

ALTEON

A BOEING COMPANY

777-200 & 777-200 IGW Component Locator Guide

GE Engine



INTRODUCTION

PURPOSE

This guide is one of the training publications prepared to help personnel with 777 airplane maintenance. This guide combines and coordinates three kinds of component information on color coded pages: INDEX (yellow), ACCESS (pink), and RECOGNITION (blue). Each section provides the following component location data:

- INDEX - Component listing in ATA 100 chapter reference designation and Maintenance Manual chapter/section reference data.
- ACCESS - Component access/opening locations, dimensions and areas, principal dimensions, station diagrams, and zoning diagrams.
- RECOGNITION - Component's location/appearance.

The COMPONENT LOCATOR GUIDE is intended to provide a quick and convenient reference to find a particular maintenance manual reference, principal dimension, station number, zone location, exterior/interior access panel, and component recognition/identification view. The basic format of the 777 Component locator Guide is explained on the following pages.

THIS BOOK REFLECTS A GENERIC AIRPLANE CONFIGURATION AND WILL NOT BE REVISED

NOTE: THIS HANDBOOK IS FOR TRAINING PURPOSES ONLY. NO MAINTENANCE ACTION SHOULD BE TAKEN AS A RESULT OF INFORMATION CONTAINED IN THIS HANDBOOK.


This handbook has been prepared by the Customer Services Organization of
Boeing Commercial Airplane Group, Seattle, Washington
Published by Maintenance Training
April 1997

- ① FIND MAINTENANCE MANUAL (ATA NUMBER) CHAPTER SUBJECT (SEE WHITE INTRODUCTION PAGE 3)
- ② USING MAINTENANCE MANUAL SUBJECT (ATA NUMBER) GO TO CORRECT INDEX (YELLOW) PAGE
- ③ FIND THE COMPONENT BY TYPE AND COMPONENT NAME (LISTED ALPHABETICALLY)
- ④ NOTE THE APPLICABILITY OF THE COMPONENT TO THE AIRPLANE VERSION (-200, -200IGW, OPTIONAL, ALL)


ATA 38	Water/Waste					ACCESS PAGE	RECOGNITION PAGE	ATA 38	EQUIPMENT NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/RACK	PINK	BLUE	CH/SEC	
SWITCH	SYSTEM 2 VACUUM BLOWER BARO SW	ALL	1	312		15(311BL)	38-10	38-32	S38006
SWITCH	WATER TANK PRESSURE LIMIT SWITCH	ALL	1	165		8,48(825)	38-8	38-14	S38003
TANK	WATER TANK	-200	2	165/166		8,48(825)	38-7	38-11	
TANK	WATER TANK	-200IGW OPTIONAL	3	165/166		8,48(825)	38-7	38-11	

⑤ FIND ACCESS PAGE


⑥ FIND RECOGNITION PAGE

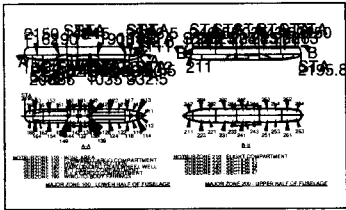

9(117AL)

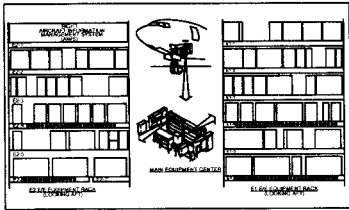

00-12

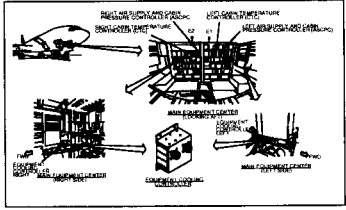

21-10

- ⑦ NOTE CHAPTER AND SECTION FOR MAINTENANCE MANUAL REFERENCE
- ⑧ NOTE QUANTITY, ZONE, PANEL/RACK AND EQUIPMENT NUMBER

Maintenance Manual Chapter Numbers

Time Limits/Maintenance Checks	5	Oxygen	35
Dimensions & Areas	6	Pneumatic Systems	36
Lifting & Shoring	7	Water / Waste	38
Leveling & Weighing	8	Central Maintenance Systems	45
Towing & Taxiing	9	Airborne Auxiliary Power (APU)	49
Parking & Mooring	10	Structures	51
Required Placards	11	Doors	52
Servicing	12	Fuselage	53
Standard Practices	20	Nacelles / Pylons	54
Air Conditioning	21	Stabilizers	55
Autoflight	22	Windows	56
Communications	23	Wings	57
Electrical Power	24	Engine Standard Practices	70
Equipment / Furnishings	25	Power Plant	71
Fire Protection	26	Engine	72
Flight Controls	27	Engine Fuel & Control	73
Fuel	28	Ignition	74
Hydraulic Power	29	Engine Air	75
Ice & Rain Protection	30	Engine Controls	76
Indicating / Recording Systems	31	Engine Indicating	77
Landing Gear	32	Exhaust	78
Lights	33	Oil	79
Navigation	34	Starting	80

I N D E X

ATA 00	AIRPLANE GENERAL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 00	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
E1 RACK	MAIN EQUIPMENT CENTER RACK	ALL	1	117	E1	8,9(117AL)	00-12		
E2 RACK	MAIN EQUIPMENT CENTER RACK	ALL	1	118	E2	8,9(117AL)	00-12		
E3 RACK	MAIN EQUIPMENT CENTER RACK	ALL	1	117	E3	8,9(117AL)	00-11		
E4 RACK	MAIN EQUIPMENT CENTER RACK	ALL	1	118	E4	8,9(117AL)	00-11		
E5 RACK	FWD CARGO EQUIPMENT RACK	ALL	1	122	E5	8,48(821)	00-18		
E6 RACK	AFT CARGO EQUIPMENT RACK	ALL	1	152	E6	8,48(824)	00-18		
E7 RACK	PASSENGER EQUIPMENT RACK	ALL	1	264	E7	8	00-7		
E10 RACK	BULK CARGO RACK	ALL	1	162	E10	8,48(825)	00-19		
E11 RACK	AFT SATCOM SHELF	ALL	1	251	E11	8	00-7		
E12 RACK	BULK CARGO RACK	ALL	1	162	E12	8,48(825)	00-7		
E13 RACK	FORWARD SATCOM SHELF	OPTIONAL	1	234	E13	8	00-7		
E15 RACK	PASSENGER EQUIPMENT RACK	ALL	1	221	E15	8	00-7		
E16 RACK	FWD CARGO EQUIPMENT RACK	ALL	1	122	E16	8,48(821)	00-18		
E17 RACK	AFT CARGO EQUIPMENT RACK	ALL	1	152	E17	8,48(824)	00-18		
P1 PANEL	L MAIN INSTRUMENT PANEL	ALL	1	211	P1	8	00-1,00-20		
P2 PANEL	CENTER MAIN INSTRUMENT PANEL	ALL	1	210	P2	8	00-1,00-20		
P3 PANEL	R MAIN INSTRUMENT PANEL	ALL	1	212	P3	8	00-1,00-20		
P5 PANEL	OVERHEAD PANEL	ALL	1	210	P5	8	00-3,00-20		
P7 PANEL	GLARESHIELD PANEL	ALL	1	210	P7	8	00-4,00-20		
P8 PANEL	AFT AISLE STAND PANEL	ALL	1	210	P8	8	00-4,00-20		

ATA 00	AIRPLANE GENERAL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 00	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
P9 PANEL	FWD AISLE STAND PANEL	ALL	1	210	P9	8	00-4,00-20		
P10 PANEL	CONTROL STAND PANEL	ALL	1	210	P10	8	00-3,00-20		
P11 PANEL	CIRCUIT BREAKER PANEL	ALL	1	210	P11	8	00-6,00-20		
P13-1 PANEL	CAPT BRIGHTNESS/HEATER CONTROL PANEL	ALL	1	211	P13-1	8	00-5,00-20		
P13-3 PANEL	CAPT MIC/HEADPHONE PANEL	ALL	1	211	P13-3	8	00-5,00-20		
P14-1 PANEL	F/O BRIGHTNESS/HEATER CONTROL PANEL	ALL	1	212	P14-1	8	00-5,00-20		
P14-3 PANEL	F/O MIC/HEADPHONE PANEL	ALL	1	212	P14-3	8	00-5,00-20		
P24 PANEL	FORWARD CARGO HANDLING CONTROL PANEL	ALL	1	122	P24	9(122BR)	00-20,25-11		
P27 PANEL	AFT CARGO HANDLING CONTROL PANEL	ALL	1	152	P27	9(252BR)	00-20,25-11		
P28 PANEL	INTEGRATED REFUEL PANEL	ALL	1	521	P28	34(521DB)	00-20,28-7		
P29 PANEL	MASTER DIM AND TEST CARDFILE	ALL	1	211	P29	8	00-20,33-4		
P30 PANEL	EXTERNAL POWER AND GATE LINK PANEL	ALL	1	118	P30	9(118AR)	00-20,24-5		
P35 PANEL	FORWARD CARGO HANDLING ACCESSORY PNL	ALL	1	122	P35	9	00-18, 00-20,25-11		
P39 PANEL	AFT CARGO HANDLING ACCESSORY PANEL	ALL	1	152	P39	14	00-18, 00-20,25-11		
P40 PANEL	SERVICE AND APU SHUTDOWN PANEL	ALL	1	711	P40	47	00-13,00-20		
P41 PANEL	RIGHT FUELING	OPTIONAL	1	621	P41	34(621DB)	00-20,28-7		
P43 PANEL	FORWARD CARGO DOOR CONTROL PANEL	ALL	1	821	P43	9(122AR)	00-20,52-6		
P44 PANEL	AFT CARGO DOOR CONTROL PANEL	ALL	1	824	P44	14(152AR)	00-20,52-6		

ATA 00	AIRPLANE GENERAL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 00	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
P49 PANEL	BULK CARGO C/B PANEL	ALL	1	162	P49	8,48(825)	00-19,00-20		
P55 PANEL	GLARESHIELD PANEL	ALL	1	210	P55	8	00-2,00-20		
P56 PANEL	MAIN W/W ELECTRICAL SERVICE PANEL	ALL	1	198	P56	13(198LR)	00-20,32-10		
P61 PANEL	OVERHEAD MAINTENANCE PANEL	ALL	1	210	P61	8	00-5,00-20		
P84 PANEL	R SYSTEM CARD FILE	ALL		118	P84	8,9(117AL)	00-9,00-20		
P85 PANEL	L SYSTEM CARD FILE	ALL	1	117	P85	8,9(117AL)	00-9,00-20		
P87 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 1 LEFT				P87	8	00-20,23-6		
P88 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 1 CENTER				P88	8	00-20,23-6		
P89 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 2 LEFT				P89	8	00-20,23-6		
P90 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 2 RIGHT				P90	8	00-20,23-6		
P91 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 3 LEFT				P91	8	00-20,23-6		
P92 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 3 RIGHT				P92	8	00-20,23-6		
P93 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 4 LEFT				P93	8	00-20,23-6		
P94 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 4 RIGHT				P94	8	00-20,23-6		
P96 PANEL	OVERHEAD DIMMER PANEL	ALL	1	223	P96	8	00-20,33-6		
P97 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 1 RIGHT				P97	8	00-20,23-6		
P99 PANEL	ATTENDANT SWITCH PANEL (ASP) DR 4 RIGHT-CENTER				P99	8	00-20,23-6		
P100 PANEL	L POWER PANEL	ALL	1	117	P100	8,9(117AL)	00-13,00-20		
P101 PANEL	FORWARD INTEGRATION DISTRIBUTION PANEL	ALL	1	223	P101	8	00-20		

ATA 00	AIRPLANE GENERAL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 00	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
P102 PANEL	MID INTEGRATION DISTRIBUTION PANEL	ALL	1	231	P102	8	00-20		
P103 PANEL	AFT INTEGRATION DISTRIBUTION PANEL	ALL	1	251	P103	8	00-20		
P105 PANEL	LEFT INTEGRATION DISTRIBUTION PANEL	ALL	1	115	P105	9(117AL)	00-20		
P110 PANEL	L POWER MANAGEMENT PANEL	ALL	1	117	P110	8,9(117AL)	00-13, 00-14,00-20		
P111 PANEL	FWD COUPLER PANEL	ALL	1	115	P111	8,9(117AL)	00-10,00-20		
P112 PANEL	FWD COUPLER PANEL	ALL	1	115	P112	8,9(117AL)	00-10,00-20		
P115 PANEL	BULK CARGO COUPLER PANEL	ALL	1	253	P115	14	00-19,00-20		
P200 PANEL	R LOWER PANEL	ALL	1	118	P200	8,9(117AL)	00-13,00-20		
P210 PANEL	R POWER MANAGEMENT PANEL	ALL	1	118	P210	8,9(117AL)	00-13, 00-15,00-20		
P212 PANEL	FWD COUPLER PANEL	ALL	1	116	P212	8,9(117AL)	00-10,00-20		
P215 PANEL	BULK CARGO COUPLER PANEL	ALL	1	161	P215	8,48(825)	00-19,00-20		
P300 PANEL	AUXILIARY POWER PANEL	ALL	1	118	P300	8,9(117AL)	00-13,00-20		
P310 PANEL	STANDBY POWER MANAGEMENT PANEL	ALL	1	117	P310	8,9(117AL)	00-13, 00-16,00-20		
P311 PANEL	FWD COUPLER PANEL	ALL	1	116	P311	8,9(117AL)	00-10,00-20		
P312 PANEL	FWD COUPLER PANEL	ALL	1	116	P312	8,9(117AL)	00-10,00-20		
P313 PANEL	FWD COUPLER PANEL	ALL	1	115	P313	8,9(117AL)	00-10,00-20		

ATA 00	AIRPLANE GENERAL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 00	EQUIP NUMBER
	TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC
P320 PANEL		GROUND SERVICE/HANDLING POWER PANEL	ALL	1	117	P320	8,9(117AL)	00-13, 00-17,00-20	
PRODUCTION BREAK		ARINC 629 BUSES SYSTEM PRODUCTION BREAK	ALL	2	151/152		8,48(824)	00-8	

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACTUATOR	RAM AIR INLET DOOR ACTUATOR, L	ALL	1	191		12(191LL)	21-25	21-52	M21543
ACTUATOR	RAM AIR INLET DOOR ACTUATOR, R	ALL	1	192		12(192LR)	21-25	21-52	M21541
CARD	ECS MISCELLANEOUS CARD (ECSCMC), L	ALL	1	117	P85	8,9(117AL)	00-9,21-9	21-00	P00085A014
CARD	ECS MISCELLANEOUS CARD (ECSCMC), R	ALL	1	118	P84	8,9(117AL)	00-9,21-9	21-00	P00084A014
CIRCUIT BREAKER	AFT CGO HT SOV - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-44	C21615
CIRCUIT BREAKER	AFT CGO HT TCV - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-44	C21619
CIRCUIT BREAKER	AFT GLY HTR 1 - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21304
CIRCUIT BREAKER	AFT GLY HTR 2 - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21305
CIRCUIT BREAKER	AFT GLY HTR CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21650
CIRCUIT BREAKER	UPR AFT RECIRC FAN - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-25	C21314
CIRCUIT BREAKER	UPR AFT/R LWR RECIRC FAN CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-25	C21626
CIRCUIT BREAKER	BULK CGO HT SOV - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-44	C21616
CIRCUIT BREAKER	BULK CGO HT TCV - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-44	C21620
CIRCUIT BREAKER	BULK CGO VENT FAN - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-26	C21308
CIRCUIT BREAKER	BULK CGO VENT FAN CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-26	C21640
CIRCUIT BREAKER	CAB PRESS REMOTE SNSR - CB	ALL	1	117	P310	8,9(117AL)	00-16	21-32	C21651
CIRCUIT BREAKER	CAPT FT & SHLDR HTR - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21321
CIRCUIT BREAKER	CAPT FT SHLDR CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21654
CIRCUIT BREAKER	CHLR BOOST FAN - CB	OPTIONAL	1	118	P210	8,9(117AL)	00-15	21-26	C21307
CIRCUIT BREAKER	CHLR BOOST FAN CTRL - CB	OPTIONAL	1	118	P210	8,9(117AL)	00-15	21-26	C21629

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	E4/FLTDK PRESS XDCR - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-27	C21668
CIRCUIT BREAKER	E5/VSCF PRESS XDCR - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-27	C21664
CIRCUIT BREAKER	EQPT BAY LOW FLOW DET - CB	ALL	1	117	P310	8,9(117AL)	00-16	21-27	C21663
CIRCUIT BREAKER	EQPT CLG CGO HT VLV CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-27	C21613
CIRCUIT BREAKER	EQPT CLG FWD CGO HT VLV - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-27	C21421
CIRCUIT BREAKER	EQPT CLG SMOKE OVRD VLV MOT 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	21-27	C21632
CIRCUIT BREAKER	EQPT CLG SMOKE OVRD VLV MOT 2 - CB	ALL	1	117	P310	8,9(117AL)	00-16	21-27	C21634
CIRCUIT BREAKER	EQPT CLG SPLY FAN 1 CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-27	C21605
CIRCUIT BREAKER	EQPT CLG SPLY FAN 2 CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-27	C21600
CIRCUIT BREAKER	EQPT CLG VENT CTRL VALVE - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-27	C21624
CIRCUIT BREAKER	EQPT CLG VENT FAN CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-27	C21601
CIRCUIT BREAKER	EQPT CLG VENT VLV - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-27	C21415
CIRCUIT BREAKER	F/D LOW FLOW DET - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-27	C21662
CIRCUIT BREAKER	F/D TRIM MOD VLV - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-61	C21443
CIRCUIT BREAKER	F/D TRIM MOD VLV CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-61	C21655
CIRCUIT BREAKER	F/O FT & SHLDR HTR - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-45	C21320
CIRCUIT BREAKER	F/O FT & SHLDR HTR CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-45	C21653
CIRCUIT BREAKER	FWD GLY HTR - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21303
CIRCUIT BREAKER	FWD GLY HTR CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21649
CIRCUIT BREAKER	FWD UPR RECIRC FAN - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-25	C21313

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	FWD UPR/L LWR RECIRC FAN CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-25	C21625
CIRCUIT BREAKER	GSPR FAN CTRL - CB	OPTIONAL	1	117	P110	8,9(117AL)	00-14	21-24	C21622
CIRCUIT BREAKER	L AFT OFL VLV - CB	ALL	1	117	P310	8,9(117AL)	00-16	21-32	C21611
CIRCUIT BREAKER	L CTC CHAN 1 (AC) - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-61	C21431
CIRCUIT BREAKER	L CTC CHAN 1 (DC) - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-61	C21641
CIRCUIT BREAKER	L CTC CHAN 2 (AC) - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-61	C21433
CIRCUIT BREAKER	L CTC CHAN 2 (DC) - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-63	C21647
CIRCUIT BREAKER	L DR 1 HTR - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21444
CIRCUIT BREAKER	L DR 1-4 HTR CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21631
CIRCUIT BREAKER	L DR 2 HT - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21446
CIRCUIT BREAKER	L DR 3 HTR - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21448
CIRCUIT BREAKER	L DR 4 HTR - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-45	C21450
CIRCUIT BREAKER	L ECV/FCV POS SNSR - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-51	C21645
CIRCUIT BREAKER	L EQPT CLG CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	21-27	C21637
CIRCUIT BREAKER	L FWD OFL VLV - CB	ALL	1	117	P310	8,9(117AL)	00-16	21-32	C21609
CIRCUIT BREAKER	L LAV/GLY FAN - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-26	C21323
CIRCUIT BREAKER	L LAV/GLY FAN CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-26	C21607
CIRCUIT BREAKER	L LWR RECIRC FAN - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-25	C21315
CIRCUIT BREAKER	L PACK & TRIM PRESS SNSR - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-52	C21627
CIRCUIT BREAKER	L SATCOM BACKUP CLG FAN - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-26	C21453

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	L SATCOM BACKUP CLG FAN CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	21-26	C21691
CIRCUIT BREAKER	R AFT OFL VLV - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-32	C21612
CIRCUIT BREAKER	R CTC CHAN 1 (AC) - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-61	C21432
CIRCUIT BREAKER	R CTC CHAN 2 (AC) - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-61	C21434
CIRCUIT BREAKER	R CTC CHAN 1 (DC) - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-61	C21642
CIRCUIT BREAKER	R CTC CHAN 2 (DC) - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-63	C21648
CIRCUIT BREAKER	R DR 1 HTR - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-45	C21445
CIRCUIT BREAKER	R DR 1-4 HTR CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-45	C21630
CIRCUIT BREAKER	R DR 2 HTR - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-45	C21447
CIRCUIT BREAKER	R DR 3 HTR - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-45	C21449
CIRCUIT BREAKER	R DR 4 HTR - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-45	C21451
CIRCUIT BREAKER	R ECV/FCV POS SNSR - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-51	C21646
CIRCUIT BREAKER	R EQPT CLG CTRL - CB	ALL	1	117	P210	8,9(117AL)	00-15	21-27	C21636
CIRCUIT BREAKER	R FWD OFL VLV - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-32	C21610
CIRCUIT BREAKER	R LAV/GLY FAN - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-26	C21324
CIRCUIT BREAKER	R LAV/GLY FAN CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-26	C21608
CIRCUIT BREAKER	R LWR RECIRC FAN - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-25	C21316
CIRCUIT BREAKER	R PACK & TRIM PRESS SNSR - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-52	C21628
CIRCUIT BREAKER	R SATCOM BACKUP CLG FAN - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-26	C21452
CIRCUIT BREAKER	R SATCOM BACKUP COOL FAN CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	21-26	C21692

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
	TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC
	COLLECTOR	WATER COLLECTOR	ALL	2	135/136		12(195EL)(196ER)	21-23	21-52
	CONNECTOR	GROUND CONDITIONED AIR CONNECTOR	ALL	2	135/136		12(195CL)(196CR)	21-24	21-21
	CONTROL	CABIN TEMP CONTROL	ALL	1	212	P5	8	21-1	21-61 M21314S006
	CONTROL	CAPT. SHOULDER HEATER CONTROL	ALL	1	211	P13-1	8	00-3,21-1	21-45 R21101
	CONTROL	F/O SHOULDER HEATER CONTROL	ALL	1	212	P14-1	8	00-3,21-1	21-45 R21201
	CONTROL	FLIGHT DECK TEMP CONTROL	ALL	1	212	P5	8	21-1	21-61 M21314S003
	CONTROLLER	AIR SUPPLY CABIN PRESSURE CONTROLLER (ASCPC), LEFT	ALL	1	117	E1-2	8,9(117AL)	00-12,21-10	36-11 M36111
	CONTROLLER	AIR SUPPLY CABIN PRESSURE CONTROLLER (ASCPC), RIGHT	ALL	1	118	E2-2	8,9(117AL)	00-12,21-10	36-11 M36112
	CONTROLLER	CABIN TEMP CTRL (CTC), L	ALL	1	117	E1-2	8,9(117AL)	00-12,21-10	21-61 M21631
	CONTROLLER	CABIN TEMP CTRL (CTC), R	ALL	1	118	E2-2	8,9(117AL)	00-12,21-10	21-61 M21632
	CONTROLLER	EQUIPMENT COOLING CONTROLLER, L	ALL	1	117		8,9(117AL)	21-10	21-27 M21104
	CONTROLLER	EQUIPMENT COOLING CONTROLLER, R	ALL	1	118		8,9(117AL)	21-10	21-27 M21207
	CONVERTER	OZONE CONVERTER	ALL	2	135/136		12(195EL)(196ER)	21-21	21-73
	COUPLER	LEFT CTC CH 1 COUPLER	ALL	1	115	P111	8,9(117AL)	00-10	21-61 B21631
	COUPLER	LEFT CTC CH 2 COUPLER	ALL	1	116	P211	8,9(117AL)	00-10	21-61 B21632
	COUPLER	RIGHT CTC CH 1 COUPLER	ALL	1	115	P111	8,9(117AL)	00-10	21-61 B21633
	COUPLER	RIGHT CTC CH 2 COUPLER	ALL	1	116	P211	8,9(117AL)	00-10	21-61 B21634
	CURRENT MONI- TOR	BULK CARGO VENT FAN CURRENT MON	ALL	1	118	P210	8,9(117AL)	00-15	21-26 M24638

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CURRENT MONI- TOR	CHILLER BOOST FAN CURRENT MONITOR	OPTIONAL	1	118	P210	8,9(117AL)	00-15	21-26	M24636
CURRENT MONI- TOR	DOOR HEATER 1 CURRENT MONITOR, L	ALL	1	117	P110	8,9(117AL)	00-14	21-45	M24605
CURRENT MONI- TOR	DOOR HEATER 1 CURRENT MONITOR, R	ALL	1	118	P210	8,9(117AL)	00-15	21-45	M24639
CURRENT MONI- TOR	DOOR HEATER 2 CURRENT MONITOR, L	ALL	1	117	P110	8,9(117AL)	00-14	21-45	M24606
CURRENT MONI- TOR	DOOR HEATER 2 CURRENT MONITOR, R	ALL	1	118	P210	8,9(117AL)	00-15	21-45	M24640
CURRENT MONI- TOR	DOOR HEATER 3 CURRENT MONITOR, L	ALL	1	117	P110	8,9(117AL)	00-14	21-45	M24607
CURRENT MONI- TOR	DOOR HEATER 3 CURRENT MONITOR, R	ALL	1	118	P210	8,9(117AL)	00-15	21-45	M24641
CURRENT MONI- TOR	DOOR HEATER 4 CURRENT MONITOR, L	ALL	1	117	P110	8,9(117AL)	00-14	21-45	M24608
CURRENT MONI- TOR	DOOR HEATER 4 CURRENT MONITOR, R	ALL	1	118	P210	8,9(117AL)	00-15	21-45	M24642
CURRENT MONI- TOR	EQUIPMENT COOLING VALVE CURRENT MONI- TOR	ALL	1	117	P110	8,9(117AL)	00-14	21-27	M24617
CURRENT MONI- TOR	FORWARD CARGO HEAT VALVE CURRENT MONI- TOR	ALL	1	117	P110	8,9(117AL)	00-14	21-27	M24618
CURRENT MONI- TOR	GASPER AIR FAN PH A CURRENT MONITOR	OPTIONAL	1	117	P110	8,9(117AL)	00-14	21-24	M24601

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CURRENT MONI- TOR	RECIRC FAN CURRENT MONITOR - LWR LEFT	ALL	1	117	P110	8,9(117AL)	00-14	21-25	M24632
CURRENT MONI- TOR	RECIRC FAN CURRENT MONITOR - R LWR	ALL	1	118	P210	8,9(117AL)	00-15	21-25	M24661
CURRENT MONI- TOR	RECIRC FAN CURRENT MONITOR - R UPPER	ALL	1	118	P210	8,9(117AL)	00-15	21-25	M24660
CURRENT MONI- TOR	RECIRC FAN CURRENT MONITOR - UPR FWD	ALL	1	117	P110	8,9(117AL)	00-14	21-25	M24631
CURRENT MONI- TOR	SATCOM BACKUP CLG FAN CURRENT MONITOR, LEFT	ALL	1	117	P110	8,9(117AL)	00-14	21-26	M24604
CURRENT MONI- TOR	SATCOM CLG FAN CURRENT MONITOR, RIGHT	ALL	1	118	P210	8,9(117AL)	00-15	21-26	M24637
CURRENT MONI- TOR	SMOKE OVRD VLV 1 CURRENT MONITOR	ALL	1	117	P310	8,9(117AL)	00-16	21-27	M24665
CURRENT MONI- TOR	SMOKE OVRD VLV 2 CURRENT MONITOR	ALL	1	117	P310	8,9(117AL)	00-16	21-27	M24666
DUCT	MIX MANIFOLD DISTRIBUTION DUCTS	ALL		125/126		8,48(821)	21-16	21-60	
DUCT	RAM AIR INLET DUCT	ALL	2	125/126		12(191PL)(192PR)	21-23	21-52	
ELCU	EQUIPMENT COOLING SUPPLY FAN ELCU, L	ALL	2	117	P100	8,9(117AL)	00-13	21-27	M21102
ELCU	EQUIPMENT COOLING SUPPLY FAN ELCU, R	ALL	2	118	P200	8,9(117AL)	00-13	21-27	M21202
ELCU	EQUIPMENT COOL VENT FAN ELCU	ALL	1	117	P100	8,9(117AL)	00-13	21-27	M21101
ELCU	LAV/GALLEY FAN ELCU, LEFT	ALL	2	117	P100	8,9(117AL)	00-13	21-26	M21265

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ELCU	LAV/GALLEY FAN ELCU, RIGHT	ALL	2	118	P200	8,9(117AL)	00-13	21-26	M21266
FAN	BULK CARGO VENT FAN	ALL	1	161		8,48(825)	21-18	21-26	B21263
FAN	CHILLER BOOST FAN	OPTIONAL	1	234		8	21-7	21-26	B21264
FAN	GASPER FAN	OPTIONAL	1	243		8	21-7	21-24	B21241
FAN	EQUIPMENT COOLING SUPPLY FAN #1 - LEFT	ALL	1	121		8,48(821)	21-15	21-27	B21581
FAN	EQUIPMENT COOLING SUPPLY FAN #2 - RIGHT	ALL	1	121		8,48(821)	21-15	21-27	B21582
FAN	EQUIPMENT COOLING VENT FAN	ALL	1	122		8,48(821)	21-12	21-27	B21583
FAN	LAVATORY/GALLEY VENTILATION FAN - LEFT	ALL	1	165		8,48(825)	21-18	21-26	B21262
FAN	LAVATORY/GALLEY VENTILATION FAN - RIGHT	ALL	1	165		8,48(825)	21-18	21-26	B21261
FAN	RECIRCULATION FAN - LWR L	ALL	1	125		8,48(821)	21-16	21-25	B21251
FAN	RECIRCULATION FAN - LWR R	ALL	1	126		8,48(821)	21-16	21-25	B21252
FAN	RECIRCULATION FAN - UPR AFT	ALL	1	254		8	21-5	21-25	B21254
FAN	RECIRCULATION FAN - UPR FWD	ALL	1	234		8	21-5	21-25	B21253
FAN	SATCOM BACKUP COOLING FAN, L	ALL	1	253	E11	8	21-4	21-27	B21265
FILTER	EQUIPMENT COOLING AIR FILTER	ALL	1	121		8,48(821)	21-15	21-27	
FILTER	POSITIVE PRESSURE RELIEF VLV FILTER	ALL	2	121		8,48(821)	21-13	21-32	
FILTER	RECIRCULATION FAN FILTER - LWR	ALL	4	125/126		8,48(821)	21-16	21-25	
FILTER	RECIRCULATION FAN FILTER - UPR	ALL	4	234/254		8	21-5	21-25	
GRILL	FLT DECK ZONE TEMP SENSOR AIR INLET GRILL	ALL	1	212	P5	8	21-2	21-61	
HEAT EXCHANGER	CONDENSER/REHEATER HEAT EXCHANGER	ALL	2	135/136		12(195EL)(196ER)	21-21	21-52	

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
HEAT EXCHANGER	DUAL HEAT EXCHANGER	ALL	2	135/136		12(195EL)(196ER)	21-21	21-52	
HEATER	AFT GALLEY 1 HEATER	ALL	1	263		8	21-3	21-45	B21205
HEATER	AFT GALLEY 2 HEATER	ALL	1	264		8	21-3	21-45	B21210
HEATER	CAPT FOOT HEATER - L	ALL	1	211		8	21-8	21-45	B21207
HEATER	CAPT FOOT HEATER - R	ALL	1	211		8	21-8	21-45	B21453
HEATER	CAPT SHOULDER HEATER	ALL	1	116		8,9(117AL)	21-8	21-45	B21454
HEATER	DOOR AREA HEATER	ALL	8	200		8	21-3	21-45	
HEATER	F/O FOOT HEATER - L	ALL	1	212		8	21-8	21-45	B21208
HEATER	F/O FOOT HEATER - R	ALL	1	212		8	21-8	21-45	B21451
HEATER	F/O SHOULDER HEATER	ALL	1	115		8,9(117AL)	21-8	21-45	B21452
HEATER	FORWARD GALLEY HEATER	ALL	1	224		8	21-3	21-45	B21204
HOUSING	FAN INLET & DIFFUSER HOUSING	ALL	2	135/136		12(195EL)(196ER)	21-21	21-52	
MACHINE	AIR CYCLE MACHINE	ALL	2	135/136		12(195EL)(196ER)	21-21	21-52	
MANIFOLD	MIX MANIFOLD	ALL	1	125/126		8,48(821)	21-16	21-21	
MUFFLER	FLIGHT DECK AC MUFFLER	ALL	2	121		8	21-13	21-21	
MUFFLER	PACK OUTLET MUFFLER	ALL	2	135/136		8(195EL,196ER)	21-21	21-22	
MUFFLER	TRIM AIR MUFFLER	ALL	7	135/136		12(195CL)(196CR)	21-24	21-61	
NOZZLE	WATER SPRAY NOZZLE	ALL	2	135/136		12(195EL)(196ER)	21-23	21-52	
PANEL	AIR CONDITIONING PANEL	ALL	1	212	P5	8	00-3,21-1	21-61	M21314
PANEL	CARGO TEMPERATURE SELECT PANEL	ALL	1	210	P61	8	00-5,21-1	21-44	M21016

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
PANEL	CLEAN OUT PANEL, RAM AIR INLET DUCT	ALL	2	135/136		12(195JL)(196JR)	21-23	21-52	
RELAY	AFT CARGO HEAT SHUTOFF VALVE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-44	K21441
RELAY	AFT CARGO HEAT TEMP CTRL VLV RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-44	K21442
RELAY	AFT GALLEY HEATER 2 RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-45	K21457
RELAY	AFT GALLEY HEATER RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-45	K21455
RELAY	AUTO/MAN FLT DK TRIM AIR MOD RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-61	K21611
RELAY	BULK CARGO HEAT SHUTOFF VLV RELAY	ALL	1	118	P210	8,9(117AL)	00-15	21-44	K21443
RELAY	BULK CARGO HEAT SHUTOFF VLV RELAY	ALL	1	118	P210	8,9(117AL)	00-15	21-44	K21444
RELAY	BULK CARGO VENT FAN RELAY	ALL	1	118	P210	8,9(117AL)	00-15	21-26	K21263
RELAY	CAPT FOOT HEATER RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-45	K21454
RELAY	CHILLER BOOST FAN RELAY	ALL	1	118	P210	8,9(117AL)	00-15	21-26	K21264
RELAY	DOOR HEATER 1 RELAY, L	ALL	1	117	P110	8,9(117AL)	00-14	21-45	K21451
RELAY	DOOR HEATER 1 RELAY, R	ALL	1	118	P210	8,9(117AL)	00-15	21-45	K21452
RELAY	DOOR HEATER 2 RELAY, L	ALL	1	117	P110	8,9(117AL)	00-14	21-45	K21006
RELAY	DOOR HEATER 2 RELAY, R	ALL	1	118	P210	8,9(117AL)	00-15	21-45	K21007
RELAY	E/E FORWARD CARGO HEAT VALVE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-27	K21583
RELAY	E/E SMK OVRD VALVE MOTOR 1 RELAY	ALL	1	117	P310	8,9(117AL)	00-16	21-27	K21589
RELAY	E/E SMK OVRD VALVE MOTOR 2 RELAY	ALL	1	117	P310	8,9(117AL)	00-16	21-27	K21590
RELAY	E/E SMK OVRD VALVE MOTOR SELECT	ALL	1	117	P310	8,9(117AL)	00-16	21-27	K21588
RELAY	ECONOMY COOLING VALVE RELAY, L	ALL	1	117	P110	8,9(117AL)	00-14	21-52	K21009

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	ECONOMY COOLING VALVE, R	ALL	1	118	P210	8,9(117AL)	00-15	21-52	K21008
RELAY	EQUIPMENT COOLING VENT VALVE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-27	K21584
RELAY	F/O SUPPLEMENTAL HEAT RELAY	ALL	1	118	P210	8,9(117AL)	00-15	21-45	K21453
RELAY	GALLEY RELAY, FORWARD	ALL	1	117	P110	8,9(117AL)	00-14	21-45	K21456
RELAY	GASPER FAN RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-24	K21241
RELAY	MANUAL CLOSE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-61	K21624
RELAY	MANUAL OPEN RELAY	ALL	1	117	P110	8,9(117AL)	00-14	21-61	K21623
RELAY	RECIRC FAN RELAY, LWR L	ALL	1	117	P110	8,9(117AL)	00-14	21-25	K21587
RELAY	RECIRC FAN RELAY, LWR R	ALL	1	118	P210	8,9(117AL)	00-15	21-25	K21206
RELAY	RECIRC FAN RELAY, UPR AFT	ALL	1	118	P210	8,9(117AL)	00-15	21-25	K21586
RELAY	RECIRC FAN RELAY, UPR FWD	ALL	1	117	P110	8,9(117AL)	00-14	21-25	K21585
RELAY	SATCOM BACKUP COOLING FAN RELAY, L	ALL	1	117	P100	8,9(117AL)	00-13	21-27	K21265
RISER	A/C RISER	ALL	8	200		8	21-6	21-23	
SCREEN	LAV/GALLEY VENT OUTLET DUCT SCREEN	ALL	2	165		8,48(825)	21-18	21-26	
SCREEN	BULK CARGO VENT FAN SCREEN	ALL	1	161		8,48(825)	21-18	21-26	
SELECTOR	AFT CARGO TEMP SELECTOR	ALL	1	212	P61	8	21-1	21-44	M21016S001
SELECTOR	BULK CARGO TEMP SELECTOR	ALL	1	212	P61	8	21-1	21-44	M21016S002
SELECTOR	CAPT. FOOT HEAT SELECTOR	ALL	1	211	P13-1	8	00-3,21-1	21-45	M33414S001
SELECTOR	F/O FOOT HEAT SELECTOR	ALL	1	212	P14-1	8	00-3,21-1	21-45	M33415S001
SELECTOR	LANDING ALTITUDE SELECTOR	ALL	1	212		8	21-1	21-31	M36113S009

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	AFT CARGO COMPARTMENT TEMP SNSR	ALL	1	151		8	21-19	21-44	M21441
SENSOR	ASCP C COMPRESSOR DISCH TEMP SNSR, L PACK	ALL	1	135		12(195EL)	21-20	21-52	M21103
SENSOR	ASCP C COMPRESSOR DISCH TEMP SNSR, R PACK	ALL	1	136		12(196ER)	21-20	21-52	M21206
SENSOR	BACKUP GENERATOR CONV PRESS SENSOR	ALL	1	118		8,9(117AL)	21-11	21-27	M21585
SENSOR	BULK CARGO COMPT TEMP SNSR	ALL	1	162		8,48(825)	21-19	21-44	M21442
SENSOR	CABIN ZONE AIR TEMP SENSORS	ALL	7	200		8	21-6	21-61	
SENSOR	CABIN ZONE DUCT TEMP SENSOR	ALL	12	200		8	21-6	21-61	
SENSOR	COMPRESSOR DISCH TEMP SNSR 1 - L PACK	ALL	1	135		12(195EL)	21-20	21-52	M21512
SENSOR	COMPRESSOR DISCH TEMP SNSR 1 - R PACK	ALL	1	136		12(196ER)	21-20	21-52	M21520
SENSOR	COMPRESSOR DISCH TEMP SNSR 2 - L PACK	ALL	1	135		12(195EL)	21-20	21-52	M21513
SENSOR	COMPRESSOR DISCH TEMP SNSR 2 - R PACK	ALL	1	136		12(196ER)	21-20	21-52	M21522
SENSOR	CONDENSER INLET TEMP SENSOR 1 - L PACK	ALL	1	135		12(195EL)	21-20	21-52	M21515
SENSOR	CONDENSER INLET TEMP SENSOR 1 - R PACK	ALL	1	136		12(196ER)	21-20	21-52	M21524
SENSOR	CONDENSER INLET TEMP SENSOR 2 - L PACK	ALL	1	135		12(195EL)	21-20	21-52	M21531
SENSOR	CONDENSER INLET TEMP SENSOR 2 - R PACK	ALL	1	136		12(196ER)	21-20	21-52	M21525
SENSOR	E4 PRESSURE SENSOR	ALL	1	117		8,9(117AL)	21-11	21-27	M21586
SENSOR	E5 PRESS SENSOR	ALL	1	122		8,48(821)	21-11	21-27	M21584
SENSOR	FLIGHT DECK LOW FLOW SENSOR	ALL	1	118		8,9(117AL)	21-14	21-27	M21583

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	FLIGHT DECK PRESSURE SENSOR	ALL	1	112		9(112AL)	21-11	21-27	M21587
SENSOR	FLIGHT DECK ZONE AIR TEMP SENSOR 1	ALL	1	212		8	21-2	21-61	M21601
SENSOR	FLIGHT DECK ZONE AIR TEMP SENSOR 2	ALL	1	121		9	21-2	21-61	M21600
SENSOR	FLIGHT DECK ZONE DUCT TEMP SENSOR 1	ALL	1	121		9	21-15	21-61	M21602
SENSOR	FLIGHT DECK ZONE DUCT TEMP SENSOR 2	ALL	1	121		9	21-15	21-61	M21603
SENSOR	FLOW SENSOR, L PACK	ALL	1	135		12(195EL)	21-20	21-51	M21536
SENSOR	FLOW SENSOR, R PACK	ALL	1	136		12(196ER)	21-20	21-51	M21521
SENSOR	MEC LOW FLOW SENSOR	ALL	1	124		8,48(821)	21-14	21-27	M21582
SENSOR	MIX MANIFOLD OUT TEMP SENSOR 1 - L PACK	ALL	1	126		8,48(821)	21-16	21-52	M21532
SENSOR	MIX MANIFOLD OUT TEMP SENSOR 2 - L PACK	ALL	1	126		8,48(821)	21-16	21-52	M21533
SENSOR	MIX MANIFOLD OUTLET TEMP SENSOR 1 - R PACK	ALL	1	125		8,48(821)	21-16	21-52	M21526
SENSOR	MIX MANIFOLD OUTLET TEMP SENSOR 2 - R PACK	ALL	1	125		8,48(821)	21-16	21-52	M21529
SENSOR	PACK DISCHARGE TEMP SENSOR - L PACK	ALL	1	135		12(195CL)	21-20	21-52	M21534
SENSOR	PACK DISCHARGE TEMP SENSOR - R PACK	ALL	1	136		12(196CR)	21-20	21-52	M21527
SENSOR	PACK DISCHARGE TEMP SNSR ASCPC - L PACK	ALL	1	135		12(195CL)	21-20	21-52	M21535
SENSOR	PACK DISCHARGE TEMP SNSR ASCPC - R PACK	ALL	1	136		12(196CR)	21-20	21-52	M21528
SENSOR	PRI HT EXCHR INLET TEMP SNSR - L PACK	ALL	1	135		12(195EL)	21-20	21-52	M21508
SENSOR	PRI HT EXCHR INLET TEMP SNSR - R PACK	ALL	1	136		12(196ER)	21-20	21-52	M21517

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	PRI HT EXCHR OUTLET TEMP SNSR - L PACK	ALL	1	135		12(195EL)	21-20	21-52	M21509
SENSOR	PRI HT EXCHR OUTLET TEMP SNSR - R PACK	ALL	1	136		12(196ER)	21-20	21-52	M21518
SENSOR	REMOTE CABIN PRESSURE SENSOR	ALL	1	117		8.9(117AL)	21-17	21-32	M21311
SENSOR	SEC HT EXCHR OUTLET TEMP SNSR - L PACK	ALL	1	135		12(195EL)	21-20	21-52	M21510
SENSOR	SEC HT EXCHR OUTLET TEMP SNSR - R PACK	ALL	1	136		12(196ER)	21-20	21-52	M21519
SENSOR	SEC TURB INLET TEMP SENSOR - L PACK	ALL	1	135		12(195EL)	21-20	21-52	M21514
SENSOR	SEC TURB INLET TEMP SENSOR - R PACK	ALL	1	136		12(196ER)	21-20	21-52	M21523
SENSOR	TRIM AIR PRESSURE SENSOR - L PACK	ALL	1	135		12(195EL)	21-20	21-62	M21633
SENSOR	TRIM AIR PRESSURE SENSOR - R PACK	ALL	1	136		12(196ER)	21-20	21-62	M21634
SENSOR	ZONE A DUCT 1 TEMP SENSOR	ALL	1	221		8	21-6	21-61	M21604
SENSOR	ZONE A DUCT 2 TEMP SENSOR	ALL	1	221		8	21-6	21-61	M21606
SENSOR	ZONE A TEMP SENSOR	ALL	1	221		8	21-6	21-61	M21605
SENSOR	ZONE B DUCT 1 TEMP SENSOR	ALL	1	222		8	21-6	21-61	M21608
SENSOR	ZONE B DUCT 2 TEMP SENSOR	ALL	1	222		8	21-6	21-61	M21610
SENSOR	ZONE B TEMP SENSOR	ALL	1	222		8	21-6	21-61	M21609
SENSOR	ZONE B TEMP SENSOR (PROVISION)	ALL	1	222		8	21-6	21-61	M21611
SENSOR	ZONE C DUCT 1 TEMP SENSOR	ALL	1	231		8	21-6	21-61	M21612
SENSOR	ZONE C DUCT 2 TEMP SENSOR	ALL	1	231		8	21-6	21-61	M21614
SENSOR	ZONE C TEMP SENSOR	ALL	1	231		8	21-6	21-61	M21613
SENSOR	ZONE C TEMP SENSOR (PROVISION)	ALL	1	231		8	21-6	21-61	M21615

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	ZONE D DUCT 1 TEMP SENSOR	ALL	1	232		8	21-6	21-61	M21616
SENSOR	ZONE D DUCT 2 TEMP SENSOR	ALL	1	232		8	21-6	21-61	M21618
SENSOR	ZONE D TEMP SENSOR	ALL	1	232		8	21-6	21-61	M21617
SENSOR	ZONE D TEMP SENSOR	ALL	1	232		8	21-6	21-61	M21619
SENSOR	ZONE E DUCT 1 TEMP SENSOR	ALL	1	241		8	21-6	21-61	M21620
SENSOR	ZONE E DUCT 2 TEMP SENSOR	ALL	1	241		8	21-6	21-61	M21622
SENSOR	ZONE E FWD TEMP SENSOR	ALL	1	241		8	21-6	21-61	M21621
SENSOR	ZONE F DUCT 1 TEMP SENSOR	ALL	1	244		8	21-6	21-61	M21624
SENSOR	ZONE F DUCT 2 TEMP SENSOR	ALL	1	244		8	21-6	21-61	M21626
SENSOR	ZONE F FWD TEMP SENSOR	ALL	1	244		8	21-6	21-61	M21625
SWITCH	AFT CARGO HEAT SWITCH	ALL	1	212	P61	8	00-5,21-1	21-44	M21261S001
SWITCH	AFT OUTFLOW VALVE MANUAL SWITCH	ALL	1	212	P5	8	00-3,21-1	21-31	M36113S008
SWITCH	AFT OUTFLOW VALVE SWITCH	ALL	1	212	P5	8	21-1	21-31	M36113S011
SWITCH	AIR CONDITIONING RESET SWITCH	ALL	1	212	P5	8	00-3,21-1	21-00	M21314S007
SWITCH	EQUIPMENT COOLING SWITCH	ALL	1	212	P5	8	21-1	21-27	M21314S001
SWITCH	FWD OUTFLOW VALVE MANUAL SWITCH	ALL	1	212	P5	8	00-3,21-1	21-31	M36113S007
SWITCH	FWD OUTFLOW VALVE SWITCH	ALL	1	212	P5	8	21-1	21-31	M36113S010
SWITCH	GASPER SWITCH	ALL	1	212	P5	8	21-1	21-24	M21314S002
SWITCH	L PACK SWITCH	ALL	1	212	P5	8	21-1	21-51	M21314S008
SWITCH	LOWER RECIRCULATION FAN SWITCH	ALL	1	212	P5	8	00-3,21-1	21-25	M21314S005

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	R PACK SWITCH	ALL	1	212	P5	8	21-1	21-51	M21314S011
SWITCH	SWITCH-AFT GALLEY HEATER 1	ALL	1	220		8	25-7	21-45	M21453
SWITCH	SWITCH-FORWARD GALLEY HEATER	ALL	1	260		8	25-7	21-45	M21454
SWITCH	TRIM AIR SWITCH, L	ALL	1	212	P5	8	00-3,21-1	21-62	M21314S009
SWITCH	TRIM AIR SWITCH, R	ALL	1	212	P5	8	00-3,21-1	21-62	M21314S010
SWITCH	UPPER RECIRCULATION FAN SWITCH	ALL	1	212	P5	8	00-3,21-1	21-25	M21314S004
VALVE	AFT CARGO HEAT SHUTOFF VALVE	ALL	1	151		8,48(823)	21-19	21-44	V21441
VALVE	AFT CARGO HEAT TEMP CONTROL VALVE	ALL	1	151		8,48(823)	21-19	21-44	V21442
VALVE	BULK CARGO HEAT SHUTOFF VALVE	ALL	1	161		8,48(825)	21-19	21-44	V21443
VALVE	BULK CARGO HEAT TEMP CONTROL VALVE	ALL	1	161		8,48(825)	21-19	21-44	V21444
VALVE	CONDITIONED AIR CHECK VALVE	ALL	2	135/136		12(195EL)(196ER)	21-22	21-52	
VALVE	CONVERTER SUPPLEMENTAL CLG CHKV	ALL	1	118		8,9(117AL)	21-12	21-27	
VALVE	ECONOMY COOLING CHECK VALVE	ALL	2	135/136		12(195EL)(196ER)	21-22	21-52	
VALVE	ECONOMY COOLING VALVE - L PACK	ALL	1	135		12(195EL)	21-22	21-52	V21532
VALVE	ECONOMY COOLING VALVE - R PACK	ALL	1	136		12(196ER)	21-22	21-52	V21542
VALVE	EQUIPMENT COOLING OVERRIDE VALVE	ALL	1	121		8,48(821)	21-15	21-27	V21585
VALVE	EQUIPMENT COOLING VENT VALVE	ALL	1	123		8,48(821)	21-14	21-27	V21584
VALVE	FAN BYPASS CHECK VALVE	ALL	2	135/136		12(195EL)(196ER)	21-21	21-52	
VALVE	FLOW CONTROL AND SOV, LWR - L PACK	ALL	1	135		12(195EL)	21-22	21-51	V21513
VALVE	FLOW CONTROL AND SOV, LWR - R PACK	ALL	1	136		12(196ER)	21-22	21-51	V21514

ATA 21	AIR CONDITIONING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 21	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
VALVE	FLOW CONTROL AND SOV, UPR - L PACK	ALL	1	135		12(195EL)	21-22	21-51	V21511
VALVE	FLOW CONTROL AND SOV, UPR - R PACK	ALL	1	136		12(196ER)	21-22	21-51	V21512
VALVE	FLT DECK TRIM AIR MOD VALVE	ALL	1	135		12(195CL)	21-24	21-61	V21611
VALVE	FWD CARGO HEAT VALVE	ALL	1	121		8,48(821)	21-14	21-27	V21583
VALVE	LOW LIMIT VALVE - L PACK	ALL	1	135		12(195EL)	21-22	21-52	V21533
VALVE	LOW LIMIT VALVE - R PACK	ALL	1	136		12(196ER)	21-22	21-52	V21543
VALVE	OUTFLOW VALVE - AFT	ALL	1	161		8	21-17	21-31	M21313
VALVE	OUTFLOW VALVE - FWD	ALL	1	117		8,9(117AL)	21-17	21-31	M21312
VALVE	POSITIVE PRESSURE RELIEF VALVE	ALL	2	121		8,48(821)	21-13	21-32	
VALVE	SATCOM BACKUP COOLING CHECK VALVE	ALL	1	200		8	21-4	21-27	
VALVE	TRIM AIR PRESSURE REG. AND SOV - L PACK	ALL	1	135		12(195EL)	21-22	21-62	V21621
VALVE	TRIM AIR PRESSURE REG. AND SOV - R PACK	ALL	1	136		12(196ER)	21-22	21-62	V21622
VALVE	TURBINE BYPASS VALVE - L PACK	ALL	1	135		12(195EL)	21-22	21-52	V21531
VALVE	TURBINE BYPASS VALVE - R PACK	ALL	1	136		12(196ER)	21-22	21-52	V21541
VALVE	VENT VALVE	ALL	1	123		8,48(821)	21-14	21-27	V21584
VALVE	ZONE A TRIM AIR MOD VALVE	ALL	1	135		12(195CL)	21-24	21-61	V21612
VALVE	ZONE B TRIM AIR MOD VALVE	ALL	1	136		12(195CR)	21-24	21-61	V21613
VALVE	ZONE C TRIM AIR MOD VALVE	ALL	1	135		12(195CL)	21-24	21-61	V21614
VALVE	ZONE D TRIM AIR MOD VALVE	ALL	1	136		12(195CR)	21-24	21-61	V21615
VALVE	ZONE E TRIM AIR MOD VALVE	ALL	1	135		12(195CL)	21-24	21-61	V21616

ATA 22	AUTOFLIGHT					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 22	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACTUATOR	CONTROL COLUMN BACKDRIVE ACTUATOR, L	ALL	1	112		8,9(112AL)	22-3	22-11	M22102
ACTUATOR	CONTROL COLUMN BACKDRIVE ACTUATOR, R	ALL	1	112		8,9(112AL)	22-2	22-11	M22202
ACTUATOR	CONTROL WHEEL BACKDRIVE ACTUATOR, L	ALL	1	115		8,9(112AL)	22-4	22-11	M22103
ACTUATOR	CONTROL WHEEL BACKDRIVE ACTUATOR, R	ALL	1	116		8,9(112AL)	22-5	22-11	M22203
ACTUATOR	RUDDER PEDAL BACKDRIVE ACTUATOR, L	ALL	1	115		8,9(112AL)	22-4	22-11	M22104
ACTUATOR	RUDDER PEDAL BACKDRIVE ACTUATOR, R	ALL	1	116		8,9(112AL)	22-5	22-11	M22204
CIRCUIT BREAKER	A/T SERVO L - CB	ALL	1	211	P11	8	00-6	22-31	C22620
CIRCUIT BREAKER	A/T SERVO R - CB	ALL	1	212	P11	8	00-6	22-31	C22621
CIRCUIT BREAKER	AFDC BACK DRIVE L - CB	ALL	1	211	P11	8	00-6	22-11	C22607
CIRCUIT BREAKER	AFDC BACK DRIVE R - CB	ALL	1	212	P11	8	00-6	22-11	C22608
CIRCUIT BREAKER	AFDC C - CB	ALL	1	211	P11	8	00-6	22-11	C22604
CIRCUIT BREAKER	AFDC L - CB	ALL	1	211	P11	8	00-6	22-11	C22603
CIRCUIT BREAKER	AFDC R - CB	ALL	1	212	P11	8	00-6	22-11	C22602
CIRCUIT BREAKER	AFDC WARN - CB	ALL	1	211	P11	8	00-6	22-11	C22606
CIRCUIT BREAKER	MCP L - CB	ALL	1	211	P11	8	00-6	22-11	C22601
CIRCUIT BREAKER	MCP R - CB	ALL	1	212	P11	8	00-6	22-11	C22600
COMPUTER	AUTOPILOT FLT DIRECTOR COMP (AFDC), C	ALL	1	118	E4-1	8,9(117AL)	00-11,22-6	22-11	M22301
COMPUTER	AUTOPILOT FLT DIRECTOR COMP (AFDC), L	ALL	1	117	E1-3	8,9(117AL)	00-12,22-6	22-11	M22101
COMPUTER	AUTOPILOT FLT DIRECTOR COMP (AFDC), R	ALL	1	118	E2-5	8,9(117AL)	00-12,23-6	22-11	M22201
COUPLER	C AFDC TO C FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	22-11	B22303

ATA 22	AUTOFLIGHT					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 22	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
COUPLER	C AFDC TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P311	8,9(117AL)	00-10	22-11	B22304
COUPLER	C AFDC TO L FLT CTRL ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	22-11	B22301
COUPLER	C AFDC TO R FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	22-11	B22302
COUPLER	L AFDC TO C FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	22-11	B22103
COUPLER	L AFDC TO L FLT CTRL ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	22-11	B22101
COUPLER	L AFDC TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	22-11	B22104
COUPLER	L AFDC TO R FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	22-11	B22102
COUPLER	R AFDC TO C FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	22-11	B22203
COUPLER	R AFDC TO L FLT CTRL ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	22-11	B22201
COUPLER	R AFDC TO R FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	22-11	B22202
COUPLER	R AFDC TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	22-11	B22204
LEVER ASSY	THRUST LEVER ASSY	ALL	1	210	P10	8	00-3,22-1	22-11	M22015
MOTOR	A/T SERVO MOTOR (ASM) - L	ALL	1	211	P10	8	00-3,22-1	22-31	M22105
MOTOR	A/T SERVO MOTOR (ASM) - R	ALL	1	212	P10	8	00-3,22-1	22-31	M22205
PANEL	MODE CONTROL PANEL (MCP)	ALL	1	211	P55	8	00-2	22-11	M22016
SWITCH	A/T DISCONNECT SWITCH - L	ALL	1	211	P10	8	22-1	22-31	S22009
SWITCH	A/T DISCONNECT SWITCH - R	ALL	1	212	P10	8	22-1	22-31	S22010
SWITCH	CAPTAIN A/P DISCONNECT SWITCH	ALL	1	211		8	22-1	22-11	S22001
SWITCH	FIRST OFFICER A/P DISCONNECT SWITCH	ALL	1	212		8	22-1	22-11	S22002
SWITCH	TO/GA SWITCH 1, C	ALL	1	211		8	22-1	22-31	S22007

ATA 22	AUTOFLIGHT					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 22	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
SWITCH	TO/GA SWITCH 1, L	ALL	1	211		8	22-1	22-31	S22003
SWITCH	TO/GA SWITCH 1, R	ALL	1	211		8	22-1	22-11	S22005
SWITCH	TO/GA SWITCH 2, C	ALL	1	211		8	22-1	22-31	S22008
SWITCH	TO/GA SWITCH 2, L	ALL	1	211		8	22-1	22-31	S22004

ATA 23	COMMUNICATIONS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 23	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
AMP/DIPLEXER	SIDE MOUNTED LOW NOISE AMP/DPLXR - PORT	ALL	1	253		6,8	23-11	23-15	M23088
AMP/DIPLEXER	SIDE MOUNTED LOW NOISE AMP/DPLXR - STBD	ALL	1	254		6,8	23-11	23-15	M23089
AMP/DIPLEXER	TOP LOW NOISE AMP/DIPLEXER	ALL	1	253		6,8	23-11	23-15	M23122
AMPLIFIER	CLASS A HIGH POWER AMPLIFIER	ALL	1	253	E11	8	00-7, 23-10	23-15	M23108
AMPLIFIER	CLASS C HIGH POWER AMPLIFIER	ALL	1	253	E11	8	00-7, 23-10	23-15	M23126
ANTENNA	HF ANTENNA	ALL	1	321		15	23-20	23-11	M23098
ANTENNA	SATCOM LOW GAIN ANTENNA - TOP MTD	OPTIONAL	1	253		6,8	23-18	23-15	M23123
ANTENNA	SATCOM SIDE MTD HIGH GAIN ANT - PORT	OPTIONAL	1	253		6,8	23-11, 23-18	23-15	M23093
ANTENNA	SATCOM SIDE MTD HIGH GAIN ANT - STBD	OPTIONAL	1	254		6,8	23-11, 23-18	23-15	M23094
ANTENNA	VHF ANTENNA - CENTER	ALL	1	153		7,8	23-18	23-12	M23304
ANTENNA	VHF ANTENNA - LEFT	ALL	1	123		5,8	23-18	23-12	M23104
ANTENNA	VHF ANTENNA - RIGHT	ALL	1	154		6,8	23-18	23-12	M23204
BROUTER	BROUTER	ALL	1	117		8,9(117AL)	23-13	23-94	M23462
CARD	OVERHEAD PANEL INTERFACE CARD - L	ALL	1	211	P61	8	00-5,23-3	23-93	M23117A001
CARD	OVERHEAD PANEL INTERFACE CARD - L	ALL	1	212	P61	8	00-5,23-3	23-93	M23217A001
CARD	OVERHEAD PANEL INTERFACE CARD - R	ALL	1	211	P61	8	00-5,23-3	23-93	M23117A002
CARD	OVERHEAD PANEL INTERFACE CARD - R	ALL	1	212	P61	8	00-5,23-3	23-93	M23217A002
CARDFILE	OVERHEAD PANEL CARDFILE (OPCF) - L	ALL	1	211	P61	8	00-5,23-3	23-93	M23117
CARDFILE	OVERHEAD PANEL CARDFILE (OPCF) - R	ALL	1	212	P61	8	00-5,23-3	23-93	M23217
CIRCUIT BREAKER	AREA CONTROL PANELS - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-39	C23444

ATA 23	COMMUNICATIONS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 23	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	BROUTER - CB	ALL	1	117	P110	8,9(117AL)	00-14	23-94	C23449
CIRCUIT BREAKER	CAB INTPH PR - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-42	C23638
CIRCUIT BREAKER	CAB INTPH SEC - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-42	C23639
CIRCUIT BREAKER	CAB INTPH ZMUS - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-39	C23640
CIRCUIT BREAKER	CAB SYS MGMT UNIT - CB	ALL	1	117	P110	8,9(117AL)	00-14	23-39	C23400
CIRCUIT BREAKER	CABIN PRINTER - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-39	C23405
CIRCUIT BREAKER	CAPT TOW INTERPHONE - CB	OPTIONAL	1	117	P320	8,9(117AL)	00-17	23-51	C23645
CIRCUIT BREAKER	COMM HF L - CB	ALL	1	211	P11	8	00-6	23-11	C23301
CIRCUIT BREAKER	COMM HF R - CB	ALL	1	212	P11	8	00-6	23-11	C23300
CIRCUIT BREAKER	COMM VHF C - CB	ALL	1	212	P11	8	00-6	23-12	C23604
CIRCUIT BREAKER	COMM VHF L - CB	ALL	1	211	P11	8	00-6	23-12	C23601
CIRCUIT BREAKER	COMM VHF R - CB	ALL	1	212	P11	8	00-6	23-12	C23600
CIRCUIT BREAKER	CTU - CB	OPTIONAL	1	118	P210	8,9(117AL)	00-15	23-18	C23430
CIRCUIT BREAKER	F/O INTERPHONE - CB	ALL	1	210	P11	8	00-6	23-51	C23646
CIRCUIT BREAKER	FAX/F5 GALLEY HANDSET - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-39	C23452
CIRCUIT BREAKER	GND CREW HORN - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-43	C23626
CIRCUIT BREAKER	INTERPHONE-CAPT - CB	ALL	1	211	P11	8	00-6	23-42	C23627
CIRCUIT BREAKER	INTERPHONE-F/O - CB	ALL	1	212	P11	8	00-6	23-51	C23628
CIRCUIT BREAKER	INTERPHONE-OBS - CB	ALL	1	211	P11	8	00-6	23-51	C23629
CIRCUIT BREAKER	INTERPHONE-SERV - CB	ALL	1	211	P11	8	00-6	23-41	C23631

ATA 23	COMMUNICATIONS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 23	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	INTPH-GND - CB	ALL	1	117	P320	8,9(117AL)	00-17	23-41	C23611
CIRCUIT BREAKER	M1/M2 GALLEY HANDSETS - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-39	C23450
CIRCUIT BREAKER	OEU ZONE 3 R MAIN BUS - CB	ALL	1	117	P110	8,9(117AL)	00-14	23-33	C23445
CIRCUIT BREAKER	OEU ZONE 3 XFER BUS - CB	ALL	1	117	P110	8,9(117AL)	00-14	23-33	C23447
CIRCUIT BREAKER	OEU ZONE 1 MAIN BUS - CB	ALL	1	117	P110	8,9(117AL)	00-14	23-33	C23437
CIRCUIT BREAKER	OEU ZONE 1 XFER BUS - CB	ALL	1	117	P110	8,9(117AL)	00-14	23-33	C23439
CIRCUIT BREAKER	OEU ZONE 2 CENTER MAIN BUS - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-33	C23416
CIRCUIT BREAKER	OEU ZONE 2 LEFT MAIN BUS - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-33	C23414
CIRCUIT BREAKER	OEU ZONE 2 RIGHT MAIN BUS - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-33	C23418
CIRCUIT BREAKER	OEU ZONE 2 XFER BUS - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-33	C23420
CIRCUIT BREAKER	OEU ZONE 3 CENTER MAIN BUS - CB	ALL	1	117	P110	8,9(117AL)	00-14	23-33	C23443
CIRCUIT BREAKER	OEU ZONE 3 LEFT MAIN BUS - CB	ALL	1	117	P110	8,9(117AL)	00-14	23-33	C23441
CIRCUIT BREAKER	OPAS 1- CB	ALL	1	211	P11	8	00-6	23-93	C23603
CIRCUIT BREAKER	OPAS 2- CB	ALL	1	212	P11	8	00-6	23-93	C23602
CIRCUIT BREAKER	OPAS 3- CB	ALL	1	211	P11	8	00-6	23-93	C23605
CIRCUIT BREAKER	PA DIR ACCESS - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-31	C23637
CIRCUIT BREAKER	PAX ADRS CTRL PRI - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-31	C23632
CIRCUIT BREAKER	PAX ADRS CTRL SEC - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-31	C23633
CIRCUIT BREAKER	PRAM - CB	OPTIONAL	1	117	P110	8,9(117AL)	00-14	23-31	C23406
CIRCUIT BREAKER	RTP C - CB	ALL	1	117	P110	8,9(117AL)	00-14	23-12	C23618

ATA 23	COMMUNICATIONS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 23	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	RTP L - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-12	C23617
CIRCUIT BREAKER	RTP R - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-12	C23619
CIRCUIT BREAKER	SATL HIGH L - CB	OPTIONAL	1	117	P110	8,9(117AL)	00-14	23-15	C23431
CIRCUIT BREAKER	SATL HIGH R - CB	OPTIONAL	1	118	P210	8,9(117AL)	00-15	23-15	C23438
CIRCUIT BREAKER	SATL LOW - CB	OPTIONAL	1	117	P110	8,9(117AL)	00-14	23-15	C23433
CIRCUIT BREAKER	SATL SDU L - CB	OPTIONAL	1	117	P110	8,9(117AL)	00-14	23-15	C23427
CIRCUIT BREAKER	SATL SDU R - CB	OPTIONAL	1	118	P210	8,9(117AL)	00-15	23-15	C23435
CIRCUIT BREAKER	SDM COL 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-31	C23634
CIRCUIT BREAKER	SDM COL 2 - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-31	C23635
CIRCUIT BREAKER	SDM COL 3 - CB	ALL	1	117	P310	8,9(117AL)	00-16	23-31	C23636
CIRCUIT BREAKER	SELCAL - CB	ALL	1	211	P11	8	00-6	23-21	C23607
CIRCUIT BREAKER	VOX RCDR - CB	ALL	1	118	P110	8,9(117AL)	00-14	23-71	C23425
CIRCUIT BREAKER	ZONE MGMT UNIT 1 - CB	ALL	1	118	P110	8,9(117AL)	00-14	23-39	C23415
CIRCUIT BREAKER	ZONE MGMT UNIT 2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	23-39	C23417
CIRCUIT BREAKER	ZONE MGMT UNIT 3 - CB	ALL	1	117	P110	8,9(117AL)	00-15	23-39	C23419
COMBINER	RADIO FREQUENCY COMBINER	OPTIONAL	1	253	E11	6,8	00-7, 23-10	23-15	M23084
CONTROLLER	OVERHEAD PNL BUS CNTLR (OPBC)-L	ALL	1	211		8	23-4	23-93	M23112
CONTROLLER	OVERHEAD PNL BUS CONTROLLER (OPBC) - R	ALL	1	212		8	23-4	23-93	M23212
CONTROLLER	PASSENGER ADDRESS/CABIN INTRPHN CNTLR	ALL	1	117	E1-4	8,9(117AL)	00-12, 23-14	23-39	M23016

ATA 23	COMMUNICATIONS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 23	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
COUPLER	AUDIO MANAGEMENT UNIT TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	23-51	B23102
COUPLER	CABIN SYS MGMT UNIT (CSMU) TO R SYS ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	23-33	B23228
COUPLER	HF ANTENNA COUPLER - L	ALL	1	321		15	23-17	23-11	M23102
COUPLER	HF ANTENNA COUPLER - R	ALL	1	321		15	23-17	23-11	M23202
COUPLER	L OPBC TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	23-93	B23126
COUPLER	L OPBC TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	23-93	B23226
COUPLER	PA/CI TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	23-31	B23128
COUPLER	R OPBC TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	23-93	B23127
COUPLER	R OPBC TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	23-93	B23227
CRADLE	CABIN ATTENDANTS HANDSET CRADLE	ALL	8	200		8	23-6	23-42	
DECODER	SELCAL DECODER	ALL	1	115	E1-2	8,9(117AL)	00-12, 23-14	23-21	M23095
FREQ UNIT	RADIO FREQUENCY UNIT, R	OPTIONAL	1	251	E11	8	00-7, 23-10	23-15	M23207
HANDSET	CABIN ATTENDANTS HANDSET	ALL	8	200		8	23-6	23-42	
HANDSET	FLIGHT DECK HANDSET	ALL	1	211		8	00-4	23-42	B23004
HORN	HORN-GROUND CREW CALL	ALL	1	711	P40	47	23-16	23-43	M23085
JACK	CAPT. HAND MICROPHONE JACK	ALL	1	211		8	23-2	23-51	B23092
JACK	COCKPIT VOICE JACK	ALL	1	711	P40	47	23-2	23-41	
JACK	F/O HAND MICROPHONE JACK	ALL	1	212		8	23-2	23-51	B23093

ATA 23	COMMUNICATIONS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 23	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
JACK	FIRST OBSERVER HAND MICROPHONE JACK	ALL	1	211	P17	8	23-2	23-51	B23094
JACK	SERVICE INTERPHONE JACK	ALL	15	711	P40	47	23-1	23-41	
MACHINE	PRE-RECD ANNCT MACHINE	OPTIONAL	1	118	E2-4	8,9(117AL)	00-12, 23-14	23-31	M23060
MICROPHONE	VOICE RECORDER MICROPHONE	ALL	1	211	P5	8	00-3	23-71	B23075
MODULE	SPEAKER DRIVE MODULE	ALL		200		8	23-9,23-8	23-31	
PANEL	CABIN AREA CONTROL PANEL (CACP) 1	ALL	1	200		8	23-6	23-39	M23064
PANEL	CABIN AREA CONTROL PANEL 2	ALL	1	200		8	23-6	23-39	M23066
PANEL	CABIN AREA CONTROL PANEL 3	ALL	1	200		8	23-6	23-39	M23069
PANEL	CABIN SYSTEM CONTROL PANEL (CSCP)	ALL	1	200		8	23-5	23-39	M23062
PANEL	CAPT AUDIO CONTROL PANEL	ALL	1	211	P8	8	00-4/23-2	23-51	M23009
PANEL	CAPT BOOM MIC/HEADPHONE PANEL	ALL	1	211	P13-3	8	23-2	23-51	M23457
PANEL	F/O AUDIO CONTROL PANEL	ALL	1	211	P8	8	00-4/23-2	23-51	M23010
PANEL	F/O BOOM MIC/HEADPHONE PANEL	ALL	1	212	P14-3	8	23-2	23-51	M23458
PANEL	FIRST OBSERVER AUDIO CONTROL PANEL	ALL	1	212	P8	8	00-4/23-2	23-51	M23011
PANEL	FIRST OBSERVER BOOM MIC/HEADPHONE PANEL	ALL	1	212	P17	8	23-2	23-51	M23459
PANEL	RADIO TUNING PANEL - C	ALL	1	211	P8	8	00-4	23-12	M23007
PANEL	RADIO TUNING PANEL - L	ALL	1	211	P8	8	00-4	23-12	M23005
PANEL	RADIO TUNING PANEL - R	ALL	1	212	P8	8	00-4	23-12	M23006
PANEL	SECOND OBSERVER HEADPHONE PANEL	ALL	1	212	P18	8	23-2	23-51	B23003

ATA 23	COMMUNICATIONS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 23	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PANEL	VOICE RECORDER CONTROL PANEL	ALL	1	211	P61	8	00-5	23-71	M23477
PRINTER	CABIN PRINTER	ALL	1	211		8	23-5	23-39	M23160
RECORDER	COCKPIT VOICE RECORDER	ALL	1	264	E7	8	00-7, 23-12	23-71	M23001
RELAY	HIGH POWER RELAY	OPTIONAL	1	253	E11	6,8	00-7, 23-10	23-15	K23001
RELAY	HORN ENABLE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	23-43	K23478
SENSOR	AMBIENT NOISE SENSOR	ALL	15	200		8	23-8	23-31	M23058
SPEAKER	CAPT FLIGHT DECK SPEAKER	ALL	1	211		8	23-2	23-51	B23001
SPEAKER	F/O FLIGHT DECK SPEAKER	ALL	1	212		8	23-2	23-51	B23076
SPEAKER	PASSENGER ADDRESS SPEAKER	ALL		200		8	23-8	23-31	
SPLITTER	RADIO FREQUENCY SPLITTER	OPTIONAL	1	253	E11	8	00-7, 23-10	23-15	M23124
STOWAGE BOX	CAPT OXYGEN MASK STOWAGE BOX	ALL	1	211	P15	8	23-2	23-51	B23080
STOWAGE BOX	F/O OXYGEN MASK STOWAGE BOX	ALL	1	212	P16	8	23-2	23-51	B23081
STOWAGE BOX	FIRST OBSERVER OXY MASK STOWGE BOX	ALL	1	211	P17	8	23-2	23-51	B23082
STOWAGE BOX	SECOND OBSERVER OXY MASK STOWGE BOX	ALL	1	211	P18	8	23-2	23-51	B23083
SWITCH	CABIN INTERPHONE NORM/ALT SWITCH	ALL	1	223	P87	8	23-6	23-42	S23006
SWITCH	CAPT GLARESHIELD MIC SWITCH	ALL	2	211	P7	8	00-2, 23-2	23-51	S23005
SWITCH	CAPTAIN CONTROL COLUMN INTERPHONE MIC SW	ALL	1	211		8	23-2	23-51	S23001
SWITCH	DIRECT ACCESS SWITCH	ALL	2	223		8	23-6	23-31	
SWITCH	DR 1L CAH CRADLE DIRECT ACCESS SWITCH	ALL	1	221		8	23-6	23-31	B23084

ATA 23	COMMUNICATIONS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 23	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	DR 3L CAH CRADLE DIRECT ACCESS SWITCH	ALL	1	351		8	23-6	23-31	B23085
SWITCH	F/O CONTROL COLUMN INTERPHONE MIC SWITCH	ALL	1	212		8	23-2	23-51	S23008
SWITCH	F/O GLARESHIELD MIC SWITCH	ALL	2	212	P7	8	00-2, 23-2	23-51	S23012
SWITCH	FLIGHT DECK CALL SWITCH	ALL	1	711	P40	47	23-2	23-43	S23011
SWITCH	PA PRI/ALT CONTROL SWITCH	ALL	1	223	P87	8	23-6	23-31	S23010
SWITCH	SELCAL CODING SWITCH	ALL	1	117	E1-2	8,9(117AL)	00-12, 23-14	23-21	M23121
TRANSCEIVER	HF COMMUNICATIONS TRANSCEIVER- R	ALL	1	152	E6	7,14	00-18, 23-14	23-11	M23201
TRANSCEIVER	HF COMMUNICATIONS TRANSCEIVER-L	ALL	1	152	E6	7,14	00-18, 23-14	23-11	M23101
TRANSCEIVER	VHF COMMUNICATIONS TRANSCEIVER-C	ALL	1	117	E1-2	8,9(117AL)	00-12, 23-14	23-12	M23303
TRANSCEIVER	VHF COMMUNICATIONS TRANSCEIVER-L	ALL	1	117	E1-3	8,9(117AL)	00-12, 23-14	23-12	M23103
TRANSCEIVER	VHF COMMUNICATIONS TRANSCEIVER-R	ALL	1	118	E2-3	8,9(117AL)	00-12, 23-14	23-12	M23203
UNIT	AUDIO MANAGEMENT UNIT	ALL	1	117	E1-4	8,9(117AL)	00-12, 23-14	23-51	M23008
UNIT	BYPASS SWITCH UNIT 1	ALL	1	117		8	23-3	23-94	M23480
UNIT	BYPASS SWITCH UNIT 2	ALL	1	118		8	23-3	23-94	M23481
UNIT	CABIN SYSTEM MANAGEMENT UNIT	ALL	1	117	E1-4	8,9(117AL)	00-12, 23-14	23-39	M23061
UNIT	CABIN TELECOMMUNICATION UNIT	OPTIONAL	1	166	E12	8	00-7, 23-15	23-18	M23004
UNIT	OVERHEAD ELECTRONICS UNIT	ALL		200		8	23-9, 23-9	23-33	
UNIT	PANEL DATA CONCENTRATOR UNIT (PDCU)-L	ALL	1	211		8	23-3	23-93	M23197
UNIT	PANEL DATA CONCENTRATOR UNIT (PDCU)-R	ALL	1	212		8	23-3	23-93	M23297

ATA 23	COMMUNICATIONS					ACCESS PAGE (PNL/DOOR)	RECOGNITION PAGE	ATA 23	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/RACK	PINK	BLUE	CH-SEC	
UNIT	RADIO FREQUENCY UNIT	OPTIONAL	1	253	E11	8	00-7, 23-10	23-15	M23107
UNIT	SATELLITE DATA UNIT	OPTIONAL	1	253	E11	8	00-7, 23-10	23-15	M23106
UNIT	SIDE MOUNTED BEAM STEERING UNIT-PORT	OPTIONAL	1	253		8	23-11	23-15	M23090
UNIT	SIDE MOUNTED BEAM STEERING UNIT-STBD	OPTIONAL	1	254		8	23-11	23-15	M23091
UNIT	ZONE MANAGEMENT UNIT 1	ALL	1	224		8	23-7	23-39	M23071
UNIT	ZONE MANAGEMENT UNIT 2	ALL	1	234		8	23-7	23-39	M23072
UNIT	ZONE MANAGEMENT UNIT 3	ALL	1	234		8	23-7	23-39	M23073

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
BATTERY	APU BATTERY	ALL	1	162	E10	8.48(825)	00-19,24-6	24-31	M24012
BATTERY	APU BATTERY CHARGER	ALL	1	162	E10	8.48(825)	00-19,24-6	24-31	M2412
BATTERY	FCDC BATTERY, C	ALL	1	118	E2-5	8.9(117AL)	00-12,24-3	24-35	M24302
BATTERY	FCDC BATTERY, L	ALL	1	117	E1-6	8.9(117AL)	00-12,24-3	24-35	M24102
BATTERY	FCDC BATTERY, R	ALL	1	118	E5-2	9.48(821)	00-12,24-3	24-35	M24202
BATTERY	MAIN BATTERY	ALL	1	117/118		8.9(117AL)	24-1	24-31	M24013
CARD	ARINC CARD, L	ALL	1	117	P110	8.9(117AL)	00-14	24-09	M24400A003
CARD	ARINC CARD, L	ALL	1	118	P210	8.9(117AL)	00-15	24-09	M24403A003
CARD	ARINC CARD, L	ALL	1	117	P310	8.9(117AL)	00-16	24-09	M24406A003
CARD	ARINC CARD, R	ALL	1	117	P110	8.9(117AL)	00-14	24-09	M24400A013
CARD	ARINC CARD, R	ALL	1	118	P210	8.9(117AL)	00-15	24-09	M24403A013
CARD	ARINC CARD, R	ALL	1	117	P310	8.9(117AL)	00-16	24-09	M24406A013
CARD	CPU CH A CARD	ALL	1	117	P110	8.9(117AL)	00-14	24-09	M24400A002
CARD	CPU CH A CARD	ALL	1	118	P210	8.9(117AL)	00-15	24-09	M24403A002
CARD	CPU CH A CARD	ALL	1	117	P310	8.9(117AL)	00-16	24-09	M24406A002
CARD	CPU CH B CARD	ALL	1	117	P110	8.9(117AL)	00-14	24-09	M24400A014
CARD	CPU CH B CARD	ALL	1	118	P210	8.9(117AL)	00-15	24-09	M24403A014
CARD	CPU CH B CARD	ALL	1	117	P310	8.9(117AL)	00-16	24-09	M24406A014
CARD	DCS CARD	ALL	1	117	P310	8.9(117AL)	00-16	24-09	M24406A012
CARD	I/O CARD 1 CARD	ALL	1	117	P110	8.9(117AL)	00-14	24-09	M24400A004

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CARD	I/O CARD 1 CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24403A004
CARD	I/O CARD 1 CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A004
CARD	I/O CARD 2 CARD	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24400A005
CARD	I/O CARD 2 CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24403A005
CARD	I/O CARD 2 CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A005
CARD	I/O CARD 3 CARD	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24400A006
CARD	I/O CARD 3 CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24403A006
CARD	I/O CARD 3 CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A006
CARD	I/O CARD 4 CARD	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24400A007
CARD	I/O CARD 4 CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24403A007
CARD	I/O CARD 4 CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A007
CARD	I/O CARD 5 CARD	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24400A008
CARD	I/O CARD 5 CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24403A008
CARD	I/O CARD 5 CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A008
CARD	I/O CARD 6 CARD	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24400A009
CARD	I/O CARD 6 CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24403A009
CARD	I/O CARD 6 CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A009
CARD	I/O CARD 7 CARD	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24400A010
CARD	I/O CARD 7 CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24403A010
CARD	I/O CARD 7 CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A010

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CARD	PSU CH A CARD	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24400A001
CARD	PSU CH A CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24403A001
CARD	PSU CH A CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A001
CARD	PSU CH B CARD	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24400A015
CARD	PSU CH B CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24403A015
CARD	PSU CH B CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A015
CARD	SIGNAL CONDITIONING	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24401
CARD	SIGNAL CONDITIONING	ALL	1	117	P110	8,9(117AL)	00-14	24-09	M24402
CARD	SIGNAL CONDITIONING	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24404
CARD	SIGNAL CONDITIONING CARD	ALL	1	118	P210	8,9(117AL)	00-15	24-09	M24405
CARD	SIGNAL CONDITIONING CARD 1	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24407
CARD	SIGNAL CONDITIONING CARD 2	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24408
CARD	SIGNAL CONDITIONING CARD 3	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24409
CARD	SPECIAL FUNCTION CARD	ALL	1	117	P310	8,9(117AL)	00-16	24-09	M24406A011
CHARGER	APU BATTERY CHARGER	ALL	1	162	E10	8,48(825)	00-19,24-6	24-31	M24014
CHARGER	MAIN BATTERY CHARGER	ALL	1	117	E3-2	8,9(117AL)	00-11,24-1	24-31	M24015
CIRCUIT BREAKER	AC STBY BUS PWR - CB	ALL	1	117	P100	8,9(117AL)	00-13	24-33	C24415
CIRCUIT BREAKER	AC STBY RLY CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24639
CIRCUIT BREAKER	APB - CB	ALL	1	118	P300	8,9(117AL)	00-13,24-2	24-21	C24335
CIRCUIT BREAKER	APU BAT CHARGER PWR - CB	ALL	1	117	P320	8,9(117AL)	00-17	24-31	C24301

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	APU BAT CHRG - CB	ALL	1	162	P49	8,48(825)	00-19,24-6	24-31	C24622
CIRCUIT BREAKER	APU BAT VOLT SENSE - CB	ALL	1	162	P49	8,48(825)	00-19,24-6	24-31	C24645
CIRCUIT BREAKER	APU CRK CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-31	C24652
CIRCUIT BREAKER	APU GCU - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-21	C24606
CIRCUIT BREAKER	BACKUP CONVERTER CONTROL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-25	C24671
CIRCUIT BREAKER	BAT BUS 2 ALTN - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24665
CIRCUIT BREAKER	BAT BUS DISTR P11 - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-61	C24613
CIRCUIT BREAKER	BAT BUS DISTR P310 - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-61	C24683
CIRCUIT BREAKER	BAT BUS PWR - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24638
CIRCUIT BREAKER	BAT CAPT RLY CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24636
CIRCUIT BREAKER	BATY BUS 2 NORM - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24669
CIRCUIT BREAKER	BPCU - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-41	C24649
CIRCUIT BREAKER	BPCU AC - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-41	C24305
CIRCUIT BREAKER	C PSA BAT PWR - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-35	C24676
CIRCUIT BREAKER	C PSA TRU PWR - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-35	C24674
CIRCUIT BREAKER	CAPT FLT INST DC BUS DISTR P11 - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-61	C24616
CIRCUIT BREAKER	CAPT FLT INST DC BUS DISTR P310 - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-61	C24682
CIRCUIT BREAKER	CAPT INST ALTN - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-32	C24667
CIRCUIT BREAKER	CAPT-F/O TIE CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-32	C24637
CIRCUIT BREAKER	DC BUS TIE L - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-32	C24629

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	DC BUS TIE R - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-32	C24666
CIRCUIT BREAKER	DC TIE CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-32	C24642
CIRCUIT BREAKER	DC TOW BUS - CB	ALL	1	117	P320	8,9(117AL)	00-17	24-29	C24686
CIRCUIT BREAKER	ELMS RAT DEPLOY - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24619
CIRCUIT BREAKER	ELMS RAT DEPLOY - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24670
CIRCUIT BREAKER	F/O FLT INST DC BUS DISTR P11 - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-61	C24614
CIRCUIT BREAKER	F/O INST ALTN - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-32	C24654
CIRCUIT BREAKER	GND HDLG AC BUS DISTR P320 - CB	ALL	1	118	P300	8,9(117AL)	00-13	24-51	C24342
CIRCUIT BREAKER	GND HDLG BUS PH B - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-22	C24401
CIRCUIT BREAKER	GND HDLG BUS PH C - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-22	C24402
CIRCUIT BREAKER	GND HDLG PH A - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-22	C24400
CIRCUIT BREAKER	GND PWR BAT RLY CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24631
CIRCUIT BREAKER	GND SVCE 28VAC BUS - CB	ALL	1	117	P320	8,9(117AL)	00-17	24-53	C24450
CIRCUIT BREAKER	GND SVCE AC SECT 1 BUS DISTR P320 - CB	ALL	1	118	P300	8,9(117AL)	00-13	24-51	C24322
CIRCUIT BREAKER	GND SVCE AC SECT 2 BUS DISTR P320 - CB	ALL	1	118	P300	8,9(117AL)	00-13	24-51	C24323
CIRCUIT BREAKER	GND SVCE BUS - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-22	C24346
CIRCUIT BREAKER	HOT BAT DISTR P11 - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-61	C24607
CIRCUIT BREAKER	HOT BAT DISTR P310 - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-61	C24681
CIRCUIT BREAKER	L 28V AC BUS - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-53	C24449
CIRCUIT BREAKER	L BTB - CB	ALL	1	117	P100	8,9(117AL)	00-13,24-2	24-22	C24333

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	L GCB - CB	ALL	1	117	P100	8,9(117AL)	00-13,24-2	24-22	C24331
CIRCUIT BREAKER	L GCU - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-21	C24601
CIRCUIT BREAKER	L GCU/BPCU - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-21	C24684
CIRCUIT BREAKER	L IDG DISC - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-11	C24603
CIRCUIT BREAKER	L MAIN AC SECT 1 BUS DISTR P110 - CB	ALL	1	117	P100	8,9(117AL)	00-13	24-51	C24307
CIRCUIT BREAKER	L MAIN AC SECT 2 BUS DISTR P11 - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-51	C24343
CIRCUIT BREAKER	L MAIN AC SECT 2 BUS DISTR P110 - CB	ALL	1	117	P100	8,9(117AL)	00-13	24-51	C24309
CIRCUIT BREAKER	L MAIN DC BUS DISTR P11 - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-61	C24609
CIRCUIT BREAKER	L PSA BAT PWR - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-35	C24675
CIRCUIT BREAKER	L PSA TRU PWR - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-35	C24673
CIRCUIT BREAKER	L UTIL AC BUS CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-51	C24651
CIRCUIT BREAKER	L XFR AC BUS DISTR P11 - CB	ALL	1	117	P100	8,9(117AL)	00-13	24-51	C24321
CIRCUIT BREAKER	L XFR AC BUS DISTR P110 - CB	ALL	1	117	P100	8,9(117AL)	00-13	24-51	C24339
CIRCUIT BREAKER	L XFR BUS - CB	ALL	1	117	P100	8,9(117AL)	00-13	24-25	C24319
CIRCUIT BREAKER	MN BAT CHARGER - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-31	C24620
CIRCUIT BREAKER	MN BAT CHARGER PWR - CB	ALL	1	118	P320	8,9(117AL)	00-17	24-31	C24300
CIRCUIT BREAKER	MN BAT RLY CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24643
CIRCUIT BREAKER	P110 PSU A ALTN - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-09	C24658
CIRCUIT BREAKER	P110 PSU A PRI - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-09	C24617
CIRCUIT BREAKER	P110 PSU B ALTN - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-09	C24624

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	P110 PSU B PRI - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-09	C24655
CIRCUIT BREAKER	P210 PSU A ALTN - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-09	C24657
CIRCUIT BREAKER	P210 PSU A PRI - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-09	C24656
CIRCUIT BREAKER	P210 PSU B ALTN - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-09	C24618
CIRCUIT BREAKER	P210 PSU B PRI - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-09	C24625
CIRCUIT BREAKER	P310 PSU A ALTN - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-09	C24633
CIRCUIT BREAKER	P310 PSU A PRI - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-09	C24641
CIRCUIT BREAKER	P310 PSU B ALTN - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-09	C24640
CIRCUIT BREAKER	P310 PSU B PRI - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-09	C24635
CIRCUIT BREAKER	R 28V AC BUS - CB	ALL	1	117	P110	8,9(117AL)	00-14	24-53	C24448
CIRCUIT BREAKER	R BTB - CB	ALL	1	118	P200	8,9(117AL)	00-13,24-2	24-22	C24334
CIRCUIT BREAKER	R GCB - CB	ALL	1	118	P200	8,9(117AL)	00-13,24-2	24-22	C24332
CIRCUIT BREAKER	R GCU - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-21	C24600
CIRCUIT BREAKER	R IDG DISC - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-11	C24602
CIRCUIT BREAKER	R MAIN AC SECT 1 BUS DISTR P210 - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-51	C24306
CIRCUIT BREAKER	R MAIN AC SECT 2 BUS DISTR P11 - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-51	C24338
CIRCUIT BREAKER	R MAIN AC SECT 2 BUS DISTR P210 - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-51	C24308
CIRCUIT BREAKER	R PSA TRU PWR - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-35	C24672
CIRCUIT BREAKER	R UTIL AC BUS CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-51	C24650
CIRCUIT BREAKER	R XFR AC BUS DISTR P11 - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-51	C24344

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	R XFR AC BUS DISTR P210 - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-51	C24324
CIRCUIT BREAKER	R XFR BUS - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-25	C24318
CIRCUIT BREAKER	R MAIN DC BUS DISTR P11 - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-61	C24610
CIRCUIT BREAKER	STATIC INV PWR - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-33	C24632
CIRCUIT BREAKER	STBY 28V AC BUS - CB	ALL	1	118	P210	8,9(117AL)	00-15	24-53	C24420
CIRCUIT BREAKER	SVCE OUTLET DR 1R - CB	ALL	1	117	P320	8,9(117AL)	00-17	24-51	C25406
CIRCUIT BREAKER	SVCE OUTLET DR 2R - CB	ALL	1	117	P320	8,9(117AL)	00-17	24-51	C25407
CIRCUIT BREAKER	SVCE OUTLET DR 3R - CB	ALL	1	117	P320	8,9(117AL)	00-17	24-51	C25408
CIRCUIT BREAKER	SVCE OUTLET DR 4R - CB	ALL	1	117	P320	8,9(117AL)	00-17	24-51	C25409
CIRCUIT BREAKER	TOW INV PWR - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-61	C24679
CIRCUIT BREAKER	TRU C1 - CB	ALL	1	117	P100	8,9(117AL)	00-13	24-32	C24341
CIRCUIT BREAKER	TRU C1 CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-32	C24627
CIRCUIT BREAKER	TRU C2 - CB	ALL	1	118	P200	8,9(117AL)	00-13	24-32	C24340
CIRCUIT BREAKER	TRU C2 CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	24-32	C24628
CIRCUIT BREAKER	TRU GND HDLG - CB	ALL	1	118	P320	8,9(117AL)	00-17	24-61	C24325
CIRCUIT BREAKER	TRU L - CB	ALL	1	117	P100	8,9(117AL)	00-13	24-32	C24303
CIRCUIT BREAKER	TRU R - CB	ALL	1	117	P200	8,9(117AL)	00-13	24-32	C24302
CIRCUIT BREAKER	XFR RLY TOW - CB	ALL	1	117	P320	8,9(117AL)	00-17	24-29	C24680
CONTACTOR	APU CRANK CONTACTOR	ALL	1	162	E10	8,48(825)	24-6	24-31	K24494
CONTACTOR	PRIMARY EXTERNAL POWER CONTACTOR	ALL	1	117	P200	8,9(117AL)	00-13,24-2	24-41	K24022

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
CONTACTOR	SECONDARY EXTERNAL POWER CONTACTOR	ALL	1	118	P300	8,9(117AL)	00-13,24-2	24-41	K24023
CONTROL UNIT	APU GENERATOR CONTROL UNIT	ALL	1	117	E2-3	8,9(117AL)	00-12,24-3	24-22	M24305
CONTROL UNIT	BUS POWER CONTROL UNIT	ALL	1	118	E1-1	8,9(117AL)	00-12,24-3	24-41	M24002
CONTROL UNIT	GENERATOR CONTROL UNIT, L	ALL	1	118	E1-1	8,9(117AL)	00-12,24-3	24-22	M24105
CONTROL UNIT	GENERATOR CONTROL UNIT, R	ALL	1	118	E2-2	8,9(117AL)	00-12,24-3	24-22	M24205
CONTROL UNIT	RAT GENERATOR CONTROL UNIT	ALL	1	117		8,9(117AL)	24-3	24-33	M24018
CONVERTER	BACKUP GENERATOR CONVERTER	ALL	1	118	E4-4	8,9(117AL)	00-11,24-1	24-25	M24008
COUPLER	APU GCU RIGHT ARINC 629 COUPLER	ALL	1	116	P211	8,9(117AL)	00-10	24-28	B24205
COUPLER	APU GCU-LEFT ARINC 629 COUPLER	ALL	1	115	P111	8,9(117AL)	00-10	24-28	B24105
COUPLER	BACKUP CONVERTER ARINC 629 CPLR, L	ALL	1	115	P111	8,9(117AL)	00-10	24-25	B24102
COUPLER	BACKUP CONVERTER ARINC 629 CPLR, R	ALL	1	116	P211	8,9(117AL)	00-10	24-25	B24202
COUPLER	BPCU ARINC 629 COUPLER, L	ALL	1	115	P111	8,9(117AL)	00-10	24-28	B24106
COUPLER	BPCU ARINC 629 COUPLER, R	ALL	1	116	P211	8,9(117AL)	00-10	24-28	B24206
COUPLER	L GCU ARINC 629 COUPLER, L	ALL	1	115	P111	8,9(117AL)	00-10	24-28	B24103
COUPLER	L GCU ARINC 629 COUPLER, R	ALL	1	116	P211	8,9(117AL)	00-10	24-28	B24203
COUPLER	P110 ARINC 629 COUPLER, L	ALL	1	115	P111	8,9(117AL)	00-10	24-09	B24107
COUPLER	P110 ARINC 629 COUPLER, R	ALL	1	116	P211	8,9(117AL)	00-10	24-09	B24207
COUPLER	P210 ARINC 629 COUPLER, L	ALL	1	115	P111	8,9(117AL)	00-10	24-09	B24108
COUPLER	P210 ARINC 629 COUPLER, R	ALL	1	116	P211	8,9(117AL)	00-10	24-09	B24208
COUPLER	P310 ARINC 629 COUPLER, L	ALL	1	115	P111	8,9(117AL)	00-10	24-09	B24109

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
COUPLER	P310 ARINC 629 COUPLER, R	ALL	1	116	P211	8,9(117AL)	00-10	24-09	B24209
COUPLER	PSA C-BUS COUPLER, C	ALL	1	116	P312	8,9(117AL)	00-10	24-35	B24301
COUPLER	PSA L BUS COUPLER, L	ALL	1	115	P112	8,9(117AL)	00-10	24-35	B24101
COUPLER	PSA R BUS COUPLER, R	ALL	1	116	P212	8,9(117AL)	00-10	24-35	B24201
COUPLER	R GCU ARINC 629 COUPLER, L	ALL	1	115	P111	8,9(117AL)	00-10	24-28	B24104
COUPLER	R GCU ARINC 629 COUPLER, R	ALL	1	116	P211	8,9(117AL)	00-10	24-28	B24204
EEU	ELMS ELECTRONICS UNIT (EEU)	ALL	1	117	P310	8,9(117AL)	00-16,24-2	24-09	M24406
EEU	ELMS ELECTRONICS UNIT (EEU), L	ALL	1	117	P110	8,9(117AL)	00-14,24-2	24-09	M24400
EEU	ELMS ELECTRONICS UNIT (EEU), R	ALL	1	118	P210	8,9(117AL)	00-15,24-2	24-09	M24403
ELCU	UTILITY BUS ELCU, L	ALL	1	117	P100	8,9(117AL)	00-13,24-2	24-51	M24111
ELCU	UTILITY BUS ELCU, R	ALL	1	118	P200	8,9(117AL)	00-13,24-2	24-51	M24211
FAN	SUPPLEMENTAL COOLING FAN	ALL	1	117		8,9(117AL)	24-3	24-25	B24003
GENERATOR	APU GENERATOR	ALL	1	316		28(315AL)	24-7	24-21	M24003
GENERATOR	BACKUP GENERATOR - L,R ENG	ALL	2	411/421		29	24-8	24-25	M24004
GENERATOR	INTEGRATED DRIVE GEN (IDG) - L,R ENG	ALL	2	411/421		29	24-8	24-21	M24001
GENERATOR	RAM AIR TURBINE GENERATOR	ALL	1	154		13(198HR)	24-7	24-33	M24017
HEAT EXCHANGER	BACK UP GENERATOR HEAT EXCHANGER	ALL	2	411/421		29	24-8	24-11	
HEAT EXCHANGER	IDG AIR/OIL HEAT EXCHANGER	ALL	2	411/421		29	24-8	24-11	
INVERTER	STATIC INVERTER	ALL	1	117	E3-2	8,9(117AL)	00-11,24-1	24-33	M24016
INVERTER	TOWING STATIC INVERTER	OPTIONAL	1	117	E3-2	8,9(117AL)	00-11,24-1	24-29	M24057

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
LIGHT	APU GEN HOT BUS WARN LIGHT	ALL	1	118	P300	8,9(117AL)	00-13	24-21	L24009
LIGHT	AUX/SEC TIE BUS HOT BUS WARN LIGHT	ALL	1	118	P300	8,9(117AL)	00-13	24-21	L24004
LIGHT	BACKUP PWR HOT BUS WARN LIGHT	ALL	1	117	P100	8,9(117AL)	00-13	24-25	L24103
LIGHT	BACKUP PWR HOT BUS WARN LIGHT	ALL	1	118	P200	8,9(117AL)	00-13	24-25	L24203
LIGHT	GND HDLG HOT BUS WARN LIGHT	ALL	1	118	P300	8,9(117AL)	00-13	24-22	L24014
LIGHT	GROUND SERVICE LIGHT	ALL	1	118	P300	8,9(117AL)	00-13	24-22	L24001
LIGHT	IDG HOT BUS WARN LIGHT, L	ALL	1	117	P100	8,9(117AL)	00-13	24-21	L24006
LIGHT	IDG HOT BUS WARN LIGHT, R	ALL	1	118	P200	8,9(117AL)	00-13	24-21	L24008
LIGHT	PRIMARY CONNECTED LIGHT	ALL	1	118	P30	9(118AR)	24-5	24-41	L24019
LIGHT	PRIMARY EXT PWR HOT BUS WARN LIGHT	ALL	1	118	P200	8,9(117AL)	00-13	24-41	L24012
LIGHT	PRIMARY POWER NOT IN USE LIGHT	ALL	1	118	P30	9(118AR)	24-5	24-41	L24018
LIGHT	SECONDARY CONNECTED LIGHT	ALL	1	118	P30	9(118AR)	24-5	24-41	L24021
LIGHT	SECONDARY EXT PWR HOT BUS WARN LIGHT	ALL	1	118	P300	8,9(117AL)	00-13	24-41	L24013
LIGHT	SECONDARY POWER NOT IN USE LIGHT	ALL	1	118	P30	9(118AR)	24-5	24-41	L24020
LIGHT	TIE BUS HOT BUS WARN LIGHT, L	ALL	1	117	P100	8,9(117AL)	00-13	24-21	L24002
LIGHT	TIE BUS HOT BUS WARN LIGHT, R	ALL	1	118	P200	8,9(117AL)	00-13	24-21	L24003
PANEL	AUXILIARY POWER PANEL	ALL	1	118	P300	8,9(117AL)	00-13,24-2	24-09	
PANEL	ELECTRICAL PANEL	ALL	1	211	P5	8,48(831)	00-3,24-4	24-22	M24023
PANEL	GROUND SERVICE/HDLG POWER PANEL	ALL	1	117	P320	8,9(117AL)	00-17,24-2	24-09	
PANEL	POWER MANAGEMENT PANEL, L	ALL	1	117	P110	8,9(117AL)	00-14,24-2	24-09	

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PANEL	POWER MANAGEMENT PANEL, R	ALL	1	118	P210	8,9(117AL)	00-15,24-2	24-09	
PANEL	POWER PANEL, L	ALL	1	117	P100	8,9(117AL)	00-13,24-2	24-09	
PANEL	POWER PANEL, R	ALL	1	118	P200	8,9(117AL)	00-13,24-2	24-09	
PANEL	STANDBY POWER MANAGEMENT PANEL	ALL	1	117	P310	8,9(117AL)	00-16,24-2	24-09	
POWER SUPPLY	FLIGHT CONTROL POWER SUPPLY ASSEMBLY, C	ALL	1	118	E2-5	8,9(117AL)	00-12,24-3	24-35	M24301
POWER SUPPLY	FLIGHT CONTROL POWER SUPPLY ASSEMBLY, L	ALL	1	117	E1-6	8,9(117AL)	00-12,24-3	24-35	M24101
POWER SUPPLY	FLIGHT CONTROL POWER SUPPLY ASSEMBLY, R	ALL	1	124	E5	9,48(821)	00-18,24-3	24-35	M24201
RECEPTACLE	EXTERNAL POWER PRIMARY RECEPTACLE	ALL	1	118	P30	9(118AR)	24-5	24-41	DP030A
RECEPTACLE	EXTERNAL POWER SECONDARY RECEPTACLE	ALL	1	118	P30	9(118AR)	24-5	24-41	DP030B
RELAY	AC STANDBY CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-33	K24031
RELAY	AC STANDBY POWER RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-33	K24009
RELAY	AUTO START CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-31	K24030
RELAY	BAT CAPT ISOLATION RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-33	K24020
RELAY	CAPT/F/O BUS TIE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-32	K24016
RELAY	CONVERTER CIRCUIT RELAY, L	ALL	1	117	P100	8,9(117AL)	00-13	24-25	K24102
RELAY	CONVERTER CIRCUIT RELAY, R	ALL	1	118	P200	8,9(117AL)	00-13	24-25	K24202
RELAY	DC TIE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	24-32	K24013
RELAY	ELMS REFUEL POWER CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-09	K24024
RELAY	ELMS START POWER CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-09	K24025
RELAY	GND PWR BATTERY RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-33	K24019

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	GROUND HANDLING RELAY	ALL	1	118	P300	8,9(117AL)	00-13,24-2	24-22	K24004
RELAY	GROUND SERVICE SELECT RELAY	ALL	1	118	P300	8,9(117AL)	00-13,24-2	24-22	K24002
RELAY	GROUND SERVICE TRANSFER RELAY	ALL	1	118	P200	8,9(117AL)	00-13,24-2	24-22	K24003
RELAY	MAIN BATTERY RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-33	K24006
RELAY	HOT BAT LATCH RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-09	K24227
RELAY	RAT DEPLOY RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-33	K24026
RELAY	TRANSFER BUS RELAY, L	ALL	1	117	P100	8,9(117AL)	00-13	24-25	K24101
RELAY	TRANSFER BUS RELAY, R	ALL	1	118	P200	8,9(117AL)	00-13	24-25	K24201
RELAY	TRU C1 RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-32	K24017
RELAY	TRU C1 TRANSFER ENABLE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-32	K24300
RELAY	TRU C2 RELAY	ALL	1	117	P310	8,9(117AL)	00-16	24-32	K24018
SENSOR	APU BATTERY CURRENT SENSOR	ALL	1	162	E10	8,48(825)	24-6	24-31	M24038
SENSOR	BACKUP GENERATOR OIL IN TEMP SENSOR	ALL	2	411/421		29	24-8	24-25	M24054
SENSOR	BACKUP GENERATOR OIL OUT TEMP SENSOR	ALL	2	411/421		29	24-8	24-25	M24055
SENSOR	IDG OIL IN TEMP SENSOR	ALL	2	411/421		29	24-8	24-11	M24050
SENSOR	IDG OIL OUT TEMP SENSOR	ALL	2	411/421		29	24-8	24-11	M24051
SENSOR	MAIN BATTERY CURRENT SENSOR	ALL	1	117		8,9(117AL)	24-1	24-31	M24037
STRAPS	POWER CORD RESTRAINING STRAPS	ALL	2	118	P30	9(118AR)	24-5	24-40	
SWITCH	BACKUP GENERATOR SWITCH, L	ALL	2	211	P5	8,48(831)	00-3,24-4	24-33	M24023S011
SWITCH	BACKUP GENERATOR SWITCH, R	ALL	2	211	P5	8,48(831)	00-3,24-4	24-33	M24023S012

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	BATTERY SWITCHRF	ALL	1	211	P5	8,48(831)	00-3,24-4	24-33	M24023S003
SWITCH	DRIVE DISCONNECT SWITCH, L	ALL	1	211	P5	8,48(831)	00-3,24-4	24-33	M24023S006
SWITCH	DRIVE DISCONNECT SWITCH, R	ALL	1	211	P5	8,48(831)	00-3,24-4	24-33	M24023S010
SWITCH	GROUND SERVICE SWITCH	ALL	1	221	P87	8,48(831)	24-4	24-22	S24001
SWITCH	STANDBY POWER SWITCH	ALL	1	211	P61	8,48(831)	00-5,24-4	24-33	M30431
SWITCH	APU GENERATOR SWITCH	ALL	1	211	P5	8,48(831)	00-3,24-4	24-22	M24023S002
SWITCH	BUS TIE SWITCH, L	ALL	1	211	P5	8,48(831)	00-3,24-4	24-22	M24023S004
SWITCH	BUS TIE SWITCH, R	ALL	1	211	P5	8,48(831)	00-3,24-4	24-22	M24023S008
SWITCH	GENERATOR CONTROL SWITCH, L	ALL	1	211	P5	8,48(831)	00-3,24-4	24-22	M24023S005
SWITCH	GENERATOR CONTROL SWITCH, R	ALL	1	211	P5	8,48(831)	00-3,24-4	24-22	M24023S009
SWITCH	PRIMARY EXTERNAL POWER SWITCH	ALL	1	211	P5	8,48(831)	00-3,24-4	24-22	M24023S007
SWITCH	SECONDARY EXTERNAL POWER SWITCH	ALL	1	211	P5	8,48(831)	00-3,24-4	24-22	M24023S013
SWITCH	TOWING POWER SWITCH	OPTIONAL	1	211	P61	8,48(831)	00-3,24-4	24-22	MS27785-23
TRANSFORMER	28V AC BUS L TRANSFOMER	ALL	1	117	P110	8,9(117AL)	00-14	24-53	T24105
TRANSFORMER	28V AC BUS R TRANSFOMER	ALL	1	118	P210	8,9(117AL)	00-15	24-53	T24205
TRANSFORMER	28V AC GND SVCE TRANSFOMER	ALL	1	117	P320	8,9(117AL)	00-17	24-53	T24001
TRANSFORMER	STBY 28V AC BUS TRANSFOMER	ALL	1	117	P310	8,9(117AL)	00-16	24-53	T24005
TRU	CENTER 1 TRU	ALL	1	117	E3-2	8,9(117AL)	00-11,24-1	24-32	M24300
TRU	CENTER 2 TRU	ALL	1	117	E3-2	8,9(117AL)	00-11,24-1	24-32	M24303
TRU	GROUND HANDLING TRU	ALL	1	117	P320	8,9(117AL)	00-17,24-2	24-61	M24021

ATA 24	ELECTRICAL POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 24	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
TRU	TRU, L	ALL	1	117	E1-1	8,9(117AL)	00-12,24-3	24-32	M24103
TRU	TRU, R	ALL	1	117	E2-2	8,9(117AL)	00-12,24-3	24-32	M24203

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 25	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
BAR	ESCAPE SLIDE GIRT BAR	ALL	8	830/840		48	25-10	25-66	
BIN	CENTER STOWAGE BIN	ALL		200		8	25-5	25-28	
BIN	OUTBOARD STOWAGE BIN	ALL		200		8	25-5	25-28	
BOTTLE	ESCAPE SLIDE INFLATION BOTTLE	ALL	8	830/840		48	25-10	25-66	
BUSTLE	ESCAPE SLIDE PACK BUSTLE	ALL	8	830/840		48	25-10	25-66	
CHILLER	LOWER LOBE (AFT GALLEY) AIR CHILLER	ALL	1	165		8	25-3	25-33	M25041
CHILLER	OVERHEAD GALLEY AIR CHILLERS	ALL		200		8	25-3	25-33	
CIRCUIT BREAKER	CAPT SEAT - CB	ALL	1	117	P110	8,9(117AL)	00-14	25-11	C25323
CIRCUIT BREAKER	CARGO HDLG AFT COMPT L - CB	ALL	1	118	P300	8,9(117AL)	00-13	25-53	C25309
CIRCUIT BREAKER	CARGO HDLG AFT COMPT R - CB	ALL	1	118	P300	8,9(117AL)	00-13	25-53	C25310
CIRCUIT BREAKER	CARGO HDLG CTRL AFT - CB	ALL	1	117	P320	8,9(117AL)	00-17	25-53	C25614
CIRCUIT BREAKER	CARGO HDLG CTRL FWD - CB	ALL	1	117	P320	8,9(117AL)	00-17	25-53	C25613
CIRCUIT BREAKER	CARGO HDLG FWD COMPT L - CB	ALL	1	118	P300	8,9(117AL)	00-13	25-53	C25307
CIRCUIT BREAKER	CARGO HDLG FWD COMPT R - CB	ALL	1	118	P300	8,9(117AL)	00-13	25-53	C25308
CIRCUIT BREAKER	CSC DC-LEFT - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25028
CIRCUIT BREAKER	CSC DC-LEFT - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25128
CIRCUIT BREAKER	CSC DC-RIGHT - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25029
CIRCUIT BREAKER	CSC DC-RIGHT - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25129
CIRCUIT BREAKER	DR 1 GLY - CB	ALL	1	118	P210	8,9(117AL)	00-15	25-31	C25605

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOGNITION PAGE	ATA 25	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	DR 2 GLY - CB	ALL	1	117	P110	8,9(117AL)	00-14	25-31	C25606
CIRCUIT BREAKER	DR 4L GLY - CB	ALL	1	117	P110	8,9(117AL)	00-14	25-31	C25607
CIRCUIT BREAKER	DR 4R GLY - CB	ALL	1	118	P210	8,9(117AL)	00-15	25-31	C25608
CIRCUIT BREAKER	EMER EVAC SIG - CB	ALL	1	117	P310	8,9(117AL)	00-16	25-63	C25604
CIRCUIT BREAKER	F/O SEAT - CB	ALL	1	118	P210	8,9(117AL)	00-15	25-11	C25324
CIRCUIT BREAKER	LAT GUIDES - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25017
CIRCUIT BREAKER	LAT GUIDES - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25116
CIRCUIT BREAKER	PAX SEATS C - CB	ALL	1	118	P210	8,9(117AL)	00-15	25-25	C25314
CIRCUIT BREAKER	PAX SEATS L - CB	ALL	1	117	P110	8,9(117AL)	00-14	25-25	C25311
CIRCUIT BREAKER	PAX SEATS R - CB	ALL	1	118	P210	8,9(117AL)	00-15	25-25	C25312
CIRCUIT BREAKER	PDU 1L/5L/12L - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25011
CIRCUIT BREAKER	PDU 1L/6/10L - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25111
CIRCUIT BREAKER	PDU 1R/5R/12R - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25021
CIRCUIT BREAKER	PDU 1R/6R/10R - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25121
CIRCUIT BREAKER	PDU 2L/7L/13L - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25012
CIRCUIT BREAKER	PDU 2L/7L/8C - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25112
CIRCUIT BREAKER	PDU 2R/6R/10C - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25122
CIRCUIT BREAKER	PDU 2R/7R/13R - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25022
CIRCUIT BREAKER	PDU 3L/11L - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25013
CIRCUIT BREAKER	PDU 3L/9L/13L - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25113

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 25	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
CIRCUIT BREAKER	PDU 3R/11R - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25023
CIRCUIT BREAKER	PDU 3R/9R/13R - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25123
CIRCUIT BREAKER	PDU 4C/8L/14L - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25014
CIRCUIT BREAKER	PDU 4L/11L - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25114
CIRCUIT BREAKER	PDU 4L/9L/15L - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25015
CIRCUIT BREAKER	PDU 4R/11R - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25124
CIRCUIT BREAKER	PDU 4R/9R/15R - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25025
CIRCUIT BREAKER	PDU 5L/8L/12L - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25115
CIRCUIT BREAKER	PDU 5R/8R/12R - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25125
CIRCUIT BREAKER	PDU 6C/8R/14R - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25024
CIRCUIT BREAKER	PDU 6L/10L/16L - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25016
CIRCUIT BREAKER	PDU 6R/10R/16R - CB	ALL	1	122	P35	8,48(821)	00-18	25-53	C25026
CIRCUIT BREAKER	SILL RESTR & STOP/LOCKS - CB	ALL	1	152	P39	8,48(824)	00-18	25-53	C25126
CIRCUIT BREAKER	SILL RESTR & STOP/LOCKS - CB C/B	ALL	1	122	P35	8,48(821)	00-18	25-53	C25027
CIRCUIT BREAKER	SVCE OUTLET DR 1 - CB	ALL	1	117	P320	8,9(117AL)	00-17	25-29	C25400
CIRCUIT BREAKER	SVCE OUTLET DR 2 - CB	ALL	1	117	P320	8,9(117AL)	00-17	25-29	C25401
CIRCUIT BREAKER	SVCE OUTLET DR 3 -	ALL	1	117	P320	8,9(117AL)	00-17	25-29	C25402
CIRCUIT BREAKER	SVCE OUTLET DR 4 - CB	ALL	1	117	P320	8,9(117AL)	00-17	25-29	C25403
CIRCUIT BREAKER	SVCE OUTLET E/E BAY - CB	ALL	1	117	P320	8,9(117AL)	00-17	25-29	C25404
CIRCUIT BREAKER	SVCE OUTLET F/D AC - CB	ALL	1	117	P320	8,9(117AL)	00-17	25-29	C25405

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 25	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	SVCE OUTLET F/D DC - CB	ALL	1	118	P210	8,9(117AL)	00-15	25-29	C25600
CLOSETS	FULL HEIGHT CLOSETS	ALL		200		8	25-8	25-24	
CONSOLE	FORWARD CONSOLES - FLIGHT DECK	ALL	2	211/212		8	25-2	25-15	
CONSOLE	SIDE CONSOLES - FLIGHT DECK	ALL	2	211/212		8	25-2	25-15	
CONTAINER	LAVATORY WASTE CONTAINER	ALL		200		8	25-9	25-41	
CONTROLLER	SYSTEM CONTROLLER - AFT CARGO	ALL	1	152	E17	8,48(824)	25-11	25-53	M25002
CONTROLLER	SYSTEM CONTROLLER - FWD CARGO	ALL	1	122	E16	8,48(821)	25-11	25-53	M25001
CONVERTER	SHAVER OUTLET FREQUENCY CONVERTER	ALL	22	200		8	25-9	25-42	
ELCU	DOOR 1 GALLEY ELCU	ALL	1	118	P200	8,9(117AL)	00-13	25-31	M25043
ELCU	DOOR 2 GALLEY ELCU	ALL	1	117	P100	8,9(117AL)	00-13	25-31	M25044
ELCU	DOOR 4L GALLEY ELCU	ALL	1	117	P100	8,9(117AL)	00-13	25-31	M25135
ELCU	DOOR 4R GALLEY ELCU	ALL	1	118	P200	8,9(117AL)	00-13	25-31	M25235
FILTER	GALLEY CHILLER AIR FILTER	ALL		165/200		8,48	25-3	25-33	
GALLEY	A-1 GALLEY	ALL	1	263/264		8	25-7	25-31	M25331
GALLEY	A-2 GALLEY	ALL	1	263		8	25-7	25-31	M25332
GALLEY	A-3 GALLEY	ALL	1	264		8	25-7	25-31	M25333
GALLEY	A-4 GALLEY	ALL	1	261/262		8	25-7	25-31	M25334
GALLEY	F-1 GALLEY	ALL	1	224		8	25-7	25-31	M25131
GALLEY	F-2 GALLEY	ALL	1	223/224		8	25-7	25-31	M25132
GALLEY	F-3 GALLEY	ALL	1	224		8	25-7	25-31	M25133

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 25	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
GALLEY	F-4 GALLEY	ALL	1	223		8	25-7	25-31	M25134
GALLEY	F-5 GALLEY	ALL	1	223/224		8	25-7	25-31	M25137
GALLEY	M-1 GALLEY	ALL	1	231/232		8	25-7	25-31	M25231
GALLEY	M-2 GALLEY	ALL	1	233/234		8	25-7	25-31	M25232
GALLEY	MS-1 GALLEY	ALL	1	232		8	25-7	25-31	M25233
GALLEY	MS-2 GALLEY	ALL	1	231		8	25-7	25-31	M25234
GALLEY	MS-3 GALLEY	ALL	1	234		8	25-7	25-31	
GALLEY	MS-4 GALLEY	ALL	1	233		8	25-7	25-31	
GAUAGE	ESCAPE SLIDE INFLATION BOTTLE GAUGE	ALL	8	830/840		8	25-10	25-66	
GUIDE	AFT LATERAL GUIDE - AFT CARGO	ALL	4	150		8,48(824)	25-12	25-53	
GUIDE	AFT LATERAL GUIDE - FWD CARGO	ALL	4	120		8,48(821)	25-12	25-53	
GUIDE	FWD LATERAL GUIDE - AFT CARGO	ALL		150		8,48(824)	25-12	25-53	
GUIDE	FWD LATERAL GUIDE - FWD CARGO	ALL	3	120		8,48(821)	25-12	25-53	
JOYSTICK	CARGO CONTROL JOYSTICK - AFT	ALL	1	152		14(152BR)	25-11	25-53	S25101
JOYSTICK	CARGO CONTROL JOYSTICK - FWD	ALL	1	122		9(122BR)	25-11	25-53	S25001
LATCH	STOWAGE BIN LATCH	ALL		200		8	25-5	25-28	
LAVATORY	LAVATORY MODULE - CENTER	ALL	1	200		8	25-9	25-41	
LAVATORY	LAVATORY MODULE - OUTBOARD	ALL	1	200		8	25-9	25-41	
LIGHT	BAY A ON LIGHT - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	L25108
LIGHT	BAY B ON LIGHT - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	L25107

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 25	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
LIGHT	BAY C ON LIGHT - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	L25106
LIGHT	BAY D ON LIGHT - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	L25008
LIGHT	BAY E ON LIGHT - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	L25007
LIGHT	BAY F ON LIGHT - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	L25006
LIGHT	BAY G ON LIGHT - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	L25103
LIGHT	BAY G ON LIGHT - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	L25005
LIGHT	BAY H ON LIGHT - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	L25004
LIGHT	BAY I ON LIGHT - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	L25003
LIGHT	CONTROL PANEL AREA LIGHT - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	L25101
LIGHT	CONTROL PANEL AREA LIGHT - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	L25001
LIGHT	EVACUATION LIGHT	ALL	8	200		8	25-2	25-63	
LIGHT	SYSTEM POWER ON LED - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	L25102
LIGHT	SYSTEM POWER ON LED - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	L25002
LOCK	CENTER STOP/LOCK 1 - AFT CARGO	ALL	1	150		8,48(824)	25-12	25-53	M25033
LOCK	CENTER STOP/LOCK 1 - FWD CARGO	ALL	1	120		48(821)	25-12	25-53	M25017
LOCK	CENTER STOP/LOCK 2 - AFT CARGO	ALL	1	150		8,48(824)	25-12	25-53	M25034
LOCK	CENTER STOP/LOCK 2 - FWD CARGO	ALL	1	120		48(821)	25-12	25-53	M25018
LOCK	DOUBLE PALLET LOCK	ALL		120/150		48(821),48(824)	25-12	25-53	
LOCK	RETRACTABLE GUIDE ROLLER/LOCK - FWD	ALL	1	120		48(821)	25-12	25-53	M25007
LOCK	RETRACTABLE GUIDE ROLLER/LOCK - AFT	OPTIONAL	1	150		8,48(824)	25-12	25-53	M25023

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 25	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
LOCK	ROLLOUT STOP/LOCK - AFT CARGO	ALL		150		8,48(824)	25-12	25-53	
LOCK	ROLLOUT STOP/LOCK - FWD CARGO	ALL	3	120		8,48(821)	25-12	25-53	
LOCK	SINGLE PALLET LOCK	ALL		120/150		48(821),48(824)	25-12	25-53	
OUTLET	SHAVER OUTLET	ALL		200		8	25-9	25-42	
MODULE	LOWER LOBE ATTENDANT'S REST MODULE	OPTIONAL	1	152		8	25-13	25-29	
PANEL	BALL PANEL, AFT - AFT CARGO	OPTIONAL	2	150		8,48(824)	25-12	25-53	
PANEL	BALL PANEL, AFT - FWD CARGO	ALL	2	120		8,48(821)	25-12	25-53	
PANEL	BALL PANEL, FORWARD - AFT CARGO	ALL	3	150		8,48(824)	25-12	25-53	
PANEL	BALL PANEL, FORWARD - FWD CARGO	ALL	3	120		8,48(821)	25-12	25-53	
PANEL	EMERGENCY EVAC PANEL	ALL	1	200	P8	8	25-2	25-63	M25068
PANEL	CARGO HANDLING ACCESSORY PNL - AFT	ALL	1	152	P39	8,48(824)	00-18,25-11	25-53	P39
PANEL	CARGO HANDLING ACCESSORY PNL - FWD	ALL	1	122	P35	8,48(821)	00-18,25-11	25-53	P35
PANEL	CARGO HANDLING CONTROL PANEL (P24) - FWD	ALL	1	122	P24	9(122BR)	25-11	25-53	P24
PANEL	CARGO HANDLING CONTROL PANEL (P27) - AFT	ALL	1	152	P27	14(152BR)	25-11	25-53	P27
PDU	LATERAL PDU - AFT CARGO	ALL		150		8,48(824)	25-12	25-53	
PDU	LATERAL PDU - FWD CARGO	ALL	6	120		8,48(821)	25-12	25-53	
PDU	LONGITUDINAL PDU - AFT CARGO	ALL		150		8,48(824)	25-12	25-53	
PDU	LONGITUDINAL PDU - FWD CARGO	ALL	28	120		8,48(821)	25-12	25-53	
PIN	ESCAPE SLIDE LACING COVER SAFETY PIN	ALL	8	830/840		48	25-10	25-66	
PSU	GASPER AIR PSU	OPTIONAL		200		8	25-4	25-23	

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 25	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PSU	OXYGEN PSU	ALL		200		8	25-4	25-23	
PSU	READING LIGHTS PSU	ALL		200		8	25-4	25-23	
RAIL	SIDE GUIDE RAIL	ALL		120/150		48(821),48(824)	25-12	25-53	
RELAY	DOOR 1 GALLEY DC PWR RELAY	ALL	1	118	P210	8,9(117AL)	00-15	25-31	K25003
RELAY	DOOR 2 GALLEY DC PWR RELAY	ALL	1	117	P110	8,9(117AL)	00-14	25-31	K25005
RELAY	DOOR 4L CHILLER CONTROL RELAY	ALL	1	117	P110	8,9(117AL)	00-14	25-31	K25007
RELAY	DOOR 4L GALLEY DC PWR RELAY	ALL	1	117	P110	8,9(117AL)	00-14	25-31	K25006
RELAY	DOOR 4R GALLEY DC PWR RELAY	ALL	1	118	P210	8,9(117AL)	00-15	25-31	K25008
RELAY	SYSTEM POWER RELAY, L	ALL	1	122	P35	8,48(821)	00-18	25-53	K25001
RELAY	SYSTEM POWER RELAY, L	ALL	1	152	P39	8,48(824)	00-18	25-53	K25101
RELAY	SYSTEM POWER RELAY, R	ALL	1	122	P35	8,48(821)	00-18	25-53	K25002
RELAY	SYSTEM POWER RELAY, R	ALL	1	152	P39	8,48(824)	00-18	25-53	K25102
ROLLER	GUIDE ROLLERS	ALL		120/150		48(821),48(824)	25-12	25-53	
ROLLER	SILL ROLLER	ALL		120/150		48(821),48(824)	25-12	25-53	
ROPE	ESCAPE ROPES	ALL	2	211/212		8	25-2	25-61	
SEAT	ATTENDANT SEAT	ALL		200		8	25-6	25-25	
SEAT	CAPTAIN SEAT	ALL	1	211		8	25-1	25-11	M25059
SEAT	ECONOMY PASSENGER SEAT	ALL		200		8	25-6	25-25	
SEAT	FIRST CLASS SEAT	ALL		200		8	25-6	25-25	
SEAT	FIRST OBSERVERS SEAT	ALL	1	211		8	25-1	25-11	

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 25	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SEAT	FIRST OFFICER SEAT	ALL	1	212		8	25-1	25-11	M25058
SEAT	SECOND OBSERVERS SEAT	ALL		212		8	25-1	25-11	
SLIDE	DOOR-MOUNTED ESCAPE SLIDE	ALL	8	830/840		48	25-10	25-66	
SNUBBER	STOWAGE BIN UPPER SNUBBER	ALL		200		8	25-5	25-28	
STOP	END STOP	ALL	22	120/150		48(821),48(824)	25-12	25-53	
STOP	PARTIAL LOAD STOPS	ALL		120/150		48(821),48(824)	25-12	25-53	
SWITCH	BAY A OFF SWITCH - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	S25112
SWITCH	BAY G OFF SWITCH - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	S25107
SWITCH	BAY I OFF SWITCH - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25007
SWITCH	BAYS B-A OFF SWITCH - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	S25111
SWITCH	BAYS C-A OFF SWITCH - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	S25110
SWITCH	BAYS D-I OFF SWITCH - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25012
SWITCH	BAYS E-I OFF SWITCH - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25011
SWITCH	BAYS F-I OFF SWITCH - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25010
SWITCH	BAYS G-I OFF SWITCH - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25009
SWITCH	BAYS H-I OFF SWITCH - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25008
SWITCH	EVACUATION COMAND SWITCH	ALL		200		8	25-2	25-63	
SWITCH	HORN SHUTOFF SWITCH	ALL		200		8	25-2	25-63	
SWITCH	LOCK/LOAD/UNLOAD SWITCH - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	S25103
SWITCH	LOCK/LOAD/UNLOAD SWITCH - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25003

ATA 25	EQUIPMENT / FURNISHINGS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 25	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	PALLET/CONTAINER SW - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25006
SWITCH	PDU FWD/AFT SWITCH - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	S25105
SWITCH	PDU FWD/AFT SWITCH - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25005
SWITCH	PDU LEFT/RIGHT SWITCH - AFT CARGO	ALL	1	152	P27	14(152BR)	25-11	25-53	S25104
SWITCH	PDU LEFT/RIGHT SWITCH - FWD CARGO	ALL	1	122	P24	9(122BR)	25-11	25-53	S25004
SWITCH	SECONDARY JOYSTICK SWITCH - AFT CARGO	ALL	1	152		8,48(824)	25-11	25-53	S25115
SWITCH	SECONDARY JOYSTICK SWITCH- FWD CARGO	ALL	1	122		8,48(821)	25-11	25-53	S25015
SWITCH	STOP/LOCKS LOCK/UNLOCK SWITCH - AFT CARGO	ALL	1	152		8,48(824)	25-11	25-53	S25116
SWITCH	STOP/LOCKS LOCK/UNLOCK SWITCH - FWD CARGO	ALL	1	122		8,48(821)	25-11	25-53	S25016
SWITCH	SYSTEM POWER SWITCH - AFT CARGO	ALL	1	152		8,48(824)	25-11	25-53	S25102
SWITCH	SYSTEM POWER SWITCH- FWD CARGO	ALL	1	122		8,48(821)	25-11	25-53	S25002
TRANSMITTER	EMERGENCY LOCATOR TRANSMITTER	ALL	8	830/840		48	25-10	25-63	
TRAY	ROLLER TRAY	ALL		120/150		48(821),48(824)	25-12	25-53	

ATA 26	FIRE PROTECTION					ACCESS PAGE (PNL/DOOR)	REC- OGN- ITION PAGE	ATA 26	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
BOTTLE	APU FIRE BOTTLE	ALL	1	313		28(311AL)	26-10	26-22	B26003
BOTTLE	CARGO FIRE BOTTLE 1A	ALL	1	124		8,48(821)	26-4	26-23	B26013
BOTTLE	CARGO FIRE BOTTLE 1B	ALL	1	124		8,48(821)	26-4	26-23	B26014
BOTTLE	CARGO FIRE BOTTLE 2A	ALL	1	124		8,48(821)	26-4	26-23	B26015
BOTTLE	CARGO FIRE BOTTLE 2B	ALL	1	124		8,48(821)	26-4	26-23	B26016
BOTTLE	CARGO FIRE BOTTLE 2C	ALL	1	124		8,48(821)	26-4	26-23	B26017
BOTTLE	ENGINE FIRE BOTTLE 1	ALL	1	124		8,48(821)	26-5	26-21	B26001
BOTTLE	ENGINE FIRE BOTTLE 2	ALL	1	124		8,48(821)	26-5	26-21	B26002
CARD	APU FIRE DETECTION CARD	ALL	1	115	P85	8,9(117AL)	00-9,26-2	26-15	P00085A009
CARD	DLODS CONTROL CARD, C	ALL	1	116	P84	8,9(117AL)	00-9,26-2	26-18	P00084A008
CARD	DLODS CONTROL CARD, L	ALL	1	115	P85	8,9(117AL)	00-9,26-2	26-18	P00085A005
CARD	DLODS CONTROL CARD, R	ALL	1	116	P84	8,9(117AL)	00-9,26-2	26-17	P00084A005
CARD	ENGINE FIRE DETECTION CARD, L	ALL	1	115	P85	8,9(117AL)	00-9,26-2	26-11	P00085A010
CARD	ENGINE FIRE DETECTION CARD, R	ALL	1	116	P84	8,9(117AL)	00-9,26-2	26-11	P00084A010
CARD FILE	SYSTEM CARD FILE (P84), R	ALL	1	116	P84	8,9(117AL)	00-9,26-2	26-11	
CARD FILE	SYSTEM CARD FILE (P85), L	ALL	1	115	P85	8,9(117AL)	00-9,26-2	26-11	
CIRCUIT BREAKER	AFT CARGO SMOKE CTRL CHANL 2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	26-16	C26416
CIRCUIT BREAKER	AFT CARGO SMOKE CTRL CHANNEL 1 - CB	ALL	1	117	P110	8,9(117AL)	00-14	26-16	C26414
CIRCUIT BREAKER	APU RMT FIRE IND/AUTO DISCH ARM - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-15	C26623
CIRCUIT BREAKER	FIRE EXT APU - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-22	C26636

ATA 26	FIRE PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 26	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	FIRE EXT CARGO BTL 1A & VLV SQB - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-23	C26638
CIRCUIT BREAKER	FIRE EXT CARGO BTL 1B & VALVE SQB - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-23	C26640
CIRCUIT BREAKER	FIRE EXT CARGO BTL 2A,2B,2C - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-23	C26639
CIRCUIT BREAKER	FIRE EXT L ENG BTL 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-21	C26633
CIRCUIT BREAKER	FIRE EXT L ENG BTL 2 - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-21	C26635
CIRCUIT BREAKER	FIRE EXT R ENG BTL 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-21	C26632
CIRCUIT BREAKER	FIRE EXT R ENG BTL 2 - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-21	C26634
CIRCUIT BREAKER	FIRE HDL UNLOCK - CB	ALL	1	117	P310	8,9(117AL)	00-16	26-20	C26612
CIRCUIT BREAKER	FWD CARGO SMOKE CTRL CHAN 1 - CB	ALL	1	117	P110	8,9(117AL)	00-14	26-16	C26413
CIRCUIT BREAKER	FWD CARGO SMOKE CTRL CHANL 2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	26-16	C26415
CIRCUIT BREAKER	LAV SMOKE DETECTOR LEFT - CB	ALL	1	117	P110	8,9(117AL)	00-14	26-13	C26621
CIRCUIT BREAKER	LAV SMOKE DETECTOR RIGHT - CB	ALL	1	118	P210	8,9(117AL)	00-15	26-13	C26619
CONTROLLER	AFT CARGO ZONE 1 SMK DET HTR CONTROLLER	ALL	1	152		48(823/824)	26-3	26-16	M26721
CONTROLLER	AFT CARGO ZONE 2 SMK DET HTR CONTROLLER	ALL	1	152		48(823/824)	26-3	26-16	M26722
CONTROLLER	AFT CARGO ZONE 3 SMK DET HTR CONTROLLER	ALL	1	152		48(823/824)	26-3	26-16	M26723
CONTROLLER	FWD CARGO ZONE 1 SMK DET HTR CONTROL- LER	ALL	1	122		48(821)	26-3	26-16	M26711
CONTROLLER	FWD CARGO ZONE 2 SMK DET HTR CONTROL- LER	ALL	1	122		48(821)	26-3	26-16	M26712
CONTROLLER	FWD CARGO ZONE 3 SMK DET HTR CONTROL- LER	ALL	1	122		48(821)	26-3	26-16	M26713

ATA 26	FIRE PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 26	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
DETECTOR	AFT CARGO SMOKE DETECTOR	ALL	1	151		8,48(824)	26-3	26-16	M26061
DETECTOR	APU DETECTOR - UPPER AFT	ALL	1	315		28(315AL)	26-10	26-15	M26010
DETECTOR	APU FIRE DETECTOR - LOWER	ALL	1	315		28(315AL)	26-10	26-15	M26009
DETECTOR	APU FIRE DETECTOR - UPPER FWD	ALL	1	315		28(3315AL)	26-10	26-15	M26008
DETECTOR	BODY LOOP 1 DUCT LEAK DETECTOR	ALL	12				26-7	26-18	
DETECTOR	BODY LOOP 2 DUCT LEAK DETECTOR	ALL	12				26-7	26-18	
DETECTOR	E/E COOLING SMOKE DETECTOR	ALL	1	118		8,9(117AL)	26-5	26-19	M26231
DETECTOR	ENGINE CORE FIRE DETECTOR, L	ALL	2	411/421		29	26-8	26-11	M26023
DETECTOR	ENGINE CORE FIRE DETECTOR, LWR AFT	ALL	2	411/421		29	26-8	26-11	M26022
DETECTOR	ENGINE CORE FIRE DETECTOR, R	ALL	2	411/421		29	26-8	26-11	M26021
DETECTOR	ENGINE GEARBOX FIRE DETECTOR, L	ALL	2	411/421		29	26-8	26-11	M26018
DETECTOR	ENGINE GEARBOX FIRE DETECTOR, R	ALL	2	411/421		29	26-8	26-11	M26019
DETECTOR	ENGINE ZONE 2 FIRE DETECTOR	ALL	2	411/421		29	26-8	26-11	M26020
DETECTOR	FAN CASE OVERHEAT DETECTOR	ALL	2	411/421		29	26-8	26-18	M26100
DETECTOR	FWD CARGO SMOKE DETECTOR	ALL	1	121		8,48(821)	26-3	26-16	M26060
DETECTOR	LAVATORY SMOKE DETECTOR - (1 EACH LAVA- TORY)	ALL		200		8	26-6	26-13	
DETECTOR	STRUT LOOP 1 OVERHEAT DETECTOR (L WING)	ALL	1	511		31,33	26-7	26-18	M26101
DETECTOR	STRUT LOOP 1 OVERHEAT DETECTOR (R WING)	ALL	1	611		31,33	26-7	26-18	M26201
DETECTOR	STRUT LOOP 2 OVERHEAT DETECTOR (L WING)	ALL	1	511		31,33	26-7	26-18	M26104

ATA 26	FIRE PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 26	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
DETECTOR	STRUT LOOP 2 OVERHEAT DETECTOR (R WING)	ALL	1	611		31,33	26-7	26-18	M26204
DETECTOR	STRUT OVERHEAT DETECTOR, AFT (L STRUT)	ALL	1	431		29	26-7	26-18	M26103
DETECTOR	STRUT OVERHEAT DETECTOR, FWD (L STRUT)	ALL	1	431		29	26-7	26-18	M26102
DETECTOR	STRUT OVERHEAT DETECTOR, AFT (R STRUT)	ALL	1	441		29	26-7	26-18	M26203
DETECTOR	STRUT OVERHEAT DETECTOR, FWD (R STRUT)	ALL	1	441		29	26-7	26-18	M26202
DETECTOR	WHEEL WELL LOOP 1 FIRE DETECTOR, L	ALL	1	143		8	26-9	26-17	M26031
DETECTOR	WHEEL WELL LOOP 1 FIRE DETECTOR, R	ALL	1	144		8	26-9	26-17	M26030
DETECTOR	WHEEL WELL LOOP 2 FIRE DETECTOR, L	ALL	1	143		8	26-9	26-17	M26033
DETECTOR	WHEEL WELL LOOP 2 FIRE DETECTOR, R	ALL	1	144		8	26-9	26-17	M26032
DETECTOR	WING LOOP 1 DUCT LEAK DETECTOR, L	ALL	5	511		31,12(195EL)	26-7	26-18	
DETECTOR	WING LOOP 1 DUCT LEAK DETECTOR, R	ALL	5	611		31,12(196ER)	26-7	26-18	
DETECTOR	WING LOOP 2 DUCT LEAK DETECTOR, L	ALL	5	511		31,12(195EL)	26-7	26-18	
DETECTOR	WING LOOP 2 DUCT LEAK DETECTOR, R	ALL	5	611		31,12(196ER)	26-7	26-18	
EXTINGUISHER	HALON FIRE EXTINGUISHER	ALL		200		8	26-6	26-26	
EXTINGUISHER	WATER FIRE EXTINGUISHER	ALL		200		8	26-6	26-26	
FAN	AFT CARGO SMOKE DETECTOR FAN	ALL	2	152		8,48(824)	26-3	26-16	
FAN	FWD CARGO SMOKE DETECTOR FAN	ALL	2	122		8,48(821)	26-3	26-16	
HEATER	AFT CARGO ZONE 1 SMOKE DETECTOR HEATER	ALL	1	152		48(823/824)	26-3	26-16	B26721
HEATER	AFT CARGO ZONE 2 SMOKE DETECTOR HEATER	ALL	1	152		48(823/824)	26-3	26-16	B26722
HEATER	AFT CARGO ZONE 3 SMOKE DETECTOR HEATER	ALL	1	152		48(823/824)	26-3	26-16	B26723

ATA 26	FIRE PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 26	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
HEATER	FWD CARGO ZONE 1 SMOKE DETECTOR HEATER	ALL	1	122		48(821)	26-3	26-16	B26711
HEATER	FWD CARGO ZONE 2 SMOKE DETECTOR HEATER	ALL	1	122		48(821)	26-3	26-16	B26712
HEATER	FWD CARGO ZONE 3 SMOKE DETECTOR HEATER	ALL	1	122		48(821)	26-3	26-16	B26713
HORN	APU FIRE WARNING HORN	ALL	1	711	P40	3	26-9	26-15	B26501
INDICATOR	TEMPERATURE INDICATOR STRIP(LAVATORIES)	ALL		200		8	26-6	26-24	
LIGHT	APU FIRE EXT BOTTLE DISCH LIGHT	ALL	1	711	P40	3	26-9	26-22	M26002L001
LIGHT	APU FIRE WARNING LIGHT	ALL	1	711	P40	3	26-9	26-15	L26502
LIGHT	APU FIRE BOTTLE ARMED LIGHT	ALL	1	711	P40	3	26-9	26-22	L26503
LIGHT	APU REMOTE FIRE BOTTLE DISCH LIGHT	ALL	1	711	P40	3	26-9	26-22	L26504
LIGHT	ENGINE BOTTLE 1 DISCH LIGHT	ALL	1	210	P8	8	00-3,26-1	26-21	M26063
LIGHT	ENGINE BOTTLE 2 DISCH LIGHT	ALL	1	210	P8	8	00-3,26-1	26-21	M26063L001
LIGHT	MASTER WARNING CAUTION LIGHTS	ALL	2	211/212	P7	8	00-2,26-1	26-11	
PANEL	CARGO FIRE/ENGINE CONTROL PANEL	ALL	1	212	P5	8	00-3,26-1	26-22	M80001
PANEL	ENGINE FIRE PANEL	ALL	1	210	P8	8	00-3,26-1	26-21	M26063L002
REGULATOR	CARGO FIRE EXTINGUISHING FILTER/REGULA- TOR	ALL	1	124		8,48(821)	26-4	26-23	
RELAY	APU AUTO FIRE BOTTLE DISCHARGE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	26-22	K26403
RELAY	APU HORN INTERRUPTER RELAY	ALL	1	117	P310	8,9(117AL)	00-16	26-15	K26402

ATA 26	FIRE PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 26	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	APU REMOTE WARNING RELAY	ALL	1	117	P310	8,9(117AL)	00-16	26-22	K26401
RELAY	BOTTLE 1A, 1B SQUIB CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	26-23	K26009
RELAY	BOTTLE 2A SQUIB CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	26-23	K26007
RELAY	BOTTLE 2B, 2C SQUIB CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	26-23	K26008
RELAY	SQUIB TEST CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	26-23	K26010
SPEAKER	AURAL WARNING SPEAKER	ALL	2	211/212		8	26-1	26-11	
SQUIB	APU FIRE EXT BOTTLE SQUIB	ALL	1	313		28 (311AL)	26-10	26-22	B26003B001
SQUIB	CARGO FIRE BOTTLE 1A SQUIB	ALL	1	124		8,48(821)	26-4	26-23	B26013B001
SQUIB	CARGO FIRE BOTTLE 1B SQUIB	ALL	1	124		8,48(821)	26-4	26-23	B26014B001
SQUIB	CARGO FIRE BOTTLE 2A SQUIB	ALL	1	124		8,48(821)	26-4	26-23	B26015B002
SQUIB	CARGO FIRE BOTTLE 2B SQUIB	ALL	1	124		8,48(821)	26-4	26-23	B26016B002
SQUIB	CARGO FIRE BOTTLE 2C SQUIB	ALL	1	124		8,48(821)	26-4	26-23	B26017B002
SQUIB	ENGINE FIRE EXT BOTTLE 1 SQUIB, L	ALL	1	124		8,48(821)	26-5	26-21	B26001B001
SQUIB	ENGINE FIRE EXT BOTTLE 1 SQUIB, R	ALL	1	124		8,48(821)	26-5	26-21	B26001B002
SQUIB	ENGINE FIRE EXT BOTTLE 2 SQUIB, L	ALL	1	124		8,48(821)	26-5	26-21	B26002B001
SQUIB	ENGINE FIRE EXT BOTTLE 2 SQUIB, R	ALL	1	124		8,48(821)	26-5	26-21	B26002B002
SWITCH	AFT CARGO FIRE ARM SWITCH	ALL	1	212	P5	8	00-3,26-1	26-23	M80001S002
SWITCH	AFT CARGO FIRE EXT INLINE PRESSURE SWITCH	ALL	1	124		8,48(821)	26-4	26-23	S26003
SWITCH	APU FIRE BOTTLE REMOTE DISCHARGE SWITCH	ALL	1	711	P40	3	26-9	26-22	S26505

ATA 26	FIRE PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 26	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	APU FIRE SWITCH	ALL	1	212	P5	8	00-3,26-1	26-20	S26401
SWITCH	CARGO FIRE BOTTLE 1A PRESSURE SWITCH	ALL	1	124		8,48(821)	26-4	26-23	B26013S001
SWITCH	CARGO FIRE BOTTLE 1B PRESSURE SWITCH	ALL	1	124		8,48(821)	26-4	26-23	B26014S001
SWITCH	CARGO FIRE BOTTLE 2A PRESSURE SWITCH	ALL	1	124		8,48(821)	26-4	26-23	B26015S002
SWITCH	CARGO FIRE BOTTLE 2B PRESSURE SWITCH	ALL	1	124		8,48(821)	26-4	26-23	B26016S002
SWITCH	CARGO FIRE BOTTLE 2C PRESSURE SWITCH	ALL	1	124		8,48(821)	26-4	26-23	B26017S002
SWITCH	CARGO FIRE BOTTLE DISCHARGE SW	ALL	1	212	P5	8	26-1	26-23	M80001S004
SWITCH	FIRE /OVHT TEST SWITCH	ALL	1	212	P5	8	00-3,26-1	26-23	M80001S003
SWITCH	FWD CARGO FIRE ARM SWITCH	ALL	1	212	P5	8	00-3,26-1	26-23	M80001S001
SWITCH	FWD CARGO FIRE EXT INLINE PRESSURE SWITCH	ALL	1	124		8,48(821)	26-4	26-23	S26002
SWITCH	L ENGINE FIRE SWITCH	ALL	1	210	P8	8	00-4,26-1	26-20	S26101
SWITCH	R ENGINE FIRE SWITCH	ALL	1	210	P8	8	00-4,26-1	26-20	S26201
VALVE	AFT CARGO FIRE EXT FLOW VALVE	ALL	1	124		8,48(821)	26-4	26-23	V26202
WATER SEPARA- TOR	AFT CARGO ZONE 1 SMOKE DETECTOR WATER SEPARATOR	ALL	1	152		48(823/824)	26-3	26-16	
WATER SEPARA- TOR	AFT CARGO ZONE 2 SMOKE DETECTOR WATER SEPARATOR	ALL	1	152		48(823/824)	26-3	26-16	
WATER SEPARA- TOR	AFT CARGO ZONE 3 SMOKE DETECTOR WATER SEPARATOR	ALL	1	152		48(823/824)	26-3	26-16	

ATA 26	FIRE PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 26	EQUIP NUMBER
	TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC
	WATER SEPARA- TOR	FWD CARGO ZONE 1 SMOKE DETECTOR WATER SEPARATOR	ALL	1	122		48(821)	26-3	26-16
	WATER SEPARA- TOR	FWD CARGO ZONE 2 SMOKE DETECTOR WATER SEPARATOR	ALL	1	122		48(821)	26-3	26-16
	WATER SEPARA- TOR	FWD CARGO ZONE 3 SMOKE DETECTOR WATER SEPARATOR	ALL	1	122		48(821)	26-3	26-16

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACCELEROMETER	MODAL ACCELEROMETER - L	ALL	1	161		8,48(825)	27-29	27-21	M27044
ACCELEROMETER	MODAL ACCELEROMETER - R	ALL	1	162		8,48(825)	27-29	27-21	M27045
ACTUATOR	AILERON TRIM ACTUATOR	ALL	1	115		8,9(117AL)	27-5	27-11	M27127
ACTUATOR	AUTO SPDBRK ACTUATOR	ALL	1	112		8,9(112AL)	27-2	27-62	M27019
ACTUATOR	ELEV FEEL ACTUATOR - L	ALL	1	112		8,9(112AL)	27-4	27-31	M27020
ACTUATOR	ELEV FEEL ACTUATOR - R	ALL	1	112		8,9(112AL)	27-4	27-31	M27021
ACTUATOR	INBD L.E. ROTARY ACTUATOR, L	ALL	2	512		33(511CB)(511MB)	27-16	27-81	
ACTUATOR	INBD L.E. ROTARY ACTUATOR, R	ALL	2	612		33(611CB)(611MB)	27-16	27-81	
ACTUATOR	KRUEGER FLAP ROTARY ACTUATOR	ALL	2	513/613		33(513AT)(613AT)	27-13	27-81	
ACTUATOR	OUTBD L.E. ROTARY ACTUATORS, L	ALL	12	520		31	27-13	27-81	
ACTUATOR	OUTBD L.E. ROTARY ACTUATORS, R	ALL	12	620		31	27-13	27-81	
ACTUATOR	RUDDER TRIM ACTUATOR	ALL	1	115		8,9(112AL)	27-5	27-21	M27126
ACTUATOR	STICK SHAKER ACTUATOR - L	ALL	1	112		8,9(112AL)	27-4	27-31	M31105
ACTUATOR	STICK SHAKER ACTUATOR - R	ALL	1	112		8,9(112AL)	27-4	27-31	M31205
AILERON	AILERON	ALL	2	568/668		31	27-28	27-11	

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
BALLSCREW & GIMBAL	INBD FLAP BALLSCREW AND GIMBAL, L	ALL	2	141/573		8,31	27-23	27-51	
BALLSCREW & GIMBAL	INBD FLAP BALLSCREW AND GIMBAL, R	ALL	2	142/673		8,31	27-23	27-51	
BALLSCREW & GIMBAL	OUTBD FLAP BALLSCREW AND GIMBAL, L	ALL	2	576/577		31	27-25	27-51	
BALLSCREW & GIMBAL	OUTBD FLAP BALLSCREW AND GIMBAL, R	ALL	2	676/677		31	27-25	27-51	
BRAKE	RATCHET NO-BACK BRAKE	ALL	2	567/667		31	27-22	27-51	
BRAKE	STABILIZER SECONDARY BRAKE	ALL	2	311/312		28(313BL)	27-30	27-41	
CABLE	OUTBOARD SLAT SKEW CABLE	ALL		520/620		31	27-14	27-89	
CARRIAGE	OUTBD FLAP AUX. SUPPT. CARRIAGE	ALL	4	567/667		31	27-21	27-51	
CIRCUIT BREAKER	ACE L2 PWR - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27608
CIRCUIT BREAKER	AIL PCU LIB(BLK)/LOB(BYP) - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27611
CIRCUIT BREAKER	AIL TRIM ACTR - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27625
CIRCUIT BREAKER	ELEV FEEL ACTR - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27613
CIRCUIT BREAKER	ELEV PCU RIB(BLK)/ROB(BYP) - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27609
CIRCUIT BREAKER	F/C SHUTOFF TAIL, C - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27622

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	F/C SHUTOFF TAIL, L - CB	ALL	1	118	P210	8,9(117AL)	00-15	27-02	C27621
CIRCUIT BREAKER	F/C SHUTOFF TAIL, R - CB	ALL	1	118	P210	8,9(117AL)	00-15	27-02	C27623
CIRCUIT BREAKER	F/C SHUTOFF WING, C - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27619
CIRCUIT BREAKER	F/C SHUTOFF WING, L - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27618
CIRCUIT BREAKER	F/C SHUTOFF WING, R - CB	ALL	1	118	P210	8,9(117AL)	00-15	27-02	C27620
CIRCUIT BREAKER	FLAPS ELEC CTRL RLY PWR - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-51	C27631
CIRCUIT BREAKER	FLAPS ELEC MOT PWR - CB	ALL	1	117	P100	8,9(117AL)	00-13	27-51	C27301
CIRCUIT BREAKER	FLAPS PRI DR CONT 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	27-51	C27604
CIRCUIT BREAKER	FLAPS PRI DR CONT 2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	27-51	C27632
CIRCUIT BREAKER	FLPRN PCU RIB(BYP)/SPLR 4&11 - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27610
CIRCUIT BREAKER	FSEU 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	27-51	C27601
CIRCUIT BREAKER	FSEU 2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	27-51	C27602
CIRCUIT BREAKER	RUD TRIM POS IND/STAB POS IND L - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27633
CIRCUIT BREAKER	SLATS ELEC CTRL RLY PWR -CB	ALL	1	118	P210	8,9(117AL)	00-15	27-81	C27630
CIRCUIT BREAKER	SLATS ELEC MOT PWR - CB	ALL	1	118	P200	8,9(117AL)	00-13	27-81	C27300

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	SLATS PRI DR CONT 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	27-81	C27606
CIRCUIT BREAKER	SLATS PRI DR CONT 2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	27-81	C27607
CIRCUIT BREAKER	SNSR EXC 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	27-51	C27513
CIRCUIT BREAKER	SNSR EXC 2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	27-51	C27514
CIRCUIT BREAKER	STAB POS IND, R - CB	ALL	1	118	P210	8,9(117AL)	00-15	27-48	C27634
CIRCUIT BREAKER	STAB TRIM ARM R - CB	ALL	1	117	P110	8,9(117AL)	00-14	27-02	C27612
CIRCUIT BREAKER	STICK SHAKER, L - CB	ALL	1	211	P11	8	00-6	27-31	C27001
CIRCUIT BREAKER	STICK SHAKER, R - CB	ALL	1	212	P11	8	00-11	27-31	C27616
CIRCUIT BREAKER	WARN SPKR/STICK SHAKER, L - CB	ALL	1	117	P310	8,9(117AL)	00-16	27-31	C27636
CLUTCH	AUTO SPEEDBRAKE CLUTCH	ALL	1	112		8,9(112AL)	27-2	27-62	
COLUMN	CONTROL COLUMN	ALL	2	211/212		8	27-1	27-31	
COMPUTER	PRIMARY FLIGHT COMPUTER (PFC), C	ALL	1	118	E2-6	8,9(117AL)	00-12, 27-8	27-02	M27306
COMPUTER	PRIMARY FLIGHT COMPUTER (PFC), L	ALL	1	117	E1-6	8,9(117AL)	00-12, 27-8	27-02	M27106
COMPUTER	PRIMARY FLIGHT COMPUTER (PFC), R	ALL	1	122	E16-1	8	00-18, 27-8	27-02	M27206
CONTROL WHEEL	CONTROL WHEEL	ALL	2	211/212		8	27-1	27-11	

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
COUPLER	C PFC LANE 1 TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27073
COUPLER	C PFC LANE 1 TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27071
COUPLER	C PFC LANE 1 TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27072
COUPLER	C PFC LANE 2 TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27083
COUPLER	C PFC LANE 2 TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27081
COUPLER	C PFC LANE 2 TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27082
COUPLER	C PFC LANE 3 TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27093
COUPLER	C PFC LANE 3 TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27091
COUPLER	C PFC LANE 3 TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27092
COUPLER	FSEU 1 CONTROL 1C TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P311	8,9(117AL)	00-10	27-51	B27301
COUPLER	FSEU 1 CONTROL 1L TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	27-51	B27101
COUPLER	FSEU 1 MONITOR 1C TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P311	8,9(117AL)	00-10	27-51	B27302

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
COUPLER	FSEU 1 MONITOR 1L TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	27-51	B27102
COUPLER	FSEU 2 CONTROL 2C TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P311	8,9(117AL)	00-10	27-51	B27303
COUPLER	FSEU 2 CONTROL 2R TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	27-51	B27201
COUPLER	FSEU 2 MONITOR 2C TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P311	8,9(117AL)	00-10	27-51	B27304
COUPLER	FSEU 2 MONITOR 2R TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	27-51	B27202
COUPLER	L ACE TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27143
COUPLER	L ACE TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27141
COUPLER	L ACE TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27142
COUPLER	L PFC LANE 1 TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27013
COUPLER	L PFC LANE 1 TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27011
COUPLER	L PFC LANE 1 TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27012
COUPLER	L PFC LANE 2 TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27023
COUPLER	L PFC LANE 2 TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27021

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
COUPLER	L PFC LANE 2 TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27022
COUPLER	L PFC LANE 3 TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27033
COUPLER	L PFC LANE 3 TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27031
COUPLER	L PFC LANE 3 TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27032
COUPLER	L1 ACE TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27113
COUPLER	L1 ACE TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27111
COUPLER	L1 ACE TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27112
COUPLER	L2 ACE TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27123
COUPLER	L2 ACE TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27121
COUPLER	L2 ACE TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27122
COUPLER	R ACE TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27133
COUPLER	R ACE TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27131
COUPLER	R ACE TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27132
COUPLER	R PFC LANE 1 TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27043

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
COUPLER	R PFC LANE 1 TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27041
COUPLER	R PFC LANE 1 TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27042
COUPLER	R PFC LANE 2 TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27053
COUPLER	R PFC LANE 2 TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27051
COUPLER	R PFC LANE 2 TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27052
COUPLER	R PFC LANE 3 TO C SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	27-02	B27063
COUPLER	R PFC LANE 3 TO L SYSTEM ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	27-02	B27061
COUPLER	R PFC LANE 3 TO R SYSTEM ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	27-02	B27062
CRANK	CRANK & FLEX SHAFT FOR RUD PEDAL ADJ	ALL	1	211/212		8,9(112AL)	27-1	27-21	
DAMPER	COLUMN DAMPER	ALL	2	112		8,9(112AL)	27-4	27-31	
DAMPER	PEDAL DAMPER	ALL	1	116		8,9(117AL)	27-6	27-21	
DAMPER	WHEEL DAMPER	ALL	1	116		8,9(112AL)	27-5	27-11	
DRIVE UNIT	FLAP POWER DRIVE UNIT (PDU)	ALL	1	143		8	27-11	27-51	

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
DRIVE UNIT	SLAT POWER DRIVE UNIT (PDU)	ALL	1	511		33(511AB)	27-17	27-81	
ELECTRONICS	ACTUATOR CONTROL ELECTRONICS (ACE), C	ALL	1	118	E2-5	8,9(117AL)	00-12, 27-7	27-02	M27321
ELECTRONICS	ACTUATOR CONTROL ELECTRONICS (ACE), L1	ALL	1	117	E1-5	8,9(117AL)	00-12, 27-7	27-02	M27121
ELECTRONICS	ACTUATOR CONTROL ELECTRONICS (ACE), L2	ALL	1	117	E1-1	8,9(117AL)	00-12, 27-7	27-02	M27122
ELECTRONICS	ACTUATOR CONTROL ELECTRONICS (ACE), R	ALL	1	122	E5-2	8	00-18, 27-7	27-02	M27221
ELEVATOR	ELEVATOR	ALL	2	336/346		15	27-31	27-31	
FAIRING	FLAPERON FAIRING	ALL	4	575/675		31	27-27	27-11	
FAIRING	INBOARD FLAP FAIRING, L	ALL	2	571/573		31	27-24	27-51	
FAIRING	INBOARD FLAP FAIRING, R	ALL	2	671/673		31	27-24	27-51	
FAIRING	OUTBOARD FLAP FAIRING, L	ALL	2	576/577		31	27-25	27-51	
FAIRING	OUTBOARD FLAP FAIRING, R	ALL	2	676/677		31	27-25	27-51	
FLAP	INBOARD T.E. AFT FLAP	ALL	2	556/656		39	27-23	27-51	
FLAP	INBOARD T.E. FLAP	ALL	2	554/555		39	27-23	27-51	
FLAP	KRUEGER FLAP	ALL	2	513/613		31	27-13	27-81	
FLAP	OUTBOARD T.E. FLAP	ALL	2	567/667		31	27-21	27-51	

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
FLAPERON	FLAPERON	ALL	2	557/657		31	27-27	27-11	
FSEU	FLAP/SLAT ELECTRONICS (FSEU) - UNIT 1	ALL	1	117	E1-6	8,9(117AL)	00-12,27-8	27-51	M27001
FSEU	FLAP/SLAT ELECTRONICS (FSEU) - UNIT 2	ALL	1	118	E4-1	8,9(117AL)	00-11,27-8	27-51	M27002
GEAR	INBD L.E. PINION GEAR, L	ALL	2	512		33(511CB)(511MB)	27-13	27-81	
GEAR	INBD L.E. PINION GEAR, R	ALL	2	612		33(611CB)(611MB)	27-13	27-81	
GEAR	OUTBD L.E. PINION GEAR, L	ALL	12	520		31	27-13	27-81	
GEAR	OUTBD L.E. PINION GEAR, R	ALL	12	620		31	27-13	27-81	
GEARBOX	FLAP POSITION SENSOR GEARBOX, L	ALL	1	141		8	27-10	27-51	
GEARBOX	FLAP POSITION SENSOR GEARBOX, R	ALL	1	142		8	27-12	27-51	
GEARBOX	FLOOR ANGLE GEARBOX	ALL	2	121/122		8	27-17	27-81	
GEARBOX	INBD L.E. NO-BACK BRAKE OFFSET GRBX, L	ALL	2	512		33(511CB)(511MB)	27-16	27-81	
GEARBOX	INBD L.E. NO-BACK BRAKE OFFSET GRBX, R	ALL	2	612		33(611CB)(611MB)	27-16	27-81	
GEARBOX	KRUGER FLAP OFFSET GEARBOX	ALL	2	513/613		33(513AT)(613AT)	27-13	27-81	
GEARBOX	OFFSET GEARBOX-DRIVE LINE	ALL	2	511/611		33(511MB)(611MB)	27-16	27-81	
GEARBOX	OUTBD L.E. NO-BACK BRAKE OFFSET GRBX, L	ALL	11	520		31	27-13	27-81	

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
GEARBOX	OUTBD L.E. NO-BACK BRAKE OFFSET GRBX, R	ALL	11	620		31	27-13	27-81	
GEARBOX	REAR SPAR ANGLE GEARBOX	ALL	2	552/652		38(552EB)(652EB)	27-22	27-51	
GEARBOX	SIDE OF BODY ANGLE GEARBOX	ALL	2	141/142		8	27-20	27-51	
GEARBOX	STRAKELET ANGLE GEARBOX	ALL	2	511/611		33(511AB)(611AB)	27-17	27-81	
GEARBOX	T.E. FLAP REAR SPAR ANGLE GEARBOX	ALL	2	552/652		38(552EB)(652EB)	27-22	27-51	
GEARBOX	T.E. FLAP SIDE OF BODY ANGLE GEARBOX	ALL	2	141/142		8	27-20	27-51	
GEARBOX	OUTBD L.E. OFFSET GRBX W/POSN SNSRS	ALL	2	527/627		34(521ACB)(621A CB)	27-16	27-81	
INDICATOR	RUDDER TRIM INDICATOR	ALL	1	211/212	P8	8	00-4	27-21	N27003
INDICATOR	STAB POSN INDICATOR - L	ALL	1	211	P10	8	00-3, 27-2	27-48	N27001
INDICATOR	STAB POSN INDICATOR - R	ALL	1	212	P10	8	00-3, 27-2	27-48	N27002
LEVER	FLAP CONTROL LEVER	ALL	1	212	P10	8	00-3	27-51	
LEVER	SPEEDBRAKE LEVER	ALL	1	211	P10	8	00-3,27-2	27-61	
LIMITERS	FORCE LIMITERS	ALL	2	115/116		8,9(117AL)	27-5	27-11	
MECHANISM	AILERON FEEL & CENTERING MECH	ALL	1	115		8,9(117AL)	27-5	27-11	
MECHANISM	COLUMN BREAKOUT MECHANISM	ALL	2	112		8,9(112AL)	27-4	27-31	

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
MECHANISM	INBOARD FLAP, INBOARD SUPPORT MECH	ALL	2	141/142		8	27-20	27-51	
MECHANISM	INBOARD FLAP, OUTBOARD SUPPORT MECH	ALL	2	573/673		31	27-23	27-51	
MECHANISM	LATERAL CONTROL MECHANISM -L	ALL	1	115		8,9(117AL)	27-5	27-11	
MECHANISM	LATERAL CONTROL MECHANISM -R	ALL	1	116		8,9(117AL)	27-6	27-11	
MECHANISM	OUTBOARD FLAP SUPPORT MECHANISM, L	ALL	2	576/577		31	27-25	27-51	
MECHANISM	OUTBOARD FLAP SUPPORT MECHANISM, R	ALL	2	676/677		31	27-25	27-51	
MECHANISM	OUTBOARD SLAT SKEW MECHANISM	ALL	2	526/626		37(526CB)(626CB)	27-14	27-89	
MECHANISM	RTO SPEEDBRAKE MECHANISM	ALL	1	211		8	27-2	27-62	
MECHANISM	RUDDER CONTROL MECHANISM - L	ALL	1	115		8,9(117AL)	27-5	27-21	
MECHANISM	RUDDER CONTROL MECHANISM - R	ALL	1	116		8,9(117AL)	27-6	27-21	
MECHANISM	SLAT SKEW MECHANISM	ALL	2	526/626		36(526BB)(626BB)	27-14	27-89	
MECHANISM	SPOILER CTRL MECH FOR MECH SPOILER	ALL	1	141/142		8	27-9	27-61	
MODULE	STAB POSN MDL - L	ALL	1	311		28 (313BL)	27-30	27-41	M27015
MODULE	STAB POSN MDL - C	ALL	1	312		28 (313BL)	27-30	27-41	M27030
MODULE	STAB POSN MDL - R	ALL	1	312		28 (313BL)	27-30	27-41	M27031

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
MODULE	STAB TRIM CTRL MDL - C	ALL	1	311		28(313BL)	27-31	27-41	M27313
MODULE	STAB TRIM CTRL MDL - R	ALL	1	312		28(313BL)	27-31	27-41	M27213
MOTOR	FLAP ELECTRIC MOTOR	ALL	1	143		8	27-11	27-51	B27002
MOTOR	FLAP HYDRAULIC MOTOR	ALL	1	143		8	27-11	27-51	
MOTOR	SLAT ELECTRIC MOTOR	ALL	1	511		33(511AB)	27-17	27-81	B27001
MOTOR	SLAT HYDRAULIC MOTOR	ALL	1	511		33(511AB)	27-17	27-81	
MOTOR	STABILIZER HYDRAULIC MOTOR	ALL	2	311/312		28(311BL)	27-30	27-41	
PANEL	AILERON/RUDDER TRIM CTRL PNL	ALL	1	211/212	P8	8	00-4	27-11	M27036
PANEL	FLT CONT HYD PWR MAINTENANCE PNL	ALL	1	211	P61	8	00-5	27-02	M27035
PANEL	PRIMARY FLIGHT COMPUTERS/ADIRU PANEL	ALL	1	211	P5	8	00-3	27-02	M27042
PEDAL	RUDDER PEDALS	ALL	4	211/212		8	27-1	27-21	
PWR CNTL UNIT	AILPOWER CONTROL UNIT (PCU)-LIB	ALL	1	561		41(561NB)	27-28	27-11	M27108
PWR CNTL UNIT	AIL POWER CONTROL UNIT (PCU)-LOB	ALL	1	561		41(561PB)	27-28	27-11	M27107
PWR CNTL UNIT	AIL POWER CONTROL UNIT (PCU)-RIB	ALL	1	661		41(661NB)	27-28	27-11	M27208
PWR CNTL UNIT	AIL POWER CONTROL UNIT (PCU)-ROB	ALL	1	661		41(661PB)	27-28	27-11	M27207

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PWR CNTL UNIT	ELEV POWER CONTROL UNIT (PCU)-LIB	ALL	1	335		17(335EB)	27-32	27-31	M27112
PWR CNTL UNIT	ELEV POWER CONTROL UNIT (PCU)-LOB	ALL	1	335		17(335FB)	27-32	27-31	M27111
PWR CNTL UNIT	ELEV POWER CONTROL UNIT (PCU)-RIB	ALL	1	345		17(345EB)	27-32	27-31	M27212
PWR CNTL UNIT	ELEV POWER CONTROL UNIT (PCU)-ROB	ALL	1	345		17(345FB)	27-32	27-31	M27211
PWR CNTL UNIT	FLPRN POWER CONTROL UNIT (PCU)-LIB	ALL	1	557		38(552HB)	27-27	27-11	M27110
PWR CNTL UNIT	FLPRN POWER CONTROL UNIT (PCU)-LOB	ALL	1	557		38(552LB)	27-27	27-11	M27109
PWR CNTL UNIT	FLPRN POWER CONTROL UNIT (PCU)-RIB	ALL	1	657		38(652HB)	27-27	27-11	M27210
PWR CNTL UNIT	FLPRN POWER CONTROL UNIT (PCU)-ROB	ALL	1	657		38(652LB)	27-27	27-11	M27209
PWR CNTL UNIT	RUDDER POWER CONTROL UNIT (PCU)-LOWER	ALL	1	324		26(324DL)	27-32	27-21	M27009
PWR CNTL UNIT	RUDDER POWER CONTROL UNIT (PCU)-MIDDLE	ALL	1	324		26(324EL)	27-32	27-21	M27008
PWR CNTL UNIT	RUDDER POWER CONTROL UNIT (PCU)-UPPER	ALL	1	324		26(324FL)	27-32	27-21	M27007
PWR CNTL UNIT	SPOILER NO. 1 POWER CONTROL UNIT (PCU)	ALL	1	566		31	27-19	27-61	M27116
PWR CNTL UNIT	SPOILER NO. 2 POWER CONTROL UNIT (PCU)	ALL	1	565		31	27-19	27-61	M27117
PWR CNTL UNIT	SPOILER NO. 3 POWER CONTROL UNIT (PCU)	ALL	1	564		31	27-19	27-61	M27118
PWR CNTL UNIT	SPOILER NO. 4 POWER CONTROL UNIT (PCU)	ALL	1	563		31	27-19	27-61	M27119

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PWR CNTL UNIT	SPOILER NO. 5 POWER CONTROL UNIT (PCU)	ALL	1	562		31	27-19	27-61	M27120
PWR CNTL UNIT	SPOILER NO. 6 POWER CONTROL UNIT (PCU)	ALL	1	552		38(552EB)	27-19	27-61	M27114
PWR CNTL UNIT	SPOILER NO. 7 POWER CONTROL UNIT (PCU)	ALL	1	552		38(552CB)	27-19	27-61	M27115
PWR CNTL UNIT	SPOILER NO. 8 POWER CONTROL UNIT (PCU)	ALL	1	652		38(652CB)	27-19	27-61	M27215
PWR CNTL UNIT	SPOILER NO. 9 POWER CONTROL UNIT (PCU)	ALL	1	652		38(652EB)	27-19	27-61	M27214
PWR CNTL UNIT	SPOILER NO. 10 POWER CONTROL UNIT (PCU)	ALL	1	662		31	27-19	27-61	M27220
PWR CNTL UNIT	SPOILER NO. 11 POWER CONTROL UNIT (PCU)	ALL	1	663		31	27-19	27-61	M27219
PWR CNTL UNIT	SPOILER NO. 12 POWER CONTROL UNIT (PCU)	ALL	1	664		31	27-19	27-61	M27218
PWR CNTL UNIT	SPOILER NO. 13 POWER CONTROL UNIT (PCU)	ALL	1	665		31	27-19	27-61	M27217
PWR CNTL UNIT	SPOILER NO. 14 POWER CONTROL UNIT (PCU)	ALL	1	666		31	27-19	27-61	M27216
QUADRANT	SPOILER FORWARD QUADRANT	ALL	1	116		8,9(117AL)	27-6	27-61	
QUADRANT	SPOILER PCU QUADRANT	ALL	2	563/663		31	27-18	27-61	
QUADRANT	STABILIZER QUADRANT	ALL	2	115/116		8,9(112AL)	27-4	27-41	
RELAY	AUTO SPDBRK ARM RELAY	ALL	1	113		8,9(112AL)	27-3	27-61	K27010
RELAY	AUTO SPDBRK CTRL RELAY	ALL	1	113		8,9(112AL)	27-3	27-61	K27009

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	RELAY-FLAPS BYPASS/CLUTCH	ALL	1	117	P110	8,9(117AL)	00-14	27-51	K27002
RELAY	RELAY-FLAPS EXTEND	ALL	1	117	P110	8,9(117AL)	00-14	27-51	K27004
RELAY	RELAY-FLAPS RETRACT	ALL	1	117	P110	8,9(117AL)	00-14	27-51	K27006
RELAY	RELAY-SLATS BYPASS/CLUTCH	ALL	1	118	P210	8,9(117AL)	00-15	27-81	K27001
RELAY	RELAY-SLATS EXTEND	ALL	1	118	P210	8,9(117AL)	00-15	27-81	K27003
RELAY	RELAY-SLATS RETRACT	ALL	1	118	P210	8,9(117AL)	00-15	27-81	K27005
RELAY	STAB AUTO SHUTDOWN RELAY - C	ALL	1	113		8,9(112AL)	27-3	27-41	K27007
RELAY	STAB AUTO SHUTDOWN RELAY - R	ALL	1	113		8,9(112AL)	27-3	27-41	K27008
RUDDER	RUDDER	ALL	1	325		27	27-32	27-21	
SELECTOR	ALTERNATE FLAPS CONTROL SELECTOR	ALL	1	212	P10	8	00-3	27-51	S27053
SENSOR	FLAP LEVER POSITION SENSOR	ALL	1	212		8	27-2	27-51	M27037
SENSOR	FLAP POSITION SENSOR - 1L	ALL	1	141		8	27-10	27-58	M27101
SENSOR	FLAP POSITION SENSOR - 1R	ALL	1	142		8	27-12	27-58	M27102
SENSOR	FLAP POSITION SENSOR - 2L	ALL	1	141		8	27-10	27-58	M27201
SENSOR	FLAP POSITION SENSOR - 2R	ALL	1	142		8	27-12	27-58	M27202

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	INBD FLAP INBD SKEW SENSOR - L (4A)	ALL	1	141		8	27-20	27-59	M27329
SENSOR	INBD FLAP INBD SKEW SENSOR - L (4B)	ALL	1	141		8	27-20	27-59	M27337
SENSOR	INBD FLAP INBD SKEW SENSOR - R (5A)	ALL	1	142		8	27-20	27-59	M27328
SENSOR	INBD FLAP INBD SKEW SENSOR - R (5B)	ALL	1	142		8	27-20	27-59	M27336
SENSOR	INBD FLAP OUTBD SKEW SENSOR - L (3A)	ALL	1	573		31	27-24	27-59	M27327
SENSOR	INBD FLAP OUTBD SKEW SENSOR - L (3B)	ALL	1	573		31	27-24	27-59	M27335
SENSOR	INBD FLAP OUTBD SKEW SENSOR - R (6A)	ALL	1	673		31	27-24	27-59	M27326
SENSOR	INBD FLAP OUTBD SKEW SENSOR - R (6B)	ALL	1	673		31	27-24	27-59	M27334
SENSOR	INBD SLAT INBD SKEW SENSOR, L (7A)	ALL	1	512		33(511EB)	27-15	27-89	S27017
SENSOR	INBD SLAT INBD SKEW SENSOR, L (7B)	ALL	1	512		33(511EB)	27-15	27-89	S27019
SENSOR	INBD SLAT INBD SKEW SENSOR, R (8A)	ALL	1	612		33(611EB)	27-15	27-89	S27018
SENSOR	INBD SLAT INBD SKEW SENSOR, R (8B)	ALL	1	612		33(611EB)	27-15	27-89	S27020
SENSOR	INBD SLAT OUTBD SKEW SENSOR, L (7A)	ALL	1	512		33(511LB)	27-15	27-89	S27013
SENSOR	INBD SLAT OUTBD SKEW SENSOR, L (7B)	ALL	1	512		33(511LB)	27-15	27-89	S27015
SENSOR	INBD SLAT OUTBD SKEW SENSOR, R (8 A)	ALL	1	612		33(611LB)	27-15	27-89	S27014

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	INBD SLAT OUTBD SKEW SENSOR, R (8B)	ALL	1	612		33(611LB)	27-15	27-89	S27016
SENSOR	OUTBD FLAP INBD SKEW SENSOR - L (2A)	ALL	1	576		31	27-28	27-59	M27325
SENSOR	OUTBD FLAP INBD SKEW SENSOR-L (2B)	ALL	1	577		31	27-28	27-59	M27333
SENSOR	OUTBD FLAP INBD SKEW SENSOR - R (7A)	ALL	1	676		31	27-28	27-59	M27324
SENSOR	OUTBD FLAP INBD SKEW SENSOR - R (7B)	ALL	1	676		31	27-28	27-59	M27332
SENSOR	OUTBD FLAP OUTBD SKEW SENSOR - L (1A)	ALL	1	577		31	27-28	27-59	M27323
SENSOR	OUTBD FLAP OUTBD SKEW SENSOR - L (1B)	ALL	1	577		31	27-28	27-59	M27331
SENSOR	OUTBD FLAP OUTBD SKEW SENSOR - R (8A)	ALL	1	677		31	27-28	27-59	M27322
SENSOR	OUTBD FLAP OUTBD SKEW SENSOR - R (8B)	ALL	1	677		31	27-28	27-59	M27330
SENSOR	OUTBD L.E. OFFSET GRBX W/POSN SNRSRS	ALL	2	527/627		34(521ACB)(621A CB)	27-16	27-81	
SENSOR	OUTBD SLAT SKEW SENSOR, L (2A)	ALL	1	526		36(526CB)	27-14	27-89	S27009
SENSOR	OUTBD SLAT SKEW SENSOR, L (2B)	ALL	1	526		36(526CB)	27-14	27-89	S27011
SENSOR	OUTBD SLAT SKEW SENSOR, R -13A	ALL	1	626		36(626CB)	27-14	27-89	S27010
SENSOR	OUTBD SLAT SKEW SENSOR, R -13B	ALL	1	626		34(626CB)	27-14	27-89	S27012
SENSOR	SLAT POSITION SENSOR - 1L	ALL	1	527		34(521ACB)	27-16	27-88	M27103

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	SLAT POSITION SENSOR - 2L	ALL	1	527		34(521ACB)	27-16	27-88	M27203
SENSOR	SLAT POSITION SENSOR - 2R	ALL	1	627		34(621ACB)	27-16	27-88	M27204
SENSOR	SLAT POSITION SENSOR -1R	ALL	1	627		34(621ACB)	27-16	27-88	M27104
SLAT	INBOARD LEADING EDGE SLAT (NO. 7) - L	ALL	1	512		31	27-13	27-81	
SLAT	INBOARD LEADING EDGE SLAT (NO. 8) - R	ALL		616		31	27-13	27-81	
SLAT	OUTBOARD LEADING EDGE SLAT (NO, 9-14), R	ALL	6	620		31	27-13	27-81	
SLAT	OUTBOARD LEADING EDGE SLAT (NO. 1-6), L	ALL	6	520		31	27-13	27-81	
SOLENOID	FLAP PRIMARY CONTRO VALVE RETACT SOLE- NOID	ALL	1	142		8	27-12	27-51	V27004V004
SOLENOID	FLAP PRIMARY CONTROL VALVE BYPASS SOLE- NOID	ALL	1	142		8	27-12	27-51	V27004V005
SOLENOID	FLAP PRIMARY CONTROL VALVE EXTEND SOLE- NOID	ALL	1	142		8	27-12	27-51	V27004V002
SOLENOID	FLAP PRIMARY CONTROL VALVE LOW SPEED SOLENOID	ALL	1	142		8	27-12	27-51	V27004V003
SOLENOID	FLAP PRIMARY CONTROL VALVE SHUTOFF SOLENOID	ALL	1	142		8	27-12	27-51	V27004V001
SOLENOID	SLAT PRIMARY CONTROL VALVE BYPASS SOLE- NOID	ALL	1	141		8	27-10	27-81	V27003V005

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SOLENOID	SLAT PRIMARY CONTROL VALVE EXTEND SOLENOID	ALL	1	141		8	27-10	27-81	V27003V002
SOLENOID	SLAT PRIMARY CONTROL VALVE LOW SPEED SOLENOID	ALL	1	141		8	27-10	27-81	V27003V003
SOLENOID	SLAT PRIMARY CONTROL VALVE RETRACT SOLENOID	ALL	1	141		8	27-10	27-81	V27003V004
SOLENOID	SLAT PRIMARY CONTROL VALVE SHUTOFF SOLENOID	ALL	1	141		8	27-10	27-81	V27003V001
SOLENOID	TRIM DN ARM SOL STCM - C	ALL	1	311		28(313BL)	27-31	27-41	M27313V003
SOLENOID	TRIM DN ARM SOL STCM - R	ALL	1	312		28(313BL)	27-31	27-41	M27213V003
SOLENOID	TRIM DN CTRL SOL STCM - C	ALL	1	311		28(313BL)	27-31	27-41	M27313V001
SOLENOID	TRIM DN CTRL SOL STCM - R	ALL	1	312		28(313BL)	27-31	27-41	M27213V001
SOLENOID	TRIM RATE SOL STCM - C	ALL	1	312		28(313BL)	27-31	27-41	M27313V005
SOLENOID	TRIM RATE SOL STCM - R	ALL	1	312		28(313BL)	27-31	27-41	M27213V005
SOLENOID	TRIM RATE SOL-L STCM - C	ALL	1	311		28(313BL)	27-31	27-41	M27113V005
SOLENOID	TRIM UP ARM SOL STCM - C	ALL	1	311		28(313BL)	27-31	27-41	M27313V004
SOLENOID	TRIM UP ARM SOL STCM - R	ALL	1	312		28(313BL)	27-31	27-41	M27213V004
SOLENOID	TRIM UP CTRL SOL STCM - C	ALL	1	311		28(313BL)	27-31	27-41	M27313V002

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SOLENOID	TRIM UP CTRL SOL STCM - R	ALL	1	312		28(313BL)	27-31	27-41	M27213V002
SPOILERS	INBOARD SPOILERS, L	ALL	2	554/555		31	27-19	27-61	
SPOILERS	INBOARD SPOILERS, R	ALL	2	654/655		31	27-19	27-61	
SPOILERS	OUTBOARD SPOILERS, L	ALL	5	562/566		31	27-19	27-61	
SPOILERS	OUTBOARD SPOILERS, R	ALL	5	662/666		31	27-19	27-61	
SUPPORT	L.E. TORQUE TUBE SUPPORTS, L	ALL		511/521		31	27-16	27-81	
SUPPORT	L.E. TORQUE TUBE SUPPORTS, R	ALL		611/621		31	27-16	27-81	
SUPPORT	T.E. FLAPS TORQUE TUBE SUPPORT, L	ALL		552/561		31	27-21	27-51	
SUPPORT	T.E. FLAPS TORQUE TUBE SUPPORT, R	ALL		652/661		31	27-21	27-51	
SWITCH	ALT PITCH TRIM LVR SW, ARM ACTN	ALL	1	116		8,9(112AL)	27-4	27-41	S27046
SWITCH	ALT PITCH TRIM LVR SW, ARM DN	ALL	1	116		8,9(112AL)	27-4	27-41	S27051
SWITCH	ALT PITCH TRIM LVR SW, ARM UP	ALL	1	116		8,9(112AL)	27-4	27-41	S27050
SWITCH	ALT PITCH TRIM LVR SW, CTRL ACTN	ALL	1	116		8,9(112AL)	27-4	27-41	S27047
SWITCH	ALT PITCH TRIM LVR SW, CTRL DN	ALL	1	116		8,9(112AL)	27-4	27-41	S27049
SWITCH	ALT PITCH TRIM LVR SW, CTRL UP	ALL	1	116		8,9(112AL)	27-4	27-41	S27048

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	ALTERNATE FLAPS ARM SWITCH	ALL	1	212	P10	8	00-3	27-51	S27052
SWITCH	AUTO SPEEDBRAKE THRUST REVERSER SW	ALL	1	211		8	27-2	27-61	S27056
SWITCH	BRAKE PRESS SW STCM - C	ALL	1	311		28(313BL)	27-31	27-41	M27313S001
SWITCH	BRAKE PRESS SW STCM - R	ALL	1	312		28(313BL)	27-31	27-41	M27213S001
SWITCH	FLAP LIMIT SWITCH	ALL	1	142		8	27-12	27-51	S27004
SWITCH	STAB GREENBAND NOSE GEAR PRESS SWITCH	ALL	1	711		47	27-3	27-48	S31001
SWITCH	PITCH TRIM SWITCH - L	ALL	1	211		8	27-1	27-41	S27039
SWITCH	PITCH TRIM SWITCH - R	ALL	1	212		8	27-1	27-41	S27044
SWITCH	SLAT LIMIT SWITCH	ALL	1	511		33(511AB)	27-17	27-81	S27005
SWITCH	STAB CUTOUT SW - C	ALL	1	211	P10	8	00-3,27-2	27-41	S27055
SWITCH	STAB CUTOUT SW - R	ALL	1	211	P10	8	00-3,27-2	27-41	S27054
TORQUE TUBE	COLUMN TORQUE TUBE	ALL	2	112		8,9(112AL)	27-4	27-31	
TORQUE TUBE	L.E. TORQUE TUBE, L	ALL		511/521		31	27-16	27-81	
TORQUE TUBE	L.E. TORQUE TUBE, R	ALL		611/621		31	27-16	27-81	
TORQUE TUBE	T.E. FLAPS TORQUE TUBE, L	ALL		552/561		31	27-21	27-51	

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
TORQUE TUBE	T.E. FLAPS TORQUE TUBE, R	ALL		652/661		31	27-21	27-51	
TRACK	INBOARD SLAT MAIN TRACK, L	ALL	3	512		31	27-13	27-81	
TRACK	INBOARD SLAT MAIN TRACK, R	ALL	3	612		31	27-13	27-81	
TRACK	OUTBD FLAP AUX. SUPPORT TRACK	ALL	4	567/667		31	27-21	27-51	
TRACK	OUTBD SLAT MAIN TRACK, L	ALL	12	520		31	27-13	27-81	
TRACK	OUTBD SLAT MAIN TRACK, R	ALL	12	620		31	27-13	27-81	
TRACK	INBD L.E. SLAT AUXILIARY TRACK, L	ALL	3	512		31	27-15	27-81	
TRACK	INBD L.E. SLAT AUXILIARY TRACK, R	ALL	3	612		31	27-15	27-81	
TRANSDUCER	COLUMN FORCE XDCR ASSY - L	ALL	1	112		8,9(112AL)	27-4	27-31	M27139
TRANSDUCER	COLUMN FORCE XDCR ASSY - R	ALL	1	112		8,9(112AL)	27-4	27-31	M27239
TRANSDUCER	COLUMN POSN XDCR, L1	ALL	1	112		8,9(112AL)	27-4	27-31	M27134
TRANSDUCER	COLUMN POSN XDCR, L2	ALL	1	112		8,9(112AL)	27-4	27-31	M27135
TRANSDUCER	COLUMN POSN XDCR, L3	ALL	1	112		8,9(112AL)	27-4	27-31	M27136
TRANSDUCER	COLUMN POSN XDCR, R1	ALL	1	112		8,9(112AL)	27-4	27-31	M27234
TRANSDUCER	COLUMN POSN XDCR, R2	ALL	1	112		8,9(112AL)	27-4	27-31	M27235

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG-NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
TRANSDUCER	COLUMN POSN XDCR, R3	ALL	1	112		8,9(112AL)	27-4	27-31	M27236
TRANSDUCER	GUST SUPP PRESS XDCR-LWR	ALL	1	322		24(322DL)	27-32	27-21	M27038
TRANSDUCER	GUST SUPP PRESS XDCR-UPR	ALL	1	322		24(322EL)	27-32	27-21	M27039
TRANSDUCER	PEDAL POSN XDCR, L1	ALL	1	115		8,9(112AL)	27-5	27-21	M27137
TRANSDUCER	PEDAL POSN XDCR, L2	ALL	1	115		8,9(112AL)	27-5	27-21	M27138
TRANSDUCER	PEDAL POSN XDCR, R1	ALL	1	116		8,9(112AL)	27-6	27-21	M27237
TRANSDUCER	PEDAL POSN XDCR, R2	ALL	1	116		8,9(112AL)	27-6	27-21	M27238
TRANSDUCER	RUDDER TRIM POSITION TRANSDUCER	ALL	1	115		8,9(112AL)	27-5	27-21	M27043
TRANSDUCER	SPDBRK LEVER POSN XDCR	ALL	1	211		8	27-2	27-61	M27029
TRANSDUCER	WHEEL FORCE XDCR	ALL	1	115		8,9(117AL)	27-5	27-11	M27129
TRANSDUCER	WHEEL POSN XDCR, L1	ALL	1	115		8,9(117AL)	27-5	27-11	M27131
TRANSDUCER	WHEEL POSN XDCR, L2	ALL	1	115		8,9(117AL)	27-5	27-11	M27132
TRANSDUCER	WHEEL POSN XDCR, L3	ALL	1	115		8,9(117AL)	27-5	27-11	M27133
TRANSDUCER	WHEEL POSN XDCR, R1	ALL	1	116		8,9(117AL)	27-5	27-11	M27231
TRANSDUCER	WHEEL POSN XDCR, R2	ALL	1	116		8,9(117AL)	27-5	27-11	M27232

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
TRANSDUCER	WHEEL POSN XDCR, R3	ALL	1	116		8,9(117AL)	27-5	27-11	M27233
TRANSMISSION	INBOARD FLAP INBOARD TRANSMISSION	ALL	2	141/142		8	27-20	27-51	
TRANSMISSION	INBOARD FLAP OUTBOARD TRANSMISSION	ALL	2	573/673		31	27-23	27-51	
TRANSMISSION	OUTBOARD FLAP TRANSMISSION, L	ALL	2	576/577		31	27-25	27-51	
TRANSMISSION	OUTBOARD FLAP TRANSMISSION, R	ALL	2	676/677		31	27-25	27-51	
UNIT	ELEVATOR FEEL UNIT	ALL	2	112		8,9(112AL)	27-4	27-31	
VALVE	C HYDRAULIC SYSTEM TAIL SOV	ALL	1	141		8	27-26	27-02	V27103
VALVE	C HYDRAULIC SYSTEM WING SOV	ALL	1	141		8	27-26	27-02	V27099
VALVE	FLAP PRIMARY CONTROL VALVE	ALL	1	142		8	27-12	27-51	V27004
VALVE	FLAP/SLAT PRIORITY VALVE	ALL	1	142		8	27-11	27-51	
VALVE	L HYDRAULIC SYSTEM TAIL SOV	ALL		552		38(552JB)(552LB)	27-26	27-02	V27101
VALVE	L HYDRAULIC SYSTEM WING SOV	ALL	1	552		38(552JB)(552LB)	27-26	27-02	V27100
VALVE	MLG AUTOSLAT PRIORITY VALVE	ALL	1	142		8	27-11	27-81	V27105
VALVE	R HYDRAULIC SYSTEM TAIL SOV	ALL	1	142		8	27-26	27-02	V27102
VALVE	R HYDRAULIC SYSTEM WING SOV	ALL	1	652		34(652JB)(652LB)	27-26	27-02	V27098

ATA 27	FLIGHT CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 27	EQUIP NUMBER
	TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PINK	BLUE	CH-SEC	
	VALVE	SHUTOFF VALVE STCM - C	ALL	1	312	28(311BL)	27-31	27-41	M27313V006
	VALVE	SHUTOFF VALVE STCM - R	ALL	1	311	28(311BL)	27-31	27-41	M27213V006

3-

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACTUATOR	APU FUEL ISOLATION VALVE ACTUATOR	ALL	1	531		38	28-12	28-25	V28031
ACTUATOR	APU FUEL SHUTOFF VALVE ACTUATOR	ALL	1	531		38	28-12	28-25	V28023
ACTUATOR	DEFUEL VALVE ACTUATOR	ALL	1	631		38	28-11	28-26	V28310
ACTUATOR	ENGINE FUEL SPAR VALVE ACTUATOR, L	ALL	1	551		38(551DB)	28-9	28-22	V28164
ACTUATOR	ENGINE FUEL SPAR VALVE ACTUATOR, R	ALL	1	651		38(651DB)	28-9	28-22	V28264
ACTUATOR	FUEL JETTISON ISOLATION VALVE ACTUATOR, L	ALL	1	531		38	28-9	28-31	V28165
ACTUATOR	FUEL JETTISON ISOLATION VALVE ACTUATOR, R	ALL	1	631		38	28-9	28-31	V28265
ACTUATOR	FUEL JETTISON NOZZLE VALVE ACTR, L	ALL	1	543		37(543AB)	28-13	28-31	V28166
ACTUATOR	FUEL JETTISON NOZZLE VALVE ACTR, R	ALL	1	643		37(643AB)	28-13	28-31	V28266
ADAPTER	FUEL XFEEED VLV ADAPTER/SHAFT, FWD & AFT	ALL	2	531		37(531AB)	28-9	28-22	
ADAPTER	REFUEL ADAPTER	ALL	2 OR 4	521/621	P28	34(521DB)	28-7	28-21	
ARRESTOR	SURGE TANK VENT FLAME ARRESTOR	ALL	2	542/642		37(543BB)	28-5	28-13	
BATTERY	FUEL SPAR VALVE BATTERY	ALL	1	212		8	28-1	28-22	M28004
CIRCUIT BREAKER	L FWD FUEL BOOST PUMP - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-22	C28307
CIRCUIT BREAKER	APU FUEL S/O VALVE - CB	ALL	1	212	P11	8	00-6	28-22	C28003
CIRCUIT BREAKER	APU FUEL S/O VALVE CONTROL - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-25	C28650
CIRCUIT BREAKER	APU ISOLATION VALVE - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-25	C28638
CIRCUIT BREAKER	CTR DEFUEL VALVE-28V HOT BAT. BUS - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-26	C28637
CIRCUIT BREAKER	CTR DEFUEL VLV-28V DC GND HDLG BUS - CB	ALL	1	117	P320	8,9(117AL)	00-17	28-26	C28636
CIRCUIT BREAKER	CTR L OVRD FUEL PUMP CONT - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-22	C28647

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	CTR R OVRD FUEL PUMP CONT - CB	ALL	1	118	P210	8,9(117AL)	00-15	28-22	C28644
CIRCUIT BREAKER	DC FUEL PUMP - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-25	C28614
CIRCUIT BREAKER	FUEL BATTERY CHARGE - CB	ALL	1	212	P11	8	00-6	28-22	C28648
CIRCUIT BREAKER	FUEL CROSSFEED VALVE AFT - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-22	C28612
CIRCUIT BREAKER	FUEL CROSSFEED VALVE FWD - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-22	C28629
CIRCUIT BREAKER	FUEL QTY 1 - CB	ALL	1	118	P210	8,9(117AL)	00-15	28-21	C28625
CIRCUIT BREAKER	FUEL QTY 2 - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-21	C28624
CIRCUIT BREAKER	FUEL SHUTOFF VALVE BUS - CB	ALL	1	212	P11	8	00-6	28-22	C28649
CIRCUIT BREAKER	L AFT FUEL BOOST PUMP CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-22	C28607
CIRCUIT BREAKER	L ENGINE FUEL SPAR VALVE - CB	ALL	1	212	P11	8	00-6	28-22	C28001
CIRCUIT BREAKER	L FUEL JETTISON PUMP CONTROL - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-31	C28645
CIRCUIT BREAKER	L FWD FUEL BOOST PUMP - CB	ALL	1	117	P320	8,9(117AL)	00-17	28-22	C28301
CIRCUIT BREAKER	L FWD FUEL BOOST PUMP CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-22	C28604
CIRCUIT BREAKER	L JETTISON ISOLATION VALVE - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-31	C28631
CIRCUIT BREAKER	LEFT AFT FUEL BOOST PUMP - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-22	C28303
CIRCUIT BREAKER	LEFT JETTISON NOZZLE VALVE - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-31	C28621
CIRCUIT BREAKER	R AFT FUEL BOOST PUMP CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	28-22	C28609
CIRCUIT BREAKER	R ENGINE FUEL SPAR VALVE - CB	ALL	1	212	P11	8	00-6	28-22	C28002
CIRCUIT BREAKER	R FUEL JETTISON PUMP CONTROL - CB	ALL	1	118	P210	8,9(117AL)	00-15	28-31	C28646
CIRCUIT BREAKER	R FWD FUEL BOOST PUMP - CB	ALL	1	118	P210	8,9(117AL)	00-15	28-22	C28306

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	R FWD FUEL BOOST PUMP CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-22	C28606
CIRCUIT BREAKER	R JETTISON ISOLATION VALVE - CB	ALL	1	118	P210	8,9(117AL)	00-15	28-31	C28630
CIRCUIT BREAKER	R JETTISON NOZZLE VALVE - CB	ALL	1	118	P210	8,9(117AL)	00-15	28-31	C28620
CIRCUIT BREAKER	REFUEL QTY - CB	ALL	1	117	P320	8,9(117AL)	00-17	28-21	C28622
CIRCUIT BREAKER	REFUEL QTY - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-21	C28623
CIRCUIT BREAKER	REFUELING CONT - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-21	C28600
CIRCUIT BREAKER	REFUELING CONT - CB	ALL	1	117	P320	8,9(117AL)	00-17	28-21	C28603
CIRCUIT BREAKER	REFUELING DOOR LIGHTS - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-21	C28005
CIRCUIT BREAKER	REFUELING VALVES - CB	ALL	1	117	P310	8,9(117AL)	00-16	28-21	C28601
CIRCUIT BREAKER	REFUELING VALVES - CB	ALL	1	117	P320	8,9(117AL)	00-17	28-21	C28626
CIRCUIT BREAKER	RIGHT AFT FUEL BOOST PUMP - CB	ALL	1	118	P210	8,9(117AL)	00-15	28-22	C28300
CIRCUIT BREAKER	RIGHT FWD FUEL BOOST PUMP - CB	ALL	1	117	P110	8,9(117AL)	00-14	28-22	C28302
COUPLER	FPQU ARINC 629 R SYS BUS COUPLER	ALL	1	116	P211	8,9(117AL)	00-10	28-41	B28042
COUPLER	FQPU ARINC 629 L SYS BUS COUPLER	ALL	1	115	P111	8,9(117AL)	00-10	28-41	B28041
DENSITOMETER	DENSITOMETER - CENTER	-200IGW	1	133		10(139AL)(139AZ)	28-15	28-41	M28015
DENSITOMETER	DENSITOMETER - CENTER L	-200	1	531		37(531AB)	28-14	28-41	M28015
DENSITOMETER	DENSITOMETER - L MAIN	ALL	1	533		37(533AB)	28-14, 28-15	28-41	M28011
DENSITOMETER	DENSITOMETER - R MAIN	ALL	1	633		37(633AB)	28-14, 28-15	28-41	M28012
DETECTOR	WATER DETECTOR - CENTER L	-200	1	531		37(531AB)	28-14	28-41	M28020
DETECTOR	WATER DETECTOR - CENTER R	-200	1	631		37(631AB)	28-14	28-41	M28019

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
DETECTOR	WATER DETECTOR - CENTER	-200IGW	1	631		10(139AZ)(139AL)	28-14	28-41	M28019
DETECTOR	WATER DETECTOR - L MAIN	ALL	1	533		37(533AB)	28-14, 28-15	28-41	M28017
DETECTOR	WATER DETECTOR - R MAIN	ALL	1	633		37(633AB)	28-14, 28-15	28-41	M28016
DOOR	CENTER DRY BAY ACCESS DOOR	-200	1	125		10(139AZ)	28-3	28-11	
DOOR	CENTER TANK ACCESS DOOR	-200IGW	1	125		10(139AZ)	28-3	28-11	
DOOR	CENTER PURGE DOOR	ALL	1	143		8	28-3	28-11	
DOOR	FUEL TANK ACCESS DOOR	ALL	50	500/600		37	28-6	28-11	
DOOR	SURGE TANK ACCESS DOOR	ALL	4	500/600		37	28-6	28-11	
DRAIN	APU SHROUD DRAIN MAST	ALL	1	149		8	28-16	28-25	
DRAIN	FLAME ARRESTED DRAIN	ALL	2	542/642		37(532AB)(632AB)	28-5	28-13	
ELCU	CTR L OVRD FUEL PUMP ELCU	ALL	1	117	P100	8,9(117AL)	00-13	28-22	M28109
ELCU	CTR R OVRD FUEL PUMP ELCU	ALL	1	118	P200	8,9(117AL)	00-13	28-22	M28213
ELCU	L FUEL JETTISON PUMP ELCU	ALL	1	117	P100	8,9(117AL)	00-13	28-31	M28108
ELCU	R FUEL JETTISON PUMP ELCU	ALL	1	118	P200	8,9(117AL)	00-13	28-31	M28212
HOUSING	APU DC FUEL PUMP HOUSING	ALL	1	531		37(531BB)	28-12	28-25	
HOUSING	CTR L OVERRIDE/JETT PUMP HOUSING	ALL	1	133		10(139AL)(139AZ)	28-11	28-22	
HOUSING	CTR R OVERRIDE/JETT PUMP HOUSING	ALL	1	134		10(139AL)(139AZ)	28-11	28-22	
HOUSING	L AFT FUEL BOOST PUMP HOUSING	ALL	1	531		37(531CB)	28-10	28-22	
HOUSING	L FUEL JETTISON PUMP HOUSING	ALL	1	533		37(541AB)	28-4	28-31	
HOUSING	L FWD FUEL BOOST PUMP HOUSING	ALL	1	533		37(533DB)	28-9	28-22	

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
HOUSING	R AFT FUEL BOOST PUMP HOUSING	ALL	1	631		37(631CB)	28-10	28-22	
HOUSING	R FUEL JETTISON PUMP HOUSING	ALL	1	633		31(641AB)	28-4	28-31	
HOUSING	R FWD FUEL BOOST PUMP HOUSING	ALL	1	633		37(633DB)	28-9	28-22	
HOUSING	WATER SCAVENGE JET PUMP - CENTER	ALL	2	139		8(141,142),10(139 AL)(139AZ)	28-11	28-22	
HOUSING	WATER SCAVENGE JET PUMP - L & R MAINS	ALL	2	533/633		37(533AB)(633AB)	28-9	28-22	
LIGHT	FUELING RECEPTACLE LIGHT	ALL	4	521/621		34(521DB)(621DB)	28-7	28-21	
LIGHT	REFUELING PANEL LIGHT	ALL	1	521	P28	34(521DB)	28-7	28-21	L28039
PANEL	FUEL PANEL	ALL	1	211	P5	8	00-3,28-1	28-31	M28001
PANEL	INTEGRATED REFUEL PANEL (IRP)	ALL	1 OR 2	521/621	P28	34(521DB)	28-7	28-21	
PROBE	TEMP PROBE - LEFT MAIN	ALL	1	552		38(551DB)	28-9	28-43	M28025
PROCESSOR	FUEL QUANTITY PROCESSOR UNIT (FQPU)	ALL	1	122	E5-3	8,48(821)	00-18,28-2	28-41	M28002
PUMP	APU DC FUEL PUMP	ALL	1	531		38	28-12	28-25	M28003
PUMP	CTR L OVERRIDE/JETTISON PUMP	ALL	1	133		8	28-11	28-22	M28103
PUMP	CTR R OVERRIDE/JETTISON PUMP	ALL	1	134		8	28-11	28-22	M28203
PUMP	FUEL SCAVENGE JET PUMP	ALL	2	531/631		38	28-9	28-22	
PUMP	L AFT FUEL BOOST PUMP	ALL	1	133		38	28-10	28-22	M28102
PUMP	L FUEL JETTISON PUMP	ALL	1	552		38(552HB)	28-4	28-31	M28104
PUMP	L FWD FUEL BOOST PUMP	ALL	1	551		38(551DB)	28-9	28-22	M28101
PUMP	R AFT FUEL BOOST PUMP	ALL	1	134		38	28-10	28-22	M28202

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PUMP	R FUEL JETTISON PUMP	ALL	1	652		38(652HB)	28-4	28-31	M28204
PUMP	R FWD FUEL BOOST PUMP	ALL	1	651		38(651DB)	28-9	28-22	M28201
PUMP	WATER SCAVENGE JET PUMP - CENTER	ALL	2	133/134		8	28-11	28-22	
PUMP	WATER SCAVENGE JET PUMP - L & R MAINS	ALL	2	551/651		38(551DB)/651DB)	28-9	28-22	
RELAY	APU DC FUEL PUMP CONT RELAY	ALL	1	117	P310	8,9(117AL)	00-16	28-25	K28005
RELAY	APU EXTERNAL SHUTDOWN CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	28-25	K49002
RELAY	APU FUEL SOV CONTROL RELAY	ALL	1	223	P101	8	28-1	28-25	K28323
RELAY	APU ISOLATION VALVE CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	28-25	K28018
RELAY	APU REMOTE S/O RELAY	ALL	1	223	P101	8	28-1	28-25	K28322
RELAY	DEFUELING VALVE CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	28-26	K28319
RELAY	FUEL BOOST PUMP CONT RELAY, L AFT	ALL	1	117	P110	8,9(117AL)	00-14	28-22	K28123
RELAY	FUEL BOOST PUMP CONT RELAY, L FWD	ALL	1	117	P320	8,9(117AL)	00-17	28-22	K28121
RELAY	FUEL BOOST PUMP CONT RELAY, R AFT	ALL	1	118	P210	8,9(117AL)	00-15	28-22	K28242
RELAY	FUEL BOOST PUMP CONT RELAY, R FWD	ALL	1	117	P110	8,9(117AL)	00-14	28-22	K28241
RELAY	FUEL BOOST PUMP PWR RELAY, L FWD	ALL	1	117	P110	8,9(117AL)	00-14	28-22	K28124
RELAY	FUEL BOOST PUMP PWR RELAY, R FWD	ALL	1	118	P210	8,9(117AL)	00-15	28-22	K28245
RELAY	FUEL BST PUMP SWITCHING RLY, L FWD	ALL	1	118	P320	8,9(117AL)	00-17	28-22	K28120
RELAY	FUEL BST PUMP SWITCHING RLYR, FWD	ALL	1	117	P110	8,9(117AL)	00-14	28-22	K28243
RELAY	FUEL QTY PWR TRANSFER RELAY	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28006
RELAY	JETTISON ISOLATION VLV RELAY, L	ALL	1	117	P110	8,9(117AL)	00-14	28-31	K28144

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	JETTISON ISOLATION VLV RELAY, R	ALL	1	118	P210	8,9(117AL)	00-15	28-31	K28244
RELAY	L ENGINE FUEL SPAR VALVE CONTROL RELAY	ALL	1	223	P101	8	28-1	28-22	K28122
RELAY	OVERFILL CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28044
RELAY	R ENGINE FUEL SPAR VALVE CONTROL RELAY	ALL	1	223	P101	8	28-1	28-22	K28222
RELAY	REFUELING PANEL DOOR RELAY	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28009
RELAY	REFUELING PWR TRANSFER RELAY	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28007
RELAY	REFUELING VLV CNTRL RELAY, CTR L	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28316
RELAY	REFUELING VLV CNTRL RLY, L INBD	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28116
RELAY	REFUELING VLV CNTRL RLY, L OTBD	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28117
RELAY	REFUELING VLV CNTRL RLY, R INBD	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28216
RELAY	REFUELING VLV CNTRL RLY, R OTBD	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28217
RELAY	REFUELING VLV CONTROL RLY, CTR R	ALL	1	117	P310	8,9(117AL)	00-16	28-21	K28317
SCOOP	VENT SCOOP	ALL	2	543/643		37(543BB)	28-13	28-10	
SELECTOR	PROGRAM FUEL QUANTITY SELECTOR	ALL	1	122	E5-3	8,48(821)	28-2	28-41	M28008
STICK	FUEL QUANTITY MEASURING STICK	ALL	16	500/600		37	28-6	28-44	
SUPPLY LINE	APU FUEL SUPPLY LINE AND SHROUD	ALL	1				28-16	28-25	
SWITCH	APU DC FUEL PUMP PRESSURE SWITCH	ALL	1	531		38	28-12	28-25	S28010
SWITCH	APU FIRE SHUTDOWN SWITCH	ALL	1	711	P40	47(711)	26-9	28-25	S49003
SWITCH	BOOST PUMP PRESSURE SWITCH, L AFT	ALL	1	533		38	28-10	28-22	S28137
SWITCH	BOOST PUMP PRESSURE SWITCH, L FWD	ALL	1	551		38(551DB)	28-10	28-22	S28138

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	BOOST PUMP PRESSURE SWITCH, R AFT	ALL	1	633		38	28-10	28-22	S28237
SWITCH	BOOST PUMP PRESSURE SWITCH, R FWD	ALL	1	651		38(651DB)	28-10	28-22	S28238
SWITCH	JETTISON PUMP PRESSURE SWITCH, L	ALL	1	551		38(552HB)	28-4	28-31	S28111
SWITCH	JETTISON PUMP PRESSURE SWITCH, R	ALL	1	651		38(652HB)	28-4	28-31	S28211
SWITCH	OVRD/JETTISON PUMP PRESS SWITCH, CTR L	ALL	1	133		8	28-11	28-22	S28110
SWITCH	OVRD/JETTISON PUMP PRESS SWITCH, CTR R	ALL	1	134		8	28-11	28-22	S28210
SWITCH	REFUELING PANEL DOOR SWITCH, L	ALL	1	621		34(521DB)	28-7	28-21	S28032
SWITCH	REFUELING PANEL DOOR SWITCH, R	OPTIONAL	1	521		34(621DB)	28-7	28-21	S28024
SWITCH	SURGE TANK OVERFILL FLOAT SWITCH, L	ALL	1	521		34(521SB)	28-13	28-21	S28119
SWITCH	SURGE TANK OVERFILL FLOAT SWITCH, R	ALL	1	621		34(621SB)	28-13	28-21	S28219
TANK	FUEL TANKS	ALL	3	500/600		32	28-3	28-11	
TANK UNIT	TANK UNIT 1 - CENTER LEFT	ALL	1	531		37(531BB)	28-14, 28-15	28-41	M28147
TANK UNIT	TANK UNIT 1 - CENTER RIGHT	ALL	1	631		37(631BB)	28-14, 28-15	28-41	M28247
TANK UNIT	TANK UNIT 1 - LEFT MAIN	ALL	1	533		37(533AB)	28-14, 28-15	28-41	M28074
TANK UNIT	TANK UNIT 1 - RIGHT MAIN	ALL	1	633		37(633AB)	28-14, 28-15	28-41	M28046
TANK UNIT	TANK UNIT 2 - CENTER LEFT	ALL	1	531		37(531BB)	28-14, 28-15	28-41	M28148
TANK UNIT	TANK UNIT 2 - CENTER RIGHT	ALL	1	631		37(631BB)	28-14, 28-15	28-41	M28248
TANK UNIT	TANK UNIT 2 - LEFT MAIN	ALL	1	533		37(533BB)	28-14, 28-15	28-41	M28075
TANK UNIT	TANK UNIT 2 - RIGHT MAIN	ALL	1	633		37(633BB)	28-14, 28-15	28-41	M28047
TANK UNIT	TANK UNIT 3 - CENTER LEFT	ALL	1	531		37(531AB)	28-14, 28-15	28-41	M28149

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
TANK UNIT	TANK UNIT 3 - CENTER RIGHT	ALL	1	631		37(631AB)	28-14, 28-15	28-41	M28249
TANK UNIT	TANK UNIT 3 - LEFT MAIN	ALL	1	533		37(533CB)	28-14, 28-15	28-41	M28076
TANK UNIT	TANK UNIT 3 - RIGHT MAIN	ALL	1	633		37(633CB)	28-14, 28-15	28-41	M28048
TANK UNIT	TANK UNIT 4 - CENTER LEFT	ALL	1	531		37(531AB)	28-14, 28-15	28-41	M28150
TANK UNIT	TANK UNIT 4 - CENTER RIGHT	ALL	1	631		37(631AB)	28-14, 28-15	28-41	M28250
TANK UNIT	TANK UNIT 4 - LEFT MAIN	ALL	1	533		37(533CB)	28-14, 28-15	28-41	M28077
TANK UNIT	TANK UNIT 4 - RIGHT MAIN	ALL	1	633		37(633CB)	28-14, 28-15	28-41	M28049
TANK UNIT	TANK UNIT 5 - CENTER LEFT	ALL	1	531		37(531AB)	28-14, 28-15	28-41	M28151
TANK UNIT	TANK UNIT 5 - CENTER RIGHT	ALL	1	631		37(631AB)	28-14, 28-15	28-41	M28251
TANK UNIT	TANK UNIT 5 - LEFT MAIN	ALL	1	533		37(533DB)	28-14, 28-15	28-41	M28078
TANK UNIT	TANK UNIT 5 - RIGHT MAIN	ALL	1	633		37(633DB)	28-14, 28-15	28-41	M28050
TANK UNIT	TANK UNIT 6 - CENTER LEFT	ALL	1	531		37(531AB)	28-14, 28-15	28-41	M28152
TANK UNIT	TANK UNIT 6 - CENTER RIGHT	ALL	1	631		37(631AB)	28-14, 28-15	28-41	M28252
TANK UNIT	TANK UNIT 6 - LEFT MAIN	ALL	1	533		37(533DB)	28-14, 28-15	28-41	M28079
TANK UNIT	TANK UNIT 6 - RIGHT MAIN	ALL	1	633		37(633DB)	28-14, 28-15	28-41	M28051
TANK UNIT	TANK UNIT 7 - CENTER LEFT	-200IGW	1	531		10(139AZ)(139AL)	28-15	28-41	M28153
TANK UNIT	TANK UNIT 7 - CENTER RIGHT	-200IGW	1	631		10(139AZ)(139AL)	28-15	28-41	M28253
TANK UNIT	TANK UNIT 7 - LEFT MAIN	ALL	1	533		37(533EB)	28-14, 28-15	28-41	M28080
TANK UNIT	TANK UNIT 7 - RIGHT MAIN	ALL	1	633		37(633EB)	28-14, 28-15	28-41	M28052
TANK UNIT	TANK UNIT 8 - CENTER LEFT	-200IGW	1	531		10(139AZ)(139AL)	28-15	28-41	M28154

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
TANK UNIT	TANK UNIT 8 - CENTER RIGHT	-200IGW	1	631		10(139AZ)(139AL)	28-15	28-41	M28254
TANK UNIT	TANK UNIT 8 - LEFT MAIN	ALL	1	533		37(533FB)	28-14, 28-15	28-41	M28081
TANK UNIT	TANK UNIT 8 - RIGHT MAIN	ALL	1	633		37(633FB)	28-14, 28-15	28-41	M28053
TANK UNIT	TANK UNIT 9 - CENTER LEFT	-200IGW	1	531		10(139AZ)(139AL)	28-15	28-41	M28155
TANK UNIT	TANK UNIT 9 - CENTER RIGHT	-200IGW	1	631		10(139AZ)(139AL)	28-15	28-41	M28255
TANK UNIT	TANK UNIT 9 - LEFT MAIN	ALL	1	533		37(533GB)	28-14, 28-15	28-41	M28082
TANK UNIT	TANK UNIT 9 - RIGHT MAIN	ALL	1	633		37(633GB)	28-14, 28-15	28-41	M28054
TANK UNIT	TANK UNIT 10 - CENTER LEFT	-200IGW	1	531		10(139AZ)(139AL)	28-15	28-41	M28156
TANK UNIT	TANK UNIT 10 - CENTER RIGHT	-200IGW	1	631		10(139AZ)(139AL)	28-15	28-41	M28256
TANK UNIT	TANK UNIT 10 - LEFT MAIN	ALL	1	533		37(533GB)	28-14, 28-15	28-41	M28083
TANK UNIT	TANK UNIT 10 - RIGHT MAIN	ALL	1	633		37(633GB)	28-14, 28-15	28-41	M28055
TANK UNIT	TANK UNIT 11 - LEFT MAIN	ALL	1	541		37(541BB)	28-14, 28-15	28-41	M28084
TANK UNIT	TANK UNIT 11 - RIGHT MAIN	ALL	1	641		37(641BB)	28-14, 28-15	28-41	M28056
TANK UNIT	TANK UNIT 12 - LEFT MAIN	ALL	1	541		37(541BB)	28-14, 28-15	28-41	M28085
TANK UNIT	TANK UNIT 12 - RIGHT MAIN	ALL	1	641		37(641BB)	28-14, 28-15	28-41	M28057
TANK UNIT	TANK UNIT 13 - LEFT MAIN	ALL	1	541		37(541CB)	28-14, 28-15	28-41	M28086
TANK UNIT	TANK UNIT 13 - RIGHT MAIN	ALL	1	641		37(641CB)	28-14, 28-15	28-41	M28058
TANK UNIT	TANK UNIT 14 - LEFT MAIN	ALL	1	541		37(541EB)	28-14, 28-15	28-41	M28087
TANK UNIT	TANK UNIT 14 - RIGHT MAIN	ALL	1	641		37(641EB)	28-14, 28-15	28-41	M28059
TANK UNIT	TANK UNIT 15 - LEFT MAIN	ALL	1	541		37(541FB)	28-14, 28-15	28-41	M28088

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
TANK UNIT	TANK UNIT 15 - RIGHT MAIN	ALL	1	641		37(641FB)	28-14, 28-15	28-41	M28060
TANK UNIT	TANK UNIT 16 - LEFT MAIN	ALL	1	541		37(541HB)	28-14, 28-15	28-41	M28089
TANK UNIT	TANK UNIT 16 - RIGHT MAIN	ALL	1	641		37(641HB)	28-14, 28-15	28-41	M28061
TANK UNIT	TANK UNIT 17 - LEFT MAIN	ALL	1	541		37(541JB)	28-14, 28-15	28-41	M28090
TANK UNIT	TANK UNIT 17 - RIGHT MAIN	ALL	1	641		37(641JB)	28-14, 28-15	28-41	M28062
TANK UNIT	TANK UNIT 18 - LEFT MAIN	ALL	1	541		37(541LB)	28-14, 28-15	28-41	M28091
TANK UNIT	TANK UNIT 18 - RIGHT MAIN	ALL	1	641		37(641LB)	28-14, 28-15	28-41	M28063
TANK UNIT	TANK UNIT 19 - LEFT MAIN	ALL	1	541		37(541MB)	28-14, 28-15	28-41	M28092
TANK UNIT	TANK UNIT 19 - RIGHT MAIN	ALL	1	641		37(641MB)	28-14, 28-15	28-41	M28064
TANK UNIT	TANK UNIT 20 - LEFT MAIN	ALL	1	533		37(541PB)	28-14, 28-15	28-41	M28093
TANK UNIT	TANK UNIT 20 - RIGHT MAIN	ALL	1	633		37(641PB)	28-14, 28-15	28-41	M28065
VALVE	APU FUEL SHUTOFF VALVE	ALL	1	531		37(531BB)	28-12	28-25	V28023
VALVE	APU ISOLATION VALVE	ALL	1	531		37(531BB)	28-12	28-25	V28031
VALVE	DEFUELING VALVE	ALL	1	631		37(631AB)	28-11	28-26	V28310
VALVE	ENGINE FUEL SPAR VALVE, L	ALL	1	533		37(533BB)	28-9	28-22	V28164
VALVE	ENGINE FUEL SPAR VALVE, R	ALL	1	633		37(633BB)	28-9	28-22	V28264
VALVE	FLOAT-OPERATED SHUTOFF VALVE	ALL	4	531/631		37	28-10	28-22	
VALVE	FUEL CROSSFEED VALVE, AFT	ALL	1	531		37(531AB)	28-9	28-22	V28263
VALVE	FUEL CROSSFEED VALVE, FWD	ALL	1	531		37(531AB)	28-9	28-22	V28163
VALVE	FUEL JETTISON ISLN CHECK VALVE, L & R	ALL		531/631		37(531AB)	28-9	28-31	

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
VALVE	FUEL SUMP DRAIN VALVE	ALL	8	500/600		31	28-4	28-11	
VALVE	FUEL VENT FLOAT ACTUATED DRAIN VALVE	ALL	6	530/630		37(531AB)	28-5	28-13	
VALVE	FUEL VENT FLOAT VALVE	ALL	2	541/641		37(541QB)	28-5	28-13	
VALVE	JETTISON ISOLATION VALVE - L MAIN	ALL	1	531		37(531AB)	28-9	28-31	V28165
VALVE	JETTISON ISOLATION VALVE - R MAIN	ALL	1	631		37(631AB)	28-9	28-31	V28265
VALVE	JETTISON NOZZLE VALVE - L MAIN	ALL	1	543		37(543AB)	28-13	28-31	V28166
VALVE	JETTISON NOZZLE VALVE - R MAIN	ALL	1	643		37(643AB)	28-13	28-31	V28266
VALVE	MAIN BOOST PUMP DISCHARGE CHECK VALVE	ALL	4	130/530		8,38	28-10	28-22	
VALVE	MAIN BOOST PUMP MOTIVE FLOW CHECK VALVE	ALL	4	130/530		8,38	28-10	28-22	
VALVE	MAIN BOOST PUMP VAPOR VENT VALVE	ALL	8	130/530		8,38	28-10	28-22	
VALVE	OVERRIDE /JETTISON PUMP MOTIVE FLOW CHECK VALVE	ALL	2	133/134		8	28-11	28-22	
VALVE	OVERRIDE/JETTISON PUMP DISCHARGE CHECK VALVE	ALL	2	133/134		8	28-11	28-22	
VALVE	REFUEL MANIFOLD DRAIN VALVE	ALL	2	531/631		37(531AB)	28-8	28-21	
VALVE	REFUEL MANIFOLD VACUUM RELIEF VALVE	ALL	2	541/641		37(541AB)(641AB)	28-8	28-21	
VALVE	REFUELING VALVE, CENTER L	ALL	1	531		37(531BB)	28-8	28-21	V28305
VALVE	REFUELING VALVE, CENTER R	ALL	1	631		37(631BB)	28-8	28-21	V28304
VALVE	REFUELING VALVE, L INBD	ALL	1	533		37(533AB)	28-8	28-21	V28107
VALVE	REFUELING VALVE, L OUTBD	ALL	1	541		37(541HB)	28-8	28-21	V28108

ATA 28	FUEL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 28	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
VALVE	REFUELING VALVE, R INBD	ALL	1	633		37(633AB)	28-8	28-21	V28207
VALVE	REFUELING VALVE, R OUTBD	ALL	1	641		37(641HB)	28-8	28-21	V28208
VALVE	SUCTION BYPASS VALVE, MAIN FUEL TANK	ALL	2	533/633		37(533AB)	28-9	28-22	
VALVE	SURGE TANK DRAIN CHECK VALVE	ALL	2	541/641		37(543AB)	28-5	28-13	
VALVE	SURGE TANK PRESSURE RELIEF VALVE	ALL	2	542/642		37(543AB)	28-5	28-13	
VALVE	APU ISOLATION CHECK VALVE	ALL	1	531		37(531BB)	28-12	28-25	
VENT	SURGE TANK VENT	ALL	2	542/642		37(543BB)	28-5	28-13	
WIRING HARNESS	CENTER TANK HARNESS ASSY, L	ALL	2	531		37	28-16	28-41	
WIRING HARNESS	CENTER TANK HARNESS ASSY, R	ALL	2	631		37	28-16	28-41	
WIRING HARNESS	MAIN TANK HARNESS ASSY, L	ALL	2	541		37	28-16	28-41	
WIRING HARNESS	TANK HARNESS ASSY, R	ALL	2	641		37	28-16	28-41	

ATA 29	HYDRAULIC POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 29	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACCUMULATOR	HYDRAULIC ACCUMULATORS, L,R,C SYSTEM	ALL	4	311		28(311AL)	29-18	29-11	
ACTUATOR	RAT ACTUATOR	ALL	1	198		13(198JR)	29-16	29-21	M29003
ASSEMBLY	ADU HEATER ASSEMBLY, C1	ALL	1	197		13(197JL)	29-14	29-11	M29010
ASSEMBLY	ADU HEATER ASSEMBLY, C2	ALL	1	197		13(197JL)	29-14	29-11	M29011
CARD	HYDRAULIC INTERFACE MDL (HYDIM) CARD, CL	ALL	1	115	P85	8,9(117AL)	00-9,29-2	29-11	P00084A004
CARD	HYDRAULIC INTERFACE MDL (HYDIM) CARD, CR	ALL	1	116	P84	8,9(117AL)	00-9,29-2	29-11	P00085A004
CARD	HYDRAULIC INTERFACE MDL (HYDIM) CARD, L	ALL	1	115	P85	8,9(117AL)	00-9,29-2	29-11	P00085A017
CARD	HYDRAULIC INTERFACE MDL (HYDIM) CARD, R	ALL	1	116	P84	8,9(117AL)	00-9,29-2	29-11	P00084A017
CIRCUIT BREAKER	ADP 1 HTR CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	29-11	C29623
CIRCUIT BREAKER	ADP 1 HTR PWR - CB	ALL	1	118	P210	8,9(117AL)	00-15	29-11	C29401
CIRCUIT BREAKER	ADP 2 HTR PWR - CB	ALL	1	118	P210	8,9(117AL)	00-15	29-11	C29402
CIRCUIT BREAKER	C HYD AIR PUMP - CB	ALL	1	117	P310	8,9(117AL)	00-16	29-11	C29609
CIRCUIT BREAKER	C HYD AIR PUMP 2 - CB	ALL	1	117	P310	8,9(117AL)	00-16	29-11	C29606
CIRCUIT BREAKER	C1 HYD PUMP CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	29-11	C29607
CIRCUIT BREAKER	C2 HYD PUMP CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	29-11	C29608
CIRCUIT BREAKER	L D-PRESS VLV SPLY - CB	ALL	1	117	P110	8,9(117AL)	00-14	29-11	C29601
CIRCUIT BREAKER	L ENG- EDP SUPPLY VALVE - CB	ALL	1	211	P11	8	00-6	29-11	C29603
CIRCUIT BREAKER	L HYD PUMP CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	29-11	C29605
CIRCUIT BREAKER	NOSE GEAR ISLN VALVE - CB	ALL	1	117	P310	8,9(117AL)	00-16	29-11	C29610
CIRCUIT BREAKER	R D-PRESS VLV SPLY - CB	ALL	1	118	P210	8,9(117AL)	00-15	29-11	C29600

ATA 29	HYDRAULIC POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 29	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	R ENG-EDP SUPPLY VALVE - CB	ALL	1	212	P11	8	00-6	29-11	C29602
CIRCUIT BREAKER	R HYD PUMP CTRL - CB	ALL	1	117	P110	8,9(117AL)	00-14	29-11	C29604
CIRCUIT BREAKER	RAT AUTO CTRL - CB	ALL	1	211	P11	8	00-6	29-11	C29619
CIRCUIT BREAKER	RAT AUTO PWR - CB	ALL	1	152	P49	14	00-19	29-21	C29621
CIRCUIT BREAKER	RAT AUTO/MAN CTRL - CB	ALL	1	117	P310	8,9(117AL)	00-16	29-11	C29618
CIRCUIT BREAKER	RAT GEN HEATER CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	29-21	C29622
CIRCUIT BREAKER	RAT GEN HEATER PWR - CB	ALL	1	118	P210	8,9(117AL)	00-15	29-21	C29400
CONTROL UNIT	ADP LOGIC/SPEED CNTL UNIT (LSCU) - ADP 1	ALL	1	197		13(197JL)	29-14	29-11	M29306
CONTROL UNIT	ADP LOGIC/SPEED CNTL UNIT (LSCU) - ADP 2	ALL	1	197		13(197JL)	29-14	29-11	M29321
DISCONNECT	GROUND SERVICE PRESSURE DISC, C SYSTEM	ALL	1	197		13(197JL)	29-13	29-11	
DISCONNECT	GROUND SERVICE PRESS DISC, L&R SYSTEM	ALL	2	433/443		29(433DR)(443DR)	29-8	29-32	
DISCONNECT	GROUND SERVICE RETURN DISC, C SYSTEM	ALL	1	197		13(197JL)	29-13	29-11	
DISCONNECT	GROUND SERVICE RETURN DISC, L&R SYSTEM	ALL	2	433/443		29(433DR)(443DR)	29-8	29-32	
DOOR	RAT COMPARTMENT DOOR	ALL	1	198		13(198JR)	29-16	29-21	
DUCT	ADP EXHAUST DUCT	ALL	2	197		13(197JL)	29-14	29-11	
DUCT	ADP INLET DUCT	ALL	2	197		13(197JL)	29-14	29-11	
ELCU	C1 ELEC HYDRAULIC PUMP ELCU	ALL	1	117	P100	8,9(117AL)	00-13	29-11	M29303
ELCU	C2 ELEC HYDRAULIC PUMP ELCU	ALL	1	118	P200	8,9(117AL)	00-13	29-11	M29308
ELCU	LEFT ELEC HYDRAULIC PUMP - ELCU	ALL	1	118	P200	8,9(117AL)	00-13	29-11	M29103
ELCU	RIGHT ELEC HYDRAULIC PUMP - ELCU	ALL	1	117	P100	8,9(117AL)	00-13	29-11	M29203

ATA 29	HYDRAULIC POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 29	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
EXCHANGER	ADP HEAT EXCHANGER	ALL	2	197		13(197JL)	29-14	29-11	
EXCHANGER	HEAT EXCHANGER, L SYSTEM	ALL	1	533		37(533CB)	29-3	29-11	
EXCHANGER	HEAT EXCHANGER, R,C SYSTEM	ALL	2	533		37(633CB)(633DB)	29-3	29-11	
FILLER PORT	ADP OIL FILLER PORT	ALL	2	197		13(197JL)	29-14	29-11	
FILTER	ACMP CASE DRAIN FILTER, C	ALL	2	144		29	29-11	29-11	
FILTER	ACMP CASE DRAIN FILTER, L&R	ALL	2	433/443		29(433DR)(443DR)	29-8	29-11	
FILTER	ACMP PRESSURE FILTER, C	ALL	2	144		29	29-11	29-11	
FILTER	ACMP PRESSURE FILTER, L&R	ALL	2	433/443		29(433DR)(443DR)	29-8	29-11	
FILTER	ADP CASE DRAIN FILTER	ALL	2	197		13(197JL)	29-13	29-11	
FILTER	ADP PRESSURE FILTER	ALL	2	197		13(197JL)	29-13	29-11	
FILTER	ADP TGA OIL FILTER	ALL	1	197		13(197JL)	29-14	29-11	
FILTER	EDP CASE DRAIN FILTER	ALL	2	433/443		29(433DR)(443DR)	29-8	29-31	
FILTER	RESERVOIR FILL FILTER	ALL	1	198		13(198DR)	29-15	29-18	
FILTER MODULE	ACMP PRESS AND CASE DRAIN FILTER MOD, C	ALL	2	144		8	29-10	29-11	
FILTER MODULE	ACMP PRESS AND CASE DRAIN FILTER MOD,L&R	ALL	2	433/443		29(433DR)(443DR)	29-8	29-11	
FILTER MODULE	ADP PRESS AND CASE DRAIN FILTER MODULE	ALL	2	197		13(197DL)	29-13	29-11	
FILTER MODULE	EDP PRESS AND CASE DRAIN FILTER MODULE	ALL	2	433/443		29(433CR)(443CR)	29-8	29-11	
FILTER MODULE	RETURN FILTER MODULE, CENTER SYSTEM	ALL	1	144		8	29-11	29-11	
FILTER MODULE	RETURN FILTER MODULE, L&R SYSTEM	ALL	2	433/443		29(433DR)(443DR)	29-8	29-11	
GAUGE	HYD ACCUMULATOR GAUGE, L,R,C SYSTEM	ALL	3	311		28(313AL)	29-18	29-11	

ATA 29	HYDRAULIC POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 29	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
GAUGE	RESERVOIR QUANTITY GAUGE	ALL	1	198		13(198DR)	29-15	29-18	N29301
GEARBOX	C1 ADP TURBINE GEARBOX ASSEMBLY (TGA)	ALL	1	197		13(197JL)	29-14	29-11	M29310
GEARBOX	C2 ADP TURBINE GEARBOX ASSEMBLY (TGA)	ALL	1	197		13(197JL)	29-14	29-11	M29314
GENERATOR	RAT GOVERNOR/GENERATOR ASSEMBLY	ALL	1	198		13(198JR)	29-16	29-21	
HEAT EXCHANGER	HEAT EXCHANGER, L SYSTEM	ALL	1	533		37(533CB)	29-3	29-11	
HEAT EXCHANGER	ADP HEAT EXCHANGERS, C1 AND C2	ALL	2	197		13(197JL)	29-14	29-11	
HEAT EXCHANGER	HEAT EXCHANGERS, R&C SYSTEM	ALL	2	633		37(633CB)(633DB)	29-3	29-11	
HOSE	RESERVOIR FILL SUCTION HOSE	ALL	1	198		13(198DR)	29-15	29-18	
LIGHT	DEMAND HYD PUMP C1 FAULT LIGHT	ALL	1	117	P5	8	00-3,29-1	29-11	M29004L002
LIGHT	DEMAND HYD PUMP C2 FAULT LIGHT	ALL	1	117	P5	8	00-3,29-1	29-11	M29004L003
LIGHT	DEMAND HYD PUMP FAULT LIGHT, L	ALL	1	117	P5	8	00-3,29-1	29-11	M29004L001
LIGHT	DEMAND HYD PUMP FAULT LIGHT, R	ALL	1	117	P5	8	00-3,29-1	29-11	M29004L004
LINK	RAT DOOR ACTUATION LINK	ALL	1	198		13(198JR)	29-16	29-21	
MANIFOLD	CENTER SYSTEM RETURN MANIFOLD	ALL	1	144		8	29-12	29-11	
MODULE	RAT CHECKOUT MODULE	ALL	1	144		8	29-9	29-21	M29006
MODULE	RESERVOIR PRESSURIZATION MODULE, C	ALL	1	144		8	29-10	29-11	
MODULE	RESERVOIR PRESSURIZATION MODULE, L&R	ALL	2	433/443		29(433CR)(443CR)	29-7	29-11	
MONITOR	RAT GEN HEATER MONITOR	ALL	1	118	P210	8,9(117AL)	00-15	29-21	M24670
PANEL	HYDRAULIC ACCUMULATOR SERVICE PANEL	ALL	1	311		28(313AL)	29-18	29-11	
PANEL	HYDRAULIC/RAT PANEL	ALL	1	117	P5	8	00-3,29-1	29-11	M29004

ATA 29	HYDRAULIC POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 29	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PUMP	AIR DRIVEN PUMP (ADP) - C1	ALL	1	197		13(197JL)	29-14	29-11	M29305
PUMP	AIR DRIVEN PUMP (ADP) - C2	ALL	1	197		13(197JL)	29-14	29-11	M29309
PUMP	ALTERNATING CURRENT MOTOR PUMP (ACMP) - C1	ALL	1	144		8	29-11	29-11	M29304
PUMP	ALTERNATING CURRENT MOTOR PUMP (ACMP) - C2	ALL	1	144		8	29-11	29-11	M29311
PUMP	ALTERNATING CURRENT MOTOR PUMP (ACMP) - LEFT	ALL	1	433		29(433DR)	29-6	29-11	M29204
PUMP	ALTERNATING CURRENT MOTOR PUMP (ACMP) - RIGHT	ALL	1	443		29(443DR)	29-6	29-11	M29104
PUMP	ENGINE DRIVEN PUMP (EDP)	ALL	2	410/420		29	29-4	29-11	
PUMP	RAT HYDRAULIC PUMP	ALL	1	198		13(198JR)	29-16	29-21	
PUMP	RESERVOIR FILL MANUAL PUMP	ALL	1	198		13(198DR)	29-15	29-18	
RELAY	ADP 1 HEATER RELAY	ALL	1	118	P210	8,9(117AL)	00-15	29-11	K29021
RELAY	ADU 1 HEATER SENSOR RELAY	ALL	1	122	P35	8,48(821)	00-18,25-11	29-11	K29301
RELAY	ADU 2 HEATER SENSOR RELAY	ALL	1	122	P35	8,48(821)	00-18,25-11	29-11	K29302
RELAY	ISOLATION VALVE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	29-11	K29003
RELAY	RAT GEN HEATER RELAY	ALL	1	118	P210	8,9(117AL)	00-15	29-21	K29007
RELAY	RB&S VALVE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	29-11	K29002
RESERVOIR	HYDRAULIC RESERVOIR, C	ALL	1	144		8	29-9	29-11	
RESERVOIR	HYDRAULIC RESERVOIR, L&R	ALL	2	433/443		29(433CR)(443CR)	29-5	29-11	

ATA 29	HYDRAULIC POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 29	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SELECTOR	DEMAND HYD PUMP SELECTOR, C1	ALL	1	117	P5	8	00-3,29-1	29-11	M29004S007
SELECTOR	DEMAND HYD PUMP SELECTOR, C2	ALL	1	117	P5	8	00-3,29-1	29-11	M29004S008
SELECTOR	DEMAND HYD PUMP SELECTOR, L	ALL	1	117	P5	8	00-3,29-1	29-11	M29004S006
SELECTOR	DEMAND HYD PUMP SELECTOR, R	ALL	1	117	P5	8	00-3,29-1	29-11	M29004S009
SELECTOR	REMOTE QTY INDICATOR SELECTOR	ALL	1	198		13(198DR)	29-15	29-18	S29305
SIGHT GLASS	ADP OIL SIGHT GLASS	ALL	2	197		13(197JL)	29-14	29-11	
SIGHT GLASS	HYDRAULIC RESERVOIR SIGHT GLASSES, C	ALL	1	144		8	29-9	29-11	
SIGHT GLASS	HYDRAULIC RESERVOIR SIGHT GLASSES, L&R	ALL	2	433/443		29(433CR)(443CR)	29-5	29-11	
SOLENOID	EDP DEPRESSURIZATION SOLENOID VALVE, L&R	ALL	2	410/420		29(433DR)(443DR)	29-4	29-11	V29001
SOLENOID	RAT SOLENOID	ALL	1	198		13(198JR)	29-16	29-21	M29001
SOLENOID	RAT SOLENOID	ALL	1	198		13(198JR)	29-16	29-21	M29002
SWITCH	PRIMARY HYD PUMP SWITCH, C1	ALL	1	117	P5	8	00-3,29-1	29-11	M29004S003
SWITCH	PRIMARY HYD PUMP SWITCH, C2	ALL	1	117	P5	8	00-3,29-1	29-11	M29004S004
SWITCH	PRIMARY HYD PUMP SWITCH, L	ALL	1	117	P5	8	00-3,29-1	29-11	M29004S002
SWITCH	PRIMARY HYD PUMP SWITCH, R	ALL	1	117	P5	8	00-3,29-1	29-11	M29004S005
SWITCH	RAM AIR TURBINE (RAT) DEPLOY SW	ALL	1	117	P5	8	00-3,29-1	29-21	M29004S001
SWITCH	RAT BLADE LOCKED SWITCH	ALL	1	198		13(198JR)	29-16	29-21	M29008S002
SWITCH	RAT GENERATOR HEATER SWITCH	ALL	1	152	E6-2	48(823)	29-2	29-21	S29004
SWITCH	RAT STOWED SWITCH	ALL	1	198		13(198JR)	29-17	29-21	S29001
SWITCH	RAT STRUT ANGLE SWITCH	ALL	1	198		13(198JR)	29-17	29-21	M29008S001

ATA 29	HYDRAULIC POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 29	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	RESERVOIR PRESSURE SWITCH, C	ALL	1	144		8	29-10	29-11	S29306
SWITCH	RESERVOIR PRESSURE SWITCH, L	ALL	1	433		29(433CR)	29-7	29-11	S29105
SWITCH	RESERVOIR PRESSURE SWITCH, R	ALL	1	443		29(443CR)	29-7	29-11	S29205
TRANSDUCER	ACMP PRESSURE TRANSDUCER, C1	ALL	1	144		8	29-11	29-31	M29312
TRANSDUCER	ACMP PRESSURE TRANSDUCER, C2	ALL	1	144		8	29-11	29-31	M29317
TRANSDUCER	ACMP PRESSURE TRANSDUCER, L	ALL	1	433		29	29-8	29-11	M29109
TRANSDUCER	ACMP PRESSURE TRANSDUCER, R	ALL	1	443		29	29-8	29-11	M29209
TRANSDUCER	ACMP TEMPERATURE TRANSDUCER, C1	ALL	1	144		8	29-11	29-32	M29319
TRANSDUCER	ACMP TEMPERATURE TRANSDUCER, C2	ALL	1	144		8	29-11	29-32	M29320
TRANSDUCER	ACMP TEMPERATURE TRANSDUCER, L	ALL	1	433		29(433DR)	29-8	29-32	M29110
TRANSDUCER	ACMP TEMPERATURE TRANSDUCER, R	ALL	1	443		29(443DR)	29-8	29-32	M29210
TRANSDUCER	ADP PRESSURE TRANSDUCER, C1	ALL	1	197		13(197JL)	29-13	29-11	M29318
TRANSDUCER	ADP PRESSURE TRANSDUCER, C2	ALL	1	197		13(197JL)	29-13	29-11	M29316
TRANSDUCER	ADP TEMPERATURE TRANSDUCER, C1	ALL	1	197		13(197JL)	29-13	29-32	M29313
TRANSDUCER	ADP TEMPERATURE TRANSDUCER, C2	ALL	1	197		13(197JL)	29-13	29-32	M29315
TRANSDUCER	EDP PRESSURE TRANSDUCER, L	ALL	1	433		29(433CR)	29-8	29-31	M29108
TRANSDUCER	EDP PRESSURE TRANSDUCER, R	ALL	1	443		29(443CR)	29-8	29-31	M29208
TRANSDUCER	EDP TEMPERATURE TRANSDUCER, L	ALL	1	433		29(433CR)	29-8	29-32	M29106
TRANSDUCER	EDP TEMPERATURE TRANSDUCER, R	ALL	1	443		29(443CR)	29-8	29-32	M29206
TRANSDUCER	HYDRAULIC SYSTEM PRESS TRANSDUCER, C	ALL	1	144		8	29-12	29-31	M29301

ATA 29	HYDRAULIC POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 29	EQUIP NUMBER	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC		
	TRANSDUCER	HYDRAULIC SYSTEM PRESS TRANSDUCER, L	ALL	1	552		38(552JB)	29-3	29-31	M29101
	TRANSDUCER	HYDRAULIC SYSTEM PRESS TRANSDUCER, R	ALL	1	652		38(652JB)	29-3	29-31	M29201
	TRANSDUCER	RAT PRESSURE TRANSDUCER	ALL	1	144		8	29-9	29-31	M29009
	TRANSDUCER	RESERVOIR TEMPERATURE TRANSDUCER, C	ALL	1	144		8	29-9	29-32	M29302
	TRANSDUCER	RESERVOIR TEMPERATURE TRANSDUCER, L	ALL	1	433		29(433CR)	29-5	29-32	M29102
	TRANSDUCER	RESERVOIR TEMPERATURE TRANSDUCER, R	ALL	1	443		29(443CR)	29-5	29-32	M29202
	TRANSMITTER	RESERVOIR QUANTITY TRANSMITTER, C	ALL	1	144		8	29-9	29-33	M29307
	TRANSMITTER	RESERVOIR QUANTITY TRANSMITTER, L	ALL	1	433		29(433CR)	29-5	29-33	M29105
	TRANSMITTER	RESERVOIR QUANTITY TRANSMITTER, R	ALL	1	443		29(443CR)	29-5	29-33	M29205
	TURBINE	RAM AIR TURBINE (RAT)	ALL	1	198		13(198JR)	29-17	29-21	M29008
	VALVE	ADP MODULATING SHUTOFF VALVE (MSOV), C1	ALL	1	197		13(197JL)	29-14	29-11	V29305
	VALVE	ADP MODULATING SHUTOFF VALVE (MSOV), C2	ALL	1	197		13(197JL)	29-14	29-11	V29304
	VALVE	EDP SUPPLY SHUTOFF VALVE, L	ALL	1	433		29(433BL)(443BL)	29-5	29-11	V29102
	VALVE	EDP SUPPLY SHUTOFF VALVE, R	ALL	1	443		29(433BL)(443BL)	29-5	29-11	V29202
	VALVE	NOSE GEAR ISOLATION VALVE	ALL	1	144		8	29-12	29-11	V29303
	VALVE	RAT CHECKOUT MODULE SOLENOID VALVE	ALL	1	144		8	29-9	29-11	V29003
	VALVE	RAT MOTORING VALVE	ALL	1	144		8	29-9	29-21	
	VALVE	RAT STOW VALVE	ALL	1	144		8	29-9	29-21	
	VALVE	RESERVE ISOLATION VALVE	ALL	1	144		8	29-12	29-11	V29302
	VALVE	RESERVOIR DRAIN VALVE, C	ALL	1	144		8	29-9	29-11	

ATA 29	HYDRAULIC POWER					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 29	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
VALVE	RESERVOIR DRAIN VALVE, L&R	ALL	2	433/443		29(433CR)(443CR)	29-5	29-11	
VALVE	RESERVOIR FILL SELECTOR VALVE	ALL	1	198		13(198DR)	29-15	29-18	
VALVE	RESERVOIR PRESSURE RELIEF VALVE, C	ALL	1	144		8	29-9	29-11	
VALVE	RESERVOIR PRESSURE RELIEF VALVE, L&R	ALL	2	433/443		29(433CR)(443CR)	29-5	29-11	
VALVE	RESERVOIR PRESSURE SHUTOFF VALVE, C	ALL	1	144		8	29-10	29-11	
VALVE	RESERVOIR PRESSURE SHUTOFF VALVE, L&R	ALL	2	433/443		29(433CR)(443CR)	29-7	29-11	

ATA 30	ICE AND RAIN PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 30	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ARM	WINDSHIELD WIPER ARMS	ALL	2	211/212		8	30-4	30-42	
BLADE	BLADE PRESSURE ADJUSTMENT BOLT	ALL	2	211/212		8	30-4	30-42	
BLADE	WINDSHIELD WIPER BLADES	ALL	2	211/212		8	30-4	30-42	
CARD	L ACIPS CONTROL CARD - EAI	ALL	1	115	P85	8,9(117AL)	00-9,30-5	30-21	P00085A006
CARD	R ACIPS CONTROL CARD - EAI	ALL	1	115	P84	8,9(117AL)	00-9,30-5	30-21	P00084A006
CARD	C ACIPS CONTROL CARD - WAI	ALL	1	116	P84	8,9(117AL)	00-9,30-5	30-11	P00084A007
CIRCUIT BREAKER	AOA PROBE HTR L - CB	ALL	1	117	P110	8,9(117AL)	00-14	30-32	C30409
CIRCUIT BREAKER	AOA PROBE HTR R - CB	ALL	1	118	P210	8,9(117AL)	00-15	30-32	C30408
CIRCUIT BREAKER	DRAIN LINE HTRS - CB	ALL	1	117	P320	8,9(117AL)	00-17	30-71	C30401
CIRCUIT BREAKER	DRAIN MAST HTRS - CB	ALL	1	117	P320	8,9(117AL)	00-17	30-71	C30500
CIRCUIT BREAKER	DRAIN MAST HTRS FLT - CB	ALL	1	117	P320	8,9(117AL)	00-17	30-71	C30422
CIRCUIT BREAKER	EAI CTRL L - CB	ALL	1	117	P310	8,9(117AL)	00-16	30-21	C30603
CIRCUIT BREAKER	EAI CTRL R - CB	ALL	1	118	P210	8,9(117AL)	00-15	30-21	C30602
CIRCUIT BREAKER	ICE DET L - CB	ALL	1	117	P110	8,9(117AL)	00-14	30-81	C30441
CIRCUIT BREAKER	ICE DET R - CB	ALL	1	118	P210	8,9(117AL)	00-15	30-81	C30440
CIRCUIT BREAKER	L ENG PROBE HTR - CB	ALL	1	117	P110	8,9(117AL)	00-14	30-34	C30443
CIRCUIT BREAKER	PITOT PROBE HTR C - CB	ALL	1	118	P210	8,9(117AL)	00-15	30-31	C30425
CIRCUIT BREAKER	PITOT PROBE HTR C CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	30-31	C30625
CIRCUIT BREAKER	PITOT PROBE HTR L - CB	ALL	1	117	P110	8,9(117AL)	00-14	30-31	C30424
CIRCUIT BREAKER	PITOT PROBE HTR R - CB	ALL	1	118	P210	8,9(117AL)	00-15	30-31	C30423

ATA 30	ICE AND RAIN PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 30	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
CIRCUIT BREAKER	PROBE/VANE HEAT CTRL R - CB	ALL	1	118	P210	8.9(117AL)	00-15	30-31	C30623
CIRCUIT BREAKER	PROBE/VANE HTR CTRL L - CB	ALL	1	117	P110	8.9(117AL)	00-14	30-31	C30624
CIRCUIT BREAKER	R ENG PROBE HTR - CB	ALL	1	118	P210	8.9(117AL)	00-15	30-34	C30442
CIRCUIT BREAKER	TAT PROBE HTR CTRL - CB	ALL	1	117	P110	8.9(117AL)	00-14	30-33	C30619
CIRCUIT BREAKER	TAT PROBE HTR CTRL-R - CB	ALL	1	118	P210	8.9(117AL)	00-15	30-33	C30620
CIRCUIT BREAKER	TAT PROBE HTR L - CB	ALL	1	117	P110	8.9(117AL)	00-14	30-33	C30411
CIRCUIT BREAKER	TAT PROBE HTR-R - CB	ALL	1	118	P210	8.9(117AL)	00-15	30-33	C30412
CIRCUIT BREAKER	WAI CTRL - CB	ALL	1	118	P210	8.9(117AL)	00-15	30-11	C30600
CIRCUIT BREAKER	WATER DRAIN LINE HEATING AFT - CB	ALL	1	117	P320	8.9(117AL)	00-17	30-71	C30403
CIRCUIT BREAKER	WATER DRAIN LINE HEATING FWD - CB	ALL	1	117	P320	8.9(117AL)	00-17	30-71	C30402
CIRCUIT BREAKER	WDO HT BACKUP 1L - CB	ALL	1	117	P110	8.9(117AL)	00-14	30-41	C30415
CIRCUIT BREAKER	WDO HT 2L - CB	ALL	1	118	P210	8.9(117AL)	00-15	30-41	C30417
CIRCUIT BREAKER	WDO HT 2R - CB	ALL	1	117	P110	8.9(117AL)	00-14	30-41	C30416
CIRCUIT BREAKER	WDO HT 3L - CB	ALL	1	118	P210	8.9(117AL)	00-15	30-41	C30419
CIRCUIT BREAKER	WDO HT 3R - CB	ALL	1	117	P110	8.9(117AL)	00-14	30-41	C30418
CIRCUIT BREAKER	WDO HTR 1R - CB	ALL	1	118	P200	8.9(117AL)	00-13	30-41	C30300
CIRCUIT BREAKER	WDOHTRV 1L - CB	ALL	1	117	P100	8.9(117AL)	00-13	30-41	C30301
CIRCUIT BREAKER	WHCU BITE L - CB	ALL	1	117	P110	8.9(117AL)	00-14	30-41	C30613
CIRCUIT BREAKER	WHCU BITE R - CB	ALL	1	118	P210	8.9(117AL)	00-15	30-41	C30616
CIRCUIT BREAKER	WNDW HT BACKUP 1R - CB	ALL	1	118	P210	8.9(117AL)	00-15	30-41	C30414

ATA 30	ICE AND RAIN PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 30	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	WSHLD WIPER L - CB	ALL	1	117	P110	8,9(117AL)	00-14	30-42	C30607
CIRCUIT BREAKER	WSHLD WIPER R - CB	ALL	1	117	P320	8,9(117AL)	00-17	30-42	C30608
CIRCUIT BREAKER	WTR SPLY LINE HTRS - CB	ALL	1	117	P320	8,9(117AL)	00-17	30-71	C30400
CONTROLLER	ENGINE ANTI-ICE (EAI) VALVE CONTROLLER	ALL	2	411/421		29(414AR)(424AR)	30-10	30-21	M30211
CONTROLLER	L FWD & R SIDE WINDOW HEAT CTRL	ALL	1	118	E2-2	8,9(117AL)	00-12,30-4	30-41	M30101
CONTROLLER	R FWD & L SIDE WINDOW HEAT CTRL	ALL	1	117	E1-1	8,9(117AL)	00-12,30-4	30-41	M30201
CONTROLLER	WATER SUPPLY INLINE HEATER CTRL	ALL	3	165		9	30-7	30-71	
COOLER	CONTROLLER AIR COOLER	ALL	2	411/412		29(416AR)(426AR)	30-10	30-21	
DETECTOR	ICE DETECTOR - L	ALL	2	211		8	30-2	30-81	M30811
DETECTOR	ICE DETECTOR - R	ALL	2	212		8	30-2	30-81	M30812
DUCT	ENGINE ANTI-ICE (EAI) INSULATED DUCT	ALL	2	411/421		29	30-10	30-21	
DUCT	ENGINE ANTI-ICE (EAI) UNINSULATED DUCT	ALL	2	411/421		29	30-10	30-21	
DUCT	TELESCOPING DUCT	ALL	8	500/600		35(522BT)	30-8	30-11	
DUCT	WING ANTI-ICE DUCT	ALL	2	500/600		35(522BT)	30-8	30-11	
HEATER	AFT DRAIN MAST HEATER	ALL	1	154		14	30-6	30-71	B30001
HEATER	FWD DRAIN MAST HEATER	ALL	1	124		9	30-6	30-71	B30002
HEATER	GRAY WATER DRAIN LINE HOSE HEATER	ALL	1	124		9	30-6	30-71	B30140
HEATER	GRAY WATER DRAIN LINE HOSE HEATER	ALL	1	124		9	30-6	30-71	B30141
HEATER	GRAY WATER DRAIN LINE HTR THERMO	ALL	1	135		9	30-6	30-71	B30009
HEATER	WASTE TANK RINSE FITTING HEATER	ALL	1	161		8,48(825)	30-7	30-71	B30012

ATA 30	ICE AND RAIN PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 30	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
HEATER	WASTE TANK RINSE FITTING HEATER	ALL	1	161		8,48(825)	30-7	30-71	B30013
HEATER	WASTE TANK RINSE FITTING HEATER	ALL	1	161		8,48(825)	30-7	30-71	B30014
HEATER	WATER DRAIN LINE HEATERS	ALL		100		8	30-7	30-71	
HEATER	WATER SUPPLY IN-LINE HEATER	ALL	4	165		8,48(825)	30-7	30-71	
HEATER	WASTE TANK DRAIN BALL VALVE BLKT HTR	ALL	3	161		8,48(825)	30-7	30-71	
HEATER	WASTE TANK DRAIN LINE BLANKET HEATER	ALL	3	161		8,48(825)	30-7	30-71	
MAST	AFT DRAIN MAST	ALL	1	154		8	30-6	30-71	
MAST	FWD DRAIN MAST	ALL	1	124		8	30-6	30-71	
MOTOR	WINDSHIELD WIPER MOTOR - L	ALL	1	211		4	30-4	30-42	B30421
MOTOR	WINDSHIELD WIPER MOTOR - R	ALL	1	212		4	30-4	30-42	B30422
PANEL	ANTI-ICE/LIGHTING PANEL	ALL	1	212	P5	8	00-3,30-3	33-41	M33413
PANEL	BACKUP WINDOW HEAT PANEL	ALL	1	212	P61	8	00-5,30-3	30-41	M30431
PANEL	WINDOW HEAT/EMERGENCY LIGHTS PANEL	ALL	1	211	P5	8	00-3,30-3	30-41	M30001
PANEL	WIPER PANEL - L	ALL	1	211	P5	8	00-3,30-3	30-42	M30421
PANEL	WIPER PANEL - R	ALL	1	212	P5	8	00-3,30-3	30-42	M30422
PROBE	AOA SENSOR, L	ALL	1	211		4	30-2	30-32	M34103
PROBE	AOA SENSOR, R	ALL	1	212		4	30-2	30-32	M34203
PROBE	P2T2 PROBE - R, L	ALL	2	412/422		29	30-2	73-21	M73006
PROBE	PITOT PROBE, C	ALL	1	112		4	30-2	30-11	M34317
PROBE	PITOT PROBE, L	ALL	1	111		4	30-2	30-11	M34117

ATA 30	ICE AND RAIN PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 30	EQUIP NUMBER
								CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	EQUIP NUMBER
PROBE	PITOT PROBE, R	ALL	1	112		4	30-2	30-12	M34217
PROBE	TAT PROBE	ALL	1	111		4	30-2	34-21	M34003
RELAY	AOA CASE HEAT INDICATION RELAY	ALL	1	117	P110	8.9(117AL)	00-14	30-32	K30121
RELAY	AOA CASE HEAT INDICATION RELAY	ALL	1	118	P210	8.9(117AL)	00-15	30-32	K30221
RELAY	AOA VANE HEAT INDICATION RELAY	ALL	1	117	P110	8.9(117AL)	00-14	30-32	K30122
RELAY	AOA VANE HEAT INDICATION RELAY	ALL	1	118	P210	8.9(117AL)	00-15	30-32	K30222
RELAY	PITOT PROBE HEAT AIR RELAY, C	ALL	1	118	P210	8.9(117AL)	00-15	30-31	K30316
RELAY	PITOT PROBE HEAT AIR RELAY, L	ALL	1	117	P110	8.9(117AL)	00-14	30-31	K30312
RELAY	PITOT PROBE HEAT AIR RELAY, R	ALL	1	118	P210	8.9(117AL)	00-15	30-31	K30314
RELAY	PITOT PROBE HEAT GROUND RELAY, C	ALL	1	118	P210	8.9(117AL)	00-15	30-31	K30315
RELAY	PITOT PROBE HEAT GROUND RELAY, L	ALL	1	117	P110	8.9(117AL)	00-14	30-31	K30311
RELAY	PITOT PROBE HEAT GROUND RELAY, R	ALL	1	118	P210	8.9(117AL)	00-15	30-31	K30313
RELAY	PROBE HEAT SENSOR RELAY	ALL	1	117	P110	8.9(117AL)	00-14	30-31	K30120
RELAY	PROBE HEAT SENSOR RELAY	ALL	1	118	P210	8.9(117AL)	00-15	30-31	K30220
RELAY	PROBE HEAT SENSOR RELAY	ALL	1	118	P210	8.9(117AL)	00-15	30-31	K30223
RELAY	TAT PROBE HEAT RELAY, L	ALL	1	117	P110	8.9(117AL)	00-14	30-33	K30331
SENSOR	ENGINE ANTI-ICE (EAI) PRESSURE SENSOR, L	ALL	1	411		29(414AR)	30-10	30-21	M30212
SENSOR	ENGINE ANTI-ICE (EAI) PRESSURE SENSOR, R	ALL	1	421		29(424AR)	30-10	30-21	M30214
SENSOR	FLIGHT DECK WINDOW HEAT SENSOR	ALL	18	211/212		8	30-1	30-41	
SENSOR	REMOTE TEMPERATURE SENSOR	ALL	1	161		8	30-7	30-71	M30004

ATA 30	ICE AND RAIN PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 30	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	REMOTE TEMPERATURE SENSOR	ALL	1	161		8	30-7	30-71	M30005
SENSOR	WING ANTI-ICE PRESSURE SENSOR, L	ALL	1	522		35	30-9	30-11	M30113
SENSOR	WING ANTI-ICE PRESSURE SENSOR, R	ALL	1	622		35	30-9	30-11	M30112
SWITCH	BACKUP WINDOW HEAT SWITCH, L	ALL	1	212	P61	8	00-5.30-3	30-41	M30431SOO1
SWITCH	BACKUP WINDOW HEAT SWITCH, R	ALL	1	212	P61	8	00-5.30-3	30-41	M30431S002
SWITCH	ENGINE ANTI-ICE SELECTOR SWITCH, L	ALL	2	212	P5	8	00-3.30-3	30-21	M33413S002
SWITCH	ENGINE ANTI-ICE SELECTOR SWITCH, R	ALL	2	212	P5	8	00-3.30-3	30-21	M33413S003
SWITCH	L FORWARD WINDOW HEAT SWITCH	ALL	1	211	P5	8	00-3.30-3	30-41	M30001S004
SWITCH	L SIDE WINDOW HEAT SWITCH	ALL	1	211	P5	8	00-3.30-3	30-41	M30001S003
SWITCH	R FORWARD WINDOW HEAT SWITCH	ALL	1	211	P5	8	00-3.30-3	30-41	M30001S005
SWITCH	R SIDE WINDOW HEAT SWITCH	ALL	1	211	P5	8	00-3.30-3	30-41	M30001S006
SWITCH	WING ANTI-ICE SELECTOR SWITCH	ALL	1	212	P5	8	00-3.30-3	30-11	M30001S001
SWITCH	WIPER SWITCH, L	ALL	1	211	P5	8	00-3.30-3	30-42	M30421S001
SWITCH	WIPER SWITCH, R	ALL	1	212	P5	8	00-3.30-3	30-42	M30422S001
TRANSFORMER	PITOT PROBE HEAT TRANSFORMER, C	ALL	1	118	P210	8,9(117AL)	00-15	30-31	T30316
TRANSFORMER	PITOT PROBE HEAT TRANSFORMER, L	ALL	1	117	P110	8,9(117AL)	00-14	30-31	T30314
TRANSFORMER	PITOT PROBE HEAT TRANSFORMER, R	ALL	1	118	P210	8,9(117AL)	00-15	30-31	T30315
VALVE	ENGINE ANTI-ICE (EAI) VALVE	ALL	2	411/421		29(415AL)(425AL)	30-10	30-21	
VALVE	WING ANTI-ICE (WAI) VALVE - L	ALL	1	522		33(512AB)	30-9	30-11	V30111
VALVE	WING ANTI-ICE (WAI) VALVE - R	ALL	1	622		33(612AB)	30-9	30-11	V30112

ATA 30	ICE AND RAIN PROTECTION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 30	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
WINDOW	WINDOW 1 - L	ALL	1	211		3,8	30-1	30-41	B30101
WINDOW	WINDOW 1 - R	ALL	1	212		3,8	30-1	30-41	B30201
WINDOW	WINDOW 2 - L	ALL	1	211		3,8	30-1	30-41	B30102
WINDOW	WINDOW 2 - R	ALL	1	212		3,8	30-1	30-41	B30202
WINDOW	WINDOW 3 - L	ALL	1	211		3,8	30-1	30-41	B30103
WINDOW	WINDOW 3 - R	ALL	1	212		3,8	30-1	30-41	B30203

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CABINET	AIMS CABINET, L	ALL	1	117	E3-1	8,9(117AL)	00-11	31-41	M31101
CABINET	AIMS CABINET, R	ALL	1	118	E2-1	8,9(117AL)	00-12,31-3	31-41	M31201
CARD	LSCF L ARINC SIGNAL GATEWAY CARD	ALL	1	117	P85	8,9(117AL)	00-9	31-09	P00085A012
CARD	LSCF R ARINC SIGNAL GATEWAY CARD	ALL	1	117	P85	8,9(117AL)	00-9	31-09	P00085A015
CARD	RSCF L ARINC SIGNAL GATEWAY CARD	ALL	1	118	P84	8,9(117AL)	00-9	31-09	P00084A012
CARD	RSCF R ARINC SIGNAL GATEWAY CARD	ALL	1	118	P84	8,9(117AL)	00-9	31-09	P00084A015
CIRCUIT BREAKER	AIMS L - CB	ALL	1	117	P310	8,9(117AL)	00-16	31-41	C31651
CIRCUIT BREAKER	AIMS L1 - CB	ALL	1	211	P11	8	00-6	31-41	C31609
CIRCUIT BREAKER	AIMS L2 - CB	ALL	1	211	P11	8	00-6	31-41	C31611
CIRCUIT BREAKER	AIMS L3 - CB	ALL	1	211	P11	8	00-6	31-41	C31617
CIRCUIT BREAKER	AIMS L4 - CB	ALL	1	211	P11	8	00-6	31-41	C31619
CIRCUIT BREAKER	AIMS R - CB	ALL	1	117	P310	8,9(117AL)	00-16	31-41	C31650
CIRCUIT BREAKER	AIMS R1 - CB	ALL	1	212	P11	8	00-6	31-41	C31610
CIRCUIT BREAKER	AIMS R2 - CB	ALL	1	212	P11	8	00-6	31-41	C31612
CIRCUIT BREAKER	AIMS R3 - CB	ALL	1	212	P11	8	00-6	31-41	C31618
CIRCUIT BREAKER	AIMS R4 - CB	ALL	1	212	P11	8	00-6	31-41	C31620
CIRCUIT BREAKER	C DSPL LOWER - CB	ALL	1	211	P11	8	00-6	31-61	C31614

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	C DSPL UPR - CB	ALL	1	212	P11	8	00-6	31-61	C31613
CIRCUIT BREAKER	CAPT CLOCK - CB	ALL	1	211	P11	8	00-6	31-25	C31647
CIRCUIT BREAKER	CAPT DSPL-INBD - CB	ALL	1	211	P11	8	00-6	31-61	C31627
CIRCUIT BREAKER	CAPT DSPL-OUTBD - CB	ALL	1	211	P11	8	00-6	31-61	C31625
CIRCUIT BREAKER	CDU C - CB	ALL	1	211	P11	8	00-6	31-61	C31631
CIRCUIT BREAKER	CDU L - CB	ALL	1	211	P11	8	00-6	31-61	C31629
CIRCUIT BREAKER	CDU R - CB	ALL	1	212	P11	8	00-6	31-61	C31630
CIRCUIT BREAKER	CURSOR CTRL L - CB	ALL	1	211	P11	8	00-6	31-61	C31623
CIRCUIT BREAKER	CURSOR CTRL R - CB	ALL	1	212	P11	8	00-6	31-61	C31624
CIRCUIT BREAKER	EFIS CTRL SWITCH L - CB	ALL	1	211	P11	8	00-6	31-61	C31621
CIRCUIT BREAKER	EFIS CTRL SWITCH R - CB	ALL	1	212	P11	8	00-6	31-61	C31622
CIRCUIT BREAKER	F/O CLOCK - CB	ALL	1	212	P11	8	00-6	31-25	C31649
CIRCUIT BREAKER	F/O DSPL-INBD - CB	ALL	1	212	P11	8	00-6	31-61	C31628
CIRCUIT BREAKER	F/O DSPL-OUTBD - CB	ALL	1	212	P11	8	00-6	31-61	C31626
CIRCUIT BREAKER	FLT DECK PRINTER - CB	ALL	1	118	P210	8,9(117AL)	00-15	31-33	C31404
CIRCUIT BREAKER	FLT DECK PRINTER 2 - CB	ALL	1	117	P110	8,9(117AL)	00-14	31-33	C31405
CIRCUIT BREAKER	FLT RCDR AC - CB	ALL	1	118	P210	8,9(117AL)	00-15	31-31	C31400

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	FLT RCDDR DC - CB	ALL	1	118	P210	8,9(117AL)	00-15	31-31	C31605
CIRCUIT BREAKER	LSCF PS 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	31-09	C31634
CIRCUIT BREAKER	LSCF PS 2 - CB	ALL	1	117	P310	8,9(117AL)	00-16	31-09	C31637
CIRCUIT BREAKER	OVHD INSTR & PNL LTS - CB	ALL	1	117	P110	8,9(117AL)	00-14	31-11	C33412
CIRCUIT BREAKER	QUICK ACCESS RECORDER - CB	ALL	1	118	P210	8,9(117AL)	00-15	31-35	C31401
CIRCUIT BREAKER	RSCF PS 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	31-09	C31638
CIRCUIT BREAKER	RSCF PS 2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	31-09	C31641
CIRCUIT BREAKER	WARN SPKR L - CB	ALL	1	211	P11	8	00-6	31-51	C31001
CIRCUIT BREAKER	WARNING ELECTRONIC UNIT-L1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	31-51	C31653
CIRCUIT BREAKER	WARNING ELECTRONIC UNIT-L2 - CB	ALL	1	117	P310	8,9(117AL)	00-16	31-51	C31655
CIRCUIT BREAKER	WARNING ELECTRONIC UNIT-R1 - CB	ALL	1	118	P210	8,9(117AL)	00-15	31-51	C31652
CIRCUIT BREAKER	WARNING ELECTRONIC UNIT-R2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	31-51	C31654
CIRCUIT BREAKER	WARNING SPEAKER-R - CB	ALL	1	212	P11	8	00-6	31-51	C31606
CLOCK	CAPT CLOCK ELECTRONIC	ALL	1	211	P1-1	8	00-1, 31-1	31-25	N31002
CLOCK	F/O CLOCK ELECTRONIC	ALL	1	212	P3-1	8	00-1, 31-1	31-25	N31003
COUPLER	C CDU TO INTERCABINET 2 ARINC 629 BUS CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31315

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
COUPLER	C CDU TO L FLIGHT CONTROLS ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	31-41	B31110
COUPLER	C CDU TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-41	B31115
COUPLER	C CDU TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-41	B31212
COUPLER	L AIMS TO C FLT CTRLS ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	31-41	B31309
COUPLER	L AIMS TO C SYSTEMS ARINC 629 BUS 1 CPLR - 2	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31312
COUPLER	L AIMS TO C SYSTEMS ARINC 629 BUS 2 CPLR - 1	ALL	1	115	P313	8,9(117AL)	00-10	31-41	B31314
COUPLER	L AIMS TO DISPLAYS ARINC 629 BUS CPLR	ALL	1	212		8	31-2	31-61	B31117
COUPLER	L AIMS TO DISPLAYS ARINC 629 BUS CPLR	ALL	1	212		8	31-2	31-61	B31118
COUPLER	L AIMS TO INTERCABINET ARINC 629 BUS 1 CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-41	B31127
COUPLER	L AIMS TO INTERCABINET ARINC 629 BUS 2 CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31327
COUPLER	L AIMS TO INTERCABINET ARINC 629 BUS 3 CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-41	B31227
COUPLER	L AIMS TO INTERCABINET ARINC 629 BUS 4 CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31308
COUPLER	L AIMS TO L FLT CTRLS ARINC 629 BUS CPLR - 1	ALL	1	115	P112	8,9(117AL)	00-10	31-41	B31107
COUPLER	L AIMS TO L FLT CTRLS ARINC 629 BUS CPLR - 2	ALL	1	115	P112	8,9(117AL)	00-10	31-41	B31108
COUPLER	L AIMS TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-41	B31112
COUPLER	L AIMS TO R FLT CTRLS ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	31-41	B31206

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
COUPLER	L AIMS TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-41	B31211
COUPLER	L CDU TO INTERCABINET 2 ARINC 629 BUS CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31313
COUPLER	L CDU TO L FLIGHT CONTROLS ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	31-41	B31109
COUPLER	L CDU TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-41	B31113
COUPLER	L CDU TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-41	B31210
COUPLER	L SCF TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-09	B31102
COUPLER	L SYSTEM CARDFILE TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-09	B31101
COUPLER	L WEU TO C SYSTEMS ARINC 629 BUS 1 CPLR - 1	ALL	1	116	P311	8,9(117AL)	00-10	31-51	B31322
COUPLER	L WEU TO C SYSTEMS ARINC 629 BUS 1 CPLR - 2	ALL	1	116	P311	8,9(117AL)	00-10	31-51	B31323
COUPLER	L WEU TO L SYSTEMS ARINC 629 BUS CPLR - 1	ALL	1	116	P311	8,9(117AL)	00-10	31-51	B31122
COUPLER	L WEU TO L SYSTEMS ARINC 629 BUS CPLR - 2	ALL	1	115	P111	8,9(117AL)	00-10	31-51	B31123
COUPLER	R AIMS TO C FLT CTRLS ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	31-41	B31310
COUPLER	R AIMS TO C SYSTEMS ARINC 629 BUS 1 CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31317
COUPLER	R AIMS TO C SYSTEMS ARINC 629 BUS 1 CPLR - 2	ALL	1	116	P311	8,9(117AL)	00-10	31-51	B31307
COUPLER	R AIMS TO C SYSTEMS ARINC 629 BUS 2 CPLR	ALL	1	115	P313	8,9(117AL)	00-10	31-41	B31318
COUPLER	R AIMS TO DISPLAYS ARINC 629 BUS CPLR	ALL	1	211		8	31-2	31-61	B31215

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
COUPLER	R AIMS TO DISPLAYS ARINC 629 BUS CPLR	ALL	1	211		8	31-2	31-61	B31216
COUPLER	R AIMS TO INTERCABINET ARINC 629 BUS 1 CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-41	B31126
COUPLER	R AIMS TO INTERCABINET ARINC 629 BUS 2 CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31326
COUPLER	R AIMS TO INTERCABINET ARINC 629 BUS 3 CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-41	B31226
COUPLER	R AIMS TO INTERCABINET ARINC 629 BUS 4 CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31311
COUPLER	R AIMS TO L FLT CTRLS ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	31-41	B31111
COUPLER	R AIMS TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-41	B31116
COUPLER	R AIMS TO R FLT CTRLS ARINC 629 BUS CPLR - 1	ALL	1	116	P212	8,9(117AL)	00-10	31-41	B31208
COUPLER	R AIMS TO R FLT CTRLS ARINC 629 BUS CPLR - 2	ALL	1	116	P212	8,9(117AL)	00-10	31-41	B31209
COUPLER	R AIMS TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-41	B31214
COUPLER	R CDU TO INTERCABINET 2 ARINC 629 BUS CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31316
COUPLER	R CDU TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-41	B31114
COUPLER	R CDU TO R FLIGHT CONTROLS ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	31-41	B31207
COUPLER	R CDU TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-41	B31213
COUPLER	R SCF TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-09	B31201

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
COUPLER	R SCF TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-09	B31202
COUPLER	R WEU TO C SYSTEMS ARINC 629 BUS 1 CPLR - 1	ALL	1	116	P311	8,9(117AL)	00-10	31-51	B31306
COUPLER	R WEU TO R SYSTEMS ARINC 629 BUS CPLR - 1	ALL	1	116	P211	8,9(117AL)	00-10	31-51	B31222
COUPLER	R WEU TO R SYSTEMS ARINC 629 BUS CPLR - 2	ALL	1	116	P211	8,9(117AL)	00-10	31-51	B31223
CURSOR	CURSOR CONTROL DEVICE - L	ALL	1	211	P10	8	00-3	31-61	M31103
CURSOR	CURSOR CONTROL DEVICE - R	ALL	1	212	P10	8	00-3	31-61	M31203
DISPLAY	L INBOARD DISPLAY	ALL	1	211	P1	8	00-1	31-61	N31102
DISPLAY	L OUTBOARD DISPLAY	ALL	1	211	P1	8	00-1	31-61	N31101
DISPLAY	LOWER CENTER DISPLAY	ALL	1	211	P9	8	00-4	31-61	N31302
DISPLAY	R INBOARD DISPLAY	ALL	1	212	P3	8	00-1	31-61	N31202
DISPLAY	RIGHT OUTBOARD DISPLAY	ALL	1	212	P3	8	00-1	31-61	N31201
DISPLAY	UPPER CENTER DISPLAY	ALL	1	211	P9	8	00-1	31-61	N31301
MODULE	ACMF CORE PROCESSOR MODULE	ALL	1	117	E3-1	8,9(117AL)	00-11,31-3	31-41	M31101M002
MODULE	BASIC CORE PROCESSOR MODULE	ALL	1	118	E2-1	8,9(117AL)	00-12,31-3	31-41	M31201M002
MODULE	COMM MNGMT, CORE PROCESSOR MODULE	ALL	1	117	E3-1	8,9(117AL)	00-11,31-3	31-41	M31201M001
MODULE	COMM MNGMT, CORE PROCESSOR MODULE	ALL	1	118	E2-1	8,9(117AL)	00-12,31-3	31-41	M31101M001
MODULE	GRAPHICS GEN, CORE PROCESSOR MODULE	ALL	1	117	E3-1	8,9(117AL)	00-11,31-3	31-41	M31101M010

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
MODULE	GRAPHICS GEN, CORE PROCESSOR MODULE	ALL	1	117	E3-1	8,9(117AL)	00-11,31-3	31-41	M31101M011
MODULE	GRAPHICS GEN, CORE PROCESSOR MODULE	ALL	1	118	E2-1	8,9(117AL)	00-12,31-3	31-41	M31201M011
MODULE	GRAPHICS GEN, CORE PROCESSOR MODULE,	ALL	1	118	E2-1	8,9(117AL)	00-12,31-3	31-41	M31201M010
MODULE	GROUND TEST MODULE	ALL	1	212	P61	8	00-5	31-41	M31005
MODULE	I/O MODULE	ALL	1	117	E3-1	8,9(117AL)	00-11,31-3	31-41	M31101M003
MODULE	I/O MODULE	ALL	1	117	E3-1	8,9(117AL)	00-11,31-3	31-41	M31101M004
MODULE	I/O MODULE	ALL	1	117	E3-1	8,9(117AL)	00-11,31-3	31-41	M31101M008
MODULE	I/O MODULE	ALL	1	117	E3-1	8,9(117AL)	00-11,31-3	31-41	M31101M009
MODULE	I/O MODULE	ALL	1	118	E2-1	8,9(117AL)	00-12,31-3	31-41	M31201M003
MODULE	I/O MODULE	ALL	1	118	E2-1	8,9(117AL)	00-12,31-3	31-41	M31201M004
MODULE	I/O MODULE	ALL	1	118	E2-1	8,9(117AL)	00-12,31-3	31-41	M31201M008
MODULE	I/O MODULE	ALL	1	118	E2-1	8,9(117AL)	00-12,31-3	31-41	M31201M009
PANEL	CAPT DISPLAY SWITCH PANEL	ALL	1	211	P1-2	8	00-1	31-61	M31001
PANEL	CAPT INSTRUMENT SOURCE SELECT PANEL	ALL	1	211	P1-1	8	00-1	31-61	M31106
PANEL	DISPLAY CONTROL PANEL, C	ALL	1	212	P9	8	00-4	31-61	M31058
PANEL	DISPLAY SELECT PANEL	ALL	1	212	P55	8	00-2	31-61	M31038
PANEL	EFIS CONTROL PANEL - L	ALL	1	211	P55	8	00-2	31-61	M31102

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PANEL	EFIS CONTROL PANEL - R	ALL	1	212	P55	8	00-2	31-61	M31202
PANEL	F/O DISPLAY SWITCH PANE	ALL	1	212	P3-2	8	00-1	31-61	M31002
PANEL	F/O INSTRUMENT SOURCE SELECT PANEL	ALL	1	212	P3-1	8	00-1	31-61	M31206
POWER SUPPLY	NO. 1 LINEAR/MON CARD POWER SPLY, L	ALL	1	117	P85	8,9(117AL)	00-9	31-09	P00085A003
POWER SUPPLY	NO. 1 LINEAR/MONITOR CARD POWER SPLY, L	ALL	1	118	P84	8,9(117AL)	00-9	31-09	P00084A003
POWER SUPPLY	NO. 1 PREREGULATOR CARD POWER SPLY, L	ALL	1	117	P85	8,9(117AL)	00-9	31-09	P00085A002
POWER SUPPLY	NO. 1 PREREGULATOR CARD POWER SPLY, R	ALL	1	118	P84	8,9(117AL)	00-9	31-09	P00084A002
POWER SUPPLY	NO. 2 LINEAR/MONITOR CARD POWER SPLY, L	ALL	1	117	P85	8,9(117AL)	00-9	31-09	P00085A018
POWER SUPPLY	NO. 2 LINEAR/MONITOR CARD POWER SPLY, R	ALL	1	118	P84	8,9(117AL)	00-9	31-09	P00084A018
POWER SUPPLY	NO. 2 PREREGULATOR CARD POWER SPLY, L	ALL	1	117	P85	8,9(117AL)	00-9	31-09	P00085A019
POWER SUPPLY	NO. 2 PREREGULATOR CARD POWER SPLY, R	ALL	1	118	P84	8,9(117AL)	00-9	31-09	P00084A019
PRINTER	FLIGHT DECK PRINTER	ALL	1	211		8	00-4	31-33	M31004
RECORDER	FLIGHT DATA RECORDER	ALL	1	264	E7	8	00-7,31-4	31-31	M31035
RECORDER	QUICK ACCESS RECORDER	ALL	1	118	E2-2	8,9(117AL)	00-12,31-3	31-35	M31006
RELAY	CARDFILE POWER CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	31-09	K31003
RELAY	FLT REC AC PWR RELAY	ALL	1	118	P210	8,9(117AL)	00-15	31-31	K31002
SENSOR	REMOTE LIGHT SENSOR - L	ALL	1	211	P7	8	31-1	31-61	M31104

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	REMOTE LIGHT SENSOR - R	ALL	1	212	P7	8	31-1	31-61	M31204
SPEAKER	AURAL WARNING SPEAKER - L	ALL	1	211		8	31-1	31-51	B31124
SPEAKER	AURAL WARNING SPEAKER - R	ALL	1	212		8	31-1	31-51	B31224
SWITCH	CAPT ACCEPT SWITCH	ALL	1	211	P7	8	00-2	31-61	S31101
SWITCH	CAPT CANCEL SWITCH	ALL	1	211	P7	8	00-2	31-61	S31105
SWITCH	CAPT CLOCK SWITCH	ALL	1	211	P7	8	00-2	31-25	S31100
SWITCH	CAPT REJECT SWITCH	ALL	1	211	P7	8	00-2	31-61	S31102
SWITCH	CONTROL DISPLAY INSERTION SWITCH, C	ALL	1	200	P8	8	00-4	31-41	S31203
SWITCH	CONTROL DISPLAY INSERTION SWITCH, L	ALL	1	200	P9	8	00-4	31-41	S31305
SWITCH	CONTROL DISPLAY INSERTION SWITCH, R	ALL	1	200	P9	8	00-4	31-41	S31104
SWITCH	EICAS DISPLAY INSERTION SWITCH	ALL	1	200	P2	8	00-1	31-41	S31302
SWITCH	F/O ACCEPT SWITCH	ALL	1	212	P7	8	00-2	31-61	S31201
SWITCH	F/O CANCEL SWITCH	ALL	1	212	P7	8	00-2	31-61	S31204
SWITCH	F/O CLOCK SWITCH	ALL	1	212	P7	8	00-2	31-25	S31200
SWITCH	F/O REJECT SWITCH	ALL	1	212	P7	8	00-2	31-61	S31202
SWITCH	GROUND TEST SWITCH	ALL	1	212	P61	8	00-5	31-41	M31005S001
SWITCH	INBD DISPLAY INSERTION SWITCH, L	ALL	1	211	P1	8	00-1	31-41	S31301

ATA 31	INDICATING / RECORDING SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 31	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	INBD DISPLAY INSERTION SWITCH, R	ALL	1	212	P3	8	00-1	31-41	S31303
SWITCH	MULTI FUNTION DISPLAY INSERTION SWITCH	ALL	1	200	P9	8	00-4	31-41	S31103
SWITCH	NOSE GEAR PRESS GREENBAND SWITCH	ALL	1	711		47	27-3	27-48	S31001
SWITCH	OUTBD DISPLAY INSERTION SWITCH, L	ALL	1	211	P1	8	00-1	31-41	S31300
SWITCH	OUTBD DISPLAY INSERTION SWITCH, R	ALL	1	212	P3	8	00-1	31-41	S31304
UNIT	WARNING ELECTRONIC UNIT, L	ALL	1	117	E1-5	8,9(117AL)	00-12,31-3	31-51	M31107

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	REC- OG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACCUMULATOR	BRAKE ACCUMULATOR	ALL	1	144		8	32-23	32-41	
ACCUMULATOR	BRAKE SURGE ACCUMULATOR	ALL	1	551		31(551DB)	32-11	32-41	
ACTUATION MECH	NLG FWD DOOR ACTUATION MECHANISM	ALL	1	113/114		8	32-6	32-21	
ACTUATOR	GEAR RETRACT BRAKING ACTUATOR	ALL	2	143/144		8	32-20	32-41	
ACTUATOR	MLG ALTN UPLOCK RELEASE ACTUATOR	ALL	2	143/144		8	32-22	32-35	
ACTUATOR	MLG DOOR ACTUATOR	ALL	2	143/144		8	32-21	32-32	
ACTUATOR	MLG DOOR UPLOCK ACTUATOR	ALL	2	143/144		8	32-21	32-32	
ACTUATOR	MLG DRAG BRACE DNLOCK ACTUATOR - MLG	ALL	2	731/741		47	32-13	32-32	
ACTUATOR	MLG RETRACT ACTUATOR	ALL	2	731/741		47	32-14	32-32	
ACTUATOR	MLG SIDE BRACE DOWNLOCK ACTUATOR	ALL	2	731/741		47	32-14	32-32	
ACTUATOR	MLG STEERING/LOCKING PCA, L	ALL	1	731		47	32-17	32-53	M32163
ACTUATOR	MLG STEERING/LOCKING PCA, R	ALL	1	741		47	32-17	32-53	M32263
ACTUATOR	MLG TRUCK POSITIONER ACTUATOR	ALL	2	731/741		47	32-16	32-32	
ACTUATOR	MLG UPLOCK ACTUATOR	ALL	2	143/144		8	32-22	32-32	
ACTUATOR	NLG ALTN UPLOCK RELEASE ACTUATOR	ALL	1	113/114		8	32-7	32-35	
ACTUATOR	NLG DOOR ACTUATOR	ALL	1	113		8	32-6	32-34	
ACTUATOR	NLG LOCK ACTUATOR	ALL	1	113/114		8	32-7	32-34	
ACTUATOR	NLG RETRACT ACTUATOR	ALL	1	114		8	32-7	32-34	
ACTUATOR	NLG STEERING ACTUATOR	ALL	2	711		47	32-9	32-51	
ASSEMBLY	MLG TRUCK ASSEMBLY	ALL	2	731/741		47	32-16	32-12	

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ASSEMBLY	MLG TRUCK TILT SENSOR TARGET BRACKET ASSEMBLY	ALL	4	731/741		47	32-16	32-61	
ASSEMBLY	MLG UPLOCK ASSEMBLY	ALL	2	143/144		8	32-22	32-32	
AXLE	MLG AXLE	ALL	6	731/741		47	32-16	32-11	
BRACE	MLG LOWER DRAG BRACE	ALL	2	731/741		47	32-13	32-11	
BRACE	MLG LOWER SIDE BRACE	ALL	2	731/741		47	32-14	32-11	
BRACE	MLG UPPER DRAG BRACE	ALL	2	731/741		47	32-13	32-11	
BRACE	MLG UPPER SIDE BRACE	ALL	2	731/741		47	32-14	32-11	
BRAKE	MLG WHEEL BRAKE	ALL	12	731/741		47	32-18	32-45	
BRAKE	NLG SPIN BRAKE	ALL	2	113/114		8	32-6	32-45	
CARD	WEIGHT-ON-WHEELS LOGIC CARD, L	ALL	1	115	P85	8,9(117AL)	00-9,32-4	32-09	P00085A016
CARD	WEIGHT-ON-WHEELS LOGIC CARD, R	ALL	1	116	P84	8,9(117AL)	00-9,32-4	32-09	P00084A016
CENTERING MECH	NLG STEERING GEAR UP CENTERING MECHANISM	ALL	1	711		47	32-7	32-51	
CIRCUIT BREAKER	AIR/GND 1 - CB	ALL	1	211	P11	8	00-6	32-09	C32628
CIRCUIT BREAKER	AIR/GND 2 - CB	ALL	1	212	P11	8	00-6	32-09	C32627
CIRCUIT BREAKER	AIR/GND 3 - CB	ALL	1	212	P11	8	00-6	32-09	C32626
CIRCUIT BREAKER	LDG GEAR ALTN EXT MOTOR - CB	ALL	1	211	P11	8	00-6	32-35	C32013
CIRCUIT BREAKER	LDG GEAR-ALTN EXT CTRL - CB	ALL	1	212	P11	8	00-6	32-35	C32604
CIRCUIT BREAKER	LDG GEAR-EXTD/RETR 1 - CB	ALL	1	211	P11	8	00-6	32-31	C32607

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	LDG GEAR-EXTD/RETR 2 - CB	ALL	1	211	P11	8	00-6	32-31	C32608
CIRCUIT BREAKER	LDG-RETR AUTO OFF - CB	ALL	1	211	P11	8	00-6	32-31	C32616
CIRCUIT BREAKER	LG ALTN EXT MOTOR REMOTE - CB	ALL	1	117	P310	8,9(117AL)	00-16	32-35	C32606
CIRCUIT BREAKER	LG ANTISKID 1,5,9/3,7,11 - CB 1	ALL	1	117	P310	8,9(117AL)	00-16	32-42	C32609
CIRCUIT BREAKER	LG ANTISKID 1,5,9/3,7,11 - CB 2	ALL	1	118	P210	8,9(117AL)	00-15	32-42	C32611
CIRCUIT BREAKER	LG ANTISKID 2,6,10/4,8,12 - CB 1	ALL	1	117	P110	8,9(117AL)	00-14	32-42	C32610
CIRCUIT BREAKER	LG ANTISKID 2,6,10/4,8,12 - CB 2	ALL	1	117	P310	8,9(117AL)	00-16	32-42	C32612
CIRCUIT BREAKER	LG AUTOBRAKE/BITE/R-COMM - CB 1	ALL	1	117	P110	8,9(117AL)	00-14	32-42	C32613
CIRCUIT BREAKER	LG AUTOBRAKE/BITE/R-COMM - CB 2	ALL	1	118	P210	8,9(117AL)	00-15	32-42	C32614
CIRCUIT BREAKER	LG BRAKE CONTROL-BITE/L COMM - CB	ALL	1	117	P110	8,9(117AL)	00-14	32-42	C32621
CIRCUIT BREAKER	LG BRAKE PRESSURE IND - CB	ALL	1	117	P310	8,9(117AL)	00-16	32-41	C32632
CIRCUIT BREAKER	LG BRAKE STATUS IND - CB	ALL	1	117	P310	8,9(117AL)	00-16	32-44	C32631
CIRCUIT BREAKER	LG BRAKE TEMP MONITOR - CB	ALL	1	117	P110	8,9(117AL)	00-14	32-46	C32618
CIRCUIT BREAKER	LG DOOR CLOSE GROUND ACCESS - CB	ALL	1	117	P110	8,9(117AL)	00-14	32-35	C32605
CIRCUIT BREAKER	LG DOOR CLOSE GROUND ACCSS IND - CB	ALL	1	117	P310	8,9(117AL)	00-16	32-35	C32633
CIRCUIT BREAKER	LG LEVER LOCK-CB	ALL	1	118	P210	8,9(117AL)	00-15	32-31	C32623
CIRCUIT BREAKER	LG MAIN GEAR STEERING - CB	ALL	1	117	P110	8,9(117AL)	00-14	32-53	C32619
CIRCUIT BREAKER	LG TIRE PRESSURE INDICATOR - CB	ALL	1	117	P110	8,9(117AL)	00-14	32-49	C32617
CIRCUIT BREAKER	LG EAR-PARKING BRAKE VALVE - CB	ALL	1	212	P11	8	00-6	32-44	C32615
CIRCUIT BREAKER	PSEU 1 ALT PWR - CB	ALL	1	117	P310	8,9(117AL)	00-16	32-08	C32603

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	PSEU 1 PRI PWR - CB	ALLF	1	117	P110	8,9(117AL)	00-14	32-08	C32600
CIRCUIT BREAKER	PSEU 2 ALT PWR - CB	ALL	1	117	P310	8,9(117AL)	00-16	32-08	C32624
CIRCUIT BREAKER	PSEU 2 PRI PWR - CB	ALL	1	118	P210	8,9(117AL)	00-15	32-08	C32601
COLLAR	STEERING COLLAR	ALL	1	711		47	32-9	32-51	
COMPENSATOR	NLG STEERING BROKEN CABLE COMPENSATOR	ALL	1	117/118		8	32-5	32-51	
COUPLER	BSCU TO L SYSTEMS ARINC 629 BUS COUPLER	ALL	1	152	P115	8,48(825)	00-19	32-42	B32113
COUPLER	BSCU TO R SYSTEMS ARINC 629 BUS COUPLER	ALL	1	152	P215	8,48(825)	00-19	32-42	B32213
COUPLER	BTMU TO L SYSTEMS ARINC 629 BUS COUPLER	ALL	1	152	P115	8,48(825)	00-19	32-46	B32112
COUPLER	MGSCU TO L SYSTEMS ARINC 629 BUS COUPLER	ALL	1	152	P115	8,48(825)	00-19	32-53	B32111
COUPLER	PSEU 1 TO L SYS ARINC 629 BUS COUPLER	ALL	1	115	P111	8,9(117AL)	00-10	32-08	B32115
COUPLER	PSEU 1 TO R SYSTEMS ARINC 629 BUS COUPLER	ALL	1	116	P211	8,9(117AL)	00-19	32-08	B32301
COUPLER	PSEU 2 TO L SYSTEMS ARINC 629 BUS COUPLER	ALL	1	115	P111	8,9(117AL)	00-10	32-08	B32215
COUPLER	PSEU 2 TO R SYSTEMS ARINC 629 BUS COUPLER	ALL	1	116	P211	8,9(117AL)	00-19	32-08	B32302
COUPLER	TPMU TO L SYSTEMS ARINC 629 BUS COUPLER	ALL	1	152	P115	8,48(825)	00-19	32-49	B32114
CRANK	MLG STEERING CRANK	ALL	2	731/741		47	32-17	32-53	
DAMPER	DYNAMIC LOAD DAMPER	ALL	1	711		47	32-9	32-51	
DISCONNECT	BRAKE HYDRAULIC DISCONNECT	ALL	12	731/741		47	32-18	32-41	
DISCONNECT	FLIGHT DISPATCH DISCONNECT	ALL	2	551/651		34(551DB)(651DB)	32-11	32-42	
DISCONNECT	NLG TORSION LINK QUICK DISCONNECT	ALL	1	113		8	32-9	32-51	
DOOR	MLG BODY DOOR	ALL	2	732/742		47	32-21	32-12	

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
DOOR	MLG DRAG STRUT DOOR	ALL	2	734/744		47	32-13	32-12	
DOOR	MLG SHOCK STRUT DOOR	ALL	2	733/743		47	32-13	32-12	
DOOR	MLG TRUNNION DOOR	ALL	2	735/745		47	32-14	32-12	
DOOR	NLG AFT DOOR	ALL	2	715/716		47	32-8	32-22	
DOOR	NLG FWD DOOR	ALL	2	713/714		47	32-8	32-22	
DRIVE	ANTISKID TRANSDUCER DRIVE	ALL	12	731/741		47	32-18	32-42	
DRUM MECH	STEERING TILLER DRUM MECHANISM	ALL	2	111/112		8	32-2	32-51	
FITTING	MLG TOW FITTING	ALL	4	731/741		47	32-16	32-11	
FITTING	NLG TOW FITTING	ALL	2	711		47	32-9	32-21	
FUSE	ALTN ANTISKID VALVE HYDRAULIC FUSE	ALL	8	551/651		21	32-12	32-42	
FUSE	MLG TRUCK POSITIONER ACTUATOR FUSE	ALL	4	143/144		8	32-15	32-32	
FUSE	NORMAL ANTISKID VALVE HYDRAULIC FUSE	ALL	12	551/651		38(551DB)(651DB)	32-11	32-42	
FUSE	MLG STEERING HYDRAULIC FUSE	ALL	2	143/144		8	32-22	32-53	
GAUGE	BRAKE SURGE ACCUMULATOR PRESSURE GAUGE	ALL	1	551		38(551DB)	32-11	32-41	
GAUGE	FLT DECK BRAKE ACCUMULATOR PRESS GAUGE	ALL	1	211	P1-2	8	00-1,32-1	32-41	N32001
GAUGE	W/W BRAKE ACCUMULATOR PRESS GAUGE	ALL	1	144		8	32-23	32-41	
HANDLE	MLG STEERING/LOCKING PCA MANUAL S/O VALVE HANDLE	ALL	2	731/741		47	32-17	32-53	
HOOK	MLG DOOR UPLOCK HOOK	ALL	2	143/144		8	32-21	32-32	

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
INDICATOR	MLG STEERING/LOCKING PCA LOCK/UNLOCK VISUAL INDICATOR	ALL	2	731/741		47	32-17	32-53	
LEVER	ALT ANTISKID VALVE BYPASS LEVER	ALL	12	551/651		38(551DB)(651DB)	32-12	32-42	
LEVER	NORMAL ANTISKID VALVE BYPASS LEVER	ALL	12	551/651		31	32-11	32-42	
LEVER	PARKING BRAKE LEVER	ALL	1	210	P10	8	00-4,32-1	32-44	
LEVER	TOWING LEVER	ALL	1	711		47	32-9	32-51	
LIGHT	BRAKE OFF LIGHT	ALL	1	711		47	32-7	32-44	L32005
LIGHT	BRAKE ON LIGHT	ALL	1	711		47	32-7	32-44	L32003
LIGHT	BRAKE SOURCE LIGHT	ALL	1	211	P1-2	8	00-1,32-1	32-41	M32097L001
LIGHT	MLG DOOR UNSAFE LIGHT, L	ALL	1	143		8	32-21	32-35	L32101
LIGHT	MLG DOOR UNSAFE LIGHT, R	ALL	1	144		8	32-21	32-35	L32201
LIGHT	NLG DOOR UNSAFE LIGHT	ALL	1	114		8	32-6	32-35	L32002
LIGHT	PARKING BRAKE SET LIGHT	ALL	1	711		47	32-7	32-44	L32004
LINK	LOWER MLG TORSION LINK	ALL	2	731/741		47	32-16	32-11	
LINK	LOWER NLG TORSION LINK	ALL	1	711		47	32-9	32-21	
LINK	MAIN GEAR STEERING REACTION LINK	ALL	2	731/741		47	32-17	32-53	
LINK	MLG DRAG BRACE LOCK LINK	ALL	2	731/741		47	32-13,32-15	32-11	
LINK	MLG SIDE BRACE LOCK LINK	ALL	2	731/741		47	32-14,32-15	32-11	
LINK	NLG LOCK LINK ASSEMBLY	ALL	1	711		47	32-7	32-21	
LINK	NLG STEERING PIVOT LINK	ALL	1	113/114		8	32-7	32-51	

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
LINK	UPPER MLG TORSION LINK	ALL	2	731/741		47	32-16	32-11	
LINK	UPPER NLG TORSION LINK	ALL	1	711		47	32-9	32-21	
MECHANISM	NLG STEERING CENTERING AND RUD INTER- CONNECT MECHANISM	ALL	1	112		8	32-2	32-51	
MECHANISM	PARKING BRAKE LATCH MECHANISM	ALL	1	112		8,9(112AL)	32-3	32-44	
MODULE	ALTN ANTISKID VALVE MODULE	ALL	2	551/651		31	32-12	32-42	
MODULE	ANTISKID SHUTTLE VALVE MODULE	ALL	2	551/651		38(551DB)(651DB)	32-11	32-42	
MODULE	AUTOBRAKE VALVE MODULE	ALL	1	144		8	32-24	32-42	M32018
MODULE	BRAKE ACCUMULATOR PRESS IND MODULE	ALL	1	211	P1-2	8	32-1	32-41	M32097
MODULE	BRAKE TEMPERATURE COMPENSATION MOD- ULE, L	ALL	1	731		47	32-19	32-46	M32123
MODULE	BRAKE TEMPERATURE COMPENSATION MOD- ULE, R	ALL	1	741		47	32-19	32-46	M32223
MODULE	BRK SOURCE INDICATION TIME DELAY MODULE	ALL	1	118	E2-1	8,9(117AL)	00-12	32-41	M32003
MODULE	LANDING GEAR CONTROL LEVER MODULE	ALL	1	212	P2-2	8	32-1	32-31	M32057
MODULE	MLG DOOR RELEASE/SAFETY VALVE MODULE, L	ALL	1	143		8	32-21	32-35	M32183
MODULE	MLG DOOR RELEASE/SAFETY VALVE MODULE, R	ALL	1	144		8	32-21	32-35	M32283
MODULE	NLG DOOR RELEASE/SAFETY VALVE MODULE - NLG	ALL	1	113		8	32-6	32-35	M32058
MODULE	NLG STEERING METERING VALVE MODULE	ALL	1	711		47	32-9	32-51	
MODULE	NORMAL ANTISKID VALVE MODULE	ALL	2	551/651		38(551DB)(651DB)	32-11	32-42	

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PANEL	LANDING GEAR PANEL	ALL	1	212	P2	8	32-1	32-31	M32002
PIN	BRAKE WEAR INDICATOR PIN	ALL	24	731/741		47	32-18	32-45	
PIN	MLG STEERING PIVOT PIN	ALL	2	731/741		47	32-17	32-53	
PIN HOLE	MLG DOOR SAFETY PIN HOLE	ALL	2	143/144		8	32-21	32-00	
PIN HOLE	MLG DRAG BRACE DOWNLOCK PIN HOLE	ALL	2	731/741		47	32-15	32-00	
PIN HOLE	MLG SIDE BRACE DOWNLOCK PIN HOLE	ALL	2	731/741		47	32-15	32-00	
PIN HOLE	NLG DOOR SAFETY PIN HOLE	ALL	1	113		8	32-6	32-00	
PIN HOLE	NLG DOWNLOCK PIN HOLE	ALL	1	711		47	32-7	32-00	
PLATES	STEERING PLATE	ALL	2	711		47	32-9	32-51	
POWER PACK	ALTN EXTENSION POWER PACK	ALL	1	143		8	32-17	32-35	B32001
RELAY	AUTO-OFF RELAY - A1	ALL	1	117	P110	8,9(117AL)	00-14	32-31	K32014
RELAY	AUTO-OFF RELAY - B1	ALL	1	117	P310	8,9(117AL)	00-16	32-31	K32016
RELAY	AIR MODE MASTER LEFT SYSTEM RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32100
RELAY	AIR MODE MASTER RIGHT SYSTEM RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32200
RELAY	AIR MODE MASTER STANDBY SYSTEM RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32300
RELAY	AIR MODE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32110
RELAY	AIR MODE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32114
RELAY	AIR MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32210
RELAY	AIR MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-00	K32213
RELAY	AIR MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32214

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	AIR MODE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32310
RELAY	AIR MODE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32311
RELAY	AIR MODE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32314
RELAY	ALT EXTEND CONTROL A RELAY	ALL	1	117	P320	8,9(117AL)	00-17	32-35	K32010
RELAY	ALT EXTEND CONTROL B RELAY	ALL	1	117	P320	8,9(117AL)	00-17	32-35	K32018
RELAY	GROUND MODE MASTER LEFT SYSTEM RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32104
RELAY	GROUND MODE MASTER RIGHT SYSTEM RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32204
RELAY	GROUND MODE MASTER STANDBY SYSTEM RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32304
RELAY	GROUND MODE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32111
RELAY	GROUND MODE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32115
RELAY	GROUND MODE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32116
RELAY	GROUND MODE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32117
RELAY	GROUND MODE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32118
RELAY	GROUND MODE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32119
RELAY	GROUND MODE RELAY	ALL	1	117	P110	8,9(117AL)	00-14	32-09	K32120
RELAY	GROUND MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32215
RELAY	GROUND MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32216
RELAY	GROUND MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32217
RELAY	GROUND MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32218

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
RELAY	GROUND MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32219
RELAY	GROUND MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32220
RELAY	GROUND MODE RELAY	ALL	1	118	P210	8,9(117AL)	00-15	32-09	K32221
RELAY	GROUND MODE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32315
RELAY	GROUND MODE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32316
RELAY	GROUND MODE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32317
RELAY	GROUND MODE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32318
RELAY	GROUND MODE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32319
RELAY	GROUND MODE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-09	K32320
RELAY	PARKING BRAKE VALVE CLOSE RELAY	ALL	1	117	P310	8,9(117AL)	00-16	32-44	K32001
RODS	BRAKE PEDAL BUS ROD	ALL	2	112		8,9(112AL)	32-3	32-44	
RODS	MLG BRAKE ROD	ALL	6	731/741		47	32-16	32-11	
SEAL	MLG SHOCK STRUT DYNAMIC SEAL	ALL	2	731/741		47	32-13	32-11	
SEAL	MLG SHOCK STRUT SPARE DYNAMIC SEAL	ALL	4	731/741		47	32-13	32-11	
SEAL	MLG SHOCK STRUT SPARE STATIC SEAL	ALL	4	731/741		47	32-13	32-11	
SEAL	MLG SHOCK STRUT STATIC SEAL	ALL	2	731/741		47	32-13	32-11	
SEAL	NLG SHOCK STRUT DYNAMIC SEAL	ALL	1	711		47	32-8	32-21	
SEAL	NLG SHOCK STRUT SPARE DYNAMIC SEAL	ALL	1	711		47	32-8	32-21	
SEAL	NLG SHOCK STRUT SPARE STATIC SEAL	ALL	2	711		47	32-8	32-21	
SEAL	NLG SHOCK STRUT STATIC SEAL	ALL	1	711		47	32-8	32-21	

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SELECTOR	AUTOBRAKE SELECTOR	ALL	1	212	P2	8	00-1,32-1	32-42	S32001
SENSOR	BRAKE TEMPERATURE SENSOR	ALL	12	731/741		47	32-19	32-46	
SENSOR	L MLG TRUCK TILT 1 SENSOR	ALL	1	731		47	32-16	32-61	S32106
SENSOR	L MLG TRUCK TILT 2 SENSOR	ALL	1	731		47	32-16	32-61	S32110
SENSOR	L MLG UP & LOCKED 1 SENSOR	ALL	1	731		47	32-22	32-61	S32107
SENSOR	L MLG UP & LOCKED 2 SENSOR	ALL	1	731		47	32-22	32-61	S32111
SENSOR	MLG DOOR CLOSED SENSOR 1, L	ALL	1	143		8	32-21	32-61	S32114
SENSOR	MLG DOOR CLOSED SENSOR 1, R	ALL	1	144		8	32-21	32-61	S32214
SENSOR	MLG DOOR CLOSED SENSOR 2, L	ALL	1	143		8	32-21	32-61	S32115
SENSOR	MLG DOOR CLOSED SENSOR 2, R	ALL	1	144		8	32-21	32-61	S32215
SENSOR	MLG DRAG BRACE DOWN SENSOR 1, L	ALL	1	731		47	32-15	32-61	S32108
SENSOR	MLG DRAG BRACE DOWN SENSOR 1, R	ALL	1	741		47	32-15	32-61	S32208
SENSOR	MLG DRAG BRACE DOWN SENSOR 2, L	ALL	1	731		47	32-15	32-61	S32112
SENSOR	MLG DRAG BRACE DOWN SENSOR 2, R	ALL	1	741		47	32-15	32-61	S32212
SENSOR	MLG L WEIGHT-ON-WHEELS LOAD SENSOR, L	ALL	1	562		31(552AB)	32-12	32-09	M32101
SENSOR	MLG L WEIGHT-ON-WHEELS LOAD SENSOR, R	ALL	1	552		31(552AB)	32-12	32-09	M32201
SENSOR	MLG R WEIGHT-ON-WHEELS LOAD SENSOR, L	ALL	1	662		31(653AB)	32-12	32-09	M32102
SENSOR	MLG R WEIGHT-ON-WHEELS LOAD SENSOR, R	ALL	1	652		31(652AB)	32-12	32-09	M32202
SENSOR	MLG SIDE BRACE DOWN SENSOR 1, L	ALL	1	731		47	32-15	32-61	S32109
SENSOR	MLG SIDE BRACE DOWN SENSOR 1, L	ALL	1	731		47	32-15	32-61	S32113

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	MLG SIDE BRACE DOWN SENSOR 1, R	ALL	1	741		47	32-15	32-61	S32209
SENSOR	MLG SIDE BRACE DOWN SENSOR 2, R	ALL	1	741		47	32-15	32-61	S32213
SENSOR	MLG TIRE PRESSURE SENSOR	ALL	12	731/741		47	32-18	32-49	
SENSOR	MLG UP AND LOCKED SENSOR	ALL	4	143/144		8	32-22	32-61	
SENSOR	NLG DOOR CLOSED SENSOR 1 - L	ALL	1	113		8	32-6	32-61	S32033
SENSOR	NLG DOOR CLOSED SENSOR 2 - R	ALL	1	114		8	32-6	32-61	S32034
SENSOR	NLG DOWN SENSOR 1 - L	ALL	1	113		8	32-7	32-61	S32023
SENSOR	NLG DOWN SENSOR 2 - R	ALL	1	114		8	32-7	32-61	S32027
SENSOR	NLG LOCKED SENSOR 1 - L	ALL	1	113		8	32-7	32-61	S32022
SENSOR	NLG LOCKED SENSOR 2 - R	ALL	1	114		8	32-7	32-61	S32026
SENSOR	NLG NOT COMPRESSED SENSOR 1 - L	ALL	1	711		47	32-9	32-61	S32024
SENSOR	NLG NOT COMPRESSED SENSOR 2 - R	ALL	1	711		47	32-9	32-61	S32028
SENSOR	NLG TIRE PRESSURE SENSOR	ALL	2	711		47	32-9	32-49	
SENSOR	NLG UP SENSOR 1 - L	ALL	1	113		8	32-7	32-61	S32021
SENSOR	NLG UP SENSOR 2 - R	ALL	1	114		8	32-7	32-61	S32025
SENSOR	R MLG TRUCK TILT 1 SENSOR	ALL	1	741		47	32-16	32-61	S32206
SENSOR	R MLG TRUCK TILT 2 SENSOR	ALL	1	741		47	32-16	32-61	S32210
SENSOR	R MLG UP & LOCKED 1 SENSOR	ALL	1	741		47	32-22	32-61	S32207
SENSOR	R MLG UP & LOCKED 2 SENSOR	ALL	1	741		47	32-22	32-61	S32211
SPINDLE	MLG DRAG BRACE LOWER SPINDLE	ALL	2	731/741		47	32-13	32-11	

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SPINDLE	MLG DRAG BRACE UPPER SPINDLE	ALL	2	731/741		47	32-13	32-11	
SPINDLE	MLG SIDE BRACE LOWER SPINDLE	ALL	2	731/741		47	32-14	32-11	
SPINDLE	MLG SIDE BRACE UPPER SPINDLE	ALL	2	731/741		47	32-14	32-11	
SPRING	MLG DRAG BRACE LOCK SPRING	ALL	4	731/741		47	32-13	32-32	
SPRING	MLG SIDE BRACE LOCK SPRING	ALL	4	731/741		47	32-14	32-32	
SPRING	NLG LOCK SPRING	ALL	2	711		47	32-7	32-22	
STOP	MLG DOOR STOP	ALL	4	143/144		8	32-21	32-21	
STRIKE ASSY	TAIL STRIKE ASSEMBLY	ALL	1	163/164		8	32-26	32-71	M32010
STRUT	MLG SHOCK STRUT	ALL	2	731/741		47	32-13	32-11	
STRUT	NLG LOWER DRAG STRUT	ALL	1	114		8	32-7	32-34	
STRUT	NLG SHOCK STRUT	ALL	1	711		47	32-8	32-21	
STRUT	NLG UPPER DRAG STRUT	ALL	1	114		8	32-7	32-34	
SUMMING MECH	NLG STEERING SUMMING MECHANISM	ALL	1	711		47	32-9	32-51	
SUPPORT ASSY	BRAKE METERING VALVE ACT SUPPORT ASSY	ALL	2	143/144		8	32-20	32-41	
SWITCH	ALTN BRAKE SOURCE PRESSURE SWITCH	ALL	1	143		8	32-20	32-41	S32013
SWITCH	ALTN EXTEND HYDRAULIC PRESSURE SWITCH	ALL	1	113		8	32-7	32-35	M32011
SWITCH	ALTN GEAR EXT SWITCH	ALL	1	212	P2-2	8	00-1,32-1	32-35	M32002S001
SWITCH	AUTOBRAKE SOLENOID VALVE PRESSURE SW	ALL	1	144		8	32-24	32-42	M32018B
SWITCH	BRAKE METERED PRESSURE SWITCH, L	ALL	1	143		8	32-20	32-44	S32103
SWITCH	BRAKE METERED PRESSURE SWITCH, R	ALL	1	144		8	32-20	32-44	S32203

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	BRAKE PEDAL POSITION SWITCH, L	ALL	1	111		8,9(112AL)	32-3	32-44	S32102
SWITCH	BRAKE PEDAL POSITION SWITCH, R	ALL	1	112		8,9(112AL)	32-3	32-44	S32202
SWITCH	LEFT MLG DOOR CLOSED SWITCH	ALL	1	143		8	32-21	32-35	S32104
SWITCH	LG ARM DOORS SWITCH	ALL	1	154	P56	13(198LR)	32-10	32-35	S32015
SWITCH	MLG ALL DOORS OPEN/DOORS CLOSE SWITCH	ALL	1	154	P56	13(198LR)	32-10	32-35	S32016
SWITCH	MLG DOOR UNSAFE LIGHTS PTT SWITCH	ALL	1	154	P56	13(198LR)	32-10	32-35	S32017
SWITCH	NLG DOOR CLOSED SWITCH	ALL	1	711		47	32-6	32-35	S32105
SWITCH	NLG DOOR UNSAFE LIGHT PTT SWITCH	ALL	1	711	P40	47	32-10	32-35	S32019
SWITCH	NLG DOORS ARM SWITCH	ALL	1	711	P40	47	32-10	32-35	S32018
SWITCH	NLG DOORS CLOSE SWITCH	ALL	1	711	P40	47	32-10	32-35	S32020
SWITCH	NORMAL BRAKE SOURCE PRESSURE SWITCH	ALL	1	144		8	32-23	32-41	S32014
SWITCH	PARKING BRAKE LATCH SWITCH - INBOARD	ALL	1	112		8,9(112AL)	32-3	32-44	S32008
SWITCH	PARKING BRAKE LATCH SWITCH - OUTBOARD	ALL	1	112		8,9(112AL)	32-3	32-44	S32009
SWITCH	RIGHT MLG DOOR CLOSED SWITCH	ALL	1	144		8	32-21	32-35	S32204
TILLER/GEARBOX	NLG STEERING TILLER AND GEARBOX	ALL	2	211/212		8	32-1	32-53	
TRANSDUCER	ALTN BRAKE METERED PRESS TRANSDUCER, L	ALL	1	551		31	32-12	32-42	M32125
TRANSDUCER	ALTN BRAKE METERED PRESS TRANSDUCER, R	ALL	1	651		31	32-12	32-42	M32225
TRANSDUCER	AUTOBRAKE METERED PRESS TRANSDUCER	ALL	1	144		8	32-24	32-42	M32018D
TRANSDUCER	BRAKE ACCUMULATOR PRESS TRANSDUCER	ALL	1	144		8	32-23	32-41	M32034
TRANSDUCER	CAPT NLG STEERING TILLER POS TRANSDUCER	ALL	1	112		8	32-2	32-53	M32039

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC		
	TRANSDUCER	F/O NLG STEERING TILLER POS TRANSDUCER	ALL	1	113		8	32-2	32-53	M32038
	TRANSDUCER	NORM BRAKE METERED PRESSURE XDCR, L	ALL	1	143		8	32-20	32-42	M32124
	TRANSDUCER	NORM BRAKE METERED PRESSURE XDCR, R	ALL	1	144		8	32-20	32-42	M32224
	TRANSDUCER	TRUCK TILT PRESSURE TRANSDUCER, L	ALL	1	143		8	32-15	29-11	M29111
	TRANSDUCER	TRUCK TILT PRESSURE TRANSDUCER, R	ALL	1	144		8	32-15	29-11	M29211
	TRANSDUCER	ANTISKID TRANSDUCER	ALL	12	731/741		47	32-18	32-42	
	UNIT	BRAKE SYSTEM CONTROL UNIT (BSCU)	ALL	1	152	E6-3	8	00-18,32-26	32-42	M32017
	UNIT	BRAKE TEMPERATURE MONITOR UNIT (BTMU)	ALL	1	152	E6-2	8	00-18,32-26	32-49	M32035
	UNIT	MLG STEERING CONTROL UNIT (MGSCU)	ALL	1	152	E6-2	8	00-18,32-26	32-53	M32037
	UNIT	MLG WHEEL INTERFACE UNIT	ALL	12	731/741		47	32-18	32-49	
	UNIT	NLG WHEEL INTERFACE UNIT	ALL	2	711		47	32-9	32-49	
	UNIT	PROXIMITY SENSOR ELEX UNIT (PSEU) 1	ALL	1	117	E1-5	8,9(117AL)	00-12,32-5	32-8	M32021
	UNIT	PROXIMITY SENSOR ELEX UNIT (PSEU) 2	ALL	1	118	E4-1	8,9(117AL)	00-11,32-5	32-8	M32025
	UNIT	TIRE PRESSURE MONITOR UNIT	ALL	1	152	E6-3	8	00-18,32-26	32-49	M32026
	VALVE	ALTN ANTISKID VALVE	ALL	12	551/651		31	32-12	32-42	
	VALVE	ALTN BRAKE METERING VALVE	ALL	2	143/144		8	32-20	32-41	
	VALVE	ALTN SOURCE SELECTOR VALVE	ALL	1	143		8	32-20	32-41	
	VALVE	AUTOBRAKE CONTROL VALVE	ALL	1	144		8	32-24	32-42	M32018C
	VALVE	AUTOBRAKE SHUTTLE VALVE	ALL	2	143/144		8	32-20	32-42	
	VALVE	AUTOBRAKE SOLENOID VALVE	ALL	1	144		8	32-24	32-42	M32018A

ATA 32	LANDING GEAR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 32	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
VALVE	BRAKE ACCUMULATOR CHARGING VALVE	ALL	1	144		8	32-23	32-41	
VALVE	BRAKE ACCUMULATOR ISOLATION VALVE	ALL	1	144		8	32-24	32-41	
VALVE	BRAKE SURGE ACCUMULATOR CHARGING VALVE	ALL	1	551		34(551DB)	32-11	32-42	
VALVE	MLG DOOR OPERATED SEQUENCE VALVE	ALL	2	143/144		8	32-21	32-32	
VALVE	MLG DOOR PRIORITY/RELIEF VALVE	ALL	2	143/144		8	32-22	32-32	
VALVE	MLG DRAG BRACE OPERATED SEQUENCE VALVE	ALL	2	143/144		8	32-14	32-32	
VALVE	MLG SELECTOR/BYPASS VALVE	ALL	1	144		8	32-25	32-31	M32032
VALVE	MLG UPLOCK OPERATED SEQUENCE VALVE	ALL	2	143/144		8	32-22	32-32	
VALVE	NLG DOOR OPERATED SEQUENCE VALVE	ALL	1	113		8	32-8	32-34	
VALVE	NLG OPERATED SEQUENCE VALVE	ALL	1	113		8	32-7	32-34	
VALVE	NLG SELECTOR/BYPASS VALVE	ALL	1	113		8	32-8	32-31	M32033
VALVE	NORMAL ANTISKID VALVE	ALL	12	551/651		38(551DB)(651DB)	32-11	32-42	
VALVE	NORMAL BRAKE METERING VALVE	ALL	2	143/144		8	32-20	32-41	
VALVE	PARKING BRAKE VALVE	ALL	1	651		38(651DB)	32-3	32-45	V32001
VALVE	NLG STEERING SWIVEL VALVE	ALL	2	711		47	32-9	32-51	
WHEEL/TIRE	MLG WHEEL AND TIRE ASSEMBLY	ALL	12	731/741		47	32-18	32-45	

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
BALLAST	CEILING LIGHT BALLAST	ALL		200		8	33-8	33-22	
BALLAST	ENTRY LIGHT BALLAST	ALL		200		8	33-7	33-22	
BALLAST	LAVATORY MIRROR LIGHT BALLAST	ALL		200		8	33-10	33-26	
BALLAST	SIDEWALL LIGHT BALLAST	ALL		200		8	33-8	33-22	
CARD	MASTER BRIGHT CONTROL CARD	ALL	1	211	P29	8	33-4	33-13	M33004
CARD	MASTER DIM & TEST CARD 1	ALL	1	211	P29	8	33-4	33-16	M33001
CARD	MASTER DIM & TEST CARD 2	ALL	1	211	P29	8	33-4	33-16	M33002
CARD	MASTER DIM & TEST CARD 3	ALL	1	211	P29	8	33-4	33-16	M33003
CARDFILE	MASTER DIM & TEST CARDFILE - P29	ALL	1	211	P29	8	33-4	33-16	P29
CIRCUIT BREAKER	AFT A INT CARGO LIGHTS	ALL	1	152	P39	8,48(824)	00-18	33-37	C33011
CIRCUIT BREAKER	AFT B INT CARGO LIGHTS	ALL	1	152	P39	8,48(824)	00-18	33-37	C33012
CIRCUIT BREAKER	AFT C INT CARGO LIGHTS	ALL	1	152	P39	8,48(824)	00-18	33-37	C33013
CIRCUIT BREAKER	AFT CARGO LTS CTRL	ALL	1	152	P39	8,48(824)	00-18	33-37	C33019
CIRCUIT BREAKER	AFT EXT CARGO LIGHTS	ALL	1	152	P39	8,48(824)	00-18	33-31	C33016
CIRCUIT BREAKER	AFT EXT DOOR LIGHTS	ALL	1	152	P39	8,48(824)	00-18	33-31	C33015
CIRCUIT BREAKER	AFT GLY LIGHTS	ALL	1	117	P320	8,9(117AL)	00-17	33-27	C33459
CIRCUIT BREAKER	AFT SILL DOOR LIGHTS	ALL	1	152	P39	8,48(824)	00-18	33-31	C33014
CIRCUIT BREAKER	AFT/BULK INT & EXT CARGO LIGHTS	ALL	1	117	P320	8,9(117AL)	00-17	33-37	C33469
CIRCUIT BREAKER	AIR COND COMPT LIGHTS	ALL	1	122	P35	8,48(821)	00-18	33-31	C33007
CIRCUIT BREAKER	AISLE STAND FLOOD LIGHTS	ALL	1	117	P310	8,9(117AL)	00-16	33-11	C33800

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	AISLE STAND INST & PNL LIGHTS	ALL	1	117	P110	8,9(117AL)	00-14	33-13	C33492
CIRCUIT BREAKER	APU & TAIL COMPT LIGHT	ALL	1	152	P39	8,48(824)	00-18	33-31	C33018
CIRCUIT BREAKER	BULK EXT CARGO LIGHTS	ALL	1	152	P39	8,48(824)	00-18	33-31	C33017
CIRCUIT BREAKER	CABIN LTS AFT L	ALL	1	117	P320	8,9(117AL)	00-17	33-21	C33423
CIRCUIT BREAKER	CABIN LTS AFT R	ALL	1	117	P320	8,9(117AL)	00-17	33-21	C33422
CIRCUIT BREAKER	CABIN LTS FWD L	ALL	1	117	P320	8,9(117AL)	00-17	33-21	C33417
CIRCUIT BREAKER	CABIN LTS FWD R	ALL	1	117	P320	8,9(117AL)	00-17	33-21	C33416
CIRCUIT BREAKER	CABIN LTS MID AFT L	ALL	1	117	P320	8,9(117AL)	00-17	33-21	C33421
CIRCUIT BREAKER	CABIN LTS MID AFT R	ALL	1	117	P320	8,9(117AL)	00-17	33-21	C33420
CIRCUIT BREAKER	CABIN LTS MID FWD L	ALL	1	117	P320	8,9(117AL)	00-17	33-21	C33419
CIRCUIT BREAKER	CABIN LTS MID FWD R	ALL	1	117	P320	8,9(117AL)	00-17	33-21	C33418
CIRCUIT BREAKER	CAPT INST & PNL LIGHTS	ALL	1	117	P110	8,9(117AL)	00-14	33-13	C33405
CIRCUIT BREAKER	CHART, WORKTABLE & FLOOR LIGHTS	ALL	1	118	P210	8,9(117AL)	00-15	33-11	C33503
CIRCUIT BREAKER	DOVE LIGHTS	ALL	1	117	P310	8,9(117AL)	00-16	33-11	C33403
CIRCUIT BREAKER	DOVE LIGHTS BACKUP	ALL	1	118	P210	8,9(117AL)	00-15	33-11	C33402
CIRCUIT BREAKER	E/E EQUIP CTR LIGHTS	ALL	1	117	P320	8,9(117AL)	00-17	33-31	C33518
CIRCUIT BREAKER	EMER LIGHTS 1L	ALL	1	211	P11	8	00-6	33-51	C33626
CIRCUIT BREAKER	EMER LIGHTS 1R & 2L	ALL	1	211	P11	8	00-6	33-51	C33625
CIRCUIT BREAKER	EMER LIGHTS 2R	ALL	1	211	P11	8	00-6	33-51	C33624
CIRCUIT BREAKER	EMER LIGHTS 3L	ALL	1	212	P11	8	00-6	33-51	C33621

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	EMER LIGHTS 3R	ALL	1	212	P11	8	00-6	33-51	C33620
CIRCUIT BREAKER	EMER LIGHTS 4L & 4R	ALL	1	212	P11	8	00-6	33-51	C33619
CIRCUIT BREAKER	ENTRY/DIR CLG LIGHTS	ALL	1	117	P320	8,9(117AL)	00-17	33-22	C33433
CIRCUIT BREAKER	F/O INST & PNL LIGHTS	ALL	1	118	P210	8,9(117AL)	00-15	33-13	C33406
CIRCUIT BREAKER	FWD & DR 2 GLY LIGHTS	ALL	1	117	P320	8,9(117AL)	00-17	33-27	C33460
CIRCUIT BREAKER	FWD A INT CARGO LIGHTS	ALL	1	122	P35	8,48(821)	00-18	33-37	C33001
CIRCUIT BREAKER	FWD B INT CARGO LIGHTS	ALL	1	122	P35	8,48(821)	00-18	33-37	C33002
CIRCUIT BREAKER	FWD C INT CARGO LIGHTS	ALL	1	122	P35	8,48(821)	00-18	33-37	C33003
CIRCUIT BREAKER	FWD CARGO LTG CTRL	ALL	1	122	P35	8,48(821)	00-18	33-37	C33008
CIRCUIT BREAKER	FWD EXT CARGO DOOR LIGHTS	ALL	1	122	P35	8,48(821)	00-18	33-31	C33005
CIRCUIT BREAKER	FWD EXT CARGO LIGHTS	ALL	1	122	P35	8,48(821)	00-18	33-31	C33006
CIRCUIT BREAKER	FWD INT & EXT CARGO LTS	ALL	1	117	P320	8,9(117AL)	00-17	33-37	C33468
CIRCUIT BREAKER	FWD SILL CARGO DOOR LIGHTS	ALL	1	122	P35	8,48(821)	00-18	33-31	C33004
CIRCUIT BREAKER	GSHLD INST & PNL LIGHTS	ALL	1	118	P210	8,9(117AL)	00-15	33-13	C33411
CIRCUIT BREAKER	L NLG LDG LIGHT	ALL	1	117	P110	8,9(117AL)	00-14	33-42	C33471
CIRCUIT BREAKER	L NLG LDG LT CONTROL	ALL	1	117	P110	8,9(117AL)	00-14	33-42	C33617
CIRCUIT BREAKER	L POS LIGHT	ALL	1	117	P110	8,9(117AL)	00-14	33-43	C33481
CIRCUIT BREAKER	L POS LIGHTS CONTROL	ALL	1	117	P110	8,9(117AL)	00-14	33-43	C33635
CIRCUIT BREAKER	L RWY TRN LIGHT	ALL	1	117	P110	8,9(117AL)	00-14	33-42	C33477
CIRCUIT BREAKER	L RWY TRN LIGHT CONTROL	ALL	1	117	P110	8,9(117AL)	00-14	33-42	C33633

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	L TAXI LIGHT	ALL	1	117	P110	8,9(117AL)	00-14	33-42	C33479
CIRCUIT BREAKER	L WING LANDING LIGHT	ALL	1	117	P110	8,9(117AL)	00-14	33-42	C33473
CIRCUIT BREAKER	L WING LANDING LIGHT CONTROL	ALL	1	117	P110	8,9(117AL)	00-14	33-42	C33601
CIRCUIT BREAKER	LAV LIGHTS, L	ALL	1	117	P320	8,9(117AL)	00-17	33-26	C33497
CIRCUIT BREAKER	LAV LIGHTD, R	ALL	1	117	P320	8,9(117AL)	00-17	33-26	C33496
CIRCUIT BREAKER	LOGO LIGHTS CONTROL	ALL	1	118	P210	8,9(117AL)	00-15	33-45	C33638
CIRCUIT BREAKER	LOGO LIGHTS	ALL	1	118	P210	8,9(117AL)	00-15	33-45	C33488
CIRCUIT BREAKER	MASTER BRT CTRL & MASTER BRT OVRD RLY	ALL	1	117	P110	8,9(117AL)	00-14	33-13	C33613
CIRCUIT BREAKER	MD&T CHANNEL 1	ALL	1	117	P110	8,9(117AL)	00-14	33-16	C33605
CIRCUIT BREAKER	MD&T CHANNEL 2	ALL	1	117	P110	8,9(117AL)	00-14	33-16	C33607
CIRCUIT BREAKER	MD&T CHANNEL 3	ALL	1	117	P310	8,9(117AL)	00-16	33-16	C33610
CIRCUIT BREAKER	MD&T CHANNEL 4	ALL	1	117	P310	8,9(117AL)	00-16	33-16	C33611
CIRCUIT BREAKER	MD&T CHANNEL 5	ALL	1	118	P210	8,9(117AL)	00-15	33-16	C33604
CIRCUIT BREAKER	MD&T CHANNEL 6	ALL	1	118	P210	8,9(117AL)	00-15	33-16	C33606
CIRCUIT BREAKER	MN WW SVCE LIGHTS	ALL	1	117	P320	8,9(117AL)	00-17	33-31	C33462
CIRCUIT BREAKER	NLG WW SVCE LIGHTS	ALL	1	117	P320	8,9(117AL)	00-17	33-31	C33517
CIRCUIT BREAKER	OVHD INST & PNL LTS/FLOOD LTS STBY RLY	ALL	1	117	P110	8,9(117AL)	00-14	33-13	C33410
CIRCUIT BREAKER	PAX MASTER CALL LIGHT	ALL	1	118	P210	8,9(117AL)	00-15	33-28	C33628
CIRCUIT BREAKER	R NLG LDG LIGHT	ALL	1	118	P210	8,9(117AL)	00-15	33-42	C33472
CIRCUIT BREAKER	R NLG LDG LIGHT CONTROL	ALL	1	118	P210	8,9(117AL)	00-15	33-42	C33618

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	R POS LIGHT	ALL	1	118	P210	8,9(117AL)	00-15	33-43	C33480
CIRCUIT BREAKER	R POS LIGHT CONTROL	ALL	1	118	P210	8,9(117AL)	00-15	33-43	C33634
CIRCUIT BREAKER	R RWY TRN LIGHT	ALL	1	118	P210	8,9(117AL)	00-15	33-42	C33476
CIRCUIT BREAKER	R RWY TRN LIGHT CONTROL	ALL	1	118	P210	8,9(117AL)	00-15	33-42	C33632
CIRCUIT BREAKER	R TAXI LIGHT	ALL	1	117	P110	8,9(117AL)	00-14	33-42	C33478
CIRCUIT BREAKER	R WG LDG LIGHT	ALL	1	118	P210	8,9(117AL)	00-15	33-42	C33474
CIRCUIT BREAKER	R WG LDG LIGHT CONTROL	ALL	1	118	P210	8,9(117AL)	00-15	33-42	C33630
CIRCUIT BREAKER	RED ANTI-COLL LIGHT CONTROL	ALL	1	118	P210	8,9(117AL)	00-15	33-44	C33636
CIRCUIT BREAKER	RED ANTI-COLL LIGHTS	ALL	1	118	P210	8,9(117AL)	00-15	33-44	C33486
CIRCUIT BREAKER	STANDBY DOME LIGHTS	ALL	1	117	P310	8,9(117AL)	00-16	33-11	C33612
CIRCUIT BREAKER	STBY INST LIGHTS	ALL	1	117	P310	8,9(117AL)	00-16	33-11	C33407
CIRCUIT BREAKER	TAXI LIGHTS CONTROL	ALL	1	117	P110	8,9(117AL)	00-14	33-42	C33631
CIRCUIT BREAKER	UTIL & MAP LIGHTS	ALL	1	118	P210	8,9(117AL)	00-15	33-11	C33501
CIRCUIT BREAKER	WING ILLUM LIGHTS CONTROL	ALL	1	118	P210	8,9(117AL)	00-15	33-41	C33608
CIRCUIT BREAKER	WG LDG LIGHTS HEATING	ALL	1	117	P320	8,9(117AL)	00-17	33-42	C33519
CIRCUIT BREAKER	WHITE ANTI-COLLISION LIGHTS	ALL	1	117	P110	8,9(117AL)	00-14	33-44	C33487
CIRCUIT BREAKER	WHITE ANTI-COLLISION LIGHT CONTROL	ALL	1	117	P110	8,9(117AL)	00-14	33-44	C33637
CIRCUIT BREAKER	WING ILLUM LTS	ALL	1	117	P320	8,9(117AL)	00-17	33-41	C33470
CONTROL	AISLE STAND FLOOD LIGHT CONTROL - INR KNOB	ALL	1	212	P8	8	00-4,33-1	33-11	M33418R001

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CONTROL	AISLE STAND INST PNL LT CTRL - OUTR KNOB	ALL	1	212	P8	8	00-4,33-1	33-13	M33418R001
CONTROL	CAPT CHART LIGHT CONTROL	ALL	1	211		8	33-1	33-14	T33739
CONTROL	CAPT FLOOD LIGHT CONTROL - INR KNOB	ALL	1	211	P13-1	8	33-2	33-11	M33414R003
CONTROL	CAPT MAP LIGHT CONTROL	ALL	1	211	P7	8	00-2,33-3	33-14	T33028
CONTROL	CAPT WORKTABLE LIGHT CONTROL	ALL	1	211		8	33-1	33-14	T33037
CONTROL	DOME LIGHT CONTROL	ALL	1	211	P5	8	33-2	33-11	M33412R002
CONTROL	F/O CHART LIGHT CONTROL	ALL	1	212		8	33-1	33-14	T33750
CONTROL	F/O FLOOD LIGHT CONTROL - INR KNOB	ALL	1	212	P14-1	8	33-2	33-11	M33415R003
CONTROL	F/O INSTRUMENT PNL LIGHT CTRL - OUTR KNOB	ALL	1	212	P14	8	33-2	33-13	M33415R003
CONTROL	F/O MAP LIGHT CONTROL	ALL	1	212	P7	8	00-2,33-3	33-14	T33029
CONTROL	F/O WORKTABLE LIGHT CONTROL	ALL	1	212		8	33-1	33-14	T33038
CONTROL	GLARESHIELD FLOOD LIGHT CTRL - INR KNOB	ALL	1	211		8	33-2	33-13	M33412R004
CONTROL	MASTER BRIGHT CONTROL	ALL	1	212	P5	8	00-3,33-2	33-11	M33412R003
CONTROL	OVERHEAD C/B LIGHT CONTROL - INR KNOB	ALL	1	211	P5	8	00-3,33-2	33-13	M33412R001
CONTROL	OVERHEAD INST PANEL LIGHT CTRL - OUTR KNOB	ALL	1	211	P5	8	00-3,33-2	33-13	M33412R001
CONTROL	CAPT INSTRUMENT PNL LIGHT CTRL - OUTR KNOB	ALL	1	211	P13-1	8	33-2	33-13	M33414R003
CONTROL	GLARESHIELD PANEL LIGHT CTRL - OUTR KNOB	ALL	1	211	P5	8	00-3,33-2	33-13	M33412R004
DIMMER	AISLE STAND INST & PNL LT DIMMER	ALL	1	211		8	33-5	33-13	T33013

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
DIMMER	AISLE STAND INST & PNL LT DIMMER	ALL	1	211		8	33-5	33-13	T33014
DIMMER	AISLE STAND INSTRUMENT & PANEL LT DIMMER	ALL	1	211		8	33-5	33-13	T33011
DIMMER	AISLE STAND INSTRUMENT & PANEL LT DIMMER	ALL	1	211		8	33-5	33-13	T33012
DIMMER	CAPT INSTRUMENT & PANEL LIGHT DIMMER	ALL	1	211		8	33-5	33-13	T33006
DIMMER	CAPT INSTRUMENT & PANEL LIGHT DIMMER	ALL	1	211		8	33-5	33-13	T33024
DIMMER	CAPT PANEL FLOODLIGHT DIMMER	ALL	1	223	P96	8	33-6	33-11	T33025
DIMMER	F/O INST & PNL LT DIMMER	ALL	1	212		8	33-5	33-13	T33007
DIMMER	F/O INST & PNL LT DIMMER	ALL	1	212		8	33-5	33-13	T33010
DIMMER	F/O PANEL FLOODLIGHT DIMMER	ALL	1	223	P96	8	33-6	33-11	T33026
DIMMER	FIRST OBSERVER MAP LIGHT DIMMER	ALL	1	212	P17	8	33-4	33-13	T33030
DIMMER	GLARESHIELD FLOODLIGHT DIMMER	ALL	1	223	P96	8	33-6	33-11	T33017
DIMMER	GLARESHIELD INSTRUMENT & PNL LTS DIMMER	ALL	1	212		8	33-5	33-13	T33009
DIMMER	GLARESHIELD INSTRUMENT & PNL LTS DIMMER	ALL	1	212		8	33-5	33-13	T33044
DIMMER	OVERHEAD CIRCUIT BREAKER PNL LTS DIMMER	ALL	1	223	P96	8	33-6	33-13	T33015
DIMMER	OVERHEAD CIRCUIT BREAKER PNL LTS DIMMER	ALL	1	223	P96	8	33-6	33-13	T33016
DIMMER	OVERHEAD INSTRUMENT PANEL LT DIMMER	ALL	1	223	P96	8	33-6	33-13	T33020
DIMMER	OVERHEAD INSTRUMENT PANEL LT DIMMER	ALL	1	223	P96	8	33-6	33-13	T33021
DIMMER	PILOTS CENTER INSTRUMENT DIMMER	ALL	1	212		8	33-5	33-13	T33008
LENS	WING LANDING LIGHT LENS	ALL	2	511/611		33	33-15	33-42	
LIGHT	AFT CARGO DOOR LIGHT	ALL	1	824		48(824)	33-14	33-31	L33010

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
LIGHT	AFT CARGO DOOR SILL LIGHT	ALL	1	824		48(824)	33-14	33-31	L33864
LIGHT	AFT CARGO DOOR SILL LIGHT	ALL	1	824		48(824)	33-14	33-31	L33865
LIGHT	AFT CARGO EXTERIOR LIGHT	ALL	1	152		8	33-14	33-31	L33008
LIGHT	AFT EXTERIOR BULK CARGO DOOR LIGHT	ALL	1	825		48(825)	33-14	33-31	L33012
LIGHT	AFT FLIGHT DECK FLOOR LIGHT	ALL	1	210		8	33-1	33-14	L33744
LIGHT	AFT LOGO LIGHT - L	ALL	1	333		22	33-18	33-45	L33113
LIGHT	AFT LOGO LIGHT - R	ALL	1	343		22	33-18	33-45	L33213
LIGHT	AIR CONDITIONING COMP AFT LIGHT, L	ALL	1	135		12(195EL)	33-17	33-31	L33105
LIGHT	AIR CONDITIONING COMP AFT LIGHT, R	ALL	1	136		12(196ER)	33-17	33-31	L33205
LIGHT	AIR CONDITIONING COMP FWD LIGHT, L	ALL	1	135		12(195EL)	33-17	33-31	L33104
LIGHT	AIR CONDITIONING COMP FWD LIGHT, R	ALL	1	136		12(196ER)	33-17	33-31	L33204
LIGHT	AISLE STAND INST & PNL FLDT	ALL	1	210	P11	8	33-4	33-11	L33019
LIGHT	APU COMPARTMENT FWD LIGHT - L	ALL	1	315		28(315AL)	33-20	33-31	L33001
LIGHT	APU COMPARTMENT FWD LIGHT - R	ALL	1	316		28(315AL)	33-20	33-31	L33002
LIGHT	APU COMPT AFT LIGHT - R	ALL	1	316		28(315AL)	33-20	33-31	L33752
LIGHT	APU COMPT AFT LIGHT - R	ALL	1	315		28(315AL)	33-20	33-31	L33759
LIGHT	ATTENDANT WORK LIGHT	ALL		200		8	33-7	33-22	
LIGHT	BULK CARGO SILL LIGHT	ALL	1	162		8,48(825)	33-14	33-37	L33856
LIGHT	CAPT CHART LIGHT	ALL	1	211		8	33-1	33-14	L33749
LIGHT	CAPT DOME LIGHT	ALL	1	211		8	33-3	33-11	L33013

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
LIGHT	CAPT FLOOR LIGHT	ALL	1	211		8	33-1	33-14	L33743
LIGHT	CAPT MAP LIGHT	ALL	1	211		8	33-3	33-14	L33024
LIGHT	CAPT WORKTABLE LIGHT	ALL	1	211		8	33-1	33-14	L33741
LIGHT	CEILING LIGHT	ALL		200		8	33-8	33-22	
LIGHT	CLOSET LIGHT	ALL		200		8	33-8	33-22	
LIGHT	ENTRY LIGHT	ALL		200		8	33-7	33-22	
LIGHT	EXIT SIGN	ALL		200		8	33-10	33-51	
LIGHT	EXTERIOR EMERGENCY LIGHT	ALL	8	200		8	33-18	33-51	
LIGHT	F/O CHART LIGHT	ALL	1	212		8	33-1	33-14	L33750
LIGHT	F/O DOME LIGHT	ALL	1	212		8	33-3	33-11	L33014
LIGHT	F/O FLOOR LIGHT	ALL	1	212		8	33-1	33-14	L33745
LIGHT	F/O MAP LIGHT	ALL	1	212		8	33-3	33-14	L33025
LIGHT	F/O WORKTABLE LIGHT	ALL	1	212		8	33-1	33-14	L33742
LIGHT	FIRST OBSERVER MAP LIGHT	ALL	1	212		8	33-3	33-14	L33023
LIGHT	FIRST OBSERVER UTILITY LIGHT	ALL	1	212	P17	8	33-4	33-14	L33026
LIGHT	FLIGHT DECK PANEL FLOODLIGHTS	ALL	9	211/212		8	33-3	33-11	
LIGHT	FLIGHT DECK/AISLE CEILING/STANDBY LIGHT	ALL	1	223		8	33-6	33-21	
LIGHT	FLOOR PROXIMITY LIGHT	ALL		200		8	33-8	33-51	
LIGHT	FWD CARGO DOOR LIGHT	ALL	1	821		48(821)	33-14	33-31	L33004
LIGHT	FWD CARGO DOOR LIGHT	ALL	1	821		48(821)	33-14	33-31	L33005

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
LIGHT	FWD CARGO DOOR SILL AFT LIGHT	ALL	1	821		48(821)	33-14	33-31	L33863
LIGHT	FWD CARGO DOOR SILL FWD LIGHT	ALL	1	821		48(821)	33-14	33-31	L33862
LIGHT	FWD CARGO DOOR SILL LIGHT	ALL	2	821		48(821)	33-14	33-31	
LIGHT	FWD CARGO EXTERIOR LIGHT	ALL	1	122		48(821)	33-14	33-31	L33003
LIGHT	FWD EQUIPMENT CENTER LIGHT	ALL	6	117/118		8.9(117AL)	33-11	33-31	
LIGHT	FWD EXTERIOR BULK CARGO DOOR LIGHT	ALL	1	825		48(825)	33-14	33-31	L33011
LIGHT	FWD LOGO LIGHT - L	ALL	1	333		22	33-18	33-45	L33112
LIGHT	FWD LOGO LIGHT - R	ALL	1	343		22	33-18	33-45	L33212
LIGHT	FWD POSITION LIGHT, L	ALL	1	545		31(545AB)	33-19	33-43	L33118
LIGHT	FWD POSITION LIGHT, R	ALL	1	645		31(645AB)	33-19	33-43	L33218
LIGHT	FWD TAILCONE COMPARTMENT LIGHT - L	ALL	1	313		28(313BL)	33-20	33-31	L33704
LIGHT	FWD TAILCONE COMPARTMENT LIGHT - R	ALL	1	313		28(313BL)	33-20	33-31	L33703
LIGHT	GALLEY CEILING/STANDBY LIGHT	ALL		200		8	33-9	33-21	
LIGHT	GLARESHIELD FLOOD LIGHT - L	ALL	1	211	P7	8	00-2,33-3	33-11	L33166
LIGHT	GLARESHIELD FLOOD LIGHT - R	ALL	1	212	P7	8	00-2,33-3	33-11	L33266
LIGHT	GLARESHIELD SPOT LIGHT	ALL	2	211/212		8	33-3	33-11	
LIGHT	INTERIOR CARGO CEILING LIGHT	ALL	39	120/150		8	33-13	33-37	
LIGHT	LAVATORY DOME LIGHT	ALL		200		8	33-10	33-26	
LIGHT	LAVATORY MIRROR LIGHT	ALL		200		8	33-10	33-26	
LIGHT	LOWER BODY BEACON LIGHT	ALL	1	120		8	33-16	33-44	L33707

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
LIGHT	MAIN EQUIPMENT CENTER LIGHT	ALL	12	117/118		8,9(117AL)	33-11	33-31	
LIGHT	MAIN WW AFT LIGHT, L	ALL	1	143		8	33-17	33-31	L33103
LIGHT	MAIN WW AFT LIGHT, R	ALL	1	144		8	33-17	33-31	L33203
LIGHT	MAIN WW FWD LIGHT, L	ALL	1	143		8	33-17	33-31	L33102
LIGHT	MAIN WW FWD LIGHT, R	ALL	1	144		8	33-17	33-31	L33202
LIGHT	MASTER CALL LIGHT MODULE	ALL		200		8	33-10	33-25	
LIGHT	MID TAILCONE COMPARTMENT LIGHT	ALL	1	311		28(311AL)	33-20	33-31	L33705
LIGHT	NIGHT LIGHT	ALL		200		8	33-8	33-21	
LIGHT	NOSE GEAR LANDING LIGHT - L	ALL	1	711		47	33-15	33-42	L33114
LIGHT	NOSE GEAR LANDING LIGHT - R	ALL	1	711		47	33-15	33-42	L33214
LIGHT	NOSE GEAR WHEEL WELL AFT LIGHT	ALL	2	113/114		8	33-12	33-31	L33201
LIGHT	NOSE GEAR WHEEL WELL FWD LIGHT	ALL	2	113/114		8	33-12	33-31	L33101
LIGHT	PASSENGER CALL LIGHT	ALL		200		8	33-9	33-28	
LIGHT	PAX SEAT ATTENDANT CALL RESET SW LT	ALL		200		8	33-9	33-25	
LIGHT	PAX SEAT ATTENDANT CALL SWITCH LT	ALL		200		8	33-9	33-25	
LIGHT	READING LIGHT	ALL		200		8	33-9	33-23	
LIGHT	REAR POSITION LIGHT, L	ALL	1	545		31	33-19	33-43	L33119
LIGHT	REAR POSITION LIGHT, R	ALL	1	645		31	33-19	33-43	L33219
LIGHT	RUNWAY TURNOFF LIGHT - L	ALL	1	711		47	33-15	33-42	L33117
LIGHT	RUNWAY TURNOFF LIGHT - R	ALL	1	711		47	33-15	33-42	L33217

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
LIGHT	SECOND OBSERVERS MAP LIGHT	ALL	1	212		8	33-3	33-14	L33027
LIGHT	SIDEWALL LIGHT	ALL		200		8	33-8	33-21	
LIGHT	STABILIZER COMPT LTS - FWD/AFT	ALL		310		14(163AL)	33-20	33-31	
LIGHT	STANDBY LIGHT	ALL		200		8	33-9	33-27	
LIGHT	SUPPLEMENTAL GALLEY LIGHT	ALL		200		8	33-9	33-27	
LIGHT	TAILCONE ANTI-COLLISON LIGHT	ALL	1	310		28	33-20	33-44	L33857
LIGHT	TAXI LIGHT - L	ALL	1	711		47	33-15	33-42	L33116
LIGHT	TAXI LIGHT - R	ALL	1	711		47	33-15	33-42	L33216
LIGHT	UPPER BODY BEACON LIGHT	ALL	1	200		8	33-16	33-44	L33706
LIGHT	WING ANTI-COLLISON LIGHT, L	ALL	2	545		31	33-19	33-44	L33709
LIGHT	WING ANTI-COLLISON LIGHT, R	ALL	2	645		31	33-19	33-44	L33708
LIGHT	WING ILLUMINATION LIGHT - L	ALL	1	231		8	33-16	33-41	L33111
LIGHT	WING ILLUMINATION LIGHT - R	ALL	1	233		8	33-16	33-41	L33211
LIGHT	WING LANDING LIGHT, L	ALL	1	511		33	33-15	33-42	L33115
LIGHT	WING LANDING LIGHT, R	ALL	1	611		33	33-15	33-42	L33215
MODULE	PASSENGER SEAT CONTROL MODULE	ALL		200		8	33-9	33-24	
PANEL	ALSLE STAND BRIGHTNESS PANEL	ALL	1	212	P8	8	00-3,33-1	33-13	M33418
PANEL	ATTENDANTS CONTROL PANEL	ALL		200		8	33-6	33-22	
PANEL	CAPT FWD PANEL BRIGHTNESS/HEATER CTRL PNL	ALL	1	211	P13	8	33-2	33-13	M33414

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PANEL	F/O FWD PANEL BRIGHTNESS/HEATER CTRL PNL	ALL	1	212	P14	8	33-2	33-13	M33415
PANEL	FLOOR LIGHTS CONTROL PANEL	ALL	1	212	P8	8	00-4,33-1	33-14	M33300
PANEL	OVERHEAD DIMMER PANEL	ALL	1	223	P96	8	33-6	33-13	
PANEL	PASSENGER SIGNS/LIGHTING PANEL	ALL	1	200		8	33-2	33-24	M33412
PANEL	WINDOW HEAT/EMER LIGHTS PNL	ALL	1	211	P5	8	00-3,33-2	33-51	M30001
POWER SUPPLY	BEACON LIGHT POWER SUPPLY - UPR	ALL	1	223		8	33-16	33-44	M33426
POWER SUPPLY	BEACON LT POWER SPLY - LWR	ALL	1	144		8	33-17	33-44	M33427
POWER SUPPLY	EMERGENCY LIGHT POWER SUPPLY	ALL		200		8	33-7	33-51	
POWER SUPPLY	TAILCONE ANTI-COLLISION LT PWR SPLY	ALL	1	310		28(311AL)	33-20	33-44	M33425
POWER SUPPLY	WING ANTI-COLLISION LT PWR SPLY, L	ALL	1	545		37((544JB)	33-19	33-44	M33429
POWER SUPPLY	WING ANTI-COLLISION LT PWR SPLY, R	ALL	1	645		37(644JB)	33-19	33-44	M33428
RELAY	AFT CARGO AFT SILL DOOR LIGHT RELAY	ALL	1	117	P210	8,9(117AL)	00-15	33-31	K33144
RELAY	AFT CARGO DOOR FULLY OPEN RELAY	ALL	1	152	P39	8,48(824)	00-18	33-31	K33152
RELAY	AFT CARGO DOOR UNLATCHED RELAY	ALL	1	152	P39	8,48(824)	00-18	33-37	K33151
RELAY	AFT CARGO INTERIOR CARGO AFT LIGHT RELAY	ALL	1	152	P39	8,48(824)	00-18	33-37	K33143
RELAY	AFT EXTERIOR CARGO LIGHT RELAY	ALL	1	152	P39	8,48(824)	00-18	33-31	K33146
RELAY	AFT EXTERIOR DOOR LIGHTS RELAY	ALL	1	152	P39	8,48(824)	00-18	33-31	K33145
RELAY	ANTI-COLLISION LIGHT CONTROL RELAY	ALL	1	118	P210	8,9(117AL)	00-15	33-44	K33038
RELAY	CAPT STANDBY DIMMER CONTROL RELAY	ALL	1	211		8	33-5	33-13	K33005

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	GLARESHIELD STANDBY DIMMER CONTROL RELAY	ALL	1	211		8	33-5	33-13	K33008
RELAY	CAPT STORM/FLOOD LIGHT RELAY	ALL	1	223	P96	8	33-6	33-11	K33017
RELAY	DOMELIGHTS DIMMER RELAY	ALL	1	223	P96	8	33-6	33-11	K33202
RELAY	EWD CARGO DOOR UNLATCHED RELAY	ALL	1	122	P35	8,48(821)	00-18	33-37	K33051
RELAY	F/O STORM/FLOOD LIGHT DIMMER	ALL	1	223	P96	8	33-6	33-11	K33018
RELAY	FLIGHT DECK LAVATORY OCCUPIED RELAY	ALL	1	223	P101	8	00-13	33-26	K33040
RELAY	FWD CARGO DOOR FULLY OPEN RELAY	ALL	1	122	P35	8,48(821)	00-18	33-31	K33052
RELAY	FWD CARGO EXTERIOR DOOR LTS RELAY	ALL	1	122	P35	8,48(821)	00-18	33-31	K33045
RELAY	FWD CARGO EXTERIOR LIGHTS RELAY	ALL	1	122	P35	8,48(821)	00-18	33-31	K33046
RELAY	FWD CARGO FWD SILL DOOR LIGHT RELAY	ALL	1	122	P35	8,48(821)	00-18	33-31	K33044
RELAY	FWD CARGO INTERIOR LIGHTS	ALL	1	122	P35	8,48(821)	00-18	33-37	K33043
RELAY	FWD FLOODLIGHTS STANDBY RELAY	ALL	1	223	P96	8	33-6	33-11	K33010
RELAY	LDG LT BRT/DIM CONTROL RELAY - L WING	ALL	1	117	P110	8,9(117AL)	00-14	33-42	K33101
RELAY	LOGO LIGHT CONTROL	ALL	1	118	P210	8,9(117AL)	00-15	33-45	K33030
RELAY	NOSE LANDING GEAR L LANDING LT CTRL RLY	ALL	1	117	P110	8,9(117AL)	00-14	33-42	K33002
RELAY	NOSE LANDING GEAR R LANDING LT CTRL RLY	ALL	1	118	P210	8,9(117AL)	00-15	33-42	K33033
RELAY	POSITION LIGHT CONTROL - R	ALL	1	118	P210	8,9(117AL)	00-15	33-43	K33032
RELAY	POSITION LIGHT CONTROL RELAY - L	ALL	1	117	P110	8,9(117AL)	00-14	33-43	K33031
RELAY	RUNWAY TURNOFF CONTROL RELAY - L	ALL	1	117	P110	8,9(117AL)	00-14	33-42	K33042

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
RELAY	RUNWAY TURNOFF CONTROL RELAY - R	ALL	1	118	P210	8,9(117AL)	00-15	33-42	K33041
RELAY	STANDBY DOME LIGHTS RELAY	ALL	1	223	P96	8	33-6	33-11	K33012
RELAY	STORM DOME LIGHTS RELAY	ALL	1	223	P96	8	33-6	33-11	K33013
RELAY	STORM LIGHTS RELAY	ALL	1	223	P96	8	33-6	33-11	K33039
RELAY	TAXI LIGHT CONTROL RELAY	ALL	1	117	P110	8,9(117AL)	00-14	33-42	K33003
RELAY	WING ANTI-COLLISION LIGHT CTRL RELAY	ALL	1	117	P110	8,9(117AL)	00-14	33-44	K33037
RELAY	WING ILLUMINATION LIGHTS CONTROL RELAY	ALL	1	118	P210	8,9(117AL)	00-15	33-41	K33036
RELAY	WING LANDING LIGHT CONTROL RELAY, L	ALL	1	117	P110	8,9(117AL)	00-14	33-42	K33034
RELAY	WING LANDING LIGHT CONTROL RELAY, R	ALL	1	118	P210	8,9(117AL)	00-15	33-42	K33035
RELAY	WING LANDING LIGHT BRIGHT/DIM CTRL RLY, R	ALL	1	118	P210	8,9(117AL)	00-15	33-42	K33201
SIGN	ATTENDANT INFORMATION SIGN	ALL		200		8	33-7	33-24	
SIGN	FLIGHT DECK LAVATORY OCCUPIED SIGN	ALL		211		8	33-8	33-26	L33689
SIGN	LOCK DOOR SIGN	ALL		200		8	33-10	33-26	
SIGN	NO SMOKING/FASTEN SEATBELT PSU SIGN	ALL		200		8	33-9	33-24	
SIGN	RETURN TO SEAT SIGN	ALL		200		8	33-10	33-24	
SWITCH	AFT CARGO EXTERNAL LIGHTS SWITCH	ALL	1	152	P44	14(152AR)	33-14	33-31	S33010
SWITCH	AFT CARGO INTERIOR LIGHTS SWITCH	ALL	1	152	P39	14	33-13	33-37	S33032
SWITCH	AFT CARGO INTERNAL LIGHTS SWITCH	ALL	1	152	P44	14(152AR)	33-13	33-37	S33033
SWITCH	AFT STABILIZER COMPARTMENT LT SWITCH	ALL	1	313		28(311AL)	33-20	33-31	S33035
SWITCH	AIR CONDITION COMP LIGHT SWITCH, L	ALL	1	135		12(195EL)	33-17	33-31	S33101

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	AIR CONDITION COMP LIGHT SWITCH, R	ALL	1	136		12(196ER)	33-17	33-31	S33201
SWITCH	ANTI-ICE/LIGHTING PANEL	ALL	1	212	P5	8	00-3,33-2	33-16	M33413
SWITCH	APU COMPARTMENT LIGHT SWITCH	ALL	1	316		28(315AL)	33-20	33-31	S33004
SWITCH	ATTENDANT WORK LIGHT SWITCH	ALL		200		8	33-6	33-22	
SWITCH	ATTENDENTS PANEL EMERGENCY LIGHT SW	ALL	1	200	P87	8	33-6	33-51	S33025
SWITCH	ATTENDENTS PANEL EMERGENCY LIGHT TEST SW	ALL	1	200	P87	8	33-6	33-51	S33021
SWITCH	BEACON LIGHT SWITCH	ALL	1	212	P5	8	00-3,33-2	33-44	M33413S004
SWITCH	BULK CARGO EXTERIOR LIGHT SWITCH	ALL	1	162	P44	14(154AR)	33-14	33-31	S33011
SWITCH	BULK/AFT INTERIOR CARGO LIGHT SWITCH	ALL	1	162		8,48(825)	33-14	33-37	S33031
SWITCH	CARGO DOOR EQUIPMENT CENTER LIGHT SW	ALL	1	121		9	33-11	33-31	S33008
SWITCH	CLOSET LIGHT SWITCH	ALL		200		8	33-8	33-22	
SWITCH	EMERGENCY LIGHTS TEST SWITCH	ALL	1	262	P94	8	33-6	33-51	S33040
SWITCH	FLIGHT DECK DOOR SWITCH	ALL	1	221		8	33-6	33-22	S33360
SWITCH	FLIGHT DECK EMERGENCY LIGHTS SW	ALL	1	211	P5	8	00-3,33-2	33-51	M30001S001
SWITCH	FLIGHT EQUIPMENT CENTER LIGHT SWITCH	ALL	1	117		8	33-11	33-31	S33006
SWITCH	FWD CARGO EXTERNAL LIGHTS SWITCH	ALL	1	122	P43	9(122AR)	33-14	33-31	S33009
SWITCH	FWD CARGO INT LIGHTS E/E DOOR SWITCH	ALL	1	121		8,48(821)	33-11	33-37	S33027
SWITCH	FWD CARGO INTERIOR LIGHTS SWITCH,	ALL	1	122	P35	9	33-13	33-37	S33029
SWITCH	FWD CARGO INTERNAL LIGHTS SWITCH	ALL	1	122	P43	9(122AR)	33-13	33-37	S33028

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	FWD EQUIPMENT CENTER LIGHT SWITCH	ALL	1	112		8,9(112AL)	33-11	33-31	S33005
SWITCH	FWD EQUIPMENT CENTER LT SW - MEC ACCESS	ALL	1	118		8,9(117AL)	33-11	33-31	S33076
SWITCH	FWD STABILIZER COMPARTMENT LT SWITCH	ALL	1	313		28(313BL)	33-20	33-31	S33034
SWITCH	INDICATOR LIGHT TEST SWITCH	ALL	1	212	P5	8	00-3,33-2	33-16	M33413S008
SWITCH	LAVATORY CALL SWITCH	ALL		200		8	33-10	33-25	
SWITCH	LOGO LIGHT SWITCH	ALL	1	212	P5	8	00-3,33-2	33-45	M33413S006
SWITCH	MAIN WHEEL WELL LIGHT SWITCH	ALL	1	154		8	33-17	33-31	S33002
SWITCH	MASTER WARN & CAUTION LIGHT SW - L	ALL	1	211	P7	8	00-2,33-4	33-16	L31101
SWITCH	MASTER WARN & CAUTION LIGHT SW - R	ALL	1	212	P7	8	00-2,33-4	33-16	L31201
SWITCH	NAV LIGHTSWITCH	ALL	1	212	P5	8	00-3,33-2	33-41	M33413S005
SWITCH	NO SMOKING SWITCH	ALL	1	211	P5	8	00-3,33-2	33-24	M33412S001
SWITCH	NOSE GEAR EMERGENCY LIGHT TEST SWITCH	ALL	1	711	P40	47	33-18	33-51	S33022
SWITCH	NOSE LANDING GEAR WHEEL WELL LIGHT SW	ALL	1	711	P40	47	33-12	33-31	S33001
SWITCH	NOSE LANDING LIGHT SWITCH	ALL	1	211	P5	8	00-3,33-2	33-41	M33412S005
SWITCH	ON GROUND EQUIPMENT CENTER LIGHT SWITCH	ALL	1	118		8,9(117AL)	33-11	33-31	S33007
SWITCH	RUNWAY TURNOFF LIGHT SWITCH - L	ALL	1	212	P5	8	00-3,33-2	33-42	M33413S009
SWITCH	RUNWAY TURNOFF LIGHT SWITCH - R	ALL	1	212	P5	8	00-3,33-2	33-42	M33413S010
SWITCH	SEAT BELTS SWITCH	ALL	1	211	P5	8	00-3,33-2	33-24	M33412S002
SWITCH	STORM LIGHT SWITCH	ALL	1	211	P5	8	00-3,33-2	33-11	M33412S003

ATA 33	LIGHTS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 33	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	STROBE LIGHT SWITCH	ALL	1	212	P5	8	00-3.33-2	33-44	M33413S012
SWITCH	TAXI LIGHT SWITCH	ALL	1	211	P5	8	00-3.33-2	33-42	M33413S011
SWITCH	WING LANDING LIGHT SWITCH, L	ALL	1	211	P5	8	00-3.33-2	33-41	M33412S004
SWITCH	WING LANDING LIGHT SWITCH, R	ALL	1	211	P5	8	00-3.33-2	33-41	M33412S006
SWITCH	WING LIGHT SWITCH	ALL	1	212	P5	8	00-3.33-2	33-41	M33413S007
TRANSFORMER	AFT & BULK CARGO LIGHT TRANSFORMER	ALL	1	152	P39	8,48(824)	00-18.33-14	33-31	T33034
TRANSFORMER	CLOSET TRANSFORMER	ALL		200		8	33-8	33-22	
TRANSFORMER	FLOOR LIGHTS TRANSFORMER	ALL	1	200		8	33-4	33-14	T33043
TRANSFORMER	FWD CARGO LIGHT TRANSFORMER	ALL	1	122	P35	8,48(821)	00-18.33-14	33-31	T33033
TRANSFORMER	FWD EXT BULK CARGO LT TRANSFORMER	ALL	1	152		8,48(824)	33-14	33-31	T33035
TRANSFORMER	MAIN WHEEL WELL LIGHTS TRANSFORMER	ALL	1	144		8	33-17	33-31	T33001
TRANSFORMER	NOSE LANDING GEAR LANDING LT XFMR - L	ALL	1	711		47	33-16	33-42	T33103
TRANSFORMER	NOSE LANDING GEAR LANDING LT XFMR - R	ALL	1	711		47	33-16	33-42	T33201
TRANSFORMER	POSITION LIGHT TRANSFORMER - L	ALL	1	545		38(544JB)	33-19	33-43	T33106
TRANSFORMER	POSITION LIGHT TRANSFORMER - R	ALL	1	645		38(644JB)	33-19	33-43	T33206
TRANSFORMER	RUNWAY TURNOFF LIGHT TRANSFORMER - L	ALL	1	123		9	33-12	33-42	T33104
TRANSFORMER	RUNWAY TURNOFF LIGHT TRANSFORMER - R	ALL	1	123		9	33-12	33-42	T33204
TRANSFORMER	TAXI LIGHT TRANSFORMER - L	ALL	1	711		47	33-16	33-42	T33105
TRANSFORMER	TAXI LIGHT TRANSFORMER - R	ALL	1	711		47	33-16	33-42	T33210
TRANSFORMER	WING LANDING LIGHT TRANSFORMER, L	ALL	1	511		33	33-12	33-42	T33102

ATA 34	NAVIGATION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 34	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ALTIMETER	STANDBY ALTIMETER	ALL	1	211	P1	8	00-1	34-13	N34003
ANTENNA	ADF ANTENNA - L	ALL	1	243		5,8	34-9	34-57	M34122
ANTENNA	ADF ANTENNA - R	ALL	1	244		5,8	34-9	34-57	M34222
ANTENNA	ATC ANTENNA - BOTTOM	ALL	1	123		4,8	34-9	34-53	M34219
ANTENNA	ATC ANTENNA - TOP	ALL	1	224		4,8	34-9	34-53	M34119
ANTENNA	DME ANTENNA - L	ALL	1	121		4,8	34-9	34-55	M34118
ANTENNA	DME ANTENNA - R	ALL	1	123		4,8	34-9	34-55	M34218
ANTENNA	GLIDE SLOPE CAPTURE ANTENNA (R & C)	ALL	1	111		4,8	34-9	34-31	M34019
ANTENNA	GLIDE SLOPE CAPTURE ANTENNA - L	ALL	1	111		4,8	34-9	34-31	M34018
ANTENNA	GLIDE SLOPE TRACK (L & C)	ALL	1	716		47	34-9	34-31	M34020
ANTENNA	GLIDE SLOPE TRACK ANTENNA - R	ALL	1	715		47	34-9	34-31	M34021
ANTENNA	GLOBAL POSITIONING SYSTEM (GPS) ANT - L	ALL	1	223		4,8	34-9	34-58	M34106
ANTENNA	GPS ANTENNA - R	ALL	1	234		5,8	34-9	34-58	M34206
ANTENNA	LOCALIZER ANTENNA (R & C)	ALL	1	111		4,8	34-9	34-31	M34017
ANTENNA	LOCALIZER ANTENNA - L	ALL	1	111		4,8	34-9	34-31	M34016
ANTENNA	MARKER BEACON ANTENNA	ALL	1	100		4,8	34-9	34-32	M34023
ANTENNA	RADIO ALTIMETER RX ANTENNA - C	ALL	1	124		4,8	34-9	34-33	M34314
ANTENNA	RADIO ALTIMETER RX ANTENNA - R	ALL	1	123		4,8	34-9	34-33	M34214
ANTENNA	RADIO ALTIMETER RX ATNENNA - L	ALL	1	124		4,8	34-9	34-33	M34114
ANTENNA	RADIO ALTIMETER TX ANTENNA - C	ALL	1	124		4,8	34-9	34-33	M34313

ATA 34	NAVIGATION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 34	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ANTENNA	RADIO ALTIMETER TX ANTENNA - L	ALL	1	124		4,8	34-9	34-33	M34113
ANTENNA	RADIO ALTIMETER TX ANTENNA - R	ALL	1	123		4,8	34-9	34-33	M34213
ANTENNA	TCAS DIRECTIONAL ANTENNA - BOTTOM	ALL	1	123		4,8	34-9	34-45	M34221
ANTENNA	TCAS DIRECTIONAL ANTENNA - TOP	ALL	1	224		4,8	34-9	34-45	M34121
ANTENNA	VOR ANTENNA	ALL	1	327		15	34-9	34-51	M34022
ANTENNA	WXR ANTENNA FLAT PLATE	ALL	1	111		4,8	34-9	34-43	M34024
CIRCUIT BREAKER	ADF L - CB	ALL	1	211	P11	8	00-6	34-57	C34449
CIRCUIT BREAKER	ADF R - CB	ALL	1	212	P11	8	00-6	34-57	C34450
CIRCUIT BREAKER	ADIRU BAT PWR C - CB	ALL	1	117	P310	8,9(117AL)	00-16	34-21	C34605
CIRCUIT BREAKER	ADIRU BAT PWR L - CB	ALL	1	117	P310	8,9(117AL)	00-16	34-21	C34603
CIRCUIT BREAKER	ADIRU BAT PWR R - CB	ALL	1	117	P310	8,9(117AL)	00-16	34-21	C34604
CIRCUIT BREAKER	ADIRU PRI PWR C - CB	ALL	1	118	P210	8,9(117AL)	00-15	34-21	C34619
CIRCUIT BREAKER	ADIRU PRI PWR L - CB	ALL	1	117	P110	8,9(117AL)	00-14	34-21	C34617
CIRCUIT BREAKER	ADIRU PRI PWR R - CB	ALL	1	118	P210	8,9(117AL)	00-15	34-21	C34618
CIRCUIT BREAKER	AOA RESOLVER 1 - CB	ALL	1	117	P110	8,9(117AL)	00-14	34-21	C34501
CIRCUIT BREAKER	AOA RESOLVER 2 - CB	ALL	1	118	P210	8,9(117AL)	00-15	34-21	C34502
CIRCUIT BREAKER	ATC ANT SWITCH - CB	ALL	1	211	P11	8	00-6	34-53	C34607
CIRCUIT BREAKER	ATC L - CB	ALL	1	211	P11	8	00-6	34-53	C34445
CIRCUIT BREAKER	ATC R - CB	ALL	1	211	P11	8	00-6	34-53	C34446
CIRCUIT BREAKER	DME L - CB	ALL	1	211	P11	8	00-6	34-55	C34447

ATA 34	NAVIGATION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 34	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	DME R - CB	ALL	1	211	P11	8	00-6	34-55	C34448
CIRCUIT BREAKER	GLOBAL POS L - CB	ALL	1	211	P11	8	00-6	34-58	C34601
CIRCUIT BREAKER	GLOBAL POS R - CB	ALL	1	211	P11	8	00-6	34-58	C34602
CIRCUIT BREAKER	GND PROX - CB	ALL	1	211	P11	8	00-6	34-46	C34442
CIRCUIT BREAKER	GROUND SERVICE RELAY - CB	ALL	1	117	P320	8,9(117AL)	00-17	34-21	C34453
CIRCUIT BREAKER	ILS ANT SWITCH C - CB	ALL	1	211	P11	8	00-6	34-31	C34630
CIRCUIT BREAKER	ILS ANT SWITCH L - CB	ALL	1	211	P11	8	00-6	34-31	C34629
CIRCUIT BREAKER	ILS ANT SWITCH R - CB	ALL	1	211	P11	8	00-6	34-31	C34628
CIRCUIT BREAKER	ILS C - CB	ALL	1	211	P11	8	00-6	34-31	C34430
CIRCUIT BREAKER	ILS L - CB	ALL	1	211	P11	8	00-6	34-31	C34429
CIRCUIT BREAKER	ILS R - CB	ALL	1	211	P11	8	00-6	34-31	C34428
CIRCUIT BREAKER	RADIO ALT C - CB	ALL	1	211	P11	8	00-6	34-33	C34433
CIRCUIT BREAKER	RADIO ALT L - CB	ALL	1	211	P11	8	00-6	34-33	C34431
CIRCUIT BREAKER	RADIO ALT R - CB	ALL	1	211	P11	8	00-6	34-33	C34432
CIRCUIT BREAKER	STBY INSTR- ALT - CB	ALL	1	211	P11	8	00-6	34-13	C34003
CIRCUIT BREAKER	STBY INSTR-AIR SPEED - CB	ALL	1	211	P11	8	00-6	34-13	C34002
CIRCUIT BREAKER	STBY INSTR-ATT - CB	ALL	1	211	P11	8	00-6	34-24	C34001
CIRCUIT BREAKER	TCAS - CB	ALL	1	211	P11	8	00-6	34-45	C34441
CIRCUIT BREAKER	VOR MKR L - CB	ALL	1	211	P11	8	00-6	34-51	C34443
CIRCUIT BREAKER	VOR R - CB	ALL	1	211	P11	8	00-6	34-51	C34444

ATA 34	NAVIGATION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 34	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	WXR L - CB	ALL	1	211	P11	8	00-6	34-43	C34439
CIRCUIT BREAKER	WXR R - CB	ALL	1	211	P11	8	00-6	34-43	C34438
COMPUTER	GROUND PROX WARNING COMPUTER	ALL	1	117	E1-4	8,9(117AL)	00-12,34-5	34-43	M34004
COMPUTER	TCAS COMPUTER	ALL	1	117	E1-2	8,9(117AL)	00-12,34-5	34-45	M34006
COUPLER	ADIRU TO C FLT CTR ARINC 629 BUS 1 CPLR	ALL	1	116	P312	8,9(117AL)	00-10	34-21	B34305
COUPLER	ADIRU TO C FLT CTRL ARINC 629 BUS 2 CPLR	ALL	1	116	P312	8,9(117AL)	00-10	34-21	B34306
COUPLER	ADIRU TO L FLT CTRL ARINC 629 BUS 1 CPLR	ALL	1	115	P112	8,9(117AL)	00-10	34-21	B34105
COUPLER	ADIRU TO L FLT CTRL ARINC 629 BUS 2 CPLR	ALL	1	115	P112	8,9(117AL)	00-10	34-21	B34106
COUPLER	ADIRU TO R FLT CTRL ARINC 629 BUS 2 CPLR	ALL	1	116	P212	8,9(117AL)	00-10	34-21	B34206
COUPLER	ADIRU TO R FLT CTRL ARINC 629 BUS1 CPLR	ALL	1	116	P212	8,9(117AL)	00-10	34-21	B34205
COUPLER	C CDU TO INTRCABINET ARINC 629 BUS 2 CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31315
COUPLER	C CDU TO L FLT CTR ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	31-61	B31110
COUPLER	C CDU TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	31-61	B31114
COUPLER	C CDU TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	31-41	B31212
COUPLER	C PITOT AIR DATA MODULE (ADM) TO C FLT CNTRL ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	34-21	B34302
COUPLER	C STATIC ADM TO C FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	34-21	B34301
COUPLER	L CDU TO INTRCABINET ARINC 629 BUS 2 CPLR	ALL	1	116	P311	8,9(117AL)	00-10	31-41	B31313
COUPLER	L CDU TO L FLT CTR ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	31-61	B31109

ATA 34	NAVIGATION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 34	EQUIP NUMBER
	TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	
	COUPLER	L CDU TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	B31113
	COUPLER	L CDU TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	B31210
	COUPLER	L PITOT ADM TO L FLT CTRL ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	B34102
	COUPLER	L STATIC ADM TO L FLT CTRL ARINC 629 BUS CPLR	ALL	1	115	P112	8,9(117AL)	00-10	B34101
	COUPLER	R CDU INTRCABINET ARINC 629 BUS 2 CPLR	ALL	1	116	P311	8,9(117AL)	00-10	B31316
	COUPLER	R CDU TO L SYSTEMS ARINC 629 BUS CPLR	ALL	1	115	P111	8,9(117AL)	00-10	B31115
	COUPLER	R CDU TO R FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	B31207
	COUPLER	R CDU TO R SYSTEMS ARINC 629 BUS CPLR	ALL	1	116	P211	8,9(117AL)	00-10	B31213
	COUPLER	R PITOT ADM TO R FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	B34202
	COUPLER	R STATIC ADM TO R FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P212	8,9(117AL)	00-10	B34201
	COUPLER	SAARU TO L FLT CTRL ARINC 629 BUS COUPLER	ALL	1	115	P112	8,9(117AL)	00-10	B34103
	COUPLER	SAARU TO R FLT CTRL ARINC 629 BUS COUPLER	ALL	1	116	P212	8,9(117AL)	00-10	B34203
	COUPLER	SEC ATT AIR DATA REF UNIT (SAARU) TO FLT CTRL ARINC 629 BUS CPLR	ALL	1	116	P312	8,9(117AL)	00-10	B34303
	DISPLAY	CONTROL DISPLAY UNIT - C	ALL	1	211	P8	8	00-4	N34303
	DISPLAY	CONTROL DISPLAY UNIT - L	ALL	1	211	P9	8	00-4	N34103
	DISPLAY	CONTROL DISPLAY UNIT - R	ALL	1	212	P9	8	00-4	N34203

ATA 34	NAVIGATION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 34	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
DRIVE	WXR ANTENNA DRIVE	ALL	1	111		8,9(111AL)	34-9	34-43	
INDICATOR	STANDBY AIRSPEED INDICATOR	ALL	1	211	P1-1	8	00-1	34-13	N34002
INDICATOR	STANDBY ATTITUDE INDICATOR	ALL	1	211	P2-1	8	00-1	34-24	N34001
INTERROGATOR	DME INTERROGATOR, L	ALL	1	117	E1-2	8,9(117AL)	00-12,34-5	34-55	M34109
INTERROGATOR	DME INTERROGATOR, R	ALL	1	118	E2-3	8,9(117AL)	00-12,34-5	34-55	M34209
MODULE	ATC PROGRAM SWITCH MODULE, L	ALL	1	117	E1-3	8,9(117AL)	34-6	34-53	M34104
MODULE	ATC PROGRAM SWITCH MODULE, R	ALL	1	118	E2-3	8,9(117AL)	34-6	34-53	M34204
MODULE	GPWC PROGRAM SWITCH MODULE	ALL	1	117	E1-4	8,9(117AL)	34-6	34-46	M34027
MODULE	PITOT AIR DATA MODULE (ADM), C	ALL	1	114		8,9(117AL)	34-3	34-21	M34302
MODULE	PITOT AIR DATA MODULE (ADM), L	ALL	1	113		8,9(117AL)	34-3	34-21	M34102
MODULE	PITOT AIR DATA MODULE (ADM), R	ALL	1	114		8,9(117AL)	34-3	34-21	M34202
MODULE	PITOT STANDBY AIR DATA MODULE (SADM)	ALL	1	113		8,9(117AL)	34-3	34-11	M34404
MODULE	STATIC STANDBY AIR DATA MODULE (SADM)	ALL	1	123		9	34-7	34-11	M34403
MODULE	STATIC AIR DATA MODULE (ADM), C	ALL	1	123		9	34-7	34-21	M34301
MODULE	STATIC AIR DATA MODULE (ADM), L	ALL	1	123		9	34-7	34-21	M34101
MODULE	STATIC AIR DATA MODULE (ADM), R	ALL	1	123		9	34-7	34-21	M34201
PANEL	TRANSPONDER PANEL	ALL	1	212	P8	8	00-4	34-53	M34011
PANEL	WEATHER RADAR PANEL	ALL	1	211	P8	8	00-4	34-43	M34025
PORT	STATIC PORT	ALL	6	121/122		9	34-8	34-11	
POWER DIVIDER	ILS RF POWER DIVIDER, L	ALL	1	117	E1	8,9(117AL)	34-6	34-31	M34111

ATA 34	NAVIGATION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 34	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
POWER DIVIDER	ILS RF POWER DIVIDERS, R	ALL	1	118	E2	8,9(117AL)	34-6	34-31	M34211
PROBE	PITOT PROBE, C	ALL	1	115		9	34-8	34-11	M34317
PROBE	PITOT PROBE, L	ALL	1	115		9	34-8	34-11	M34117
PROBE	PITOT PROBE, R	ALL	1	116		9	34-8	34-11	M34217
PROBE	TOTAL AIR TEMPERATURE PROBE - L	ALL	1	115		9	34-8	34-21	M34003
RECEIVER	ADF RECEIVER, L	ALL	1	117	E1-2	8,9(117AL)	00-12,34-5	34-57	M34108
RECEIVER	ADF RECEIVER, R	ALL	1	118	E2-3	8,9(117AL)	00-12,34-5	34-57	M34208
RECEIVER	ILS RECEIVER, C	ALL	1	117	E1-3	8,9(117AL)	00-12,34-5	34-31	M34310
RECEIVER	ILS RECEIVER, L	ALL	1	117	E1-2	8,9(117AL)	00-12,34-5	34-31	M34110
RECEIVER	ILS RECEIVER, R	ALL	1	118	E2-3	8,9(117AL)	00-12,34-5	34-31	M34210
RECEIVER	VOR/MB RECEIVER, L	ALL	1	117	E1-3	8,9(117AL)	00-12,34-5	34-51	M34115
RECEIVER	VOR/MB RECEIVER, R	ALL	1	118	E2-3	8,9(117AL)	00-12,34-5	34-51	M34215
RELAY	ADIRU ON-BATTERY RELAY	ALL	1	117	P310	8,9(117AL)	00-16	34-21	K34001
RELAY	BOTTOM ATC COAX RELAY	ALL	1	118	E2-5	8,9(117AL)	00-12,34-6	34-53	K34201
RELAY	GROUND SERVICE RELAY	ALL	1	117	P320	8,9(117AL)	00-17	34-21	K34002
RELAY	TOP ATC COAX RELAY	ALL	1	117	E1-5	8,9(117AL)	00-12,34-6	34-53	K34101
SENSOR	ANGLE OF ATTACK SENSOR - L	ALL	1	115		9	34-8	34-21	M34103
SENSOR	ANGLE OF ATTACK SENSOR - R	ALL	1	116		9	34-8	34-21	M34203
SENSOR UNIT	GLOBAL POSITIONING SYS SENSOR UNIT, L	ALL	1	223		8	34-1	34-58	M34105
SENSOR UNIT	GLOBAL POSITIONING SYS SENSOR UNIT, R	ALL	1	224		8	34-1	34-58	M34205

ATA 34	NAVIGATION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 34	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SPLITTER	DME/ATC/TCAS SUPPRESSION SPLITTER	ALL	1	117		8,9(117AL)	34-6	34-00	B34001
SWITCH	GLIDE SLOPE ANTENNA SWITCH, C	ALL	1	113		8,9(117AL)	34-4	34-31	S34301
SWITCH	GLIDE SLOPE ANTENNA SWITCH, L	ALL	1	113		8,9(117AL)	34-4	34-31	S34101
SWITCH	GLIDE SLOPE ANTENNA SWITCH, R	ALL	1	114		8,9(117AL)	34-4	34-31	S34201
SWITCH	LOCALIZER ANTENNA SWITCH, C	ALL	1	117		8,9(117AL)	34-6	34-31	S34302
SWITCH	LOCALIZER ANTENNA SWITCH, L	ALL	1	117		8,9(117AL)	34-6	34-31	S34102
SWITCH	LOCALIZER ANTENNA SWITCH, R	ALL	1	118		8,9(117AL)	34-6	34-31	S34202
SWITCH	WAVEGUIDE SWITCH	ALL	1	112		8,9(112AL)	34-2	34-43	S34002
TRANSCEIVER	RADIO ALTIMETER XCVR, C	ALL	1	122	E5-3	9	00-18,34-5	34-33	M34312
TRANSCEIVER	RADIO ALTIMETER XCVR, L	ALL	1	122	E5-4	9	00-18,34-5	34-33	M34112
TRANSCEIVER	RADIO ALTIMETER XCVR, R	ALL	1	122	E5-2	9	00-18,34-5	34-33	M34212
TRANSCEIVER	WEATHER RADAR XCVR, L	ALL	1	112		8,9(112AL)	34-2	34-43	M34116
TRANSCEIVER	WEATHER RADAR XCVR, R	ALL	1	112		8,9(112AL)	34-2	34-43	M34216
TRANSPONDER	ATC/MODE S TRANSPONDER, L	ALL	1	117	E1-3	8,9(117AL)	00-12,34-5	34-53	M34107
TRANSPONDER	ATC/MODE S TRANSPONDER, R	ALL	1	118	E2-3	8,9(117AL)	00-12,34-5	34-53	M34207
UNIT	AIR DATA INERTIAL REF UNIT (ADIRU)	ALL	1	117	E3-3	8,9(117AL)	00-11,34-5	34-21	M34001
UNIT	SECONDARY ATT AIR DATA REF UNIT (SAARU)	ALL	1	118	E2-6	9(117AL)	34-5	34-21	M34002

ATA 35	OXYGEN					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 35	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACTUATOR	OXY BOX PSU DOOR LATCH/ACTUATOR	ALL		200		8	35-2	35-21	
BOX	CENTER PSU OXYGEN BOX	ALL		200		8	35-2	35-21	
BOX	CREW OXYGEN MASK STOWAGE BOX	ALL	2	211/212		8	35-1	35-11	
BOX	LAVATORY OXYGEN BOX	ALL		200		8	35-2	35-21	
BOX	OUTBOARD PSU OXYGEN BOX	ALL		200		8	35-2	35-21	
BOX	OVERDOOR OXYGEN BOX	ALL		200		8	35-2	35-21	
CIRCUIT BREAKER	C PAX OXY - CB	ALL	1	117	P310	8,9(117AL)	00-16	35-21	C35405
CIRCUIT BREAKER	CHAN A OXY DEPLOY - CB	ALL	1	117	P310	8,9(117AL)	00-16	35-21	C35606
CIRCUIT BREAKER	CHAN B OXY DEPLOY - CB	ALL	1	117	P310	8,9(117AL)	00-16	35-21	C35607
CIRCUIT BREAKER	CREW OXY PRESS - CB	ALL	1	117	P310	8,9(117AL)	00-16	35-11	C35600
CIRCUIT BREAKER	L PAX OXY - CB	ALL	1	117	P310	8,9(117AL)	00-16	35-21	C35403
CIRCUIT BREAKER	OXYGEN SOLENOID RESET - CB	ALL	1	117	P310	8,9(117AL)	00-16	35-21	C35608
CIRCUIT BREAKER	R PAX OXY - CB	ALL	1	117	P310	8,9(117AL)	00-16	35-21	C35404
COMPENSATOR	THERMAL COMPENSATOR	ALL	1 OR 2	115		8,9(117AL)	35-3	35-11	
CYLINDER	CREW OXYGEN CYLINDER	ALL	1 OR 2	115		8,9(117AL)	35-3	35-11	
CYLINDER	PAX OXYGEN CYLINDER	OPTIONAL	-	152		8,48(824)	35-4	35-22	
DISK	OVERBOARD DISCHARGE PORT DISK	ALL	1	115		4	35-3	35-11	
GAUGE	CREW OXYGEN REMOTE FILL PANEL GAUGE	OPTIONAL	1	112		8,9(112AL)	35-3	35-11	M35448
GAUGE	CREW OXYGEN BOTTLE PRESSURE GAUGE	ALL	1 OR 2	115		8,9(117AL)	35-3	35-11	
GAUGE	PAX OXYGEN BOTTLE PRESSURE GAUGE	OPTIONAL	-	152		8,48(824)	35-4	35-21	

ATA 35	OXYGEN					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 35	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
GAUGE	PAX OXYGEN REMOTE FILL PANEL GAUGE	OPTIONAL	1	152		8,48(824)	35-4	35-21	M35476
GENERATOR	CHEMICAL OXYGEN GENERATOR	BASIC		200		8	35-2	35-21	
MASK	PAX OXYGEN MASK	ALL		200		8	35-2	35-21	
MASK	CREW OXYGEN MASK	ALL		211/212		8	35-1	35-11	
PANEL	CREW OXYGEN REMOTE FILL PANEL	OPTIONAL	1	112		8,9(112AL)	35-3	35-11	
PANEL	PAX OXYGEN REMOTE FILL PANEL	OPTIONAL	1	152		8,48(824)	35-4	35-22	
PANEL	WINDOW HEAT/EMERGENCY LIGHTS PANEL	ALL	1	211	P5	8	00-3,35-1	35-21	M30001
PORT	CREW OXYGEN REMOTE FILL PORT	OPTIONAL	1	112		8,9(112AL)	35-3	35-11	
PORT	CREW OXYGEN DISCHARGE PORT OVBD	ALL	1	115		4	35-3	35-11	
PORT	PAX OXYGEN REMOTE FILL PORT	OPTIONAL	1	152		8,48(824)	35-4	35-22	
REGULATOR	CREW OXYGEN PRESSURE REGULATOR	ALL	1	115		8,9(117AL)	35-3	35-11	
REGULATOR	PAX OXYGEN PRESSURE REGULATOR	OPTIONAL	-	152		8,48(824)	35-4	35-21	
RELAY	BLEED VALVE SOLENOID CONTROL RELAY	ALL	1	118	P210	8,9(117AL)	00-15	35-11	K35005
RELAY	CH A OXYGEN DEPLOYMENT RELAY	ALL	1	117	P310	8,9(117AL)	00-16	35-21	K35001
RELAY	CH B OXYGEN DEPLOYMENT RELAY	ALL	1	117	P310	8,9(117AL)	00-16	35-21	K35003
SELECTOR	CREW CYLINDER STARTING PRESSURE SEL	ALL	1	112		8,9(112AL)	35-3	35-11	M35448
SELECTOR	CREW CYLINDER TEMPERATURE SELECTOR	ALL	1	112		8,9(112AL)	35-3	35-11	M35448
SELECTOR	PAX CYLINDER STARTING PRESSURE SEL	OPTIONAL	1	152		8,48(824)	35-4	35-22	M35101
SELECTOR	PAX CYLINDER TEMPERATURE SEL	OPTIONAL	1	152		8,48(824)	35-4	35-22	M35101
SOLENOID	CREW OXYGEN BLEED VALVE SOLENOID	ALL	1	112		8,9(117AL)	35-3	35-11	M35445

ATA 35	OXYGEN					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 35	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SOLENOID	PAX OXY FLOW CONTROL UNIT SOLINOID	OPTIONAL	1	152		8,48(824)	35-4	35-21	M35477
SOLENOID	PAX OXY FLOW CONTROL UNIT SOLINOID	OPTIONAL	1	152		8,48(824)	35-4	35-21	M35478
SWITCH	PAX OXYGEN SWITCH	ALL	1	211	P5	8	00-3,35-1	35-21	M30001S002
TRANSDUCER	CREW OXYGEN PRESSURE TRANSDUCER	ALL	1	115		8,9(117AL)	35-3	35-11	M35447
TRANSDUCER	PAX OXYGEN PRESSURE TRANSDUCER	OPTIONAL	-	152		8,48(824)	35-4	35-21	
UNIT	PAX OXYGEN FLOW CONTROL UNIT	OPTIONAL	2	152		8,48(824)	35-4	35-22	
UNIT	PAX OXYGEN VOLTAGE AVERAGING UNIT	OPTIONAL	1	152		8,48(824)	35-4	35-11	M35475
VALVE	CREW OXYGEN BLEED VALVE	ALL	1	115		8,9(117AL)	35-3	35-11	M35445
VALVE	CREW OXYGEN BOTTLE SHUTOFF VALVE	ALL	1 OR 2	115		8,9(117AL)	35-3	35-11	
VALVE	CREW OXYGEN CHECK VALVE	OPTIONAL	1	115		8,9(117AL)	35-3	35-11	
VALVE	PAX OXYGEN BOTTLE SHUTOFF VALVE	OPTIONAL	17	152		8,48(824)	35-4	35-22	

ATA 36	PNEUMATIC SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 36	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	AIR SPLY L BACKUP - CB	ALL	1	117	P310	8,9(117AL)	00-16	36-11	C36613
CIRCUIT BREAKER	AIR SPLY L HTR - CB	ALL	1	117	P110	8,9(117AL)	00-14	36-11	C36617
CIRCUIT BREAKER	AIR SPLY L SOL - CB	ALL	1	117	P310	8,9(117AL)	00-16	36-12	C36615
CIRCUIT BREAKER	AIR SPLY R BACKUP - CB	ALL	1	118	P210	8,9(117AL)	00-15	36-11	C36614
CIRCUIT BREAKER	AIR SPLY R HTR - CB	ALL	1	118	P210	8,9(117AL)	00-15	36-11	C36618
CIRCUIT BREAKER	AIR SPLY R SOL - CB	ALL	1	118	P210	8,9(117AL)	00-15	36-12	C36616
CIRCUIT BREAKER	AIR SUPPLY L PRIM - CB	ALL	1	117	P310	8,9(117AL)	00-16	36-11	C36611
CIRCUIT BREAKER	AIR SUPPLY R PRIM - CB	ALL	1	118	P210	8,9(117AL)	00-15	36-11	C36612
CIRCUIT BREAKER	CB-AIR SPLY-R SEC	ALL	1	117	P310	8,9(117AL)	00-16	36-11	C36619
CONNECTOR	HIGH PRESSURE GROUND CONNECTOR	ALL	3	135		12(195BL)	36-2	36-12	
CONTROLLER	AIR SUPPLY CABIN PRESS (ASCPC) CTRL - R	ALL	1	118	E2-2	8,9(117AL)	00-12,36-1	36-11	M36112
CONTROLLER	AIR SUPPLY CABIN PRESS CTRL (ASCPC) - L	ALL	1	117	E1-2	8,9(117AL)	00-12,36-1	36-11	M36111
CONTROLLER	HIGH PRESS FAN AIR CTRL (HPFAC) - (L,R ENG)	ALL	2	411/421		29	36-4	36-11	
CONTROLLER	PRESS REGULATING AND SOV CTRL (PRSOVC) - (L,R ENG)	ALL	2	411/421		29	36-4	36-11	M36116
COUPLER	ASCPC C COUPLER	ALL	1	116	P211	8,9(117AL)	00-10	36-21	B36231
COUPLER	ASCPC C COUPLER	ALL	1	116	P211	8,9(117AL)	00-10	36-21	B36234
COUPLER	ASCPC L COUPLER	ALL	1	115	P111	8,9(117AL)	00-10	36-21	B36232
COUPLER	ASCPC L COUPLER	ALL	1	115	P111	8,9(117AL)	00-10	36-21	B36233
DUCT	ENGINE AIR SUPPLY DUCT	ALL	2	411/421		29	36-5	36-11	

ATA 36	PNEUMATIC SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 36	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PANEL	BLEED AIR/PRESSURIZATION PANEL	ALL	1	211/212	P5	8	00-3,36-1	36-12	M36113
PRECOOLER	ENGINE AIR PRECOOLER	ALL	2	411/421		29	36-4	36-11	
SENSOR	INTERMEDIATE PRESS SENSOR	ALL	2	411/421		29	36-5	36-21	M36212
SENSOR	MANIFOLD DUAL TEMPERATURE SENSOR - R	ALL	1	441		29	36-4	36-22	M36006
SENSOR	MANIFOLD DUAL TEMPERATURE SENSOR - L	ALL	1	431		29	36-4	36-22	M36004
SENSOR	MANIFOLD FLOW SENSOR L	ALL	1	511		33(511JB)	36-3	36-23	M36119
SENSOR	MANIFOLD FLOW SENSOR R	ALL	1	611		33(611JB)	36-3	36-23	M36213
SENSOR	MANIFOLD PRESSURE SENSOR - L	ALL	1	191		12(191SL)	36-3	36-21	M36211
SENSOR	MANIFOLD PRESSURE SENSOR - R	ALL	1	192		12(192SR)	36-3	36-23	M36217
SWITCH	APU SHUTOFF VALVE (APUSOV) SWITCH	ALL	1	211	P5	8	00-3,36-1	36-11	M36113S005
SWITCH	BLEED ISOLATION SWITCH - C	ALL	3	211	P5	8	00-3,36-1	36-11	M36113S002
SWITCH	BLEED ISOLATION SWITCH - L	ALL	3	211	P5	8	00-3,36-1	36-11	M36113S001
SWITCH	BLEED ISOLATION SWITCH - R	ALL	3	211	P5	8	00-3,36-1	36-11	M36113S003
SWITCH	ENGINE BLEED AIR SWITCH - L	ALL	2	211	P5	8	00-3,36-1	36-11	M36113S004
SWITCH	ENGINE BLEED AIR SWITCH - R	ALL	2	211	P5	8	00-3,36-1	36-11	M36113S006
VALVE	APU SHUTOFF VALVE	ALL	1	314		28(315AL)	36-6	36-12	V36114
VALVE	DUCT VENT VALVE	ALL	2	411/421		29	36-5	36-11	
VALVE	FAN AIR MODULATING VALVE	ALL	2	414/424		29	36-6	36-11	V36118
VALVE	HIGH PRESSURE SHUTOFF VALVE (HPSOV)	ALL	2	411/421		29	36-5	36-11	V36117
VALVE	INTERMEDIATE PRESSURE CHECK VALVE - L	ALL	1	411/421		29	36-5	36-11	

ATA 36	PNEUMATIC SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 36	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
VALVE	ISOLATION VALVE - C	ALL	1	136		12(196NR)	36-2	36-12	V36113
VALVE	ISOLATION VALVE - L	ALL	1	135		12(195QL)	36-2	36-12	V36111
VALVE	ISOLATION VALVE - R	ALL	1	136		12(196QR)	36-2	36-12	V36112

ATA 38	WATER / WASTE					ACCESS PAGE (PNL/DOOR)	RECOGNITION PAGE	ATA 38	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
BLOWER	SYS 1 LAVATORY VACUUM BLOWER - FWD	ALL	1	161		8,48(825)	38-4	38-32	M38007
BLOWER	SYS 2 & 3 LAVATORY VACUUM BLOWER - AFT	ALL	1	161		8,48(825)	38-4	38-32	M38008
CABLE	AFT WASTE TANK VALVE CONTROL CABLE	ALL	1	161		8,48(825)	38-4	38-32	M38304W001
CABLE	CENTER WASTE TANK VALVE CONTROL CABLE	ALL	1	161		8,48(825)	38-4	38-32	M38204W001
CABLE	FWD WASTE TANK VALVE CONTROL CABLE	ALL	1	161		8,48(825)	38-4	38-32	M38104W001
CIRCUIT BREAKER	DRAIN LINE VALVES - CB	ALL	1	118	P210	8,9(117AL)	00-15	38-14	C38614
CIRCUIT BREAKER	FL CTRL LAV SYS 1 FLT - CB	ALL	1	117	P110	8,9(117AL)	00-14	38-32	C38608
CIRCUIT BREAKER	FL CTRL LAV SYS 1 GND - CB	ALL	1	117	P320	8,9(117AL)	00-17	38-32	C38604
CIRCUIT BREAKER	FL CTRL LAV SYS 2 FLT - CB	ALL	1	118	P210	8,9(117AL)	00-15	38-32	C38610
CIRCUIT BREAKER	FL CTRL LAV SYS 2 GND - CB	ALL	1	117	P320	8,9(117AL)	00-17	38-32	C38605
CIRCUIT BREAKER	FL CTRL LAV SYS 3 FLT - CB	ALL	1	118	P210	8,9(117AL)	00-15	38-32	C38612
CIRCUIT BREAKER	FL CTRL LAV SYS 3 GND - CB	ALL	1	117	P320	8,9(117AL)	00-17	38-32	C38606
CIRCUIT BREAKER	LAV WTR HTR 1 - CB	ALL	1	117	P110	8,9(117AL)	00-14	38-01	C38401
CIRCUIT BREAKER	LAV WTR HTR 2 - CB	ALL	1	117	P110	8,9(117AL)	00-14	38-01	C38403
CIRCUIT BREAKER	LAV WTR HTR 3 - CB	ALL	1	118	P210	8,9(117AL)	00-15	38-13	C38400
CIRCUIT BREAKER	LAV WTR HTR 4 - CB	ALL	1	118	P210	8,9(117AL)	00-15	38-01	C38402
CIRCUIT BREAKER	LAV WTR HTR 5 - CB	ALL	1	118	P210	8,9(117AL)	00-15	38-01	C38404
CIRCUIT BREAKER	LAV WTR HTR 6 - CB	ALL	1	118	P210	8,9(117AL)	00-15	38-01	C38406
CIRCUIT BREAKER	VAC BLO LAV SYS 1 - CB	ALL	1	118	P110	8,9(117AL)	00-14	38-32	C38306
CIRCUIT BREAKER	VAC BLO LAV SYS 2 & 3 - CB	ALL	1	118	P210	8,9(117AL)	00-15	38-32	C38307

ATA 38	WATER / WASTE					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 38	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	WTR SYS CTRL - CB	ALL	1	118	P210	8,9(117AL)	00-15	38-14	C38600
CIRCUIT BREAKER	WTR SYS CTRL GND	ALL	1	117	P320	8,9(117AL)	00-17	38-14	C38601
CIRCUIT BREAKER	WTR SYSM CPRSR - CB	ALL	1	117	P320	8,9(117AL)	00-17	38-14	C38301
COMPRESSOR	WATER AIR COMPRESSOR	ALL	1	162		8,48(825)	38-6	38-14	M38005
FILTER	COMPRESSOR INLET AIR FILTER	ALL	1	200		8	38-6	38-42	
FILTER	IN-LINE AIR FILTER	ALL	3	162		8,48(825)	38-8	38-42	
FILTER	VACUUM BLOWER COOLING AIR FILTER	ALL	2	162		8,48(825)	38-4	38-32	
FILTER	WASTE TANK RINSE FILTER	ALL	3	161		8,48(825)	38-5	38-32	
FILTER	WATER FILTER	ALL		200		8	38-2	38-11	
GUAGE	WATER QUANTITY GAUGE - AFT	ALL	1	153		14(154AR)	38-9	38-14	N38001
HANDLE	ISOLATION/ DRAIN VALVE HANDLE	ALL	1	200		8	38-1	38-11	
HANDLE	ISOLATION VALVE HANDLE	ALL	1	200		8	38-1	38-11	
HANDLE	POTABLE WATER DRAIN VALVE CTRL HANDLE	ALL	1	153		14(154AR)	38-9	38-14	
HANDLE	WASTE TANK RINSE T-HANDLES	ALL	3	163		14(163AL)	38-10	38-32	
HANDLE	WATER TANK FILL VALVE HANDLE - AFT	ALL	1	153		14(154AR)	38-9	38-14	
HANDLE	WATER TANK FILL VALVE HANDLE - FWD	ALL	1	117		8,9(123AL)	38-9	38-14	
HEATER	WATER HEATER	ALL		200		8	38-2	38-11	
MAST	DRAIN MAST - AFT	ALL	1	153		8,48(825)	38-9	38-31	
MAST	DRAIN MAST - FWD	ALL	1	123		12(195CL)	38-9	38-31	
MODULE	AFT WASTE TANK LOGIC CONTROL MODULE	ALL	1	161		8,48(825)	38-5	38-32	M38304

ATA 38	WATER / WASTE					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 38	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
MODULE	CENTER WASTE TANK LOGIC CONTROL MODULE	ALL	1	161		8,48(825)	38-5	38-32	M38204
MODULE	FWD WASTE TANK LOGIC CONTROL MODULE	ALL	1	161		8,48(825)	38-5	38-32	M38104
NOZZLE	WASTE TANK RINSE NOZZLE	ALL	3	161		8,48(825)	38-5	38-32	
PANEL	POTABLE WATER DRAIN PANEL	ALL	1	124		14(154AR)	38-9	38-11	
PANEL	POTABLE WATER SERVICE PANEL - AFT	ALL	1	153		14(154AR)	38-9	38-11	
PANEL	WASTE SERVICE PANEL	ALL	1	163		14(163AL)	38-10	38-32	
PORT	WATER TANK FILL PORT - AFT	ALL	1	153		14(154AR)	38-9	38-14	
REGULATOR	PRESSURE REGULATOR	ALL	3	165		8,48(825)	38-8	38-42	
RELAY	PRESELECT POWER ON RELAY	ALL	1	117	P320	8,9(117AL)	00-17	38-14	K38012
RELAY	PRESELECT SHUT OFF RELAY	ALL	1	117	P320	8,9(117AL)	00-17	38-14	K38014
RELAY	PRESELECT VALVE RELAY	ALL	1	117	P320	8,9(117AL)	00-17	38-14	K38013
RELAY	SYSTEM 1 FLUSH CONTROL RELAY	ALL	1	117	P110	8,9(117AL)	00-14	38-32	K38006
RELAY	SYSTEM 1 FLUSH MODULE POWER RELAY	ALL	1	117	P110	8,9(117AL)	00-14	38-32	K38101
RELAY	SYSTEM 2 FLUSH CONTROL RELAY	ALL	1	118	P210	8,9(117AL)	00-15	38-32	K38007
RELAY	SYSTEM 2 FLUSH MODULE POWER RELAY	ALL	1	118	P210	8,9(117AL)	00-15	38-32	K38201
RELAY	SYSTEM 3 FLUSH CONTROL RELAY	ALL	1	118	P210	8,9(117AL)	00-15	38-32	K38008
RELAY	SYSTEM 3 FLUSH MODULE PWR RELAY	ALL	1	118	P210	8,9(117AL)	00-15	38-32	K38301
RELAY	VACUUM BLOWER RELAY	ALL	1	117	P110	8,9(117AL)	00-14	38-32	K38003
RELAY	VACUUM BLOWER RELAY	ALL	1	118	P210	8,9(117AL)	00-15	38-32	K38004
RELAY	WATER PRESSURE SYSTEM RELAY	ALL	1	117	P320	8,9(117AL)	00-17	38-14	K38002

ATA 38	WATER / WASTE					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 38	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	WATER SYSTEM 28V PWR RELAY	ALL	1	117	P320	8,9(117AL)	00-17	38-14	K38001
SENSOR	AFT WASTE TANK CONTINUOUS LEVEL SENSOR	ALL	1	161		8,48(825)	38-5	38-32	M38303
SENSOR	AFT WASTE TANK POINT LEVEL SENSOR 1	ALL	1	161		8,48(825)	38-5	38-32	M38301
SENSOR	AFT WASTE TANK POINT LEVEL SENSOR 2	ALL	1	161		8,48(825)	38-5	38-32	M38302
SENSOR	CENTER WASTE TANK CONTINUOUS LEVEL SEN- SOR	ALL	1	161		8,48(825)	38-5	38-32	M38203
SENSOR	CENTER WASTE TANK POINT LEVEL SENSOR 1	ALL	1	161		8,48(825)	38-5	38-32	M38201
SENSOR	CENTER WASTE TANK POINT LEVEL SENSOR 2	ALL	1	161		8,48(825)	38-5	38-32	M38202
SENSOR	FWD WASTE TANK CONTINUOUS LEVEL SENSOR	ALL	1	161		8,48(825)	38-5	38-32	M38103
SENSOR	FWD WASTE TANK POINT LEVEL SENSOR 1	ALL	1	161		8,48(825)	38-5	38-32	M38101
SENSOR	FWD WASTE TANK POINT LEVEL SENSOR 2	ALL	1	161		8,48(825)	38-5	38-32	M38102
SENSOR	WASTE TANK DRAIN-BALL VALVE PROX. SEN- SOR	ALL	3	161		8,48(825)	38-4	38-32	
SEPERATOR	WASTE TANK LIQUID SEPARATOR	ALL	3	161		8,48(825)	38-5	38-32	
SHEAR FITTING	WATER TANK SHEAR FITTING	ALL	2	165/166		8,48(825)	38-7	38-11	
SHEAR PIN	WATER TANK SHEAR PIN	ALL	2	165/166		8,48(825)	38-7	38-11	
SWITCH	COMPRESSOR INTERLOCK SWITCH	ALL	1	166		8,48(825)	38-7	38-14	S38002
SWITCH	FLUSH SWITCH	ALL		200		8	38-2	38-32	
SWITCH	GRAY WATER DRAIN RESTRICTOR VALVE PRES- SURE SW	ALL	2	124/154		8,48(824)	38-3	38-42	
SWITCH	SYSTEM 1 VACUUM BLOWER BAROMETRIC SW	ALL	1	312		15(311BL)	38-10	38-32	S38005

ATA 38	WATER / WASTE					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 38	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	SYSTEM 2 VACUUM BLOWER BAROMETRIC SW	ALL	1	312		15(311BL)	38-10	38-32	S38006
SWITCH	WATER TANK PRESSURE LIMIT SWITCH	ALL	1	165		8,48(825)	38-8	38-14	S38003
TANK	WASTE TANK	ALL	3	161		8,48(825)	38-5	38-32	
TANK	WATER TANK	-200	2	165/166		8,48(825)	38-7	38-11	
TANK	WATER TANK	-200IGW OPTIONAL	3	165/166		8,48(825)	38-7	38-11	
TOILET	VACUUM TOILET	ALL		200		8	38-2	38-32	
TRANSMITTER	CENTER TANK WATER QUANTITY XMTR	ALL	1	165		8,48(825)	38-7	38-14	M38002
TRANSMITTER	R TANK WATER QUANTITY TRANSMITTER	ALL	1	166		8,48(825)	38-7	38-14	M38001
TRANSMITTER	L TANK WATER QUANTITY TRANSMITTER	-200IGW OPTIONAL	1	165		8,48(825)	38-7	38-14	M38006
UNIT	WATER QUANTITY SUMMATION UNIT	ALL	1	166		8,48(825)	38-7	38-14	M38004
VALVE	AFT WASTE TANK DRAIN BALL VALVE	ALL	1	161		8,48(825)	38-4	38-32	S38010
VALVE	APU BLEED AIR CHECK VALVE	ALL	1	165		8,48(825)	38-8	38-14	
VALVE	CENTER WASTE TANK DRAIN BALL VALVE	ALL	1	161		8,48(825)	38-4	38-32	S38009
VALVE	FILL/OVERFLOW VALVE	ALL	1	166		8,48(825)	38-7	38-14	V38102
VALVE	FWD WASTE TANK DRAIN BALL VALVE	ALL	1	161		8,48(825)	38-4	38-32	S38008
VALVE	GRAY WATER DRAIN RESTRICTOR VALVE - AFT	ALL	1	154		8,48(824)	38-3	38-31	
VALVE	GRAY WATER DRAIN RESTRICTOR VALVE - FWD	ALL	1	124		8,48(824)	38-3	38-31	
VALVE	ISOLATION DRAIN VALVE	ALL	1	200		8	38-1	38-11	

ATA 38	WATER / WASTE					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 38	EQUIP NUMBER
	TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PINK	BLUE	CH-SEC	
	VALVE	ISOLATION VALVE	ALL	1	200	8	38-1	38-11	
	VALVE	LAVATORY DRAIN SHUTOFF VALVE	ALL		200	8	38-2	38-32	
	VALVE	LAVATORY DRAIN VALVE	ALL		200	8	38-2	38-11	
	VALVE	LAVATORY WATER SUPPLY SHUTOFF VALVE	ALL		200	8	38-2	38-11	
	VALVE	PNEUMATIC LINE DRAIN VALVE	ALL	1	162	8,48(825)	38-6	38-42	
	VALVE	POTABLE WATER DRAIN VALVE - AFT	ALL	1	154	8,48(824)	38-3	38-14	V38104
	VALVE	POTABLE WATER DRAIN VALVE - FWD	ALL	1	124	8,9(122CR)	38-3	38-14	V38103
	VALVE	VACUUM TOILET ANTI-SIPHON VALVE	ALL		200	8	38-2	38-32	
	VALVE	VACUUM TOILET FLUSH VALVE	ALL		200	8	38-2	38-32	
	VALVE	WASTE TANK DRAIN VALVE	ALL	1	163	14(163AL)	38-10	38-32	
	VALVE	WASTE TANK VACUUM CHECK VALVE	ALL		162	8,48(825)	38-4	38-32	
	VALVE	WATER TANK DRAIN VALVE	ALL	1	166	8,48(825)	38-7	38-11	
	VALVE	WATER TANK PRESSURE RELIEF VALVE	ALL	1	165	8,48(825)	38-8	38-42	

ATA 45	CENTRAL MAINTENANCE SYSTEMS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 45	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CABINET	MAINTENANCE ACCESS TERMINAL (MAT) CABINET	ALL	1	212	P18	8	45-1	45-10	M46002
CIRCUIT BREAKER	E/E BAY PMAT - CB	ALL	1	117	P110	8,9(117AL)	00-14	45-10	C45401
CIRCUIT BREAKER	MAINT ACCESS TERM - CB	ALL	1	211	P11	8	00-6	45-10	C46404
DEVICE	MAT CURSOR CONTROL DEVICE	ALL	1	212	P18	8	45-1	45-10	M46002M001
DISK DRIVE	MAT DUAL DISK DRIVE	ALL	1	212	P18	8	45-1	45-10	
DISPLAY	MAT DISPLAY UNIT	ALL	1	212	P18	8	45-1	45-10	M46002N001
KEYBOARD	MAT KEYBOARD	ALL	1	212	P18	8	45-1	45-10	M46003
MAT	MAINTENANCE ACCESS TERMINAL (MAT)	ALL	1	212	P18	8	45-1	45-10	M45201
MODULE	MAT CURSOR CONTROL	ALL	1	212	P18	8	45-1	45-10	M46002M003
MODULE	MAT DUAL DISK DRIVE MODULE	ALL	1	212	P18	8	45-1	45-10	M46002M002
PMAT	PORTABLE MAINTENANCE ACCESS TERMINAL (PMAT)	ALL	1	118	E4	8,9(117AL)	45-1	45-10	M45201
RECEPTALS	PORTABLE MAINTENANCE ACCESS TERMINAL (PMAT) RECEPTALS	ALL	4			8	45-2	45-10	

ATA 49	AUXILIARY POWER UNIT (APU)					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 49	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACTUATOR	AIR INLET DOOR ACTUATOR	ALL	1	315/316		28(315AL)(316AR)	49-3	49-15	M49003
ACTUATOR	AIR INLET GUIDE VANE ACTUATOR	ALL	1	315/316		28(315AL)(316AR)	49-6	49-52	M49001M005
ASSEMBLY	OIL HEATER ASSEMBLY	ALL	1	315/316		28(315AL)(316AR)	49-5	49-28	M49001B000
BLANKET	EXHAUST DUCT INSULATION BLANKET	ALL	1	315/316		28(315AL)(316AR)	49-3	49-81	
CHIP COLLECTOR	ATS MAGNETIC CHIP COLLECTOR	ALL	1	315/316		28(315AL)(316AR)	49-6	49-27	
CHIP COLLECTOR	MAGNETIC CHIP COLLECTOR	ALL	4	315/316		28(315AL)(316AR)	49-5	49-27	
CIRCUIT BREAKER	APU GEARBOX HEATERS - CB	ALL	1	117	P320	8,9(117AL)	00-17	49-94	C49400
CIRCUIT BREAKER	APU INLET DOOR CONTROL - CB	ALL	1	117	P310	8,9(117AL)	00-16	49-15	C49600
CIRCUIT BREAKER	APUC 1 - CB	ALL	1	117	P310	8,9(117AL)	00-16	49-61	C49601
CIRCUIT BREAKER	APUC 2 - CB	ALL	1	152	P49	48(825)	00-19	49-61	C49602
CLAMP	EXHAUST DUCT CLAMP	ALL	1	315/316		28(315AL)(316AR)	49-3	49-81	
CLUSTER	FUEL CLUSTER	ALL	1	315/316		28(315AL)(316AR)	49-7	49-31	M49001M100
CLUSTER	IGNITION CLUSTER	ALL	1	315/316		28(315AL)(316AR)	49-10	49-41	M49001M200
CLUSTER	LUBE CLUSTER	ALL	1	315/316		28(315AL)(316AR)	49-8	49-27	M49001M300
CLUSTER	PNEUMATIC CLUSTER	ALL	1	315/316		28(315AL)(316AR)	49-10	49-53	
CONTROLLER	APU CONTROLLER	ALL	1	264	E7	8	49-2	49-61	M49002
COOLER	AIR/OIL COOLER	ALL	1	315/316		28(315AL)(316AR)	49-8	49-27	
COUPLER	APU TO L SYSTEMS ARINC 629 COUPLER	ALL	1	152	P115	8,48(825)	00-19	49-61	B49101
COUPLER	APU TO R SYSTEMS ARINC 629 COUPLER	ALL	1	152	P215	8,48(825)	00-19	49-61	B49201
DOOR	AIR INLET DOOR	ALL	1	315/316		28(315AL)(316AR)	49-3	49-15	

ATA 49	AUXILIARY POWER UNIT (APU)					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 49	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
DOOR	APU COMPARTMENT DOOR	ALL	2	315/316		28(315AL)(316AR)	49-4	49-11	
DRAIN	PLENUM DRAIN	ALL	1	315/316		28(315AL)(316AR)	49-6	49-16	
DUCT	AIR INLET DUCT	ALL	1	315/316		28(315AL)(316AR)	49-3	49-15	
DUCT	EXHAUST DUCT	ALL	1	315/316		28(315AL)(316AR)	49-3	49-81	
FILTER	FUEL FILTER	ALL	1	315/316		28(315AL)(316AR)	49-7	49-31	
FILTER	GENERATOR SCAVENGE FILTER	ALL	1	315/316		28(315AL)(316AR)	49-8	49-27	
FILTER	OIL FILTER	ALL	1	315/316		28(315AL)(316AR)	49-8	49-27	
GAUGE	OIL LEVEL SIGHT GAUGE	ALL	1	315/316		28(315AL)(316AR)	49-5	49-94	
HARNESS	WIRE HARNESS	ALL	1	315/316		28(315AL)(316AR)	49-4	49-14	
INDICATOR	SURGE CONTROL VALVE POSITION INDICATOR	ALL	1	315/316		28(315AL)(316AR)	49-10	49-51	M49001V400
LEAD	IGNITION LEAD 1	ALL	1	315/316		28(315AL)(316AR)	49-10	49-41	M49001M202
LEAD	IGNITION LEAD 2	ALL	1	315/316		28(315AL)(316AR)	49-10	49-41	M49001M203
LIGHT	APU FAULT LIGHT	ALL	1	211		8	00-3,49-1	49-61	M24023L001
MANIFOLDS	FUEL MANIFOLD	ALL	2	315/316		28(315AL)(316AR)	49-7	49-31	
MAST	DRAIN MAST	ALL	1	315/316		28(315AL)(316AR)	49-4	49-16	
MODULE	DATA MEMORY MODULE	ALL	1	315/316		28(315AL)(316AR)	49-9	49-72	M49001M002
MOTOR	ELECTRIC STARTER MOTOR	ALL	1	315/316		28(315AL)(316AR)	49-6	48-42	M49001M001
MOUNT	AFT SUPPT AND VIBRATION ISLN MOUNT	ALL	1	315/316		28(315AL)(316AR)	49-4	49-13	
MOUNT	FWD SUPPT AND VIBRATION ISLN MOUNT	ALL	2	315/316		28(315AL)(316AR)	49-4	49-13	
MUFFLER	APU MUFFLER	OPTIONAL	1	315/316		28(315AL)(316AR)	49-3	49-81	

ATA 49	AUXILIARY POWER UNIT (APU)					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 49	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
NOZZLE	FUEL NOZZLE	ALL	14	315/316		28(315AL)(316AR)	49-7	49-31	
PAD	GEARBOX HEATER PAD	ALL	1	315/316		28(315AL)(316AR)	49-5	49-94	M49001B001
PAD	GEARBOX HEATER PAD	ALL	1	315/316		28(315AL)(316AR)	49-5	49-94	M49001B002
PAD	GEARBOX HEATER PAD	ALL	1	315/316		28(315AL)(316AR)	49-5	49-94	M49001B003
PLUG	IGNITER PLUG 1	ALL	1	315/316		28(315AL)(316AR)	49-10	49-41	M49001M204
PLUG	IGNITER PLUG 2	ALL	1	315/316		28(315AL)(316AR)	49-10	49-41	M49001M205
PROBE	MIDFRAME HEATER PROBE	ALL	1	315/316		28(315AL)(316AR)	49-5	49-94	M49001B004
RELAY	INLET DOOR CONTROL RELAY	ALL	1	117	P310	8,9(117AL)	00-16	49-15	K49001
SEAL	AIR INLET DOOR SEAL	ALL	1	315/316		28(315AL)(316AR)	49-3	49-15	
SEAL	AIR INLET PLENUM FLANGE SEAL	ALL	1	315/316		28(315AL)(316AR)	49-3	49-15	
SELECTOR	APU SELECTOR	ALL	1	211		8	00-3,49-1	49-61	M24023S001
SENSOR	DIFFERENTIAL PRESSURE SENSOR	ALL	1	315/316		28(315AL)(316AR)	49-10	49-53	M49001M401
SENSOR	FUEL TEMPERATURE SENSOR	ALL	1	315/316		28(315AL)(316AR)	49-7	49-31	M49001M101
SENSOR	INLET PRESSURE SENSOR	ALL	1	315/316		28(315AL)(316AR)	49-10	49-53	M49001M006
SENSOR	INLET TEMPERATURE SENSOR	ALL	1	315/316		28(315AL)(316AR)	49-9	49-61	M49001M007
SENSOR	OIL PRESSURE SENSOR	ALL	1	315/316		28(315AL)(316AR)	49-8	49-27	M49001M301
SENSOR	OIL QUANTITY SUMP TEMP SENSOR	ALL	1	315/316		28(315AL)(316AR)	49-5	49-94	M49001M010
SENSOR	OIL TEMPERATURE SENSOR	ALL	1	315/316		28(315AL)(316AR)	49-8	49-27	M49001M302
SENSOR	SPEED SENSOR 1	ALL	1	315/316		28(315AL)(316AR)	49-9	49-61	M49001M008
SENSOR	SPEED SENSOR 2	ALL	1	315/316		28(315AL)(316AR)	49-9	49-61	M49001M009

ATA 49	AUXILIARY POWER UNIT (APU)					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 49	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	TOTAL PRESSURE SENSOR	ALL	1	315/316		28(315AL)(316AR)	49-10	49-53	M49001M400
STARTER	AIR TURBINE STARTER	ALL	1	315/316		28(315AL)(316AR)	49-6	49-43	
SWITCH	APU INLET DOOR POSITION SWITCH	ALL	1	315/316		28(315AL)(316AR)	49-3	49-15	S49002
SWITCH	APU MAINTENANCE SWITCH	ALL	1	211		8	49-1	49-6	
SWITCH	FUEL FILTER DIFFERENTIAL PRESSURE SWITCH	ALL	1	315/316		28(315AL)(316AR)	49-7	49-31	M49001S100
SWITCH	GENERATOR FILTER BYPASS VALVE/INDICATING SWITCH	ALL	1	315/316		28(315AL)(316AR)	49-8	49-27	M49001S301
SWITCH	LOW OIL PRESSURE SWITCH	ALL	1	315/316		28(315AL)(316AR)	49-8	49-27	M49001S302
SWITCH	OIL FILTER BYPASS VALVE/INDICATING D/P SW	ALL	1	315/316		28(315AL)(316AR)	49-8	49-94	M49001S300
THERMOCOUPLE	APU-EXHAUST GAS TEMP THERMOCOUPLE 1	ALL	2	315/316		28(315AL)(316AR)	49-7	49-71	M003-1A
THERMOCOUPLE	APU-EXHAUST GAS TEMP THERMOCOUPLE 1	ALL	2	315/316		28(315AL)(316AR)	49-7	49-71	M003-1B
THERMOCOUPLE	APU-EXHAUST GAS TEMP THERMOCOUPLE 2	ALL	2	315/316		28(315AL)(316AR)	49-7	49-71	M004-2A
THERMOCOUPLE	APU-EXHAUST GAS TEMP THERMOCOUPLE 2	ALL	2	315/316		28(315AL)(316AR)	49-7	49-71	M004-2B
UNIT	AUXILIARY POWER UNIT	ALL	1	315/316		28(315AL)(316AR)	49-10	49-11	M49001
UNIT	IGNITION UNIT	ALL	1	315/316		28(315AL)(316AR)	49-10	49-41	M49001M201
VALVE	AIR TURBINE STARTER CONTROL VALVE	ALL	1	315/316		28(315AL)(316AR)	49-6	49-43	M49001V001
VALVE	APU CHECK VALVE	ALL	1	315/316		28(315AL)(316AR)	49-6	49-52	
VALVE	COMBUSTOR DRAIN VALVE	ALL	1	315/316		28(315AL)(316AR)	49-6	49-16	
VALVE	FUEL METERING VALVE	ALL	1	315/316		28(315AL)(316AR)	49-7	49-31	M49001M102

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACTUATOR	AFT SMALL CARGO DOOR ROTARY ACTUATOR	ALL	2	824		48(823)	52-8	52-35	
ACTUATOR	EMERGENCY PWR ASSIST SYS (EPAS) ACTUATOR	ALL	8	830/840		48	52-4	52-11	
ACTUATOR	LARGE CARGO DOOR ROTARY ACTUATOR	ALL	2	821/824		48(821)(824)	52-7	52-34	
ACTUATOR	PED FLIGHT LOCK ACTUATOR	ALL	8	830/840		48	52-4	52-11	M52101
BATTERY	EMRGNCY PWR ASSIST SYS (EPAS) BATT PACK	ALL	8	830/840		48	52-4	52-11	M52105
BUNGEE	AFT SMALL CARGO DOOR BUNGEE	ALL	1	823		48(823)	52-10	52-35	
CHAIN	PROGRAMMING MECHANISM CHAIN	ALL	8	830/840		48	52-4	52-11	
CIRCUIT BREAKER	AFT CARGO DOOR - CB	ALL	1	152	P39	8,48(825)	00-18	52-35	C52304
CIRCUIT BREAKER	CARGO DR CONT - CB	ALL	1	117	P320	8,9(117AL)	00-17	52-35	C52604
CIRCUIT BREAKER	FLIGHT DECK DOOR LOCK - CB	ALL	1	117	P110	8,9(117AL)	00-14	52-51	C52605
CIRCUIT BREAKER	FWD CARGO DOOR - CB	ALL	1	122	P35	8,48(821)	00-18	52-34	C52303
CIRCUIT BREAKER	LEFT FLIGHT LOCK - CB	ALL	1	117	P110	8,9(117AL)	00-14	52-11	C52611
CIRCUIT BREAKER	RIGHT FLIGHT LOCK - CB	ALL	1	118	P210	8,9(117AL)	00-15	52-11	C52610
COUNTERBAL- ANCE	BULK CARGO DOOR COUNTERBALANCE MECHANISM	ALL	1	825		48(825)	52-11	52-36	
DOOR	AFT SMALL CARGO DOOR	BASIC	1	824		48(824)	52-2,52-9	52-35	
DOOR	AFT POTABLE WATER SERVICE DOOR	ALL	1	154		14(154AR)	52-2	52-49	
DOOR	AFT SMALL CARGO DOOR VENT DOOR	ALL	1	824		48(823)	52-9	52-35	
DOOR	AIR-DRIVEN PUMP (ADP) ACCESS DOOR	ALL	1	197		13(197JL)	52-1	52-48	

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
DOOR	AUXILIARY POWER UNIT (APU) ACCESS DOOR	ALL	2	315/316		28(315AL)	52-2	52-48	
DOOR	BULK CARGO DOOR	ALL	1	825		48(825)	52-2,52-11	52-36	
DOOR	CONTROL BAY ACCESS DOOR	ALL	1	313		28(311AL)	52-2	52-48	
DOOR	ENVIRONMENTAL CNTRL SYS (ECS) ACCESS DOOR	ALL	2	195/196		12(195EL)	52-1, 52-2	52-48	
DOOR	EXTERNAL GROUND POWER SUPPLY DOOR	ALL	1	118		9(118AR)	52-2	52-49	
DOOR	FLIGHT COMPARTMENT DOOR	ALL	1	211		8	52-3	52-51	
DOOR	FWD ACCESS DOOR	ALL	1	112		9(112AL)	52-2	52-48	
DOOR	LARGE CARGO DOOR	ALL	1 OR 2	821		48(821)	52-2, 52-7	52-34, 52-37	
DOOR	HYDRAULIC SERVICE DOOR	ALL	1	198		13(198DR)	52-2	52-49	
DOOR	LARGE CARGO DOOR VENT DOOR	ALL	1	821/824		48(821)(824)	52-7	52-34, 52-37	
DOOR	MAIN EQUIPMENT CENTER (MEC) ACCESS DOOR	ALL	1	117		8,9(117AL)	52-2	52-48	
DOOR	PASSENGER ENTRY DOOR (PED)	ALL	8	830/840		48	52-1	52-11	
DOOR	PED VENT DOOR	ALL	8	830/840		48	52-4	52-11	
DOOR	REFUELING STATION DOOR	ALL		521/621		35(521DB,621DB)	52-1	52-49	
DOOR	SERVICE ACCESS DOOR	ALL	1	311		28(313BL)	52-1, 52-2	52-48	
DOOR	WASTE TANK SERVICE DOOR	ALL	1	163		14(163AL)	52-1	52-49	
FLEX SHAFT	AFT SMALL CARGO DOOR MAN DRIVE FLEX SHAFT	ALL	1	824		48(823)	52-10	52-35	

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
GEARBOX	LARGE CARGO DOOR LATCH MANUAL DRIVE INTERMEDIATE GEARBOX	ALL	1	821/824		48(821)(824)	52-7	52-34, 52-37	
HANDLE	LARGE CARGO DOOR LOCK HANDLE	ALL	1	821/824		48(821)(824)	52-5	52-34, 52-37	
HATCH	MEC ACCESS HATCH	ALL	1	221		8	52-3	52-53	
HINGE ARM	AFT SMALL CARGO DOOR HINGE ARM	ALL	2	824		48(823)	52-10	52-35	
HINGE ARM	BULK CARGO DOOR HINGE ARM	ALL	2	825		48(825)	52-11	52-36	
HOOK	LARGE CARGO DOOR PULL-IN HOOK	ALL	2	821/824		48(821)(824)	52-7	52-34	
HOOK	AFT SMALL CARGO DOOR PRESSURE HOOK	ALL	4	823		48(823)	52-9	52-35	
LATCH	BULK CARGO DOOR LATCH MECHANISM	ALL	1	825		48(825)	52-11	52-36	
LIGHT	AFT LARGE CARGO DOOR LATCHED LIGHT	ALL	1	824	P44	14(152AR)	52-6	52-37	L52004
LIGHT	AFT LARGE CARGO DOOR UP LIGHT	ALL	1	824	P44	14(152AR)	52-6	52-37	L52003
LIGHT	AFT SMALL CARGO DOOR LATCHED LIGHT	ALL	1	824	P44	14(152AR)	52-9	52-35	L52004
LIGHT	AFT SMALL CARGO DOOR UP LIGHT	ALL	1	824	P44	14(152AR)	52-9	52-35	L52003
LIGHT	FWD LARGE CARGO DOOR LATCHED LIGHT	ALL	1	122	P43	9(122AR)	52-6	52-34	L52002
LIGHT	FWD LARGE CARGO DOOR UP LIGHT	ALL	1	122	P43	9(122AR)	52-6	52-34	L52001
LOCK	FLIGHT COMPARTMENT DOOR LOCK	ALL	1	211		8	52-3	52-51	
MECHANISM	LARGE CARGO DOOR LIFT MECHANISM	ALL	2	821/824		48(821)(824)	52-7	52-34, 52-37	
MECHANISM	LARGE CARGO DOOR LOCK MECHANISM	ALL	1	821/824		48(821)(824)	52-7	52-34, 52-37	

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
MECHANISM	LARGE CARGO DOOR VENT DOOR MECHANISM	ALL	1	821/824		48(821)(824)	52-7	52-34, 52-37	
MECHANISM	PED FLIGHT LOCK MECHANISM	ALL	8	830/840		48	52-4	52-11	
MECHANISM	PED GIRT BAR MECHANISM	ALL	8	830/840		48	52-4	52-11	
MECHANISM	PED DOOR HANDLE MECHANISM	ALL	8	830/840		48	52-4	52-11	
MECHANISM	PED HINGE MECHANISM	ALL	8	830/840		48	52-4	52-11	
MECHANISM	PED HOLD-OPEN MECHANISM	ALL	8	830/840		48	52-4	52-11	
MECHANISM	PED LATCH MECHANISM	ALL	8	830/840		48	52-4	52-11	
MECHANISM	PED MODE SELECT MECHANISM	ALL	8	830/840		48	52-4	52-11	
MODULE	OBS AUDIO SELECT MODULE	ALL	1	211	P8	8	00-4	52-51	M52002
PADS	AFT SMALL CARGO DOOR STOP PAD	ALL	20	823		48(823)	52-9	52-35	
PANEL	AFT CARGO DOOR CONTROL PANEL	ALL	1	152	P44	14(152 AR)	52-9	52-35	
PANEL	AFT SMALL CARGO DOOR ACCESS PANEL	ALL	8	823		48(823)	52-9	52-35	
PANEL	FWD CARGO DOOR CONTROL PANEL	ALL	1	122	P43	9(122AR)	52-6	52-35	
PDU	AFT SMALL CARGO DOOR HINGE PDU	ALL	1	824		48(823)	52-9	52-35	M52225
PDU	AFT SMALL CARGO DR LIFT/LATCH PDU	ALL	1	824		48(823)	52-9	52-35	M52230
PDU	LARGE CARGO DOOR LATCH/HOOK PDU	ALL	1	821/824		48(821)(824)	52-7	52-34, 52-37	M52228
PDU	LARGE CARGO DOOR LIFT PDU	ALL	1	821/824		48(821)(824)	52-7	52-34, 52-37	M52227
PIN	AFT SMALL CARGO DOOR STOP PIN	ALL	20	823		48(823)	52-10	52-35	

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
PIN	LARGE CARGO DOOR PULL-IN PIN	ALL	2	821/824		48(821)(824)	52-6	52-34, 52-37	
PORTS	LARGE CARGO DOOR WITNESS PORT	ALL	8	821/824		48(821)(824)	52-5	52-34	
RELAY	AFT LARGE CARGO DOOR HINGE DN RELAY	ALL	1	152	P39	48(824)	00-18	52-34	K52014
RELAY	AFT LARGE CARGO DOOR HINGE UP RELAY	ALL	1	152	P39	48(824)	00-18	52-34	K52013
RELAY	AFT LARGE CARGO DOOR LATCH RELAY	ALL	1	152	P39	48(824)	00-18	52-35	K52011
RELAY	AFT LARGE CARGO DOOR UNLATCH RELAY	ALL	1	152	P39	48(824)	00-18	52-34	K52012
RELAY	AFT SMALL CARGO DOOR CONTROL ARM RELAY	ALL	1	152	P39	48(823)	00-18	52-35	K52010
RELAY	AFT SMALL CARGO DOOR HINGE DOWN RELAY	ALL	1	152	P39	48(823)	00-18	52-35	K52005
RELAY	AFT SMALL CARGO DOOR HINGE UP RELAY	ALL	1	152	P39	48(823)	00-18	52-35	K52006
RELAY	AFT SMALL CARGO DOOR LIFT/LATCH DN RELAY	ALL	1	152	P39	48(823)	00-18	52-35	K52007
RELAY	AFT SMALL CARGO DOOR LIFT/LATCH UP RELAY	ALL	1	152	P39	48(823)	00-18	52-35	K52008
RELAY	FLIGHT LOCK CONTROL RELAY - L	ALL	1	117	P110	8,9(117AL)	00-14	52-11	K52105
RELAY	FLIGHT LOCK CONTROL RELAY - R	ALL	1	118	P210	8,9(117AL)	00-15	52-11	K52205
RELAY	FLIGHT LOCK RELAY DOOR 1L	ALL	1	117	P110	8,9(117AL)	00-14	52-11	K52101
RELAY	FLIGHT LOCK RELAY DOOR 1R	ALL	1	118	P210	8,9(117AL)	00-15	52-11	K52201
RELAY	FLIGHT LOCK RELAY DOOR 2L	ALL	1	117	P110	8,9(117AL)	00-14	52-11	K52102
RELAY	FLIGHT LOCK RELAY DOOR 2R	ALL	1	118	P210	8,9(117AL)	00-15	52-11	K52202
RELAY	FLIGHT LOCK RELAY DOOR 3L	ALL	1	117	P110	8,9(117AL)	00-14	52-11	K52103
RELAY	FLIGHT LOCK RELAY DOOR 3R	ALL	1	118	P210	8,9(117AL)	00-15	52-11	K52203

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	FLIGHT LOCK RELAY DOOR 4L	ALL	1	117	P110	8,9(117AL)	00-14	52-11	K52104
RELAY	FLIGHT LOCK RELAY DOOR 4R	ALL	1	118	P210	8,9(117AL)	00-15	52-11	K52204
RELAY	FWD LARGE CARGO DOOR HINGE DOWN RELAY	ALL	1	122	P35	48(821)	00-18	52-34	K52004
RELAY	FWD LARGE CARGO DOOR HINGE UP RELAY	ALL	1	122	P35	48(821)	00-18	52-34	K52003
RELAY	FWD LARGE CARGO DOOR LATCH RELAY	ALL	1	122	P35	48(821)	00-18	52-37	K52001
RELAY	FWD LARGE CARGO DOOR UNLATCH RELAY	ALL	1	122	P35	48(821)	00-18	52-37	K52002
RESERVOIR	EMRGNCY PWR ASSIST SYS (EPAS) RSVR	ALL	8	830/840		48	52-4	52-11	M52109
SENSOR	AFT LARGE CARGO DOOR CLOSED SENSOR	ALL	1	821/824		48(824)	52-8	52-71	S52045
SENSOR	AFT LARGE CARGO DOOR HANDLE UNLOCKED SENSOR	ALL	1	821/824		48(824)	52-8	52-37	S52232
SENSOR	AFT LARGE CARGO DOOR LATCH RANGE SEN- SOR	ALL	1	821/824		48(824)	52-8	52-37	S52229
SENSOR	AFT LARGE CARGO DOOR LATCHED SENSOR (CONTROL)	ALL	1	821/824		48(824)	52-8	52-37	S52233
SENSOR	AFT LARGE CARGO DOOR LATCHED SENSOR (INDICATION)	ALL	1	821/824		48(824)	52-8	52-71	S52043
SENSOR	AFT LARGE CARGO DOOR LOCKED SENSOR	ALL	1	821/824		48(824)	52-8	52-71	S52044
SENSOR	AFT LARGE CARGO DOOR UNLATCHED SENSOR	ALL	1	821/824		48(824)	52-8	52-37	S52230
SENSOR	AFT LARGE CARGO DOOR UP SENSOR	ALL	1	821/824		48(824)	52-8	52-37	S52231
SENSOR	AFT SMALL CARGO DOOR CLOSED SENSOR	ALL	1	823		48(823)	52-10	52-71	S52023
SENSOR	AFT SMALL CARGO DOOR DOWN SENSOR	ALL	1	823		48(823)	52-10	52-35	S52012

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	AFT SMALL CARGO DOOR LATCHED & LCKD SNSR	ALL	1	823		48(823)	52-10	52-71	S52024
SENSOR	AFT SMALL CARGO DOOR LATCHED SENSOR	ALL	1	823		48(823)	52-10	52-35	S52011
SENSOR)	AFT SMALL CARGO DOOR UP SENSOR	ALL	1	823		48(823)	52-10	52-35	S52008
SENSOR	AFT SMALL CARGO DOOR LIFTED SENSOR	ALL	1	823		48(823)	52-10	52-35	S52009
SENSOR	FWD ACCESS DOOR WARNING SENSOR	ALL	1	112		9(112AL)	52-2	52-71	S52018
SENSOR	FWD LARGE CARGO DOOR CLOSED SENSOR	ALL	1	821/824		48(821)(824)	52-8	52-71	S52021
SENSOR	FWD LARGE CARGO DOOR HANDLE UNLOCKED SENSOR	ALL	1	821/824		48(821)(824)	52-8	52-34	S52004
SENSOR	FWD LARGE CARGO DOOR LATCH RANGE SEN- SOR	ALL	1	821/824		48(821)(824)	52-8	52-34	S52001
SENSOR	FWD LARGE CARGO DOOR LATCHED SENSOR (CONTROL)	ALL	1	821/824		48(821)(824)	52-8	52-34	S52005
SENSOR	FWD LARGE CARGO DOOR LATCHED SENSOR (INDICATION)	ALL	1	821/824		48(821)(824)	52-8	52-71	S52042
SENSOR	FWD LARGE CARGO DOOR LOCKED SENSOR	ALL	1	821/824		48(821)(824)	52-8	52-71	S52022
SENSOR	FWD LARGE CARGO DOOR UNLATCHED SEN- SOR	ALL	1	821/824		48(821)(824)	52-8	52-34	S52002
SENSOR	FWD LARGE CARGO DOOR UP SENSOR	ALL	1	821/824		48(821)(824)	52-8	52-34	S52003
SENSOR	MEC ACCESS DOOR CLSD/LATCH & LCKD SNSR	ALL	1	117		8,9(117AL)	52-2	52-71	S52019
SENSOR	PED CLOSED & LATCHED SNSR	ALL	8	830/840		48	52-4	52-71	
SENSOR	PED FLIGHT LOCK DISENG SNSR	ALL	8	830/840		48	52-4	52-71	S52105

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	PED FLIGHT LOCK ENGAGED SNSR	ALL	8	830/840		48	52-4	52-71	S52101
SENSOR	PED DOOR LOCKED SENSOR	ALL	8	830/840		48	52-4	52-71	S52110
SHAFT	LARGE CARGO DOOR LIFT MANUAL DRIVE SHAFT	ALL	1	821/824		48(821)(824)	52-7	52-34	
SNUBBER	BULK CARGO DOOR SNUBBER	ALL	1	825		48(825)	52-11	52-36	
SNUBBER	PED SNUBBER	ALL	8	830/840		48	52-4	52-11	
SOCKET	AFT SMALL CARGO DOOR HINGE MANUAL DRIVE SOCKET	ALL	1	823		48(823)	52-9	52-35	
SOCKET	AFT SMALL CARGO DOOR LIFT/LATCH MANUAL DRIVE SOCKET	ALL	1	823		48(823)	52-9	52-35	
SOCKET	LARGE CARGO DOOR LIFT MANUAL DRIVE SOCKET	ALL	2	821/824		48(821)(824)	52-5	52-34	
SOCKET	LARGE CARGO DOOR LATCH MANUAL DRIVE SOCKET	ALL	1	821/824		48(821)(824)	52-5	52-34	
SOLENOID	FLIGHT DECK DOOR LOCK SOLENOID	ALL	1	211		8	52-3	52-51	M52001
STOP	AFT SMALL CARGO DOOR PRESSURE HOOK STOP	ALL	4	823		48(823)	52-9	52-35	
STOP	AFT SMALL CARGO DOOR DITCHING STOP	ALL	10	823		48(823)	52-10	52-35	
SWITCH	AFT LARGE CARGO DOOR EXT DOOR CONTROL SWITCH	ALL	1	824	P44	14(152AR)	52-6	52-37	S52241
SWITCH	AFT LARGE CARGO DOOR INT DOOR CONTROL SWITCH	ALL	1	152		48(823)	52-9	52-37	S52242

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SWITCH	AFT LARGE CARGO DOOR EXT CONTROL SWITCH	ALL	1	152		14(152AR)	52-6	52-37	S52241
SWITCH	AFT SMALL CARGO DOOR EXT CONTROL ARM SWITCH	ALL	1	824	P44	14(152AR)	52-10	52-35	S52013
SWITCH	AFT SMALL CARGO DOOR EXT CONTROL SW	ALL	1	824	P44	14(152AR)	52-9	52-35	S52015
SWITCH	AFT SMALL CARGO DOOR INTERIOR ARM SW	ALL	1	152		48(823)	52-9	52-35	S52016
SWITCH	AFT SMALL CARGO DOOR INT CONTROL SWITCH	ALL	1	152		48(823)	52-9	52-35	S52014
SWITCH	BULK CARGO DOOR CLSD/LATCHED & LCKD SW	ALL	1	525		48(825)	52-9	52-71	S52020
SWITCH	PED DOOR OPEN SWITCH	ALL	8	830/840		48	52-4	52-11	S52125
SWITCH	FLIGHT DECK DOOR LOCK SWITCH	ALL	1	211	P8	8	00-4	52-51	M52002S001
SWITCH	FWD LARGE CARGO DOOR EXT DOOR CONTROL SWITCH	ALL	1	122	P43	9(122AR)	52-6	52-34	S52006
SWITCH	FWD LARGE CARGO DOOR INT DOOR CONTROL SWITCH	ALL	1	122/152		48(821)	52-6	52-34	S52007
SWITCH	PED MODE SELECT SWITCH	ALL	8	830/840		48	52-4	52-11	
TRACK	AFT SMALL CARGO DOOR LATCH TRACK	ALL	2	823		48(823)	52-9	52-35	
TRACK	AFT SMALL CARGO DOOR ROLLER GUIDE TRACK	ALL	2	823		48(823)	52-9	52-35	
TORQUE TUBE	AFT SMALL CARGO DOOR LIFT/LATCH TORQUE TUBE	ALL	1	823		48(823)	52-9	52-35	

ATA 52	DOORS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 52	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
TORQUE TUBE	AFT SMALL CARGO DOOR LOCKOUT TORQUE TUBE	ALL	1	823		48(823)	52-10	52-35	
TORQUE TUBE	LARGE CARGO DOOR LATCH TORQUE TUBE	ALL	1	821/824		48(821)(824)	52-7	52-34	

ATA 56	WINDOWS					ACCESS PAGE (PNL/DOOR)	REC- OG- NITION PAGE	ATA 56	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ARM	LINK ARM	ALL	2	211/212		8	56-1	56-11	
CABLE	DRIVE CABLE	ALL	2	211/212		8	56-1	56-11	
CARRIAGE	WINDOW CARRIAGE	ALL	2	211/212		8	56-1	56-11	
HANDLE	LATCH HANDLE	ALL	2	211/212		8	56-1	56-11	
HANDLE	OPERATING HANDLE	ALL	2	211/212		8	56-1	56-11	
RETAINER	MOISTURE SEAL RETAINER RING	ALL	2	211/212		8	56-1	56-11	
SEAL	NO. 2 WINDOW MOISTURE SEAL	ALL	2	211/212		8	56-1	56-11	
SEAL	NO. 2 WINDOW PRESSURE SEAL	ALL	2	211/212		8	56-1	56-11	
SWITCH	WINDOW 2 CLSD, LTCHED & LKD SWITCH, L	ALL	1	211		8	56-1	5611	S56001
SWITCH	WINDOW 2 CLSD, LTCHED & LKD SWITCH, R	ALL	1	212		8	56-1	5611	S56002
TRACKS	LOWER TRACKS	ALL	4	211/212		8	56-1	56-11	
TRACKS	UPPER TRACKS	ALL	4	211/212		8	56-1	56-11	
TUBE	TORQUE TUBE	ALL	2	211/212		8	56-1	56-11	
WINDOW	DOOR MOUNTED WINDOWS	ALL	8	200		8	56-1	56-31	
WINDOW	LANDSCAPE CAMERA WINDOW	ALL	1	112		8,9(112AL)	56-1	56-41	
WINDOW	NO. 1 WINDOW	ALL	2	211/212		8	56-1	56-11	
WINDOW	NO. 2 OPENABLE WINDOW	ALL	2	211/212		8	56-1	56-11	
WINDOW	NO. 3 WINDOW	ALL	2	211/212		8	56-1	56-11	

ATA 71	POWER PLANT					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 71	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACTUATOR	FAN COWL OPENING ACTUATOR - L ENG	ALL	2	413/414		29	71-3	71-12	
ACTUATOR	FAN COWL OPENING ACTUATOR - R ENG	ALL	2	423/424		29	71-3	71-12	
ACTUATOR	T/R COWL OPENING ACTUATOR - L ENG	ALL	2	415/416		29	71-4	71-12	
ACTUATOR	T/R COWL OPENING ACTUATOR - R ENG	ALL	2	425/426		29	71-4	71-12	
DISCONNECT	CORE/STRUT DISCONNECT	ALL	2	411/421		29	71-7	71-00	
DISCONNECT	FORWARD FAN/STRUT DISCONNECT	ALL	2	431/441		29	71-7	71-00	
DISCONNECT	LEFT FAN/STRUT DISCONNECT	ALL	2	431/441		29	71-7	71-00	
DISCONNECT	RIGHT FAN/STRUT DISCONNECT	ALL	2	431/441		29	71-7	71-00	
DOOR	FAN COWL PRESSURE RELIEF DOOR	ALL	2	413/423		29	71-1	71-11	
DOOR	OIL TANK ACCESS DOOR	ALL	2	413/423		29	71-1	71-11	
DRAIN	ENGINE ACCESSORY DRAIN	ALL	16	411/421		29	71-6	71-71	
FILTER	PDOS PUMP FILTER	ALL	2	431/441		29	71-5	71-12	
HOSE	T/R COWL ACTUATOR HOSES - L ENG	ALL	2	415/416		29	71-4	71-12	
HOSE	T/R COWL ACTUATOR HOSES - R ENG	ALL	2	425/426		29	71-4	71-12	
LATCH	FAN COWL LATCHES - L ENG	ALL	4	413/414		29	71-2	71-11	
LATCH	FAN COWL LATCHES - R ENG	ALL	4	423/424		29	71-2	71-11	
LATCH	T/R LATCH BEAM LATCH - L ENG	ALL	5	415/416		29	71-2	71-11	
LATCH	T/R LATCH BEAM LATCH - R ENG	ALL	5	425/426		29	71-2	71-11	
LINK	THRUST LINK	ALL	4	411/421		29	71-8	71-21	
MOUNT	AFT ENGINE MOUNT	ALL	2	411/421		29	71-8	71-21	

ATA 71	POWER PLANT					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 71	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
MOUNT	FORWARD ENGINE MOUNT ASSEMBLY	ALL	2	411/421		29	71-8	71-21	
PIN	SHEAR PIN	ALL	2	411/421		29	71-8	71-21	
PUMP	POWER PACK PUMP (PDOS)	ALL	2	431/441		29	71-5	71-12	M78001
ROD	FAN COWL HOLD OPEN ROD - L ENG	ALL	4	431/414		29	71-2	71-11	
ROD	FAN COWL HOLD OPEN ROD - R ENG	ALL	4	423/424		29	71-2	71-11	
ROD	T/R COWL HOLD OPEN ROD - L ENG	ALL	4	415/416		29	71-4	71-11	
ROD	T/R COWL HOLD OPEN ROD - R ENG	ALL	4	425/426		29	71-4	71-11	
SWITCH	L FAN COWL ACTIVATION AND CONTROL SW - (L,R ENG)	ALL	2	413/423		29	71-3	71-12	S78003
SWITCH	L T/R ACTIVATION AND CONTROL SWITCH - (L,R ENG)	ALL	2	415/425		29	71-3	71-12	S78004
SWITCH	R FAN COWL ACTIVATION AND CONTROL SW - (L,R ENG)	ALL	2	413/423		29	71-3	71-12	S78005
SWITCH	R T/R ACTIVATION AND CONTROL SWITCH - (L,R ENG)	ALL	2	416/426		29	71-3	71-12	S78006
VENT	FAN COWL VENT	ALL	2	413/423		29	71-6	71-71	

ATA 72	ENGINE					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 72	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK				
BLADES	FAN BLADES	ALL	44	411/421		29	72-1	72-21	
CASE	INLET FAN CASE	ALL	2	411/421		29	72-1	72-24	
LINERS	AFT OUTER ACOUSTICAL LINERS	ALL	16	411/421		29	72-1	72-24	
LINERS	FORWARD OUTER ACOUSTICAL LINERS	ALL	16	411/421		29	72-1	72-24	
PLATFORM	FAN BLADE PLATFORM	ALL	44	411/421		29	72-1	72-21	
SPACER	FAN BLADE SPACER	ALL	44	411/421		29	72-1	72-21	
SPINNER	AFT SPINNER	ALL	2	411/421		29	72-1	72-21	
SPINNER	FORWARD SPINNER	ALL	2	411/421		29	72-1	72-21	

ATA 73	ENGINE FUEL AND CONTROL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 73	EQUIP NUMBER
						PINK	BLUE	CH-SEC	
ALTERNATOR	CONTROL ALTERNATOR	ALL	1	411/421		29	73-4	73-21	M73007
BOX	CONFIGURATION BOX	ALL	2	411/421		29	73-3	73-21	M73027
BOX	ENGINE IDENTIFICATION BOX	ALL	2	411/421		29	73-3	73-21	M73024
CIRCUIT BREAKER	L EDIU 1A - CB	ALL	1	117	P310	9(117AL)	00-16	73-21	C73605
CIRCUIT BREAKER	L EDIU 1B - CB	ALL	1	117	P110	9(117AL)	00-14	73-21	C73603
CIRCUIT BREAKER	L EDIU 2A - CB	ALL	1	117	P310	9(117AL)	00-16	73-21	C73607
CIRCUIT BREAKER	L EDIU 2B - CB	ALL	1	117	P110	9(117AL)	00-14	73-21	C73601
CIRCUIT BREAKER	L ENG EEC ALTN PWR CH A - CB	ALL	1	117	P110	9(117AL)	00-14	73-21	C73401
CIRCUIT BREAKER	L ENG EEC ALTN PWR CH B - CB	ALL	1	117	P110	9(117AL)	00-14	73-21	C73403
CIRCUIT BREAKER	L ENG START PWR CTRL - CB	ALL	1	211	P11	8	00-6	73-21	C73609
CIRCUIT BREAKER	R EDIU 1A - CB	ALL	1	117	P310	9(117AL)	00-16	73-21	C73606
CIRCUIT BREAKER	R EDIU 1B - CB	ALL	1	118	P210	9(117AL)	00-15	73-21	C73604
CIRCUIT BREAKER	R EDIU 2A - CB	ALL	1	118	P210	9(117AL)	00-15	73-21	C73602
CIRCUIT BREAKER	R EDIU 2B - CB	ALL	1	117	P310	9(117AL)	00-16	73-21	C73608
CIRCUIT BREAKER	R ENG EEC ALTN PWR CH A - CB	ALL	1	118	P210	9(117AL)	00-15	73-21	C73400
CIRCUIT BREAKER	R ENG EEC ALTN PWR CH B - CB	ALL	1	118	P210	9(117AL)	00-15	73-21	C73402
CIRCUIT BREAKER	R ENG START PWR CTRL - CB	ALL	1	212	P11	8	00-6	73-21	C73610
CONTROL, EEC	ELECTRONIC ENGINE CONTROL (EEC)	ALL	2	411/421		229	73-4	73-21	M73003
COUPLER	L EDIU CH A-C1 - COUPLER	ALL	1	116	P311	9(117AL)	00-10	73-21	B73102
COUPLER	L EDIU CH A-L - COUPLER	ALL	1	115	P111	9(117AL)	00-10	73-21	B73101

ATA 73	ENGINE FUEL AND CONTROL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 73	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC.	
COUPLER	L EDIU CH B-C2 - COUPLER	ALL	1	115	P313	9(117AL)	00-10	73-21	B73106
COUPLER	L EDIU CH B-L - COUPLER	ALL	1	115	P111	9(117AL)	00-10	73-21	B73103
COUPLER	L EDIU CH C-C1 - COUPLER	ALL	1	116	P311	9(117AL)	00-10	73-21	B73105
COUPLER	L EDIU CH C-C2 - COUPLER	ALL	1	115	P313	9(117AL)	00-10	73-21	B73104
COUPLER	R EDIU CH A-C2 - COUPLER	ALL	1	115	P313	9(117AL)	00-10	73-21	B73206
COUPLER	R EDIU CH A-R - COUPLER	ALL	1	116	P211	9(117AL)	00-10	73-21	B73201
COUPLER	R EDIU CH B-C1 - COUPLER	ALL	1	116	P311	9(117AL)	00-10	73-21	B73205
COUPLER	R EDIU CH B-R - COUPLER	ALL	1	116	P211	9(117AL)	00-10	73-21	B73203
COUPLER	R EDIU CH C-C1 - COUPLER	ALL	1	116	P311	9(117AL)	00-10	73-21	B73202
COUPLER	R EDIU CH C-C2 - COUPLER	ALL	1	115	P313	9(117AL)	00-10	73-21	B73204
FILTER	FUEL FILTER ELEMENT	ALL	2	411/421		29	73-4	73-11	
HOSE	MAIN FUEL SUPPLY HOSE	ALL	2	411/421		29	73-4	73-11	
MANIFOLD	FUEL SUPPLY MANIFOLD	ALL		411/421		29	73-4	73-11	
NOZZLE	FUEL NOZZLE	ALL	60	411/421		29	73-4	73-11	
PANEL	APU/EEC MAINT, PANEL	ALL	1	212	P61	8	00-5,73-1	73-21	M73002
PANEL	CARGO FIRE/ENGINE CONTROL PANEL	ALL	1	212	P5	8	00-3,73-1	73-21	M80001
PLUG	ENGINE RATING PLUG	ALL	2	411/421		29	73-4	73-21	
PUMP	MAIN FUEL PUMP	ALL	2	411/421		29	73-4	73-11	
RELAY	START POWER RELAY, L-ENG	ALL	1		P110	9(117AL)	00-14	73-21	K73102
RELAY	START POWER RELAY, R-ENG	ALL	1		P210	9(117AL)	00-15	73-21	K73202

ATA 73	ENGINE FUEL AND CONTROL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 73	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	BLEED BIAS FLOW SENSOR	ALL	2	411/421		29	73-5	73-21	
SENSOR	FUEL BOOST PRESSURE SENSOR	ALL	2	411/421		29	73-4	73-21	M73018
SENSOR	FUEL FILTER DP SENSOR	ALL	2	411/421		29	73-4	73-21	M73026
SENSOR	GEAR STAGE DP SENSOR	ALL	2	411/421		29	73-4	73-21	M73019
SENSOR	PT25 SENSOR	ALL	2	411/421		29	73-3	73-21	M73017
SENSOR	T12 SENSOR	ALL	2	412/422		29	73-3	73-21	M73006
SENSOR	T3 SENSOR	ALL	2	411/421		29	73-5	73-21	M73012
SWITCH	EEC MAINTENANCE SWITCH	ALL	2	212	P61	8	00-5,73-1	73-21	M73002
SWITCH	EEC MODE SWITCH	ALL	2	212	P61	8	00-5,73-1	73-21	M80001
TRANSMITTER	FUEL FLOW TRANSMITTER	ALL	2	411/421		29	73-5	73-31	M73009
UNIT, HMU	HYDROMECHANICAL UNIT (HMU)	ALL	2	411/421		29	73-4	73-21	M76001
UNIT, INTERFACE	ENGINE DATA INTERFACE UNIT (EDIU) - L	ALL	1	117	E1-5	9(117AL)	00-12,73-2	73-21	M73103
UNIT, INTERFACE	ENGINE DATA INTERFACE UNIT (EDIU) - R	ALL	1	118	E4-1	9(117AL)	00-12,73-2	73-21	M73203

ATA 74	IGNITION					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 74	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	L ENG IGN 1 - CB	ALL	1	211	P11	8	00-6	74-11	C74403
CIRCUIT BREAKER	L ENG IGN 2 - CB	ALL	1	212	P11	8	00-6	74-11	C74405
CIRCUIT BREAKER	L ENG STBY IGN 1 - CB	ALL	1	211	P11	8	00-6	74-11	C74401
CIRCUIT BREAKER	L ENG STBY IGN 2 - CB	ALL	1	211	P11	8	00-6	74-11	C74407
CIRCUIT BREAKER	R ENG IGN 1 - CB	ALL	1	212	P11	8	00-6	74-11	C74402
CIRCUIT BREAKER	R ENG IGN 2 - CB	ALL	1	211	P11	8	00-6	74-11	C74404
CIRCUIT BREAKER	R ENG STBY IGN 1 - CB	ALL	1	212	P11	8	00-6	74-11	C74400
CIRCUIT BREAKER	R ENG STBY IGN 2 - CB	ALL	1	212	P11	8	00-6	74-11	C74406
EXCITER	NO. 1 UPPER IGNITION EXCITER	ALL	2	411/421		29	74-1	74-11	M74001
EXCITER	NO. 2 LOWER IGNITION EXCITER	ALL	2	411/421		29	74-1	74-11	M74002
LEAD	NO. 1 UPPER IGNITION LEAD	ALL	2	411/421		29	74-1	74-21	M74005
LEAD	NO. 2 LOWER IGNITION LEAD	ALL	2	411/421		29	74-1	74-21	M74006
PLUG	NO. 1 UPPER IGNITER PLUG	ALL	2	411/421		29	74-1	74-21	M74003
PLUG	NO. 2 LOWER IGNITER PLUG	ALL	2	411/421		29	74-1	74-21	M74004
RELAY	IGNITER 1 XFER RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14	74-11	K74101
RELAY	IGNITER 1 XFER RELAY, R ENG	ALL	1	118	P210	9(117AL)	00-15	74-11	K74201
RELAY	IGNITER 2 XFER RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14	74-11	K74102
RELAY	IGNITER 2 XFER RELAY, R ENG	ALL	1	118	P210	9(117AL)	00-15	74-11	K74202

ATA 75	ENGINE AIR					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 75	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACTUATOR	VARIABLE BYPASS VALVE (VBV) CH A ACTUA- TOR	ALL	2	411/421		29	75-1	75-32	M75001
ACTUATOR	VARIABLE BYPASS VALVE (VBV) CH B ACTUA- TOR	ALL	2	411/421		29	75-2	75-32	M75010
ACTUATOR	VARIABLE STATOR VANE (VSV) CH A ACTUATOR	ALL	2	411/421		29	75-1	75-31	M75002
ACTUATOR	VARIABLE STATOR VANE (VSV) CH B ACTUATOR	ALL	2	411/421		29	75-2	75-31	M75009
MANIFOLD	HPT ACC COOLING MANIFOLD	ALL	2	411/421		29	75-1	75-24	
MANIFOLD	LPT ACC COOLING MANIFOLD	ALL	2	411/421		29	75-2	75-24	
SWITCH	CORE COMPT COOLING (CCC) VLV FDBK SW	ALL	2	411/421		29	75-2	75-23	S75000
SWITCH	LPT ACTIVE CLEARANCE CONTROL (ACC) VALVE FEEDBACK SWITCH	ALL	2	411/421		29	75-2	75-24	S75001
VALVE	HPT ACTIVE CLEARANCE CONTROL VALVE	ALL	2	411/421		29	75-1	75-24	M75004
VALVE	LPT ACTIVE CLEARANCE CONTROL (ACC) VLV	ALL	2	411/421		29	75-2	75-24	V75002
VALVE	START/TRANSIENT BLEED VALVE	ALL	2	411/421		29	75-1	75-33	V75007
VALVE	CORE COMPARTMENT COOLING (CCC) VALVE	ALL	2	411/421		29	75-2	75-23	V75001

ATA 76	ENGINE CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOGNITION PAGE	ATA 76	E
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/RACK	PINK	BLUE	CH-SEC	
						8	76-1		
BRAKE ASSY	AUTOTHROTTLE BRAKE ASSEMBLY	ALL	2	210		9(117AL)	00-16		C760
CIRCUIT BREAKER	L ENG CONT IGN - CB	ALL	1	117	P310	9(117AL)	00-16		C7600
CIRCUIT BREAKER	L ENG EEC RESET - CB	ALL	1	117	P310	9(117AL)	00-16		C76003
CIRCUIT BREAKER	L ENG EEC RESET/FUEL SPAR - CB	ALL	1	117	P310	9(117AL)	00-16		C76007
CIRCUIT BREAKER	L ENG FUEL CONT/IGN - CB	ALL	1	117	P310	9(117AL)	00-16		C76001
CIRCUIT BREAKER	L ENG FUEL VALVE - CB	ALL	1	212	P11	8	00-6		C76004
CIRCUIT BREAKER	R ENG CONT IGN - CB	ALL	1	117	P310	9(117AL)	00-16		
CIRCUIT BREAKER	R ENG EEC RESET - CB	ALL	1	117	P310	9(117AL)	00-16		
CIRCUIT BREAKER	R ENG EEC RESET/FUEL SPAR - CB	ALL	1	117	P310	9(117AL)	00-16		
CIRCUIT BREAKER	R ENG FUEL CONT/IGN - CB	ALL	1	117	P310	9(117AL)	00-16		
CIRCUIT BREAKER	R ENG FUEL VALVE - CB	ALL	1	212	P11	8	00-6		C76000
LEVER	THRUST LEVER	ALL	2	210	P10	8	76-1		
MICROSWITCH PACK	THRUST LEVER MICROSWITCH PACK	ALL	1	210	P10	8	76-1		M32060
MODULE	ENGINE FUEL CONTROL MODULE	ALL	1	210	P10	8	00-14		
RELAY	EEC RESET FUEL SPAR RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14		K76102
RELAY	EEC RESET T/D RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14		K76106
RELAY	EEC RESET T/D RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14		K76108
RELAY	EEC RESET T/D RELAY, R ENG	ALL	1	118	P210	9(117AL)	00-15	76-21	K76208
RELAY	EEC RESET T/D RELAY, R ENG	ALL	1	118	P210	9(117AL)	00-15	76-21	K76206

ATA 76	ENGINE CONTROLS					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 76	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
RELAY	EEC RESET/FUEL SPAR RELAY, R ENG	ALL	1	118	P210	9(117AL)	00-15	76-21	K76202
RELAY	EEC RESET/IDG DISC RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14	76-21	K76105
RELAY	EEC RESET/IDG DISC RELAY, R ENG	ALL	1	118	P210	9(117AL)	00-15	76-21	K76205
RELAY	FUEL CONT T/D RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14	76-21	K76107
RELAY	FUEL CONT T/D RELAY, R ENG	ALL	1	118	P210	9(117AL)	00-15	76-21	K76207
RELAY	GEN CONT/IGN RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14	76-21	K76104
RELAY	GEN CONT/IGN RELAY, R ENG	ALL	1	118	P210	9(117AL)	00-15	76-21	K76204
RELAY	IGN/FIRE DETECTION RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14	76-21	K76103
RELAY	IGN/FIRE DETECTION RELAY, R ENG	ALL	1	118	P210	8	00-15	76-21	K76203
RESOLVER	THRUST LEVER ANGLE (TLA) RESOLVER - L	ALL	2	210	P10	8	76-1	76-11	
RESOLVER	THRUST LEVER ANGLE (TLA) RESOLVER - R	ALL	2	210	P10	8	76-1	76-11	
SERVO	AUTOTHROTTLE SERVOMOTOR (ASM) - L	ALL	2	210	P10	8	76-1	76-12	M22105
SERVO	AUTOTHROTTLE SERVOMOTOR (ASM) - R	ALL	2	210	P10	8	76-1	76-12	M22205
SWITCH	AUTOTHROTTLE DISCONNECT SWITCH - L	ALL	1	210	P10	8	76-1	22-31	S22009
SWITCH	AUTOTHROTTLE DISCONNECT SWITCH - R	ALL	1	210	P10	8	76-1	22-31	S22010
SWITCH	FUEL CONTROL SWITCH - L	ALL	1	210	P10	8	76-1	76-11	S76100
SWITCH	FUEL CONTROL SWITCH - R	ALL	1	210	P10	8	76-1	76-11	S76200
SWITCH	TAKEOFF AND GO-AROUND SWITCH	ALL	6	210	P10	8	76-1	76-12	

ATA 77	ENGINE INDICATING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 77	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACCELEROMETER	NO. 1 BEARING ACCELEROMETER	ALL	2	411/421		29	77-2	77-31	M77011
ACCELEROMETER	TURBINE ACCELEROMETER	ALL	2	411/421		29	77-2	77-31	M77010
CIRCUIT BREAKER	L ENG VIB MONITOR - CB	ALL	1	117	P110	9(117AL)	00-14	77-31	C77403
CIRCUIT BREAKER	R ENG VIB MONITOR - CB	ALL	1	118	P210	9(117AL)	00-15	77-31	C77400
CONVERTER	REMOTE CHARGE CONVERTER (RCC)	ALL	2	411/421		29	77-2	77-31	M77026
COUPLER	LEFT AVM COUPLER	ALL	1	115	P111	9(117AL)	00-10	77-31	B77105
COUPLER	RIGHT AVM COUPLER	ALL	1	116	P211	9(117AL)	00-10	77-31	B77205
MODULE	PYROMETER ELECTRONICS MODULE	ALL	2	411/421		29	77-3	77-21	M77009
MONITOR	AIRBORNE VIBRATION MONITOR, L ENG	ALL	1	117	E1-4	9(117AL)	77-1	77-31	M77202
MONITOR	AIRBORNE VIBRATION MONITOR, R ENG	ALL	1	118	E2-4	9(117AL)	77-1	77-31	M77102
PROBE	P49 PRESSURE PROBE	ALL	2	411/421		29	77-3	77-34	
PROBE	T5 TEMPERATURE PROBE	ALL	2	411/421		29	77-3	77-34	
SENSOR	LOWER T49 TEMPERATURE SENSOR	ALL	2	411/421		29	77-3	77-21	M77032
SENSOR	N1 SPEED SENSOR	ALL	2	411/421		29	77-2	77-12	M77005
SENSOR	N2 SPEED SENSOR	ALL	4	411/421		29	77-3	77-12	M77006
SENSOR	PS13 SENSOR	ALL	2	411/421		29	77-3	77-34	
SENSOR	PYROMETER SENSOR	ALL	2	411/421		29	77-3	77-21	
SENSOR	UPPER T49 TEMPERATURE SENSOR	ALL	2	411/421		29	77-3	77-21	M77033

ATA 78	EXHAUST					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 78	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
ACTUATOR	CENTER LOCK ACTUATOR - L SLEEVE	ALL	2	415/425		29	78-2	78-34	S78008
ACTUATOR	CENTER LOCK ACTUATOR -R SLEEVE	ALL	2	416/426		29	78-2	78-34	S78011
ACTUATOR	LOWER LOCK ACTUATOR - L SLEEVE	ALL	2	415/425		29	78-2	78-34	S78009
ACTUATOR	LOWER LOCK ACTUATOR - R SLEEVE	ALL	2	416/426		29	78-2	78-34	S78012
ACTUATOR	TLA INTERLOCK ACTUATOR, L ENG	ALL	1	210	P10	8	00-3,76-1	78-34	M78105
ACTUATOR	TLA INTERLOCK ACTUATOR, R ENG	ALL	1	210	P10	8	00-3,76-1	78-34	M78205
BAND	V-GROOVE LATCH BAND - L ENG	ALL	2	415/416		29	78-1	78-31	
BAND	V-GROOVE LATCH BAND - R ENG	ALL	2	425/426		29	78-1	78-31	
CIRCUIT BREAKER	ENG COWL DOOR MOTOR CONTROL - CB	ALL	1	117	P320	9)117AL)	00-17	78-31	C78614
CIRCUIT BREAKER	L ENG COWL DOOR MOTOR - CB	ALL	1	117	P320	9)117AL)	00-17	78-31	C78301
CIRCUIT BREAKER	L ENG COWL DOOR MOTOR CONTROL - CB	ALL	1	117	P320	9)117AL)	00-17	78-31	C78613
CIRCUIT BREAKER	L ENG T/L INTLK - CB	ALL	1	117	P110	9)117AL)	00-14	78-34	C78609
CIRCUIT BREAKER	L ENG T/R CONT - CB	ALL	1	117	P110	9)117AL)	00-14	78-34	C78605
CIRCUIT BREAKER	R ENG COWL DOOR MOTOR - CB	ALL	1	117	P320	9)117AL)	00-17	78-31	C78302
CIRCUIT BREAKER	R ENG T/L INTLK - CB	ALL	1	118	P210	9)117AL)	00-15	78-34	C78611
CIRCUIT BREAKER	R ENG T/R CTRL - CB	ALL	1	118	P210	9)117AL)	00-15	78-34	C78604
DOOR	BLOCKER DOORS - L ENG	ALL	10	415/416		29	78-1	78-31	
DOOR	BLOCKER DOORS - R ENG	ALL	10	425/426		29	78-1	78-31	
DRIVE UNIT	SYNC LOCK/MANUAL DRIVE UNIT - L ENG	ALL	2	415/416		29	78-2	78-34	
DRIVE UNIT	SYNC LOCK/MANUAL DRIVE UNIT - R ENG	ALL	2	425/426		29	78-2	78-34	

ATA 78	EXHAUST					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 78	EQUIP NUMBER
	TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC
	HANDLE	V-GROOVE BAND HANDLE	ALL	2	415/425		29	78-1	78-31
	INTERLOCK	T/L INTERLOCK LEFT ENG	ALL	1	210	P10	8	76-1	78-34 M78105
	INTERLOCK	T/L INTERLOCK RIGHT ENG	ALL	1	210	P10	8	76-1	78-34 M78205
	LATCH	AFT COWL LATCH	ALL	6	423/424		29	71-2	78-31
	LATCH	DEFLECTION LIMITER LATCH	ALL	8	413/414		29	71-2	78-31
	LATCH	V-BAND LATCH	ALL	2	411/421		29	71-2	78-31
	LINKS	BLOCKER DOOR DRAG LINK - L ENG	ALL	10	415/416		29	78-1	78-31
	LINKS	BLOCKER DOOR DRAG LINK - R ENG	ALL	10	425/426		29	78-1	78-31
	PLUG	AFT TURBINE EXHAUST PLUG	ALL	2	419/429		29	72-1	78-11
	PLUG	FWD TURBINE EXHAUST PLUG	ALL	2	419/429		29	72-1	78-11
	RELAY	COWL DOOR MOTOR RELAY, L ENG	ALL	1	117	P320	9)117AL)	00-17	78-31 K78105
	RELAY	COWL DOOR MOTOR RELAY, R ENG	ALL	1	117	P320	9)117AL)	00-17	78-31 K78205
	RELAY	SYNC LOCK RELAY, L ENG	ALL	1	117	P110	9)117AL)	00-14	78-34 K78106
	RELAY	SYNC LOCK RELAY, R ENG	ALL	1	118	P210	9)117AL)	00-15	78-34 K78206
	RELAY	T/R INTERLOCK RELAY, L ENG	ALL	1	117	P110	9)117AL)	00-14	78-34 K78104
	RELAY	T/R INTERLOCK RELAY, R ENG	ALL	1	118	P210	9)117AL)	00-15	78-34 K78204
	SEGMENT	CASCADE SEGMENT - L ENG	ALL	16	415/416		29	78-1	78-31
	SEGMENT	CASCADE SEGMENT - R ENG	ALL	16	425/426		29	78-1	78-31
	SENSOR	CENTER ACTR LOCK PROX SENSOR - L SLEEVE	ALL	2	415/416		29	78-2	78-34 S78008
	SENSOR	CENTER ACTR LOCK PROX SENSOR - R SLEEVE	ALL	2	425/426		29	78-2	78-34 S78011

ATA 78	EXHAUST					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 78	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
SENSOR	DIRECTIONAL CTRL VLV PROX SENSOR - L ENG	ALL	1	433		29	78-3	78-36	S78113
SENSOR	DIRECTIONAL CTRL VLV PROX SENSOR - R ENG	ALL	1	443		29	78-3	78-36	S78213
SENSOR	LOWER ACTUATOR LOCK PROX SENSOR - L SLEEVE	ALL	2	415/416		29	78-2	78-36	S78009
SENSOR	LOWER ACTUATOR LOCK PROX SENSOR - R SLEEVE	ALL	2	425/426		29	78-2	78-36	S78012
SENSOR	SYNC LOCK PROX SENSOR - L SLEEVE	ALL	2	415/416		29	78-2	78-36	S78007
SENSOR	SYNC LOCK PROX SENSOR - R SLEEVE	ALL	2	425/426		29	78-2	78-36	S78010
SHAFT	SYNC SHAFT - L ENG	ALL		415/416		29	78-2	78-34	
SHAFT	SYNC SHAFT - R ENG	ALL		425/426		29	78-2	78-34	
SLEEVE	T/R SLEEVE - L ENG	ALL	2	415/416		29	78-1	78-31	
SLEEVE	T/R SLEEVE - R ENG	ALL	2	425/426		29	78-1	78-31	
SLEEVE	TURBINE EXHAUST SLEEVE	ALL	2	419/429		29	72-1	78-11	
SLIDER	AUXILIARY SLIDER - L ENG	ALL	2	415/416		29	78-1	78-31	
SLIDER	AUXILIARY SLIDER - R ENG	ALL	2	425/426		29	78-1	78-31	
SLIDER	MAIN SLIDER - L ENG	ALL	2	415/416		29	78-1	78-31	
SLIDER	MAIN SLIDER - R ENG	ALL	2	425/426		29	78-1	78-31	
SOLENOID	DIRECTIONAL CONTROL VALVE SOLENOID - L ENG	ALL	1	433		29	78-3	78-34	S78113
SOLENOID	DIRECTIONAL CONTROL VALVE SOLENOID - R ENG	ALL	1	443		29	78-3	78-34	S78213

ATA 78	EXHAUST					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 78	EQUIP NUMBER
	TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC
	SOLENOID	ISOLATION VALVE SOLENOID - L,R STRUT	ALL	2	433/443		29	78-3	78-34
	SOLENOID	SYNC LOCK SOLENOID - L,R ENG	ALL	2	433/443		29	78-3	78-34
	SWITCH	HYDRAULIC PRESSURE SWITCH - L STRUT	ALL	1	433		29	78-3	78-36 S78101
	SWITCH	HYDRAULIC PRESSURE SWITCH - R STRUT	ALL	1	443		29	78-3	78-36 S78201
	SWITCH	L T/R COWL SWITCH	ALL	2	415/425		29	71-3	78-31 S78004
	SWITCH	R T/R COWL SWITCH	ALL	2	416/426		29	71-3	78-31 S78006
	SWITCH	SYNC LOCK SWITCH - L ENG	ALL	1	210	P10	8	76-1	78-34 S78103
	SWITCH	SYNC LOCK SWITCH - R ENG	ALL	1	210	P10	8	76-1	78-34 S78203
	SWITCH	T/R TEST ENABLE SWITCH - L ENG	ALL	1	416		29	71-3	78-34 S78104
	SWITCH	T/R TEST ENABLE SWITCH - R ENG	ALL	1	426		29	71-3	78-34 S78106
	TEE	RETRACT FLOW CONTROL TEES - L,R ENG	ALL	2	431/441		29	78-3	78-34
	THRUST REVERSER	THRUST REVERSER - L ENG	ALL	2	415/416		29	78-1	78-31
	THRUST REVERSER	THRUST REVERSER - R ENG	ALL	2	425/426		29	78-1	78-31
	TRACK LINER	AUXILIARY TRACK LINERS, T/R SLEEVE - L ENG	ALL	2	415/416		29	78-1	78-31
	TRACK LINER	AUXILIARY TRACK LINERS, T/R SLEEVE - R ENG	ALL	2	425/426		29	78-1	78-31
	TRACK LINER	MAIN TRACK LINERS, T/R SLEEVE - L ENG	ALL	4	415/416		29	78-1	78-31
	TRACK LINER	MAIN TRACK LINERS, T/R SLEEVE - R ENG	ALL	4	425/426		29	78-1	78-31
	TRANSDUCER	POSITION TRANSDUCER (RVDT) - L SLEEVE	ALL	2	415/416		29	78-2	78-36 M78002

ATA 78	EXHAUST					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 78	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
TRANSDUCER	POSITION TRANSDUCER (RVDT) - R SLEEVE	ALL	2	425/426		29	78-2	78-36	M78003
VALVE	DIRECTIONAL CONTROL VALVE	ALL	2	431/441		29	78-3	78-34	
VALVE	SYNC LOCK VALVE - L STRUT	ALL	1	433		29	78-3	78-34	V78101
VALVE	SYNC LOCK VALVE - R STRUT	ALL	1	443		29	78-3	78-34	V78201
VALVE	T/R ISOLATION VALVE - L STRUT	ALL	1	433		29	78-3	78-34	V78102
VALVE	T/R ISOLATION VALVE - R STRUT	ALL	1	443		29	78-3	78-34	V78202

ATA 79	OIL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 79	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CAP	OIL FILLER CAP	ALL	2	411/421		29	79-1	79-11	
CONDITIONER	DEBRIS MONITOR SYSTEM (DMS) CONDITIONER	ALL	2	411/421		29	79-1	79-21	M79005
DIPSTICK	OIL DIPSTICK	ALL	2	411/421		29	79-1	79-11	
DOOR	OIL TANK ACCESS DOOR	ALL	2	413/423		29	79-1	79-11	
EXCHANGER	MAIN FUEL/OIL HEAT EXCHANGER	ALL	2	411/421		29	79-3	79-21	
FILTER	OIL FILTER	ALL	2	411/421		29	79-3	79-21	
PLUG	FILTER DRAIN PLUG	ALL	2	411/421		29	79-3	79-21	
PLUG	MAGNETIC PLUG	ALL	10	411/421		29	79-3	79-21	
PUMP	LUBE AND SCAVENGE PUMP	ALL	2	411/421		29	79-3	79-21	
SCREEN	SCAVENGE OIL INLET SCREEN	ALL	10	411/421		29	79-3	79-21	
SENSOR	DEBRIS MONITORING SYSTEM (DMS) SENSOR	ALL	2	411/421		29	79-1	79-21	M79010
SENSOR	OIL FILTER DIFFERENTIAL PRESSURE SENSOR	ALL	2	411/421		29	79-3	79-35	M79011
SENSOR	OIL LEVEL SENSOR	ALL	2	411/421		29	79-1	79-31	M79001
SENSOR	OIL PRESSURE SENSOR	ALL	2	411/421		29	79-2	79-32	M79002
SENSOR	OIL TEMPERATURE SENSOR	ALL	2	411/421		29	79-3	79-34	M79003
SEPARATOR	DEBRIS MONITOR SYSTEM (DMS) AIR/OIL SEPA- RATOR	ALL	2	411/421		29	79-1	79-21	
TANK	OIL TANK	ALL	2	411/421		29	79-1	79-11	
VALVE	ANTI-LEAK VALVE	ALL	2	411/421		29	79-3	79-21	
VALVE	ENG OIL BYPASS VALVE	ALL	2	411/421		29	79-3	79-21	

ATA 79	OIL					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 79	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
VALVE	FUEL BYPASS VALVE	ALL	2	411/421		29	79-3	79-21	
VALVE	OIL RETURN LINE DRAIN VALVE	ALL	2	411/421		29	79-1	79-11	
VALVE	OIL TANK DRAIN VALVE	ALL	2	411/421		29	79-1	79-11	

ATA 80	STARTING					ACCESS PAGE (PNL/DOOR)	RECOG- NITION PAGE	ATA 80	EQUIP NUMBER
TYPE	COMPONENT NAME	APPLIES TO:	QTY	ZONE	PANEL/ RACK	PINK	BLUE	CH-SEC	
CIRCUIT BREAKER	L ENG START SW - CB	ALL	1	211	P11	8	00-6	80-11	C80605
CIRCUIT BREAKER	L ENG START VALVE - CB	ALL	1	211	P11	8	00-6	80-11	C80601
CIRCUIT BREAKER	R ENG START SW - CB	ALL	1	212	P11	8	00-6	80-11	C80606
CIRCUIT BREAKER	R ENG START VALVE - CB	ALL	1	212	P11	8	00-6	80-11	C80600
DETECTOR	STARTER MAGNETIC CHIP DETECTOR	ALL	2	411/421		29	80-2	80-11	
HANDLE	STARTER AIR VLV MANUAL OVERRIDE HANDLE	ALL	2	411/421		29	80-2	80-11	
MODULE	CARGO FIRE/ENG CONTROL MODULE	ALL	1	212	P5	8	00-3,80-1	80-11	M80001
PLUG	STARTER OIL FILL AND DRAIN PLUG	ALL	2	411/421		29	80-2	80-11	
RELAY	START CONTROL RELAY, L ENG	ALL	1	117	P110	9(117AL)	00-14	80-11	K80102
RELAY	START CONTROL RELAY, R ENG	ALL	1	118	P210	9(117AL)	00-15	80-11	K80202
SENSOR	STARTER AIR PRESSURE SENSOR	ALL	2	411/421		29	80-2	80-11	M80002
STARTER	ENGINE STARTER	ALL	2	411/421		29	80-2	80-11	
SWITCH	AUTOSTART SWITCH	ALL	1	212	P5	8	00-3,80-1	80-11	M8001S8007
SWITCH	EEC MODE SWITCH, L ENG	ALL	1	212	P5	8	00-3,80-1	80-11	M8001S8005
SWITCH	EEC MODE SWITCH, R ENG	ALL	1	212	P5	8	00-3,80-1	80-11	M8001S8006
SWITCH	FUEL CONTROL SWITCH, L ENG	ALL	1	210	P10	8	00-3,80-1	76-11	S76200
SWITCH	FUEL CONTROL SWITCH, R ENG	ALL	1	210	P10	8	00-3,80-1	76-11	S76100
SWITCH	START/IGNITION SWITCH, L ENG	ALL	1	212	P5	8	00-3,80-1	80-11	S80100
SWITCH	START/IGNITION SWITCH, R ENG	ALL	1	212	P5	8	00-3,80-1	80-11	S80200
VALVE	STARTER AIR VALVE (SAV)	ALL	2	411/421		29	80-2	80-11	V80001


ACCESS

	ACCESS	ACCESS PAGE (PNL/DOOR)
TYPE	COMPONENT NAME	PINK
DIMENSIONS	FORWARD/SIDE VIEW PRINCIPAL DIMENSIONS	1
DIMENSIONS	TOP VIEW PRINCIPLE DIMENSIONS	2
DOORS/PANELS	AFT FUSELAGE ACCESS DOORS/PANELS	14
DOORS/PANELS	AFT WING TO BODY ACCESS DOORS/PANELS	13
DOORS/PANELS	EMPENAGE ACCESS DOORS/PANELS	28
DOORS/PANELS	FLAP DOORS/PANELS	39
DOORS/PANELS	FLAPERON DOORS/PANELS	40
DOORS/PANELS	FORWARD FUSELAGE ACCESS DOORS/PANELS	9
DOORS/PANELS	FORWARD WING TO BODY ACCESS DOORS/PANELS	12
DOORS/PANELS	HORIZONTAL STABILIZER AFT DOORS/PANELS	22
DOORS/PANELS	HORIZONTAL STABILIZER MID DOORS/PANELS	19
DOORS/PANELS	HORIZONTAL STABILIZER MID DOORS/PANELS	20
DOORS/PANELS	HORIZONTAL STABILIZER TRAILING EDGE DOORS/PANELS	18
DOORS/PANELS	INBOARD FLAP FAIRING DOORS/PANELS	43
DOORS/PANELS	INBOARD FLAPERON FAIRING DOORS/PANELS	44
DOORS/PANELS	KEEL BEAM ACCESS DOORS/PANELS	11
DOORS/PANELS	LARGE CARGO DOOR DOORS/PANELS	49
DOORS/PANELS	MID FUSELAGE ACCESS DOORS/PANELS	10
DOORS/PANELS	OUTBOARD AUX. TRACK FAIRING DOORS/PANELS	46
DOORS/PANELS	OUTBOARD FLAP DOORS/PANELS	42


	ACCESS	ACCESS PAGE (PNL/DOOR)
TYPE	COMPONENT NAME	PINK
DOORS/PANELS	OUTBOARD FLAPERON FAIRING DOORS/PANELS	48
DOORS/PANELS	SMALL CARGO DOOR DOORS/PANELS	50
DOORS/PANELS	STABILIZER TO BODY DOORS/PANELS	21
DOORS/PANELS	VERTICAL STABILIZER ACCESS DOORS/PANELS	27
DOORS/PANELS	VERTICAL STABILIZER AFTDOORS/PANELS	25
DOORS/PANELS	VERTICAL STABILIZER LEADING EDGE DOORS/PANELS	24
DOORS/PANELS	VERTICAL STABILIZER REAR SPAR DOORS/PNLs	26
DOORS/PANELS	WING INBOARD LEADING EDGE DOORS/PANELS	33
DOORS/PANELS	WING LOWER SIDE DOORS/PANELS	37
DOORS/PANELS	WING MID DOORS/PANELS	41
DOORS/PANELS	WING MID LEADING EDGE INTERNAL DOORS/PANELS	35
DOORS/PANELS	WING OUTBOARD LEADING EDGE DOORS/PANELS	34
DOORS/PANELS	WING OUTBOARD LEADING EDGE INTERNAL DOORS/PANELS	36
DOORS/PANELS	WING REAR SPAR DOORS/PANELS	38
STATIONS	41 SECTION FUSELAGE STATIONS	4
STATIONS	43 SECTION FUSELAGE STATIONS	5
STATIONS	44 SECTION FUSELAGE STATIONS	5
STATIONS	45 SECTION FUSELAGE STATIONS	5
STATIONS	46 SECTION FUSELAGE STATIONS	6
STATIONS	47 SECTION FUSELAGE STATIONS	7
STATIONS	48 SECTION FUSELAGE STATIONS	7

	ACCESS	ACCESS PAGE (PNL/DOOR)
TYPE	COMPONENT NAME	PINK
STATIONS	ENGINE STATIONS	30
STATIONS	HORIZONTAL STABILIZER LEADING EDGE/TRAILING EDGE STATIONS	17
STATIONS	HORIZONTAL STABILIZER ELEVATOR STATIONS	18
STATIONS	LEFT/RIGHT WING STATIONS	32
STATIONS	VERTICAL STABILIZER/RUDDER STATIONS	23
ZONES	BODY ZONES - 100	8
ZONES	BODY ZONES - 200	8
ZONES	EMPENAGE ZONES - 300	15
ZONES	ENGINE/STRUT ZONES - 400	29
ZONES	FORWARD/SIDE VIEW MAJOR ZONES	3
ZONES	GEAR/GEAR DOOR ZONES - 700	47
ZONES	LEFT/RIGHT WING ZONES - 500/800	31
ZONES	PASSENGER/CARGO DOOR ZONES - 800	48



[Back to INDEX - ACCESS page 2](#)

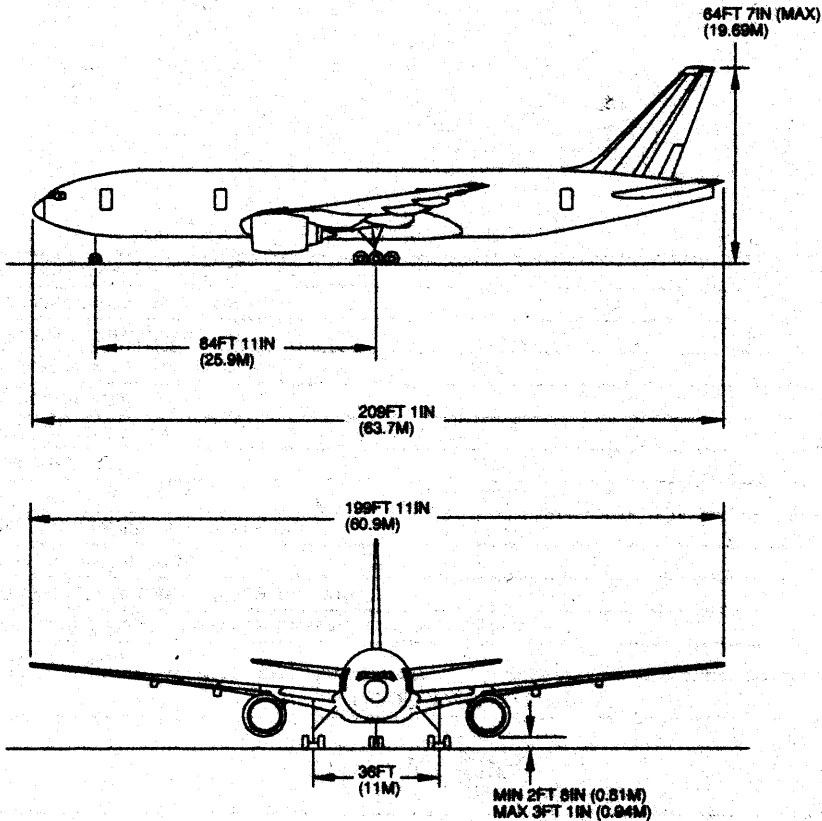

[Back to Access](#)



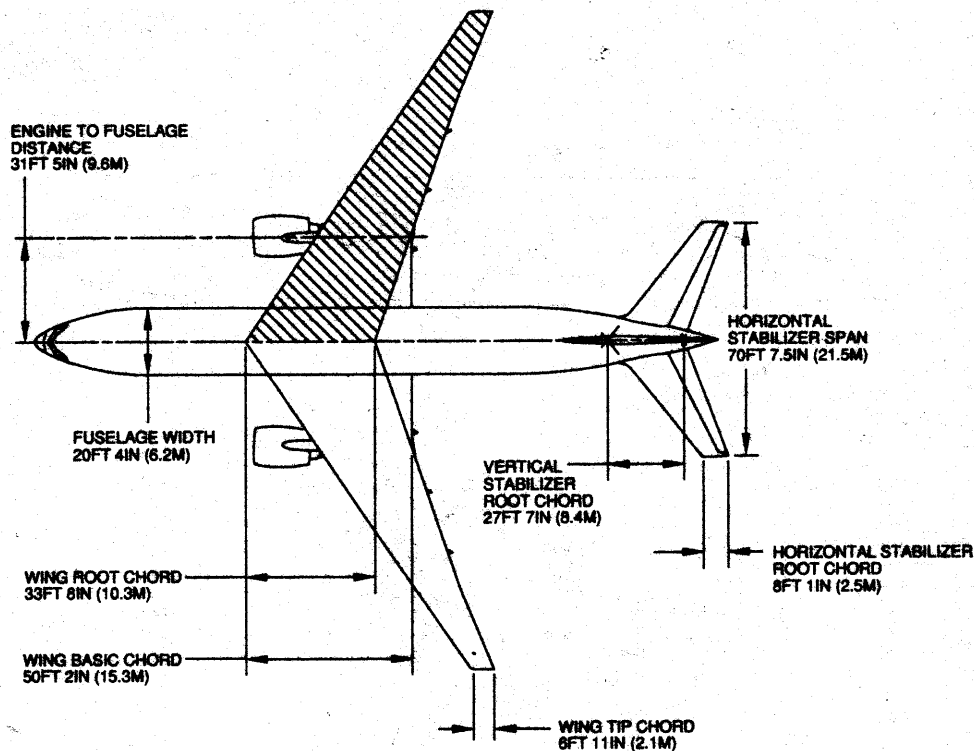





[Back to Access](#)


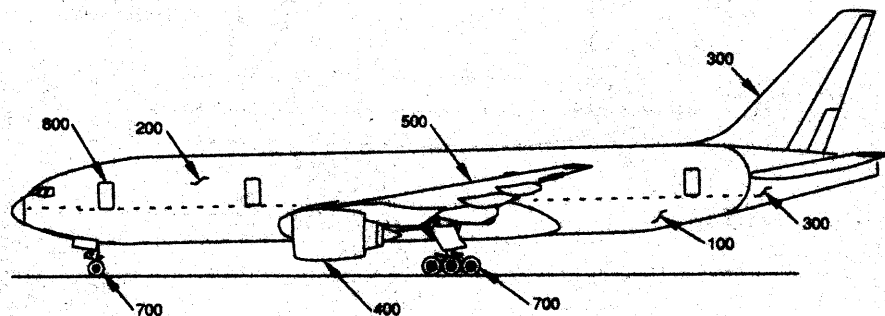
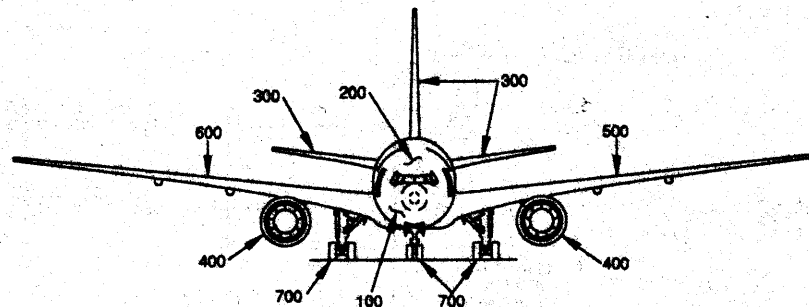





[Back to
Access](#)





NOTE: MAJOR ZONE 100 - LOWER HALF OF FUSELAGE
MAJOR ZONE 200 - UPPER HALF OF FUSELAGE
MAJOR ZONE 300 - EMPENNAGE AND BODY SECTION 48
MAJOR ZONE 400 - POWER PLANTS AND NACELLE STRUTS
MAJOR ZONE 500 - LEFT WING
MAJOR ZONE 600 - RIGHT WING
MAJOR ZONE 700 - LANDING GEAR AND LANDING GEAR DOORS
MAJOR ZONE 800 - PASSENGER AND CARGO COMPARTMENT DOORS

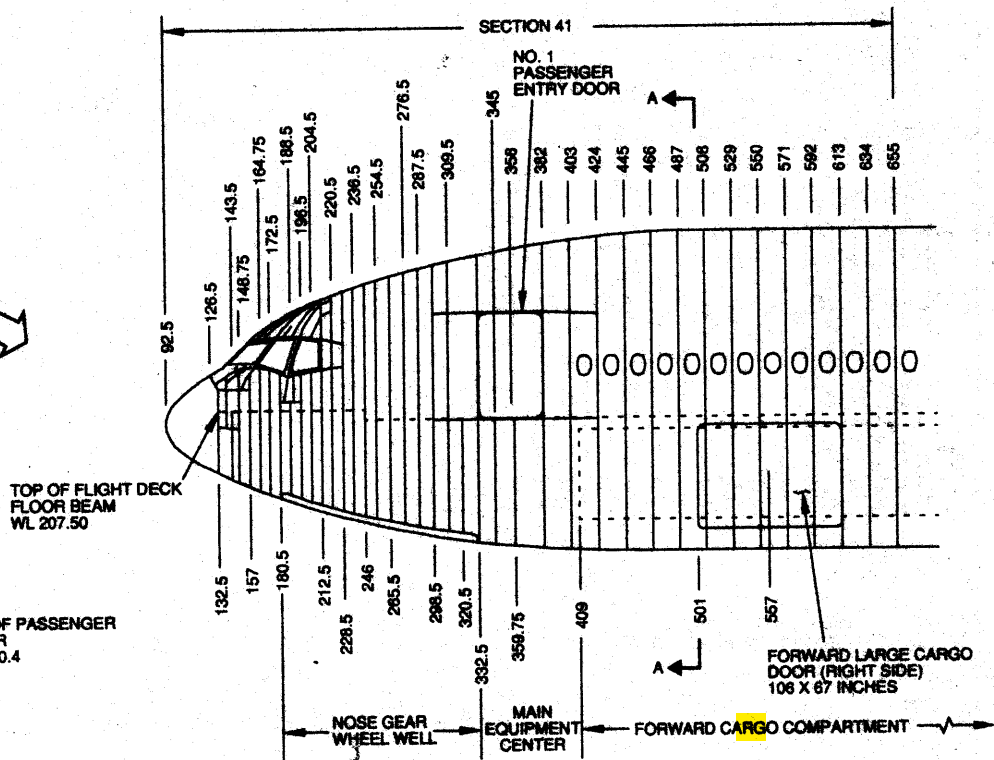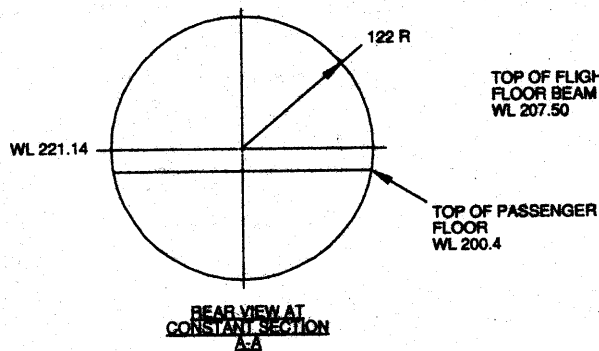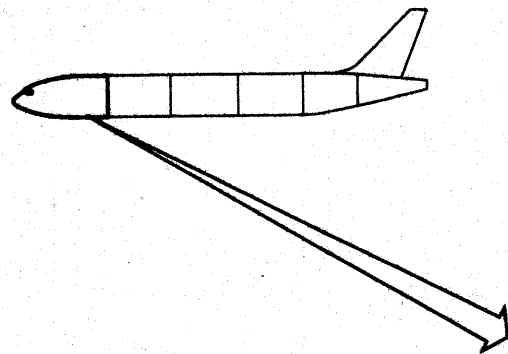

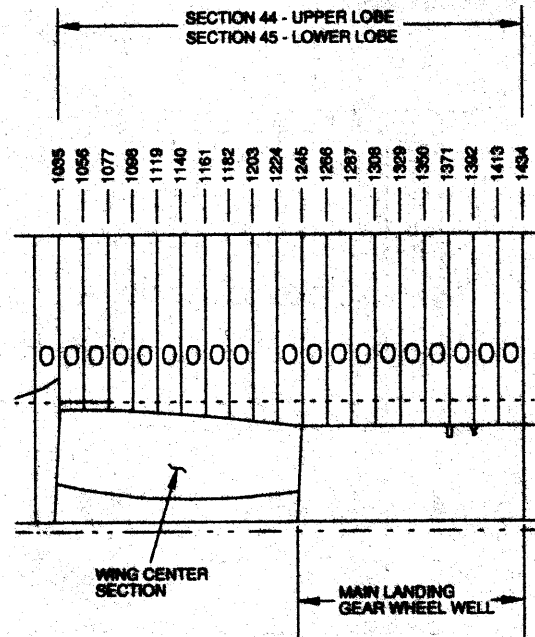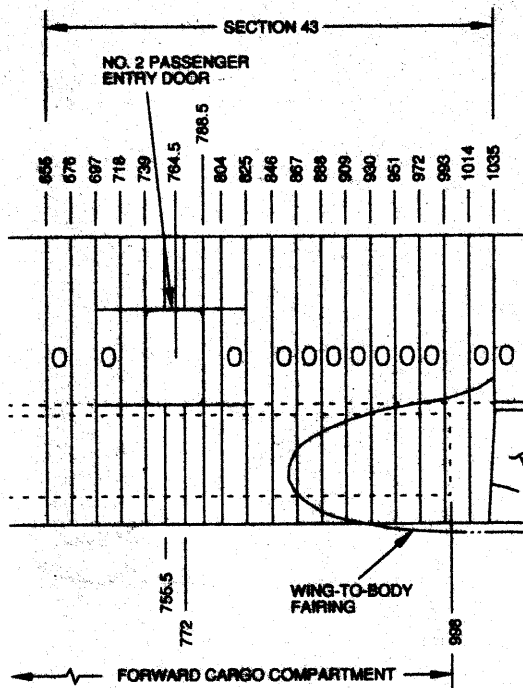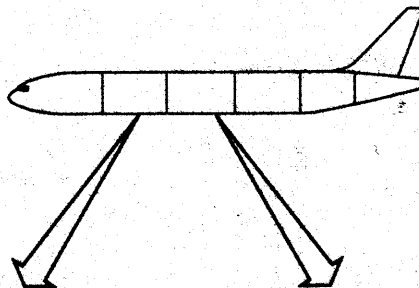

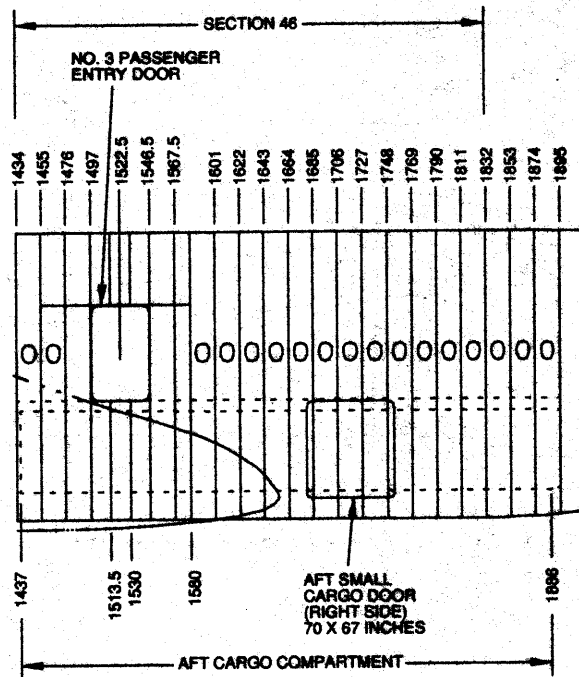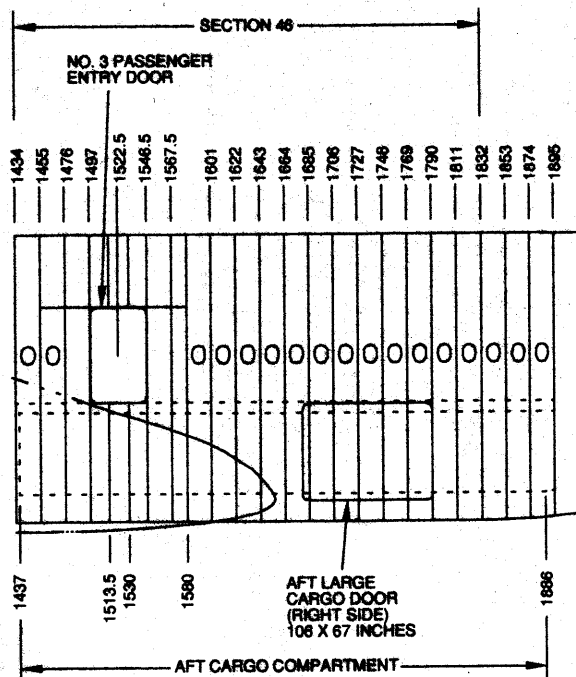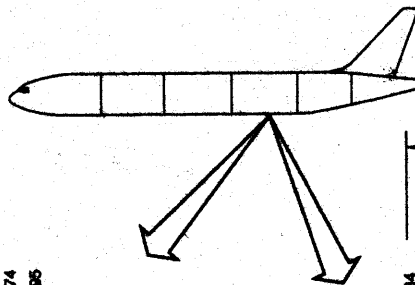

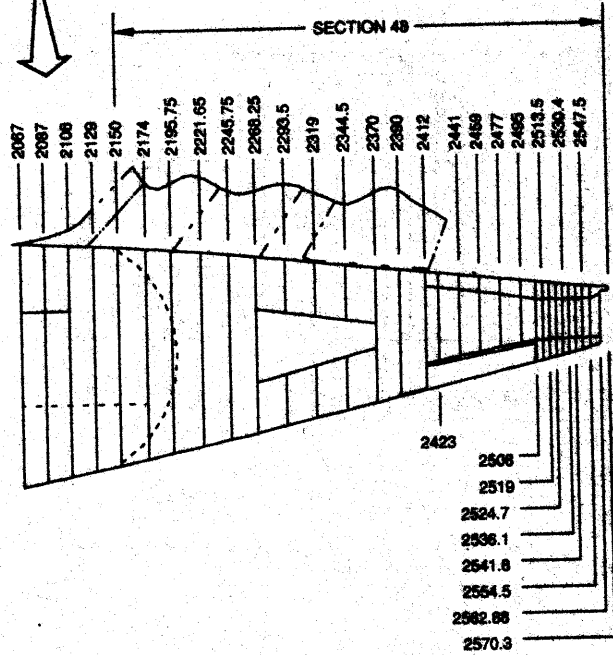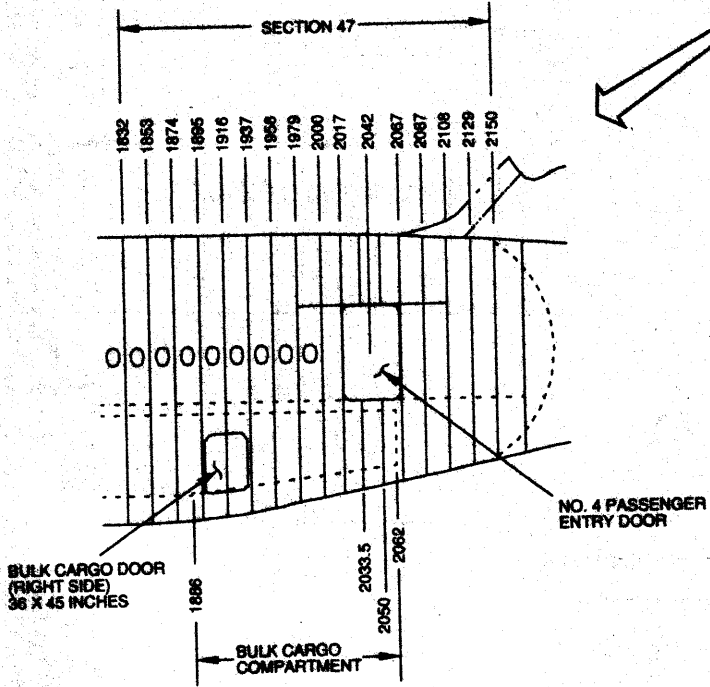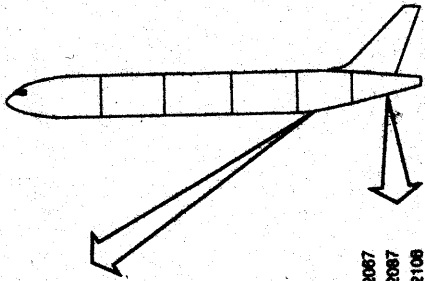

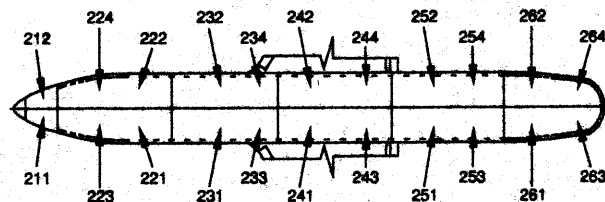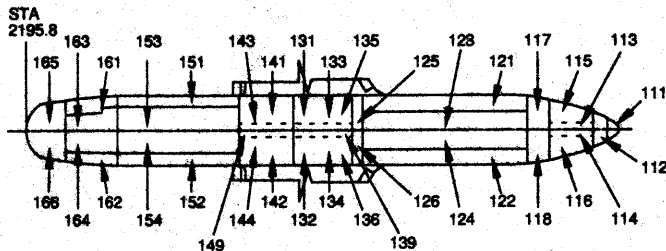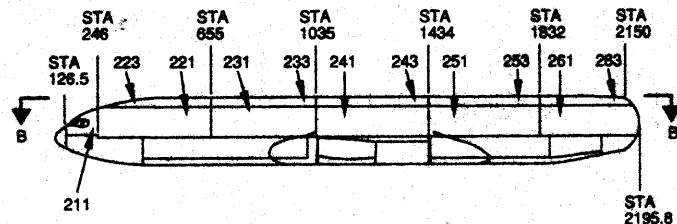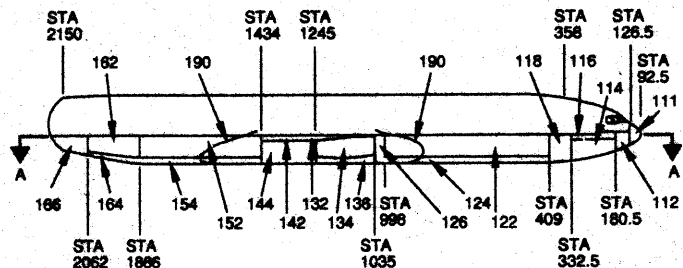

A-A


B-B


NOTE: SUBZONE 110 - NOSE AREA
 SUBZONE 120 - FORWARD CARGO COMPARTMENT
 SUBZONE 130 - WING CENTER SECTION
 SUBZONE 140 - MAIN LANDING GEAR WHEEL WELL
 SUBZONE 150 - AFT CARGO COMPARTMENT
 SUBZONE 160 - BULK CARGO COMPARTMENT
 SUBZONE 190 - WING-TO-BODY FAIRINGS




NOTE: SUBZONE 210 - FLIGHT COMPARTMENT
 SUBZONE 220 - SECTION 41
 SUBZONE 230 - SECTION 43
 SUBZONE 240 - SECTION 44
 SUBZONE 250 - SECTION 46
 SUBZONE 260 - SECTION 47


MAJOR ZONE 100 - LOWER HALF OF FUSELAGE

MAJOR ZONE 200 - UPPER HALF OF FUSELAGE

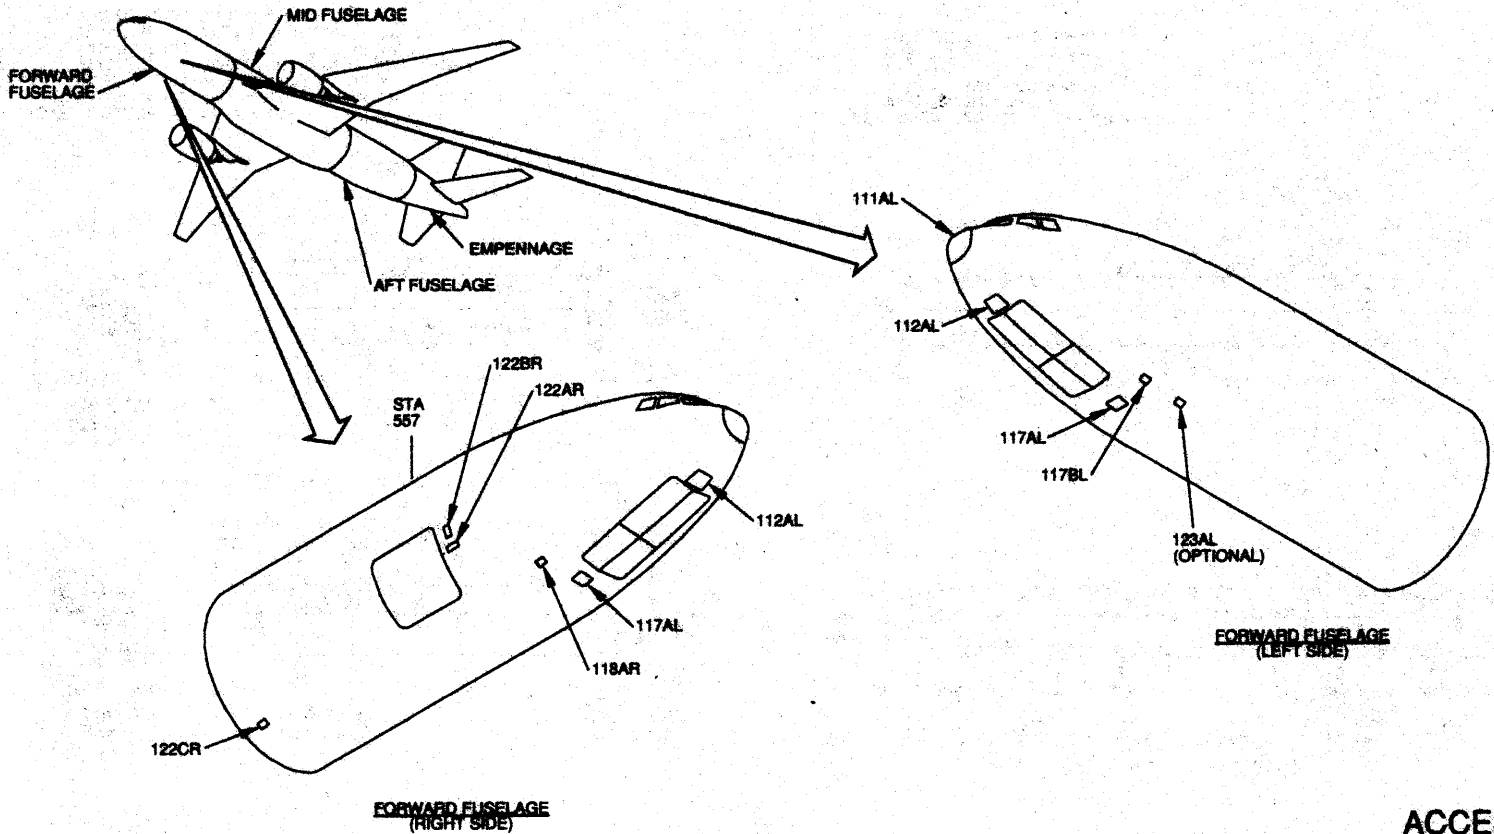


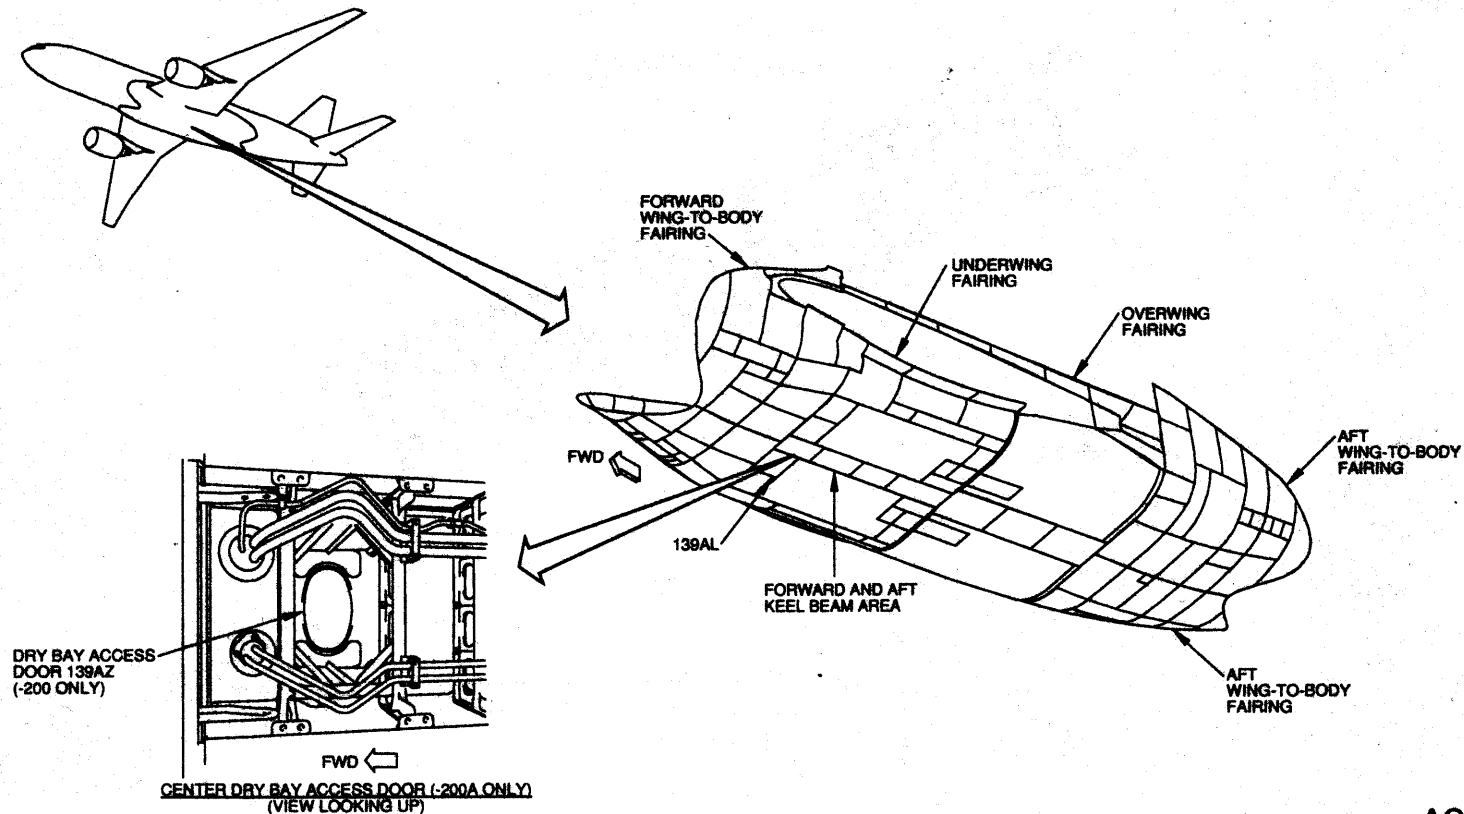

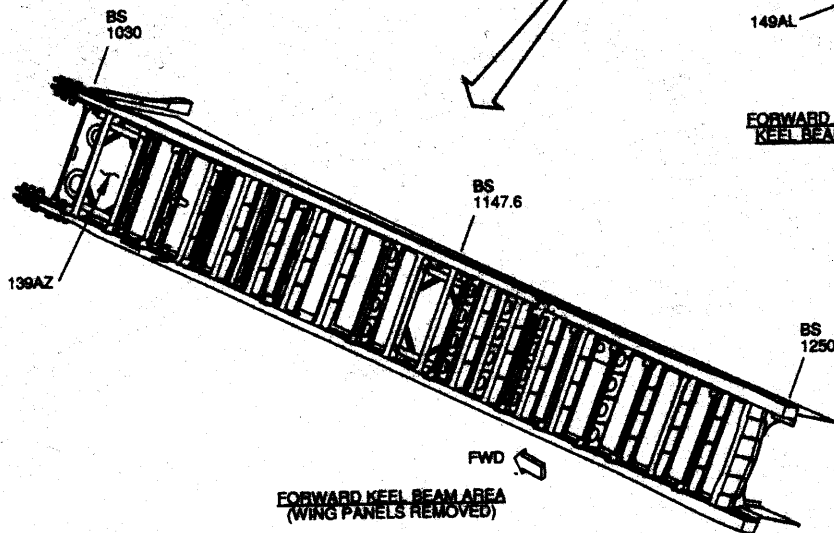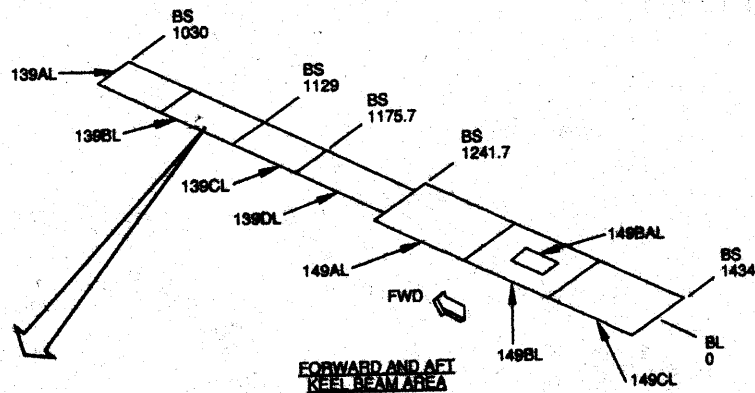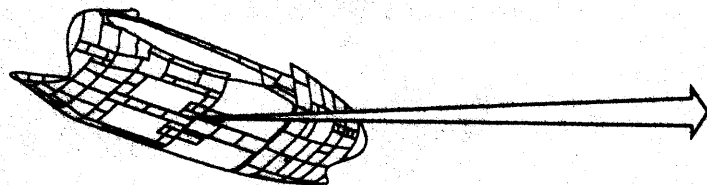


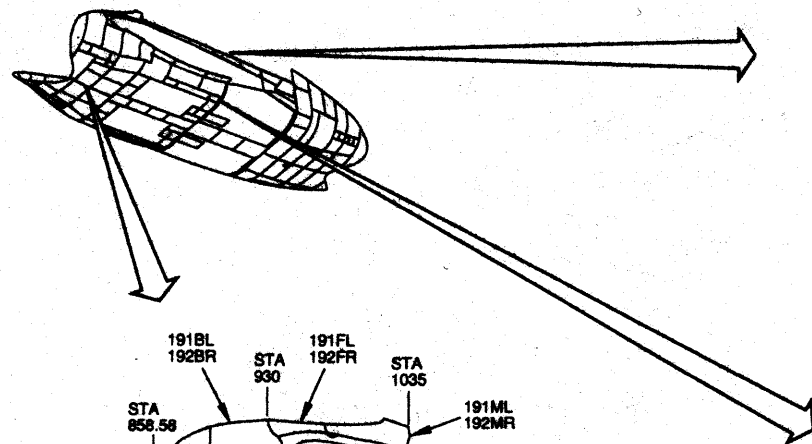


FORWARD WING-TO-BODY FAIRING

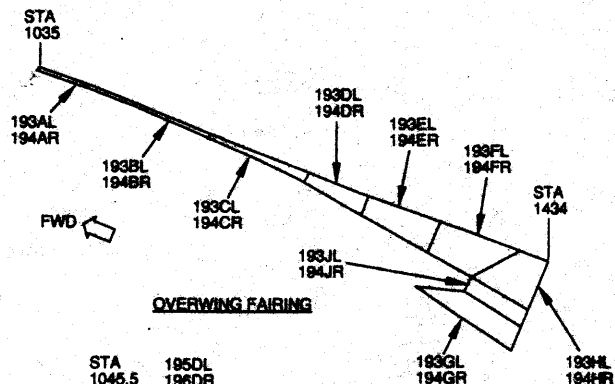

OVERWING FAIRING

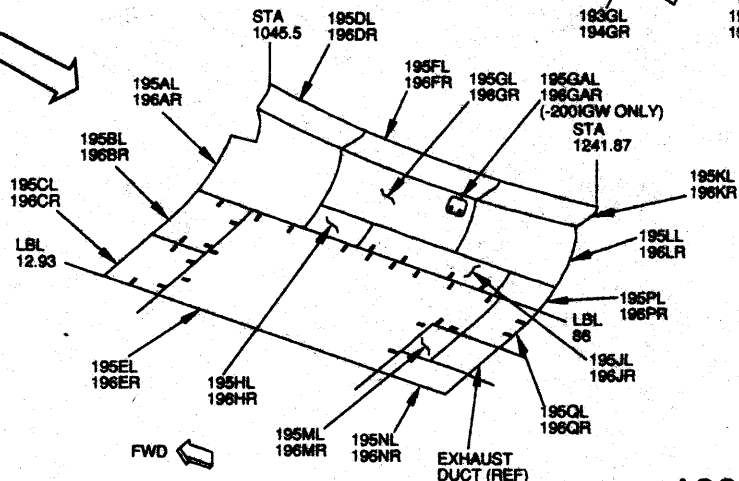

UNDERWING FAIRING




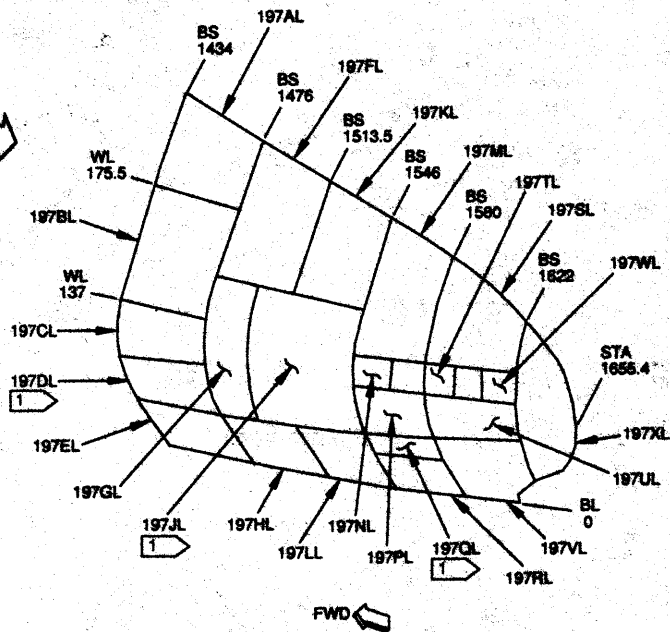




AFT WING-TO-BODY FAIRING
(LEFT SIDE)

1 HINGED AND LATCHED DOOR


AFT WING-TO-BODY FAIRING
(RIGHT SIDE)

ACCESS
Page 13

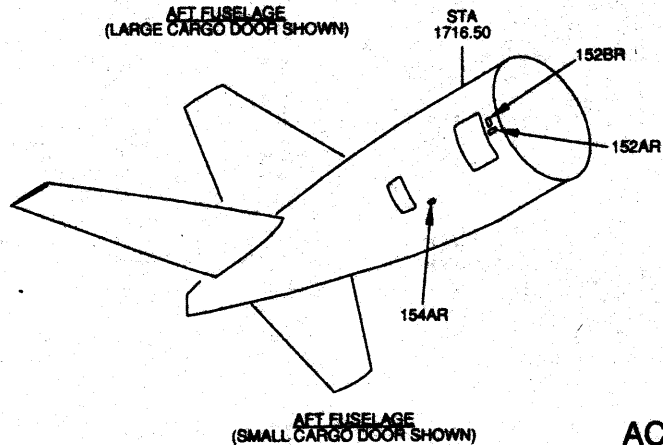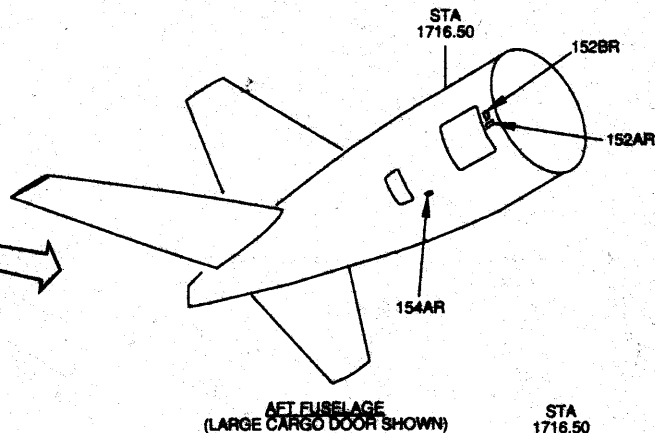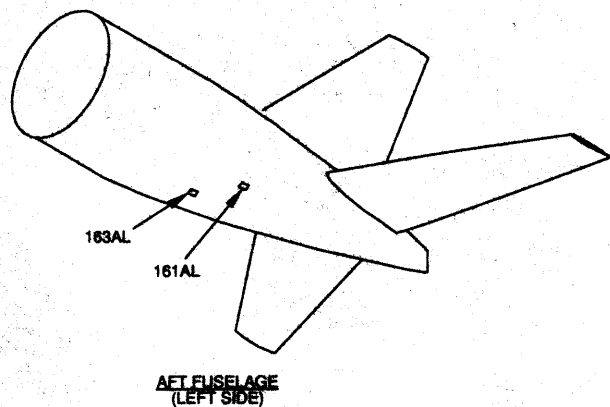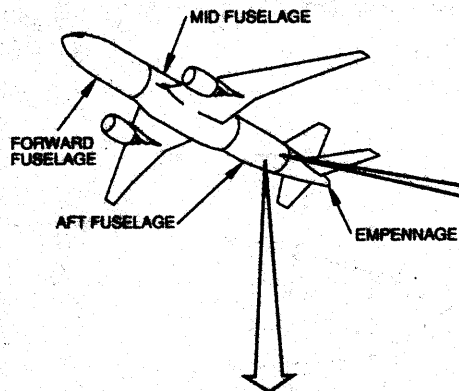


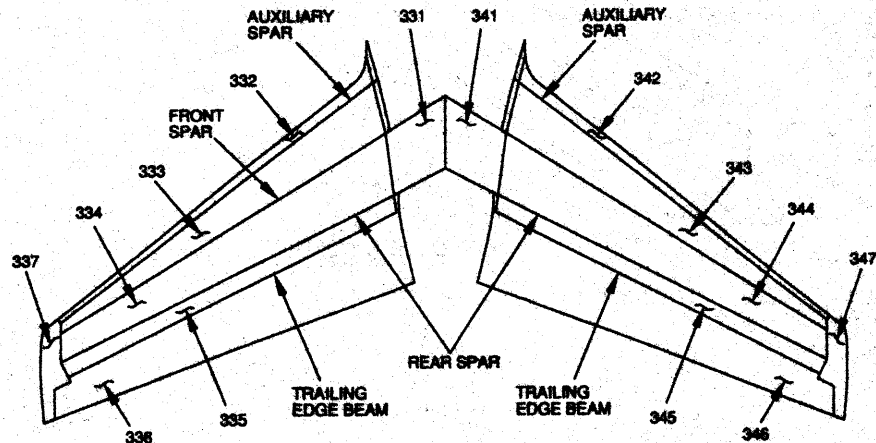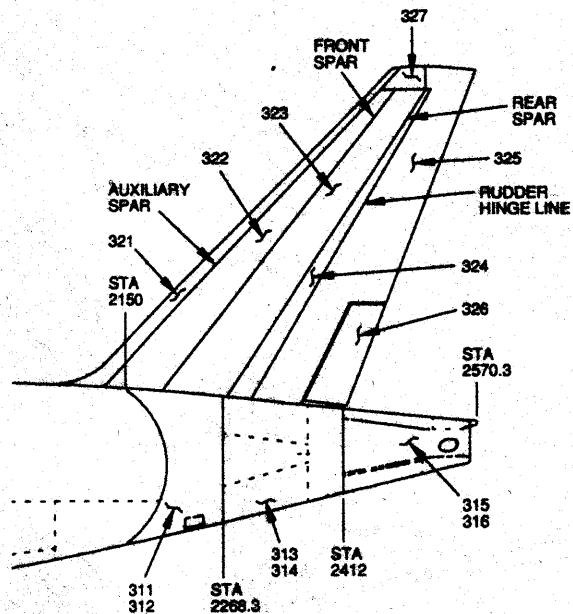



NOTE: SUBZONE 310 - SECTION 48
 SUBZONE 320 - VERTICAL STABILIZER AND RUDDER
 SUBZONE 330 - LEFT HORIZONTAL STABILIZER AND ELEVATOR
 SUBZONE 340 - RIGHT HORIZONTAL STABILIZER AND ELEVATOR

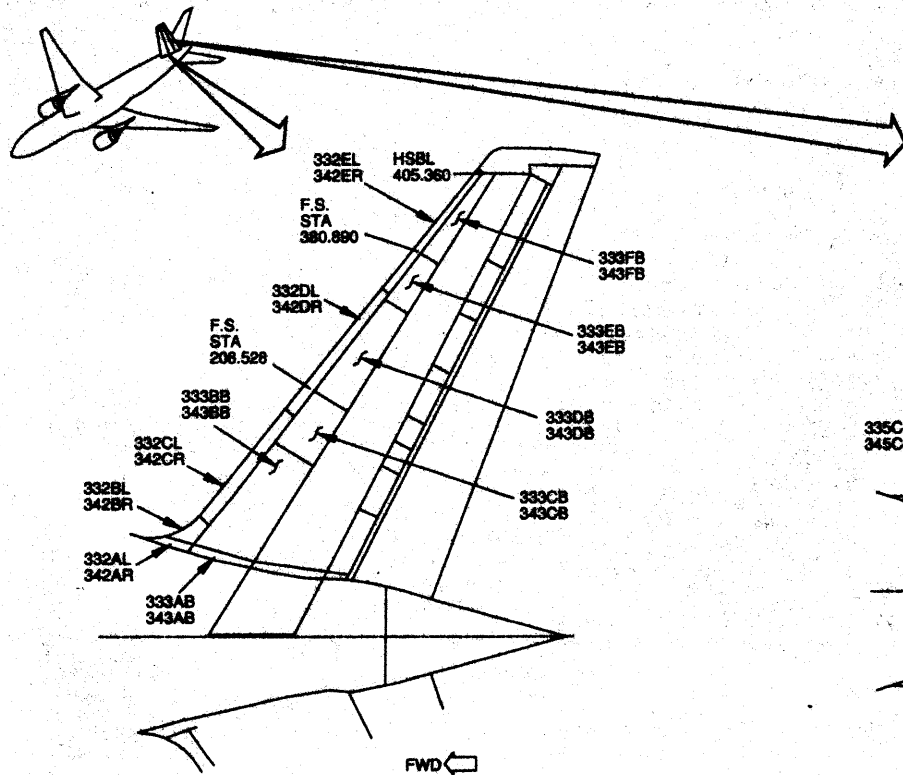

**HORIZONTAL STABILIZER LEADING EDGE
(BOTTOM VIEW)**

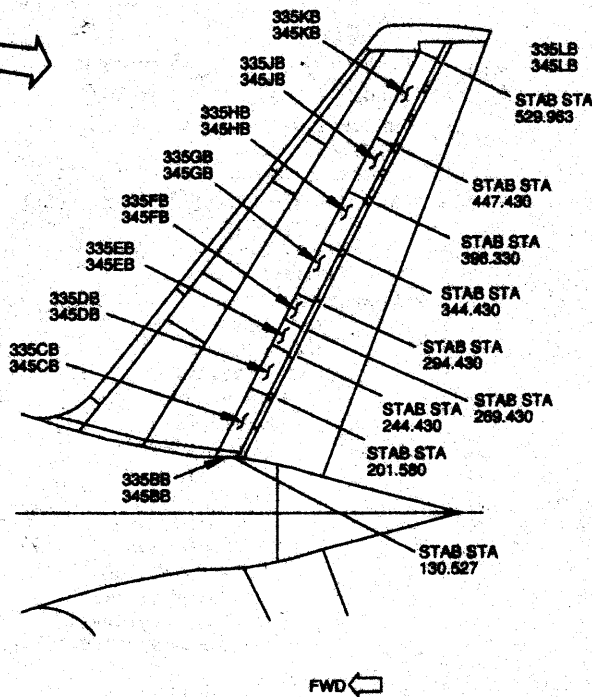


**HORIZONTAL STABILIZER TRAILING EDGE
(BOTTOM VIEW)**

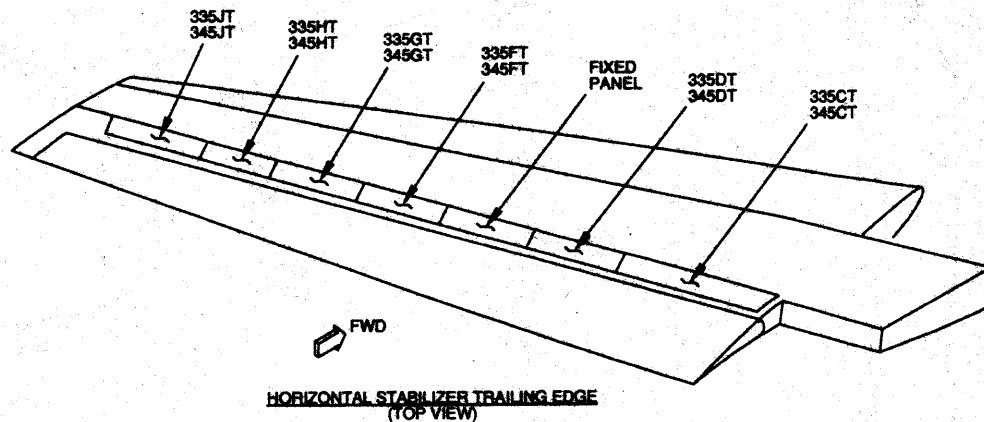
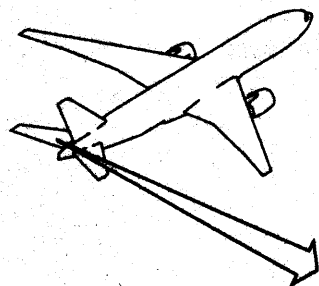




NOTE: SUBZONE 335 LEFT HORIZONTAL STABILIZER TRAILING EDGE.
SUBZONE 345 RIGHT HORIZONTAL STABILIZER TRAILING EDGE.
LEFT HORIZONTAL STABILIZER SHOWN, RIGHT HORIZONTAL
STABILIZER SIMILAR.

REMOVAL OF THESE PANELS ARE NOT RECOMMENDED FOR
NORMAL MAINTENANCE. PREFERRED ACCESS TO THIS AREA
IS THROUGH THE PANELS ON THE LOWER TRAILING EDGE
SURFACE OF THE HORIZONTAL STABILIZER.

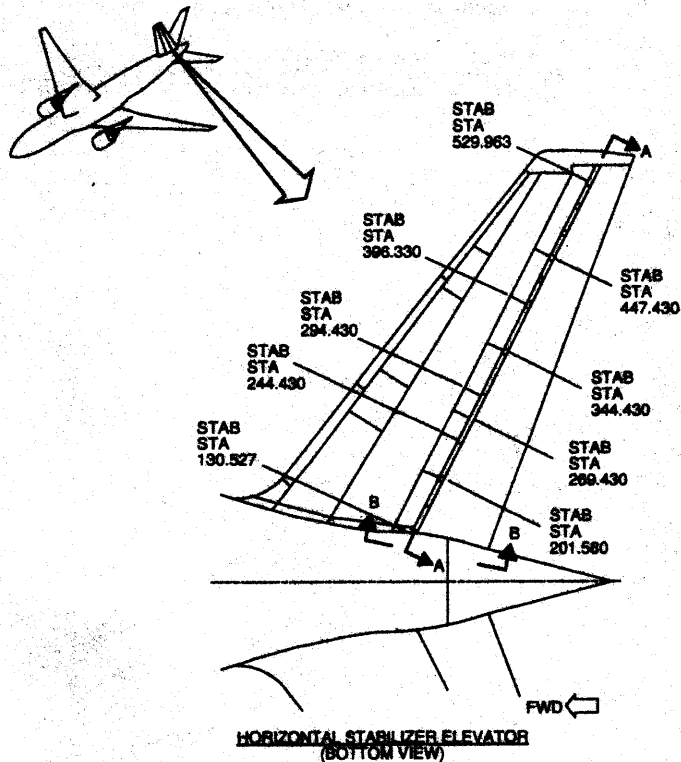


NOTE: SUBZONE 336 LEFT HORIZONTAL STABILIZER ELEVATOR.
SUBZONE 346 RIGHT HORIZONTAL STABILIZER ELEVATOR.
LEFT HORIZONTAL STABILIZER SHOWN, RIGHT HORIZONTAL STABILIZER SIMILAR.

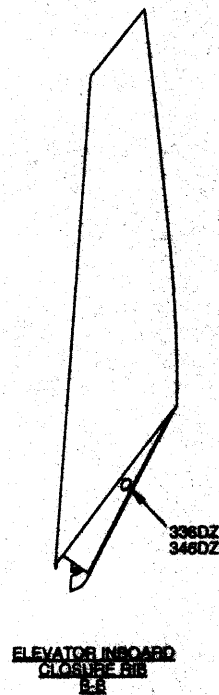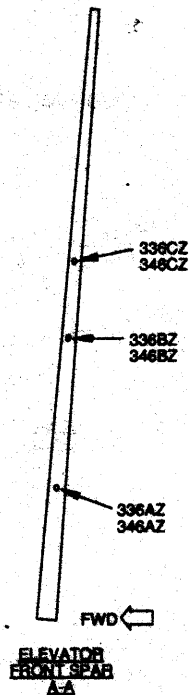


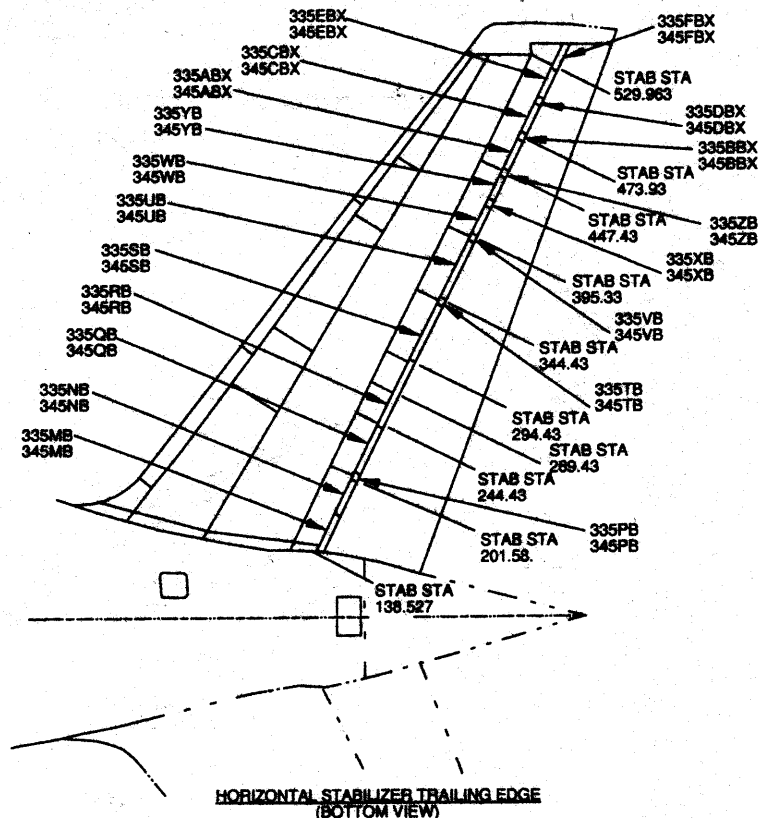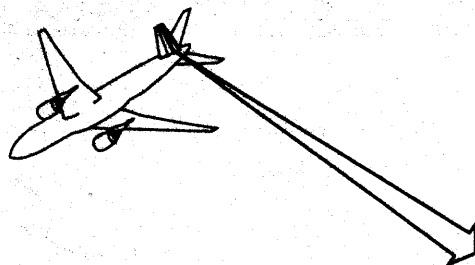

NOTE: SUBZONE 335 LEFT HORIZONTAL STABILIZER TRAILING EDGE SEALS.
 SUBZONE 345 RIGHT HORIZONTAL STABILIZER TRAILING EDGE SEALS.
 LEFT HORIZONTAL STABILIZER SHOWN, RIGHT HORIZONTAL STABILIZER SIMILAR.

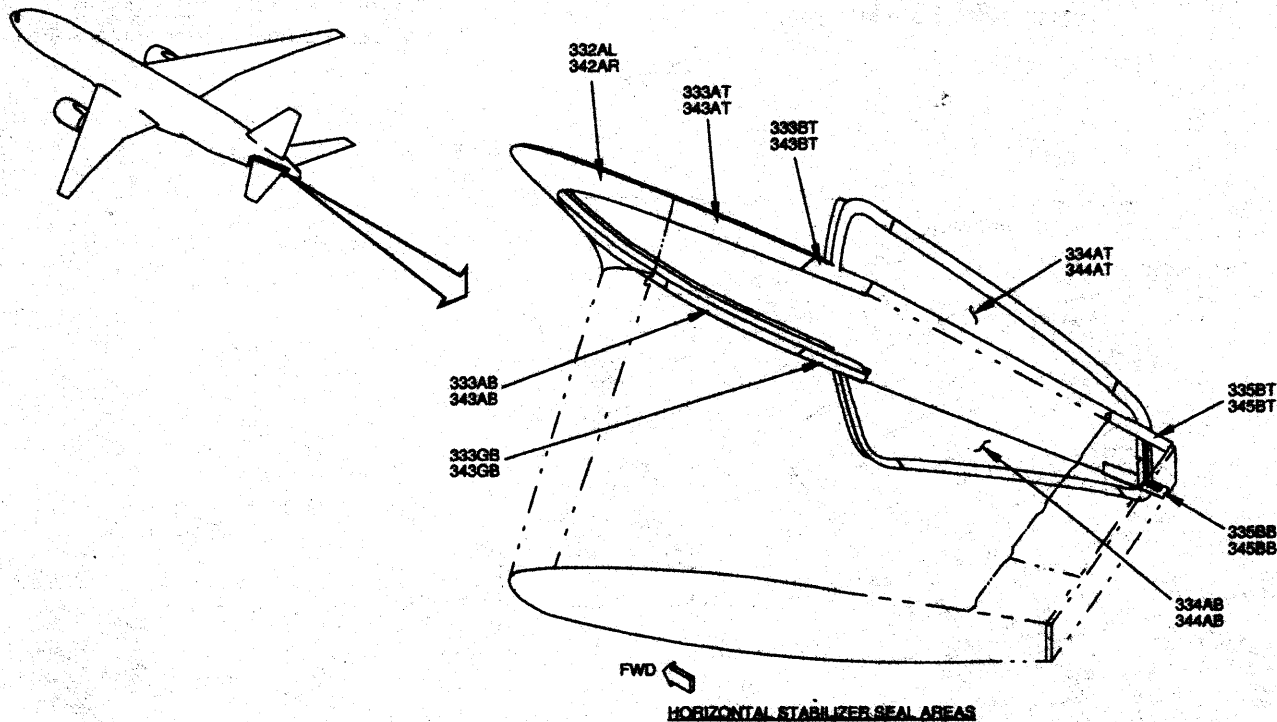

NOTE: SUBZONE 332, 333, 334, 335 LEFT HORIZONTAL STABILIZER SEAL AREAS.
 SUBZONE 342, 343, 344, 345 RIGHT HORIZONTAL STABILIZER SEAL AREAS.
 LEFT HORIZONTAL STABILIZER SHOWN, RIGHT HORIZONTAL STABILIZER SIMILAR.

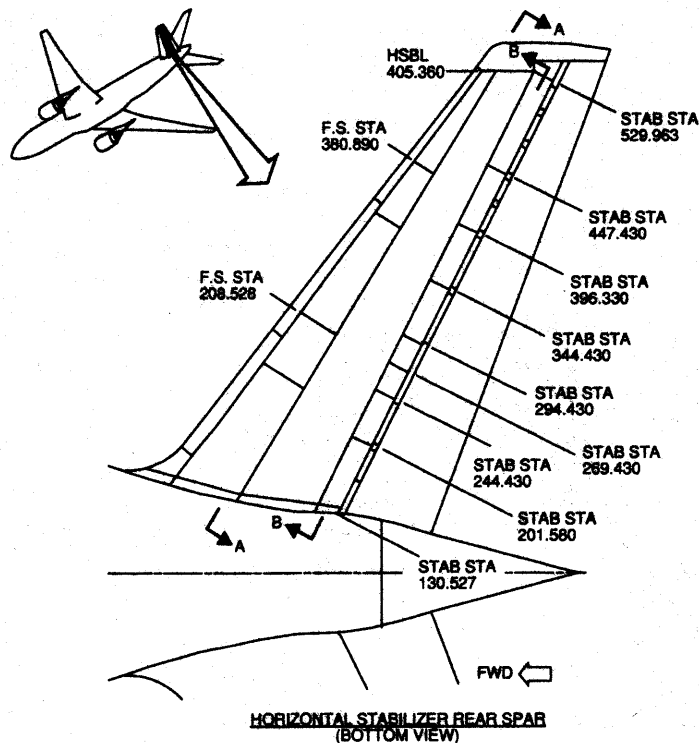

**HORIZONTAL STABILIZER REAR SPAR
(BOTTOM VIEW)**

NOTE: SUBZONES 331, 333 LEFT HORIZONTAL STABILIZER FRONT SPAR.
SUBZONES 331, 335 LEFT HORIZONTAL STABILIZER REAR SPAR.
SUBZONES 341, 343 RIGHT HORIZONTAL STABILIZER FRONT SPAR.
SUBZONES 341, 345 RIGHT HORIZONTAL STABILIZER REAR SPAR.
LEFT HORIZONTAL STABILIZER SHOWN, RIGHT HORIZONTAL STABILIZER SIMILAR.

333AFZ	333AGZ
343AFZ	343AGZ
333ADZ	333AEZ
343ADZ	343AEZ
333ABZ	333ACZ
343ABZ	343ACZ
333ZZ	333AAZ
343ZZ	343AAZ
333XZ	333VZ
343XZ	343VZ
333VZ	333WZ
343VZ	343WZ
333TZ	333UZ
343TZ	343UZ
333RZ	333SZ
343RZ	343SZ
333PZ	333QZ
343PZ	343QZ
333MZ	333NZ
343MZ	343NZ
333KZ	333LZ
343KZ	343LZ
333HZ	333JZ
343HZ	343JZ
333FZ	333GZ
343FZ	343GZ
333DZ	333EZ
343DZ	343EZ
333BZ	333CZ
343BZ	343CZ
331EZ	333AZ
341EZ	343AZ
331CZ	331DZ
341CZ	341DZ
331AZ	331BZ
341AZ	341BZ


FRONT SPAR
A-A


OUTBD
UP

335AAZ	336ZZ
345AAZ	345ZZ
335YZ	335XZ
345YZ	345XZ
335WZ	335VZ
345WZ	345VZ
335UZ	335TZ
345UZ	345TZ
335SZ	335RZ
345SZ	345RZ
335QZ	335PZ
345QZ	345PZ
335NZ	335MZ
345NZ	345MZ
335LZ	335KZ
345LZ	345KZ
335JZ	335HZ
345JZ	345HZ
335GZ	335FZ
345GZ	345FZ
335EZ	335DZ
345EZ	345DZ
335CZ	335BZ
345CZ	345BZ
335AZ	331GZ
345AZ	341GZ
	331FZ
	341FZ


REAR SPAR
B-B

OUTBD
UP

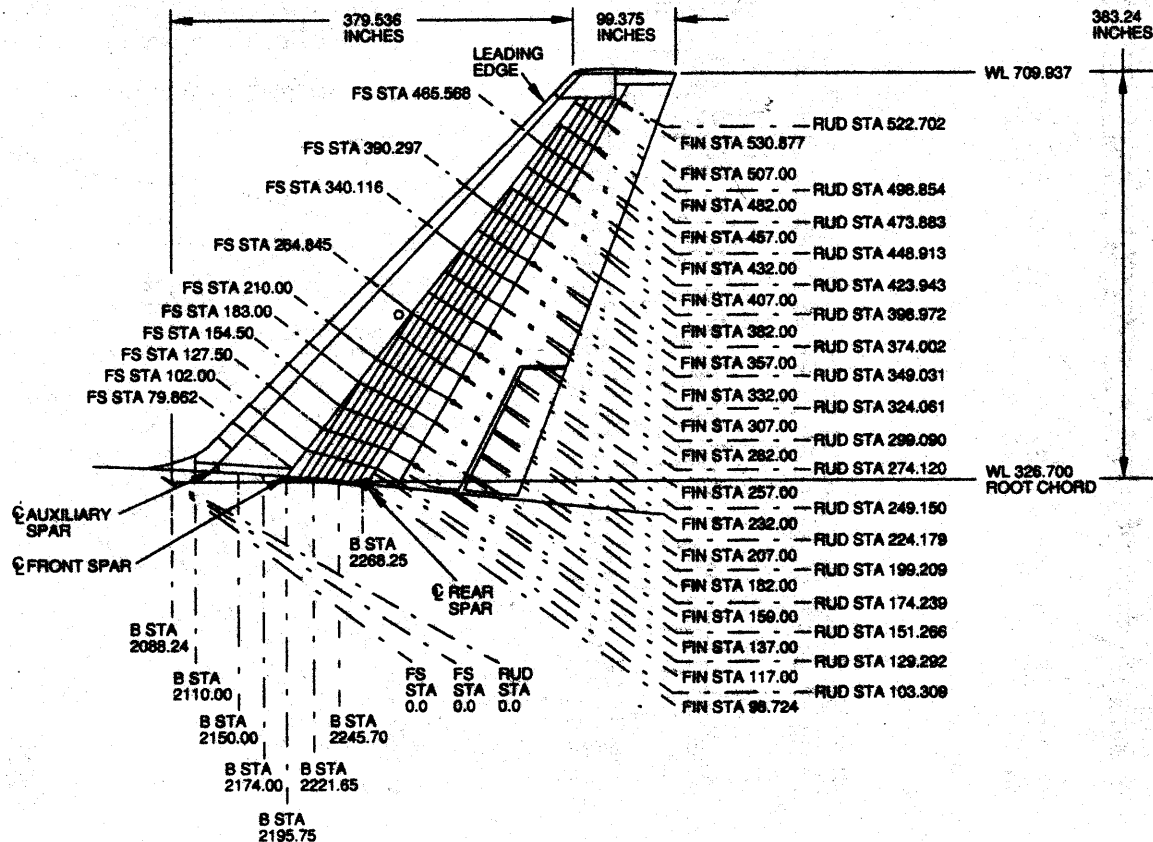


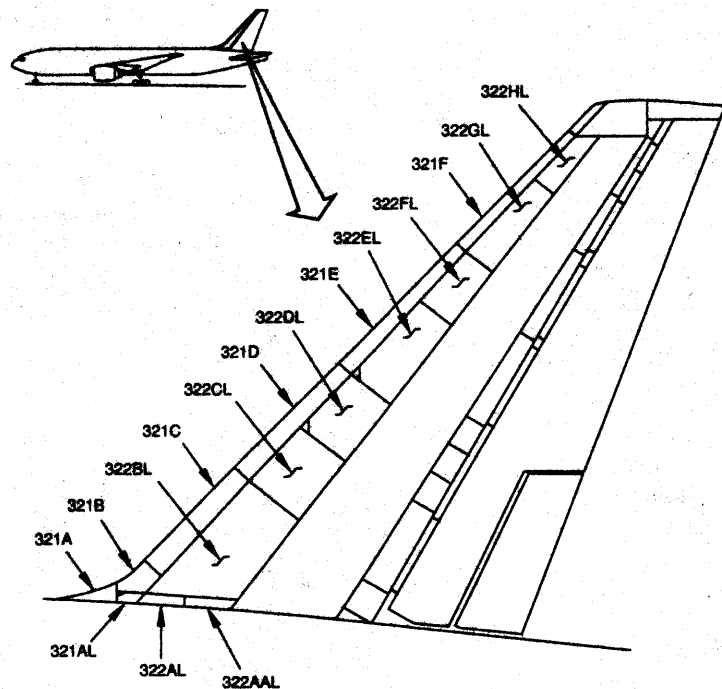


**VERTICAL STABILIZER - LEADING EDGE
AND AUXILIARY SPAR TO FRONT SPAR
(LEFT SIDE)**

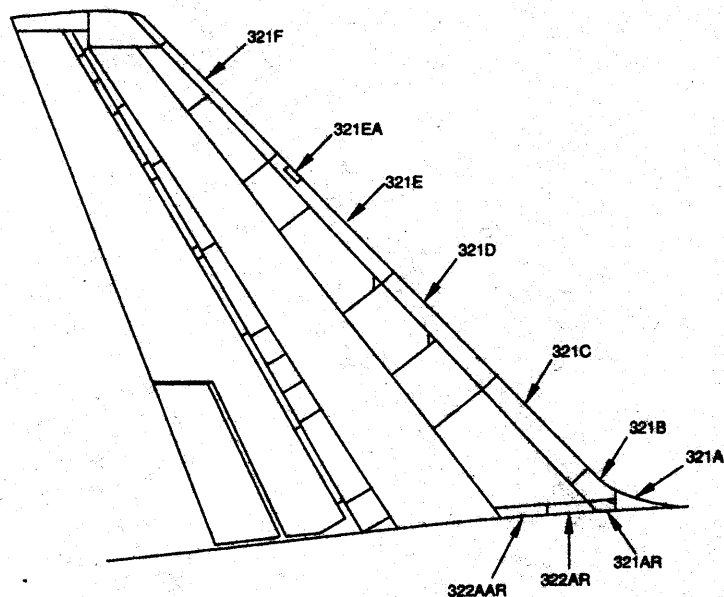


**VERTICAL STABILIZER - LEADING EDGE
AND AUXILIARY SPAR TO FRONT SPAR
(RIGHT SIDE)**

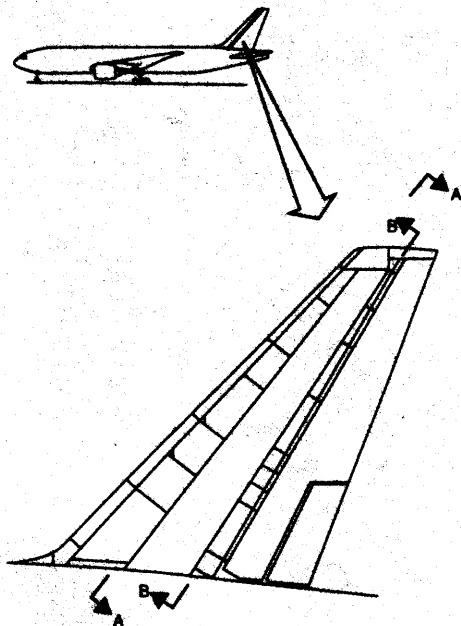


VERTICAL STABILIZER


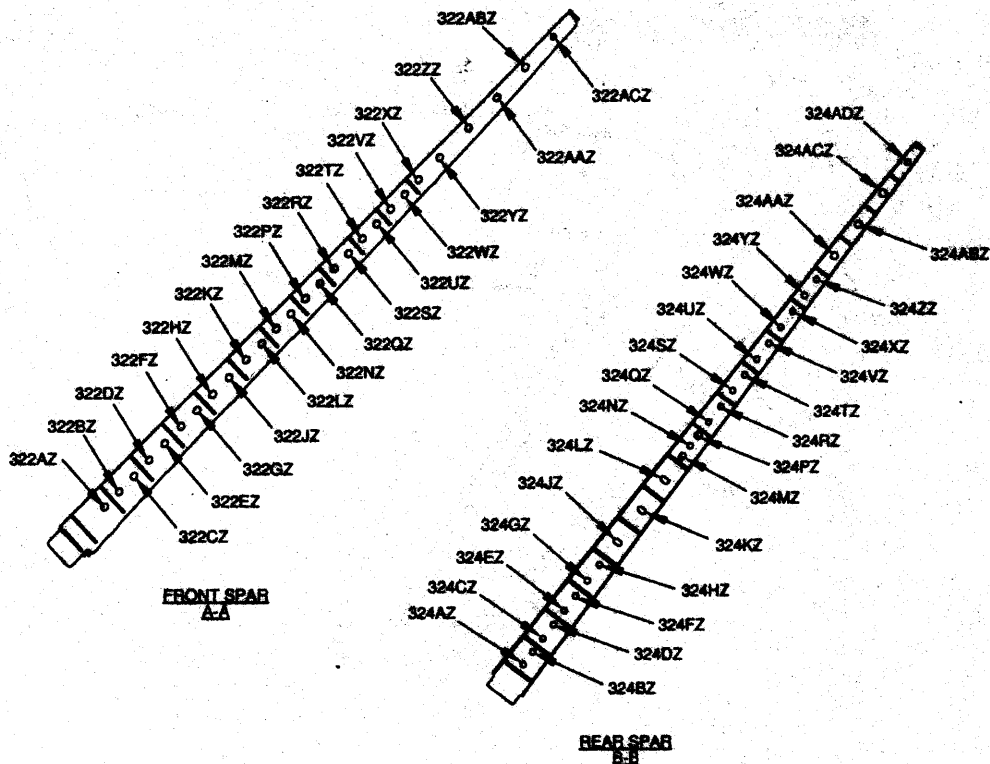



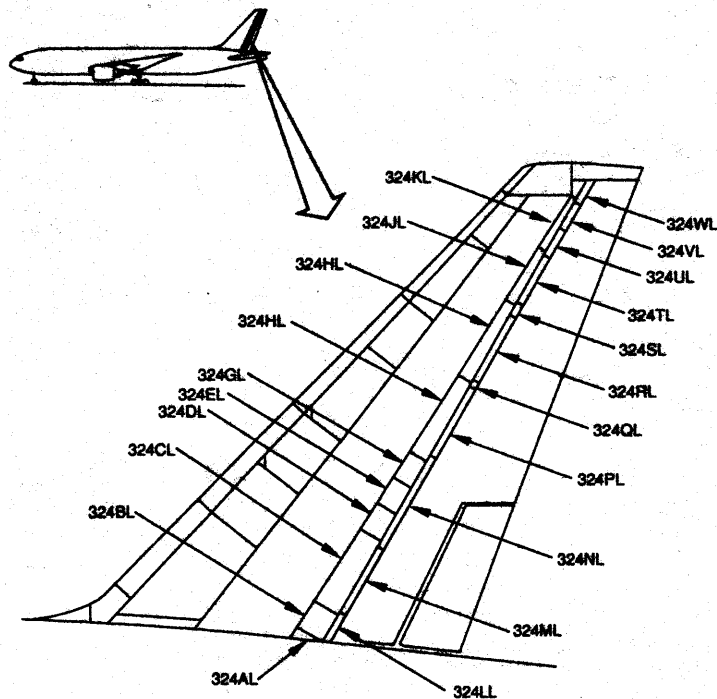


**VERTICAL STABILIZER - REAR SPAR TO TRAILING EDGE
(LEFT SIDE)**

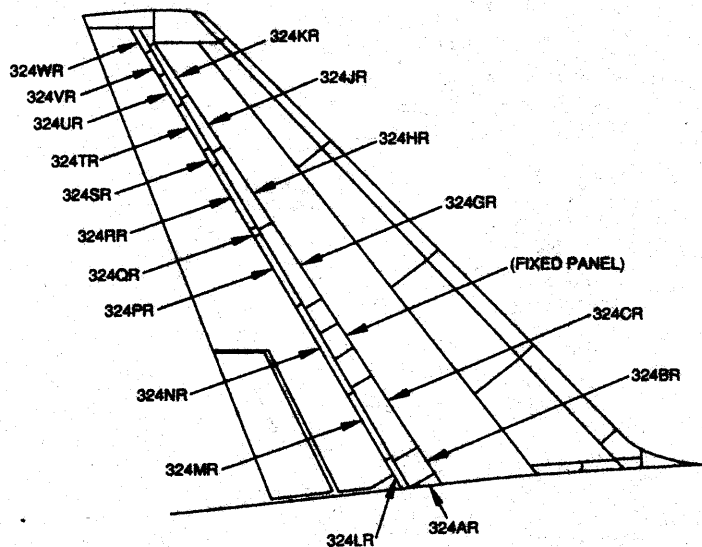


**VERTICAL STABILIZER - REAR SPAR TO TRAILING EDGE
(RIGHT SIDE)**

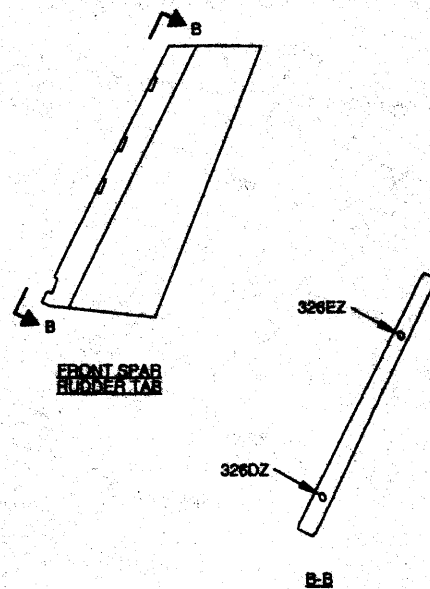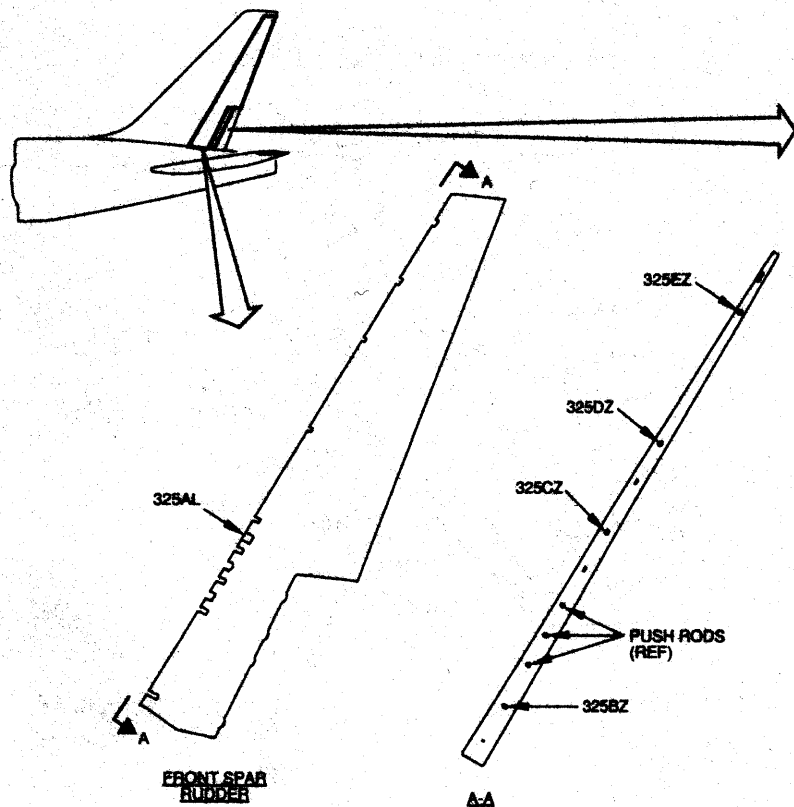


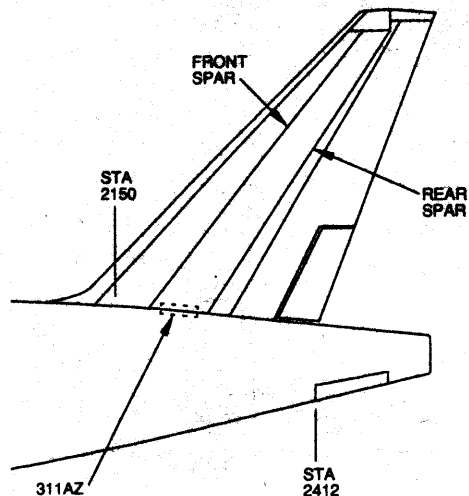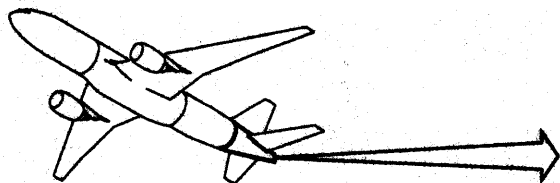







A-A

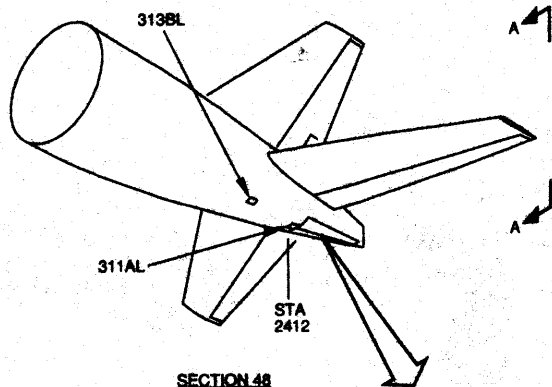


SECTION 48

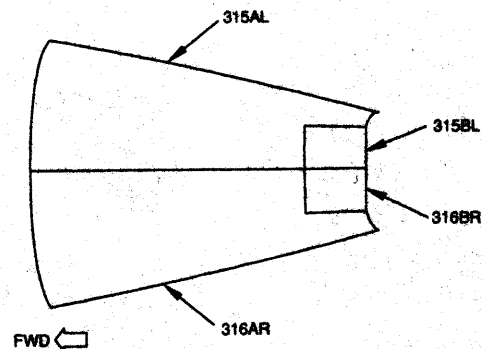


APU DOORS
(BOTTOM VIEW)

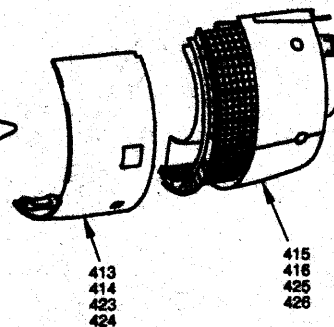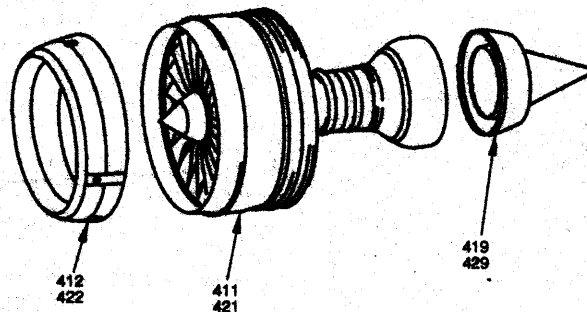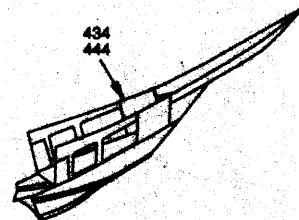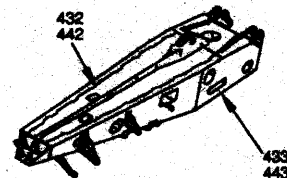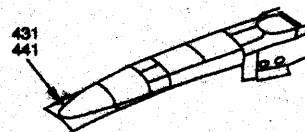
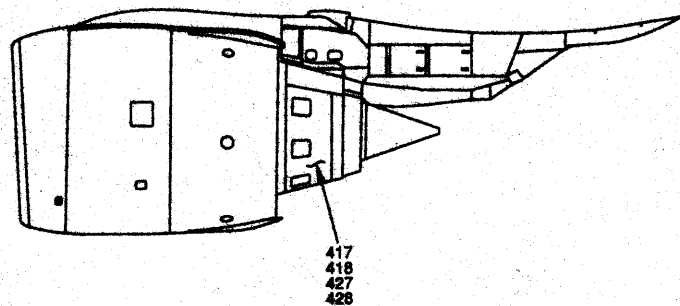


NOTE: SUBZONE 410 - LEFT POWER PLANT
SUBZONE 420 - RIGHT POWER PLANT
SUBZONE 430 - LEFT NACELLE STRUT
SUBZONE 440 - RIGHT NACELLE STRUT



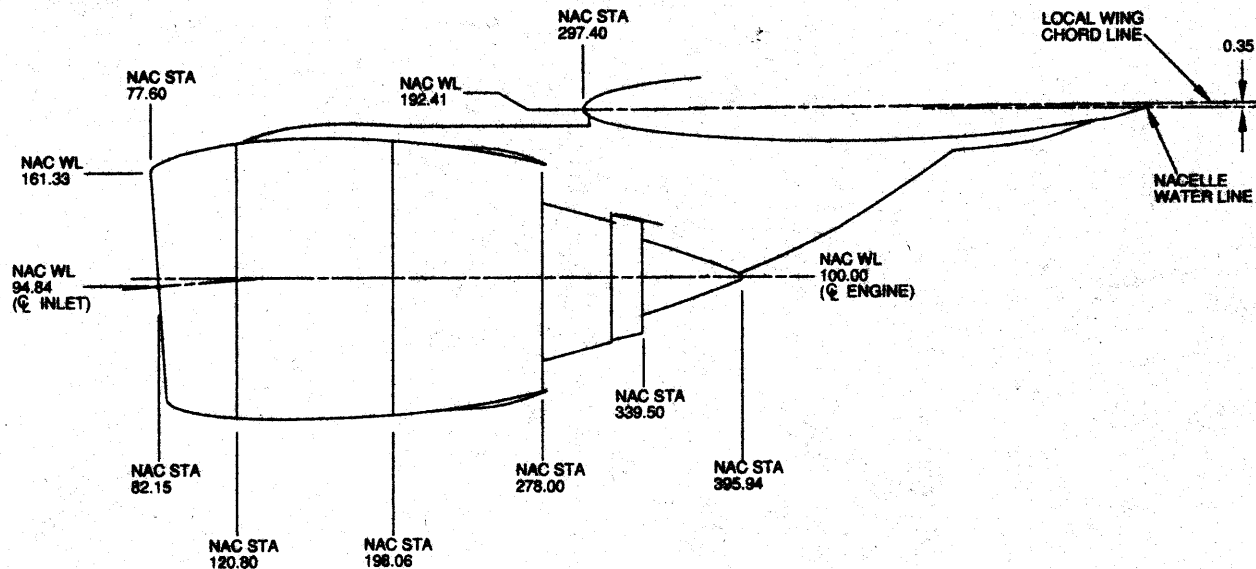


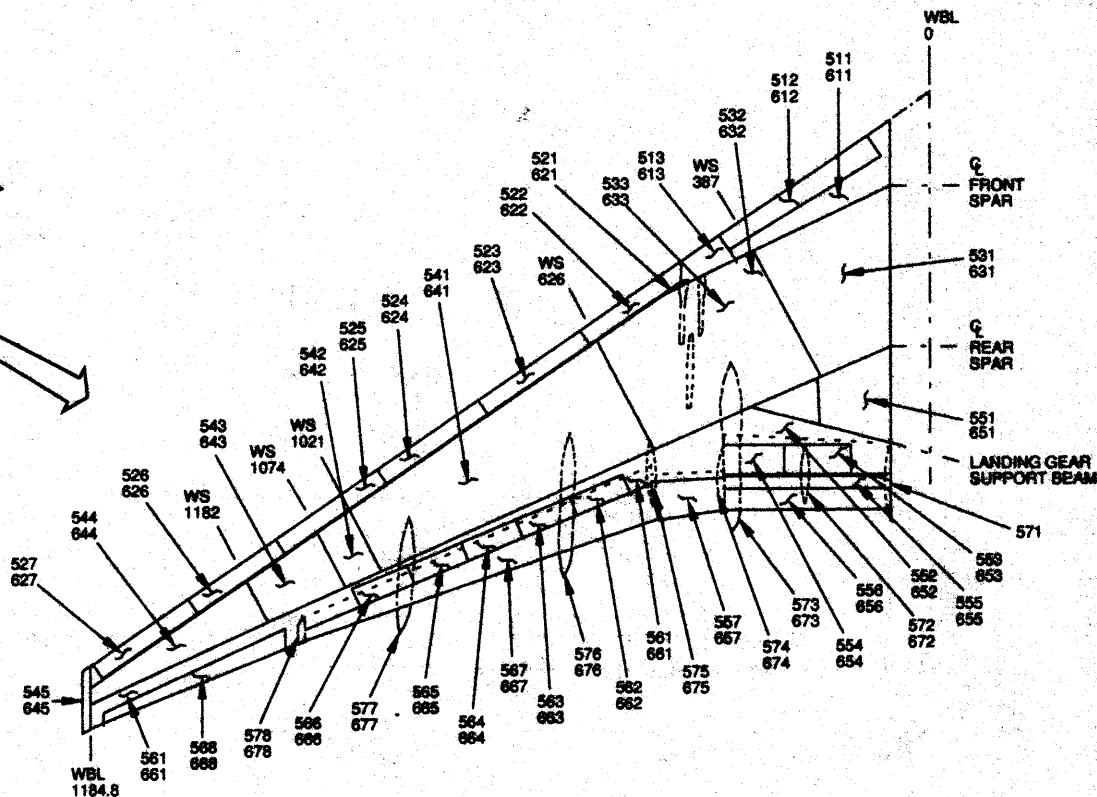


ACCESS
Page 31

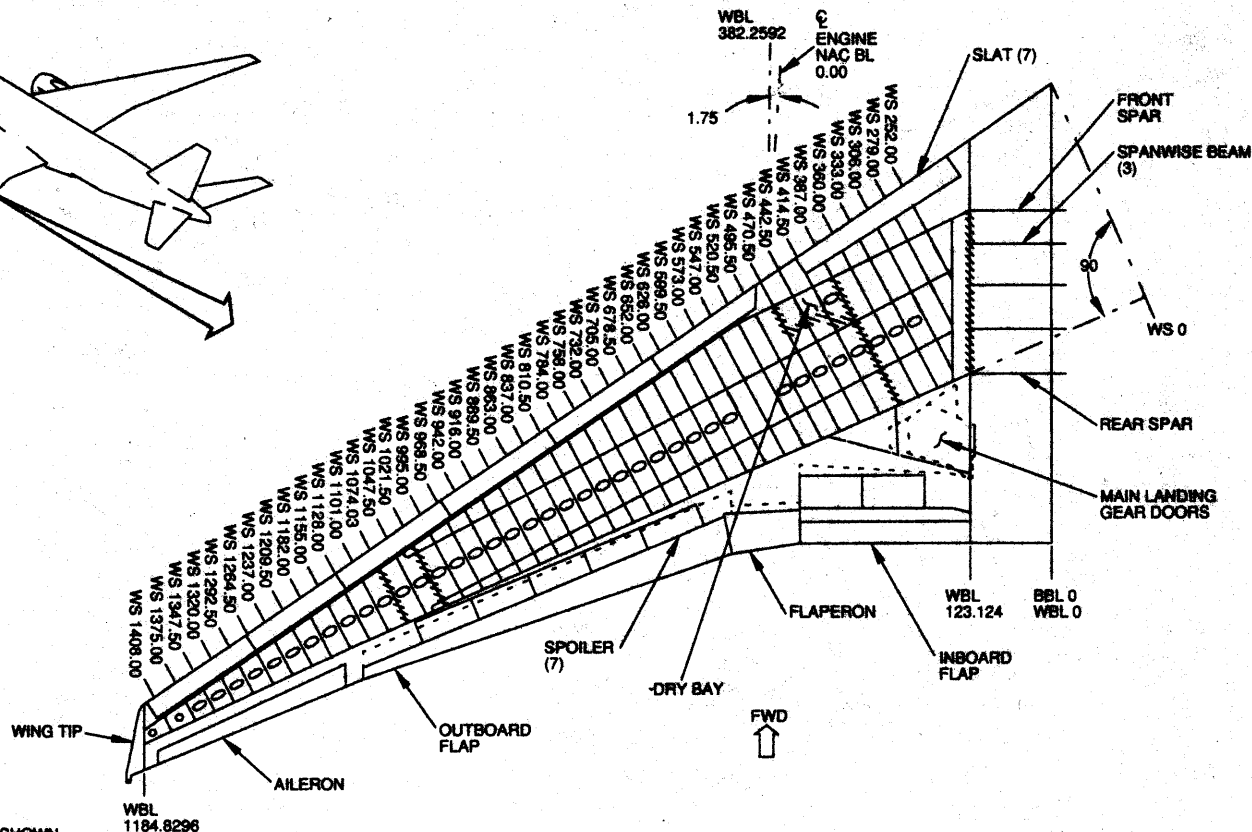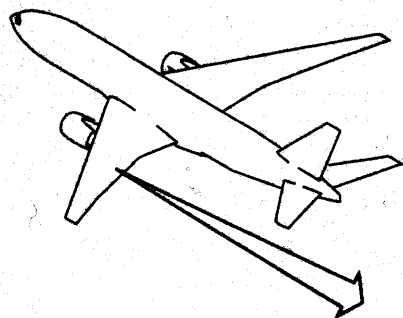


NOTE: LEFT WING SHOWN,
RIGHT WING SIMILAR.



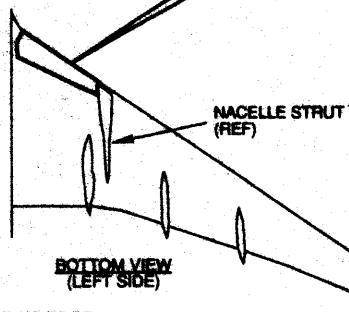
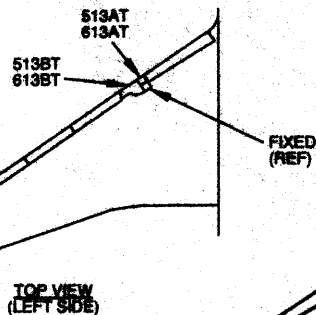
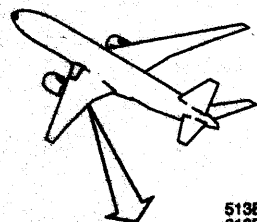


**NOTE: SUBZONES 510 - LEFT WING LEADING EDGE.
SUBZONES 610 - RIGHT WING LEADING EDGE.
LEFT WING SHOWN, RIGHT WING SIMILAR.**


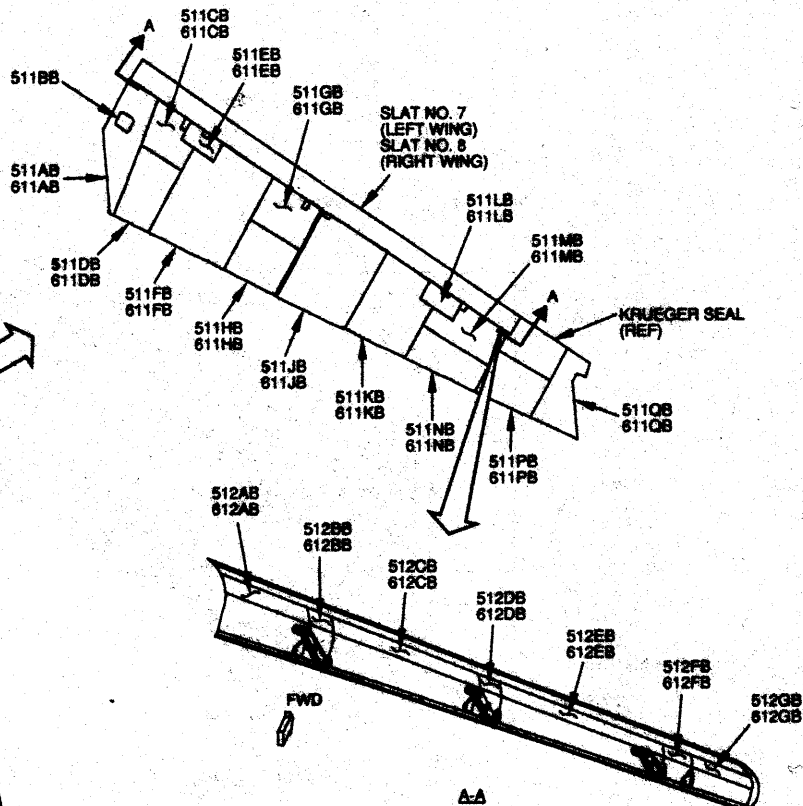


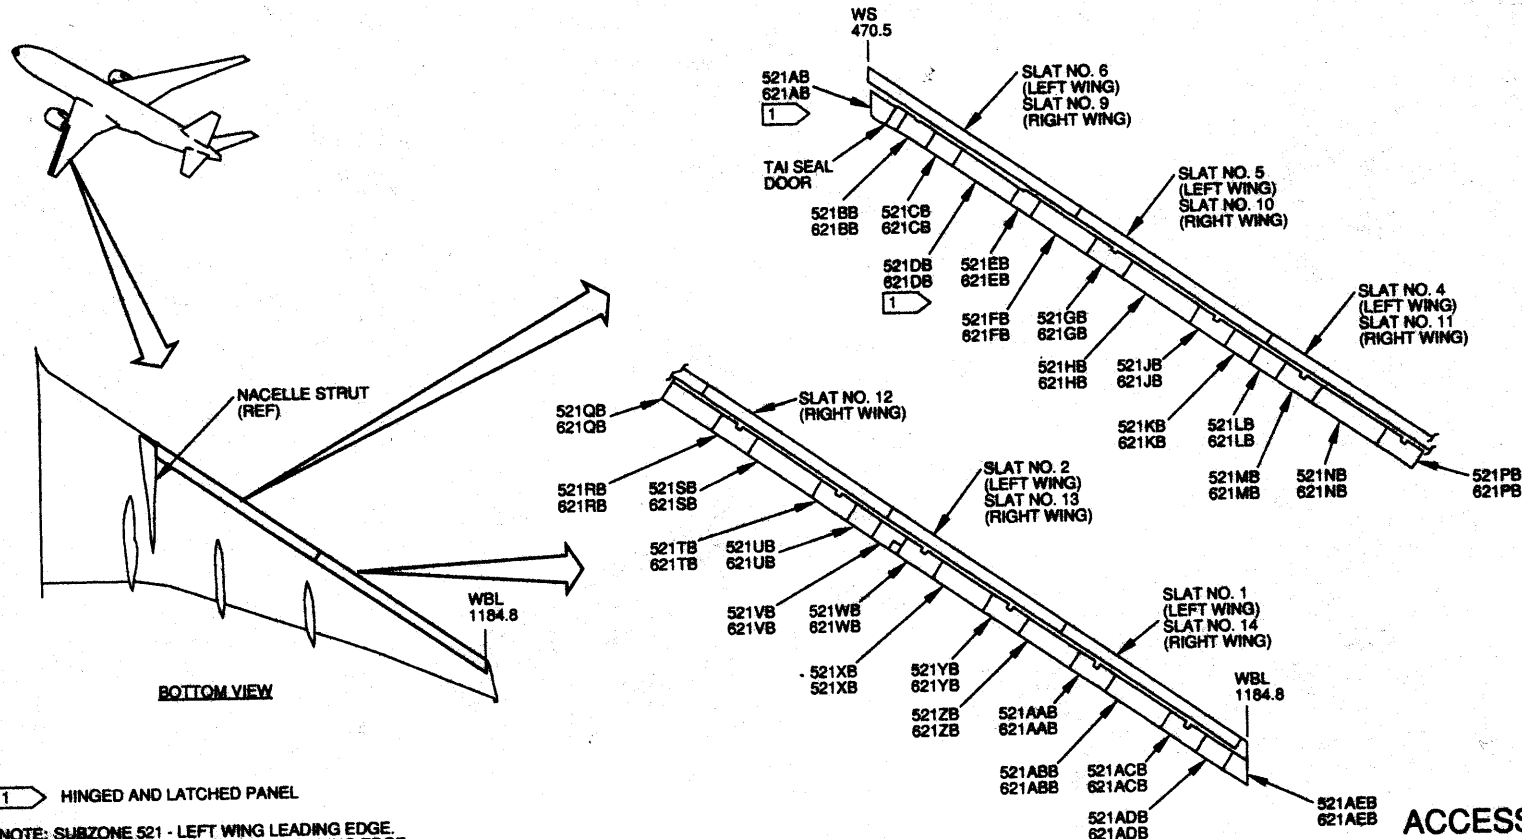




NOTE: SUBZONE 521 - LEFT WING LEADING EDGE.
SUBZONE 621 - RIGHT WING LEADING EDGE.
LEFT WING SHOWN, RIGHT WING SIMILAR.

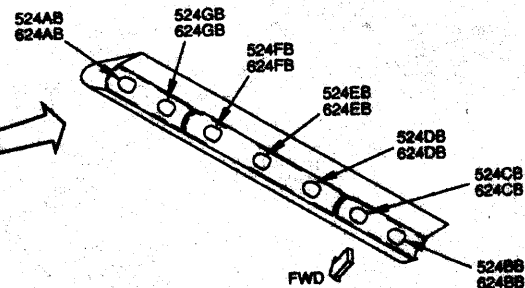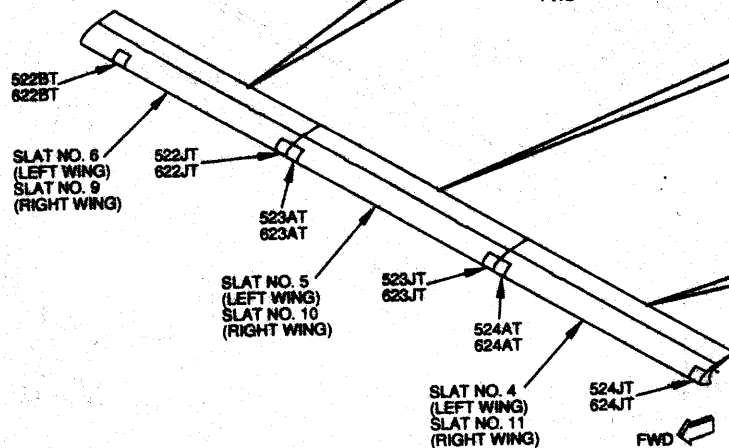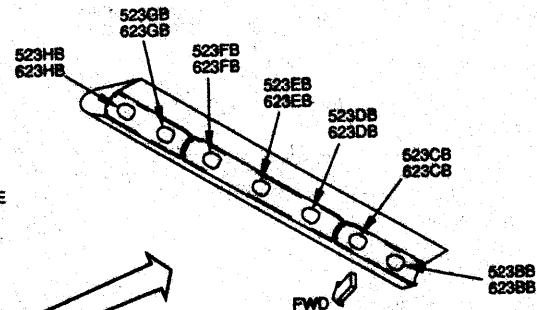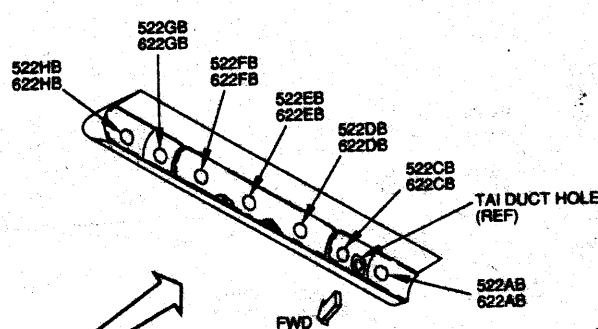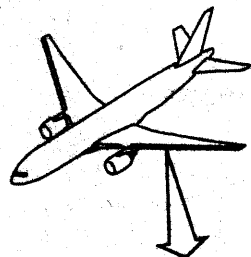


NOTE: SUBZONE 520 - LEFT WING LEADING EDGE.
SUBZONE 620 - RIGHT WING LEADING EDGE.
LEFT WING SHOWN, RIGHT WING SIMILAR.

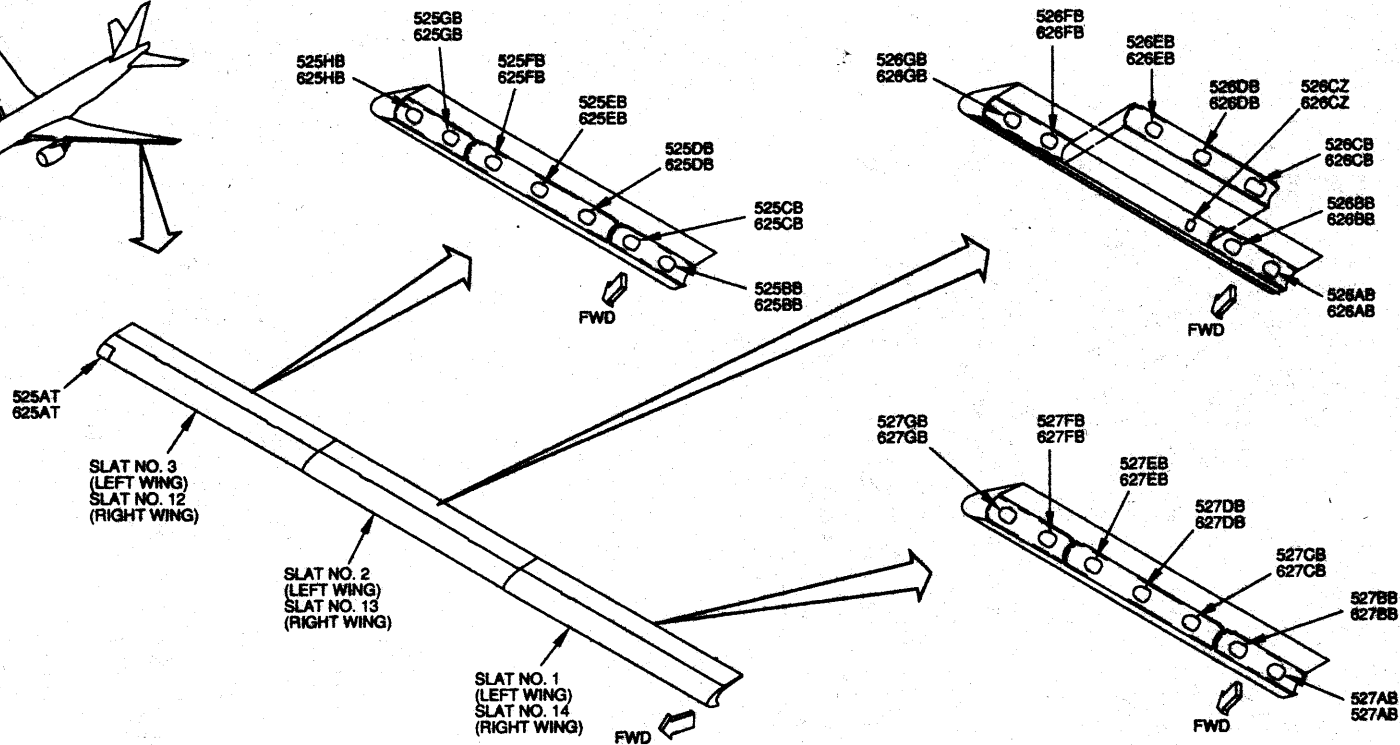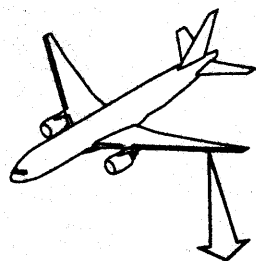


NOTE: SUBZONE 520 - LEFT WING LEADING EDGE.
SUBZONE 620 - RIGHT WING LEADING EDGE.
LEFT WING SHOWN, RIGHT WING SIMILAR.

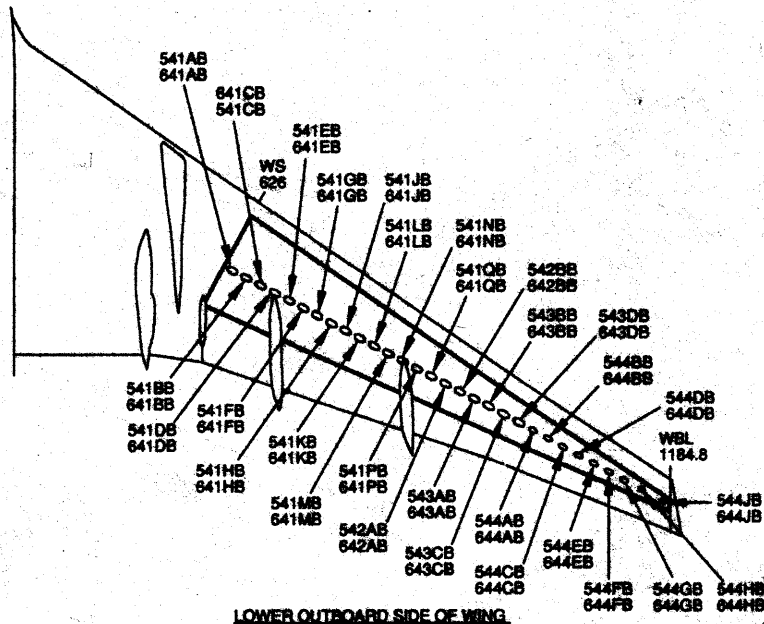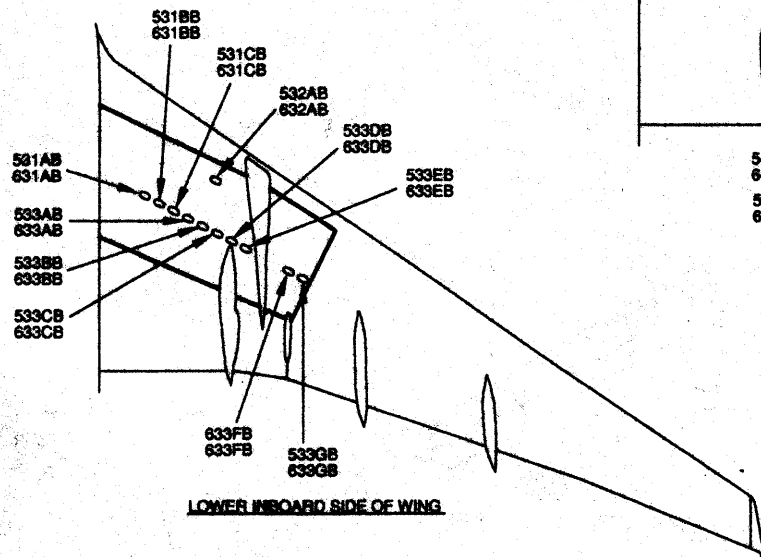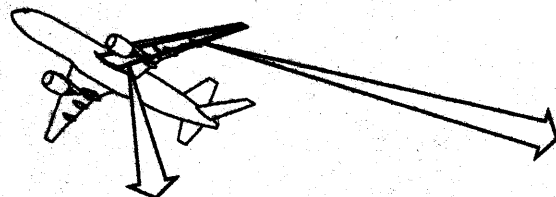



NOTE: SUBZONES 530, 540 - LEFT WING INSPAR AREA.
SUBZONES 630, 640 - RIGHT WING INSPAR AREA.
LEFT WING SHOWN, RIGHT WING SIMILAR.

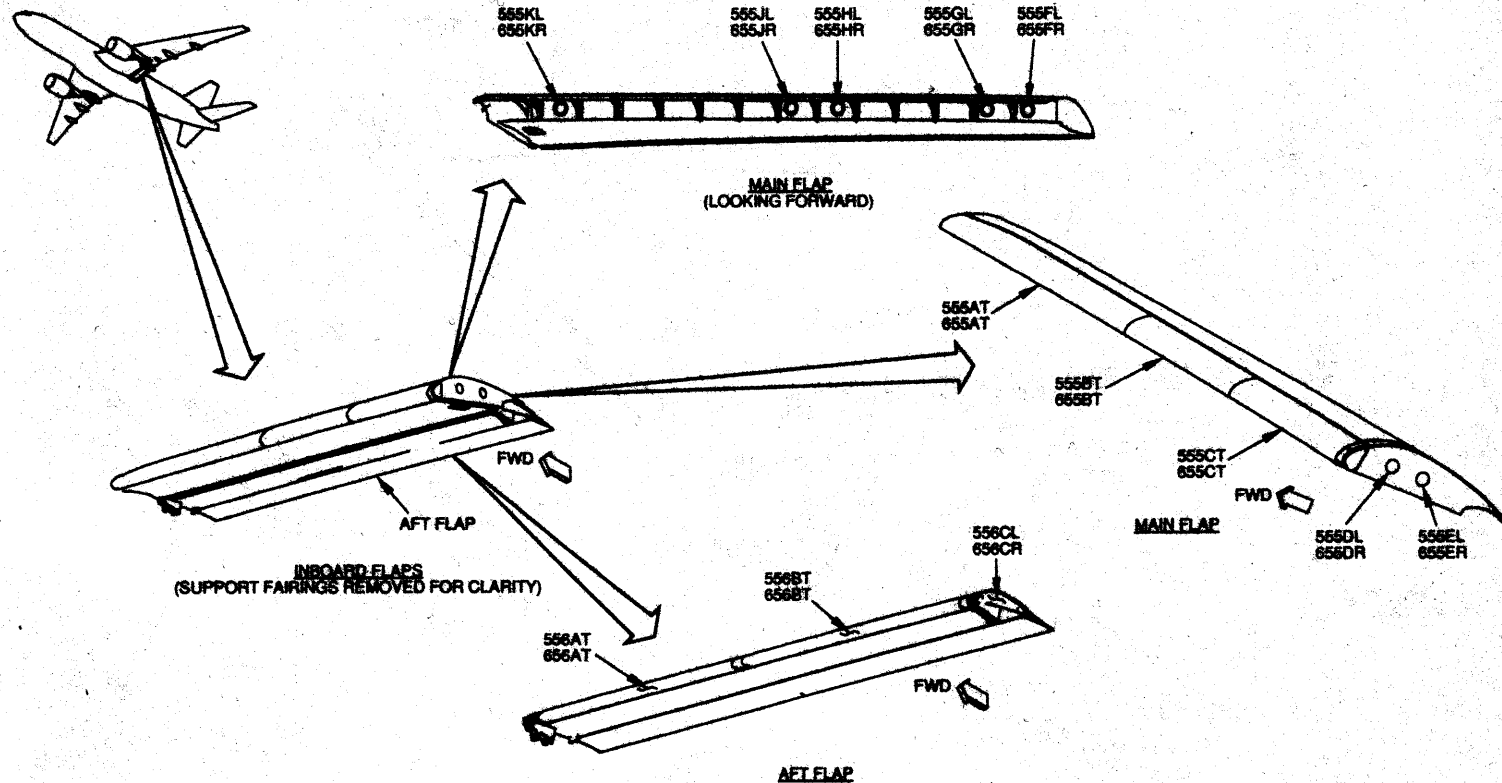




NOTE: SUBZONES 555, 556 - LEFT WING TRAILING EDGE.
SUBZONES 655, 656 - RIGHT WING TRAILING EDGE.
LEFT WING SHOWN, RIGHT WING SIMILAR.

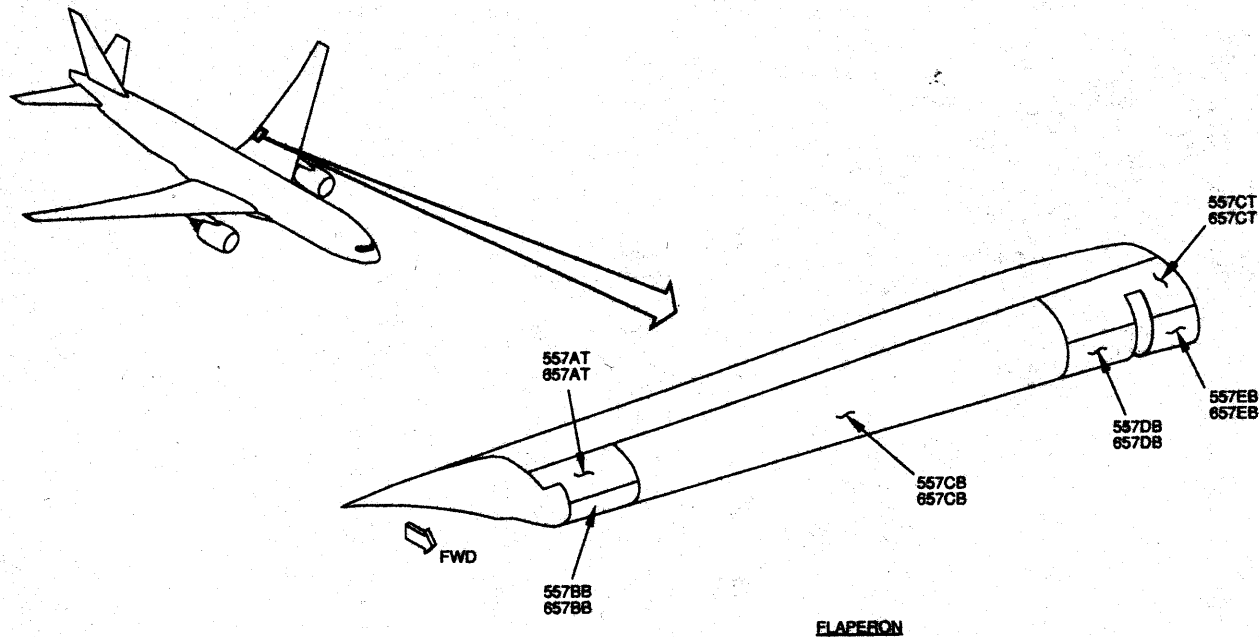


NOTE: SUBZONE 557 - LEFT WING TRAILING EDGE.
SUBZONE 657 - RIGHT WING TRAILING EDGE.
LEFT WING SHOWN, RIGHT WING SIMILAR.

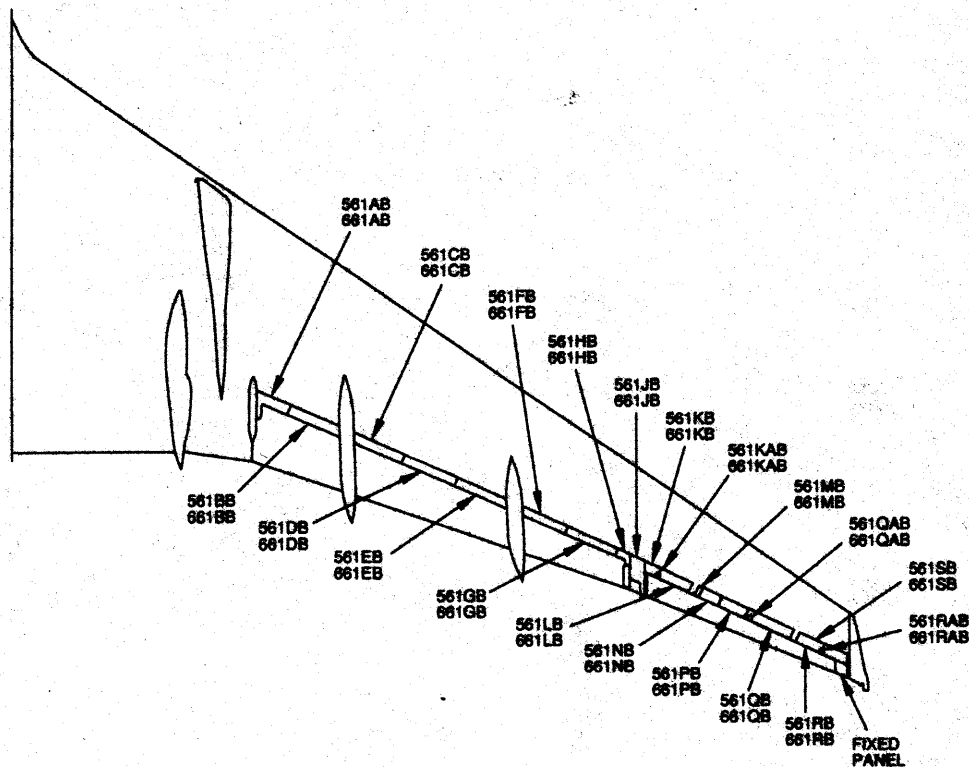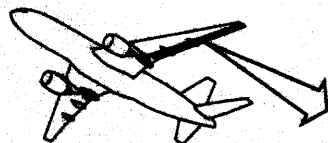


NOTE: SUBZONES 561 - LEFT WING TRAILING EDGE.
 SUBZONES 661 - RIGHT WING TRAILING EDGE.
 LEFT WING SHOWN, RIGHT WING SIMILAR.

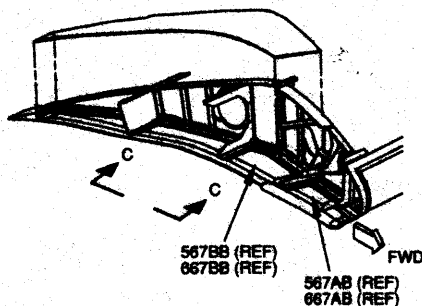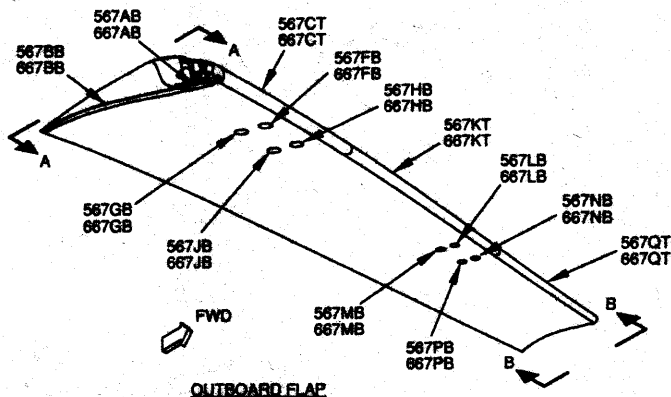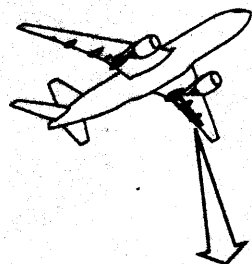

A-A


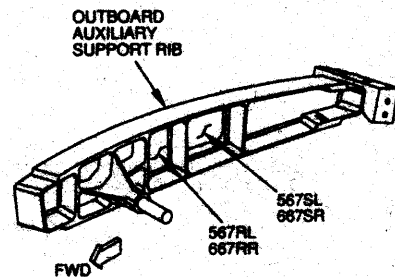


B-B

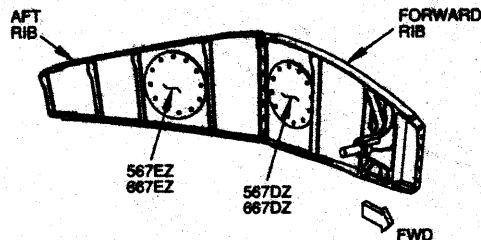


C-C

NOTE: SUBZONES 567 - LEFT WING TRAILING EDGE.
SUBZONES 667 - RIGHT WING TRAILING EDGE.
LEFT WING SHOWN, RIGHT WING SIMILAR.

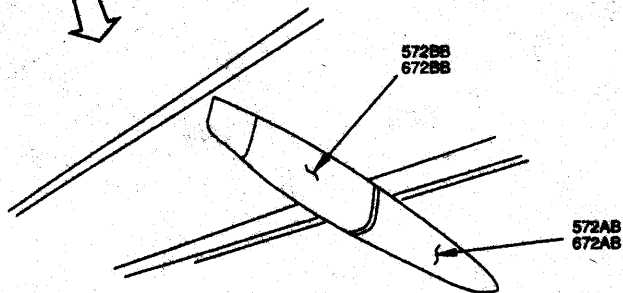
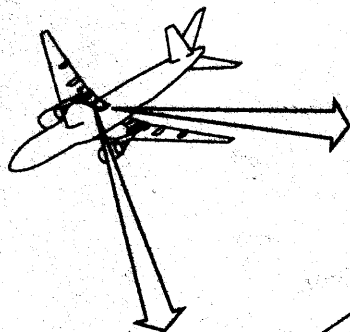


CENTER AFT FLAP TRACK FAIRING OF INBOARD FLAP

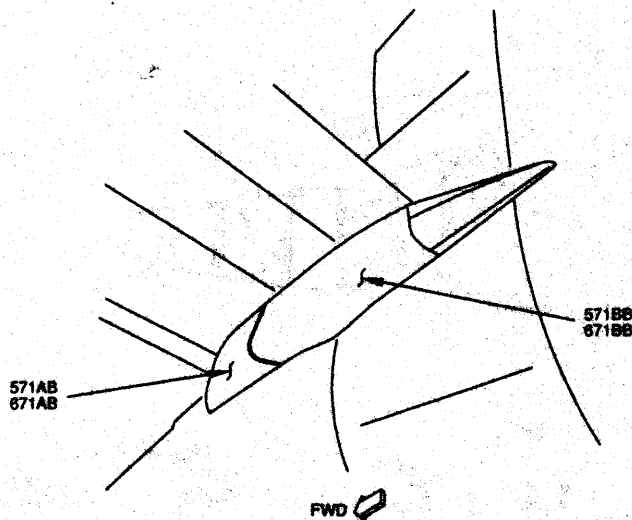


NO. 4 FAIRING - FLAP SUPPORT OF INBOARD FLAP (LEFT WING)
NO. 3 FAIRING - FLAP SUPPORT OF INBOARD FLAP (RIGHT WING)


NOTE: SUBZONES 571, 572 - LEFT WING TRAILING EDGE FLAP FAIRING.
 SUBZONES 671, 672 - RIGHT WING TRAILING EDGE FLAP FAIRING.
 LEFT WING SHOWN, RIGHT WING SIMILAR.

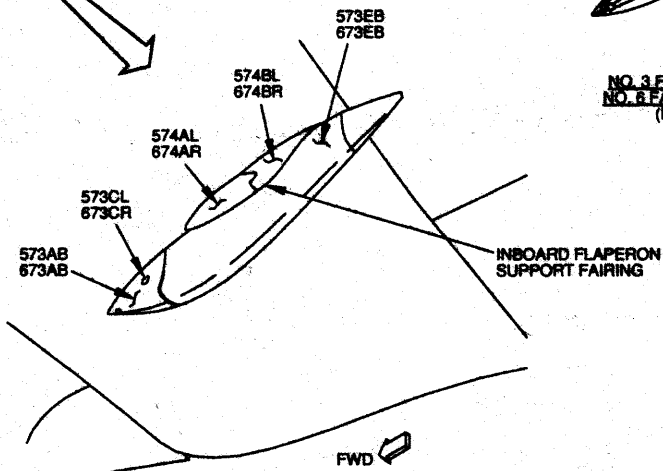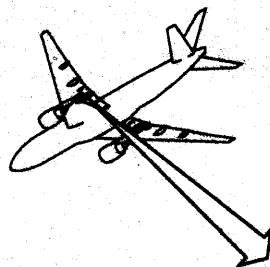

NO. 3 FAIRING (LEFT WING)
NO. 6 FAIRING (RIGHT WING)
(OUTBOARD SIDE)


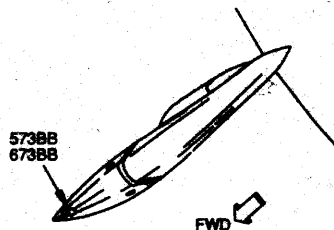


NO. 3 FAIRING (LEFT WING)
NO. 6 FAIRING (RIGHT WING)
(BOTTOM VIEW)

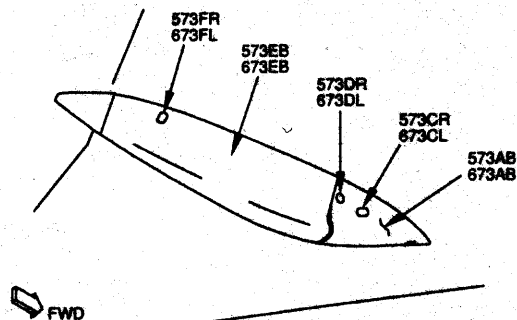


NO. 3 FAIRING (LEFT WING)
NO. 6 FAIRING (RIGHT WING)
(INBOARD SIDE)


NOTE: SUBZONES 573, 574 - LEFT WING TRAILING EDGE FLAP FAIRING.
SUBZONES 673, 674 - RIGHT WING TRAILING EDGE FLAP FAIRING.
LEFT WING SHOWN, RIGHT WING SIMILAR.

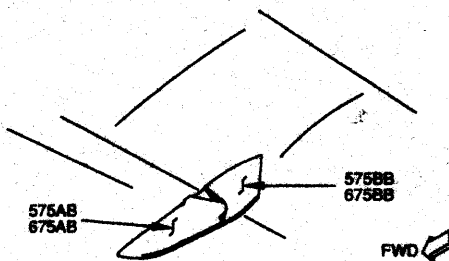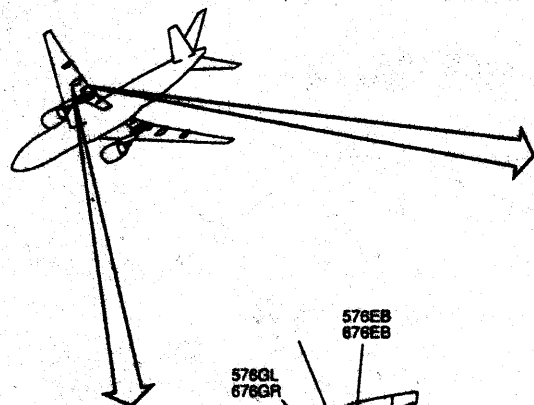

OUTBOARD FLAPERON SUPPORT FAIRING


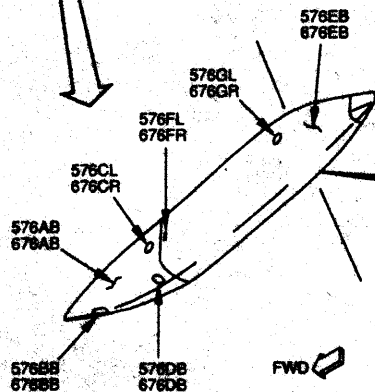


NO. 2 FAIRING (LEFT WING)
NO. 7 FAIRING (RIGHT WING)
(OUTBOARD SIDE)

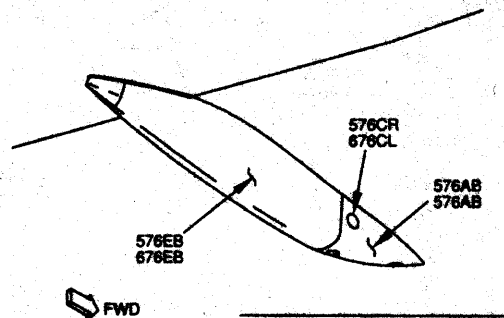


NO. 2 FAIRING (LEFT WING)
NO. 7 FAIRING (RIGHT WING)
(INBOARD SIDE)


NOTE: SUBZONES 575, 576 - LEFT WING TRAILING EDGE FLAP FAIRING.
SUBZONES 675, 676 - RIGHT WING TRAILING EDGE FLAP FAIRING.
LEFT WING SHOWN, RIGHT WING SIMILAR.

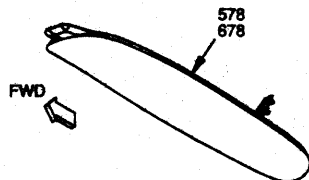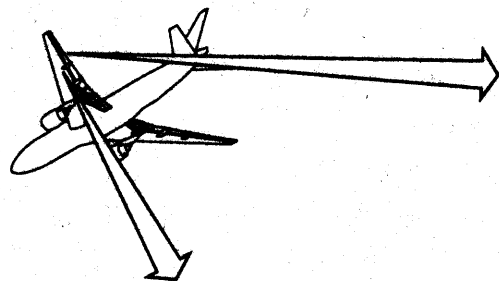


OUTBOARD AUXILIARY TRACK FAIRING

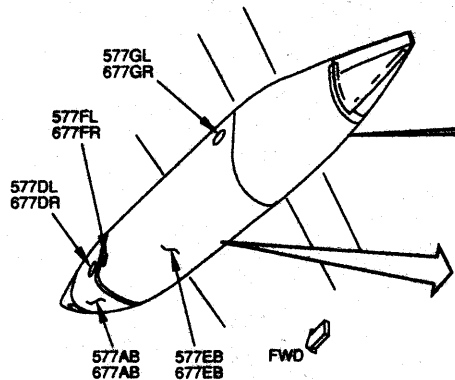

NO. 1 FAIRING (LEFT WING)
NO. 8 FAIRING (RIGHT WING)
(OUTBOARD SIDE)


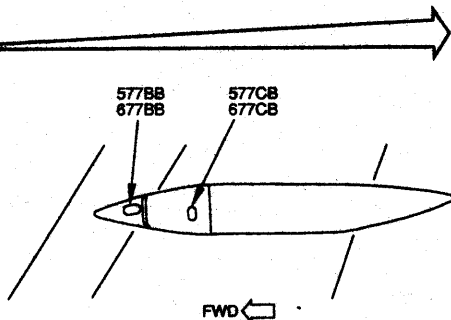


NO. 1 FAIRING (LEFT WING)
NO. 8 FAIRING (RIGHT WING)
(BOTTOM VIEW)

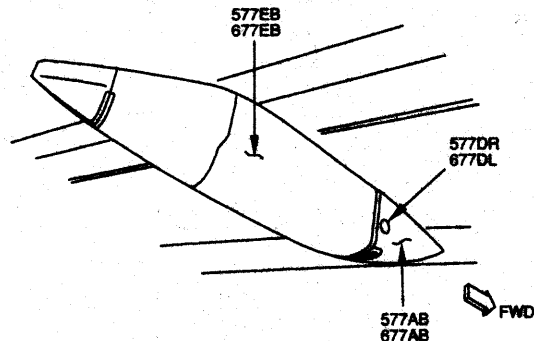


NO. 1 FAIRING (LEFT WING)
NO. 8 FAIRING (RIGHT WING)
(INBOARD SIDE)


NOTE: SUBZONES 577, 578 - LEFT WING TRAILING EDGE FLAP FAIRING.
SUBZONES 677, 678 - RIGHT WING TRAILING EDGE FLAP FAIRING.
LEFT WING SHOWN, RIGHT WING SIMILAR.

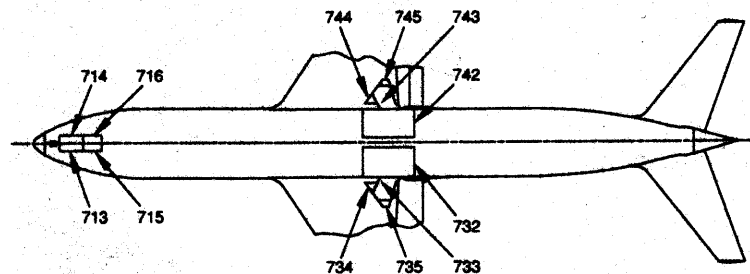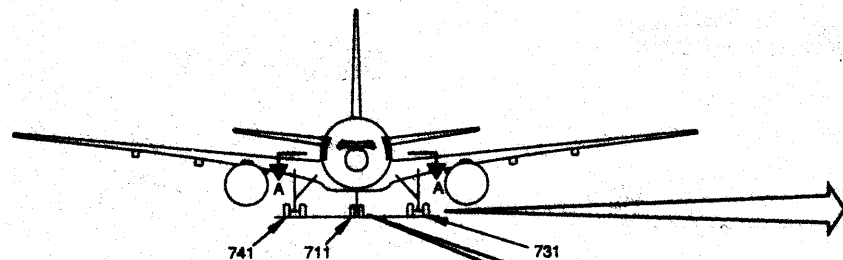

VIEW LOOKING DOWN


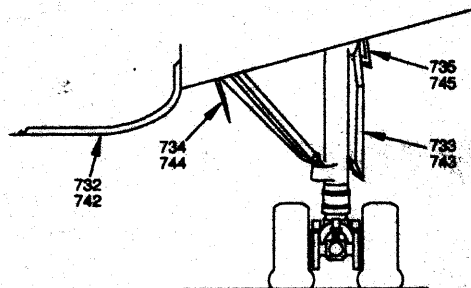


MAIN LANDING GEAR
(LEFT SIDE SHOWN)


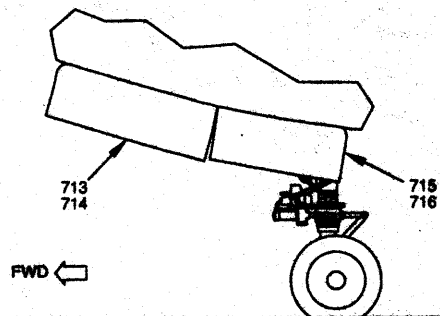


NOSE LANDING GEAR


NOTE: SUBZONE 710 - NOSE LANDING GEAR AND LANDING GEAR DOORS.
SUBZONE 730 - LEFT MAIN LANDING GEAR AND LANDING GEAR DOORS.
SUBZONE 740 - RIGHT MAIN LANDING GEAR AND LANDING GEAR DOORS.

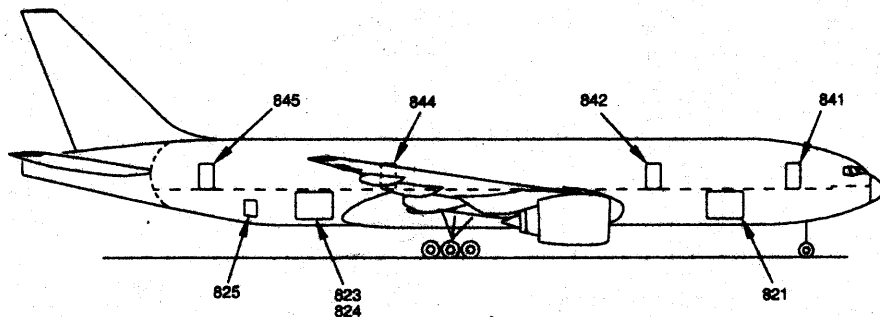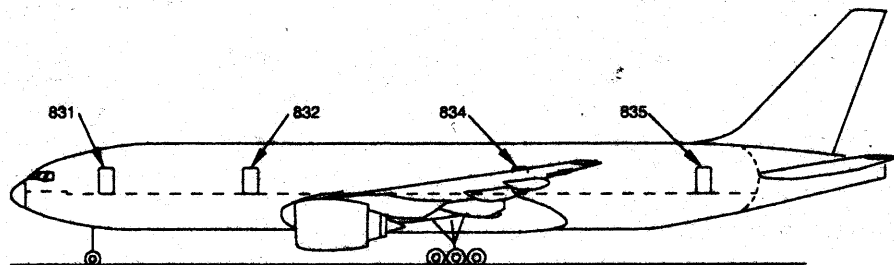



NOTE: SUBZONE 820 - CARGO COMPARTMENT DOORS
SUBZONE 830 - LEFT PASSENGER COMPARTMENT DOORS
SUBZONE 840 - RIGHT PASSENGER COMPARTMENT DOORS

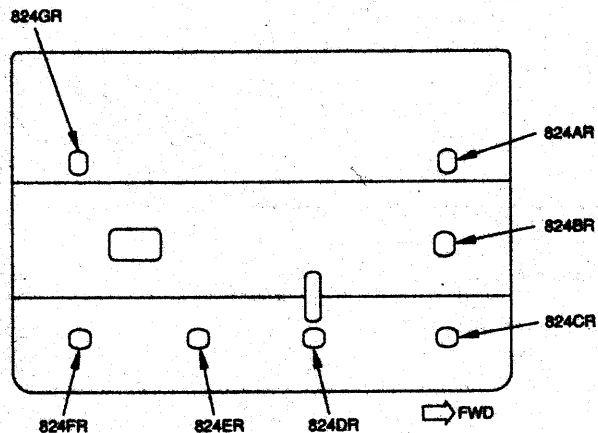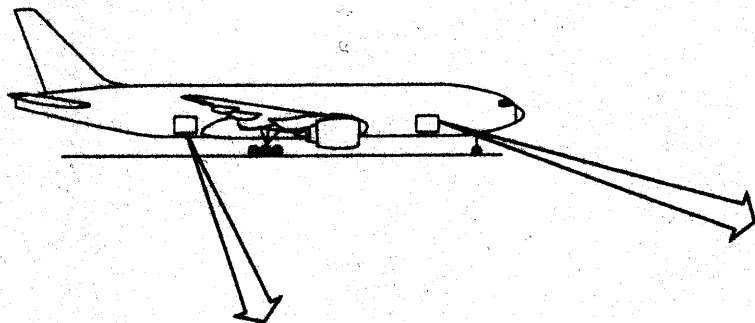


AFT LARGE CARGO DOOR (824)

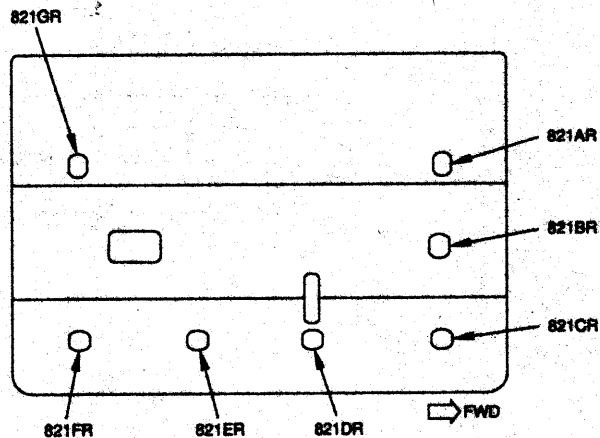

FORWARD LARGE CARGO DOOR (821)

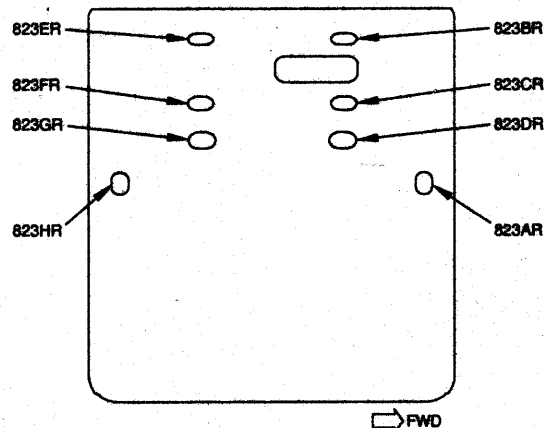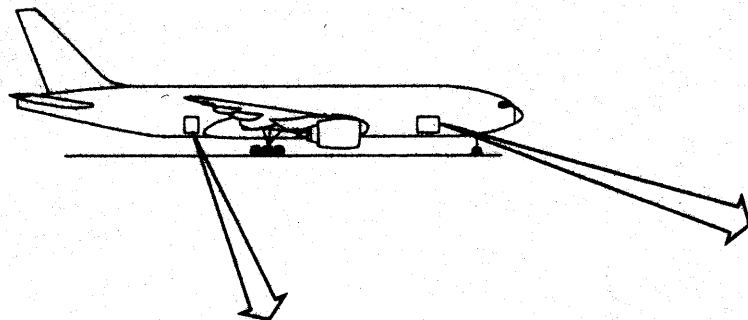


AFT SMALL CARGO DOOR (823)


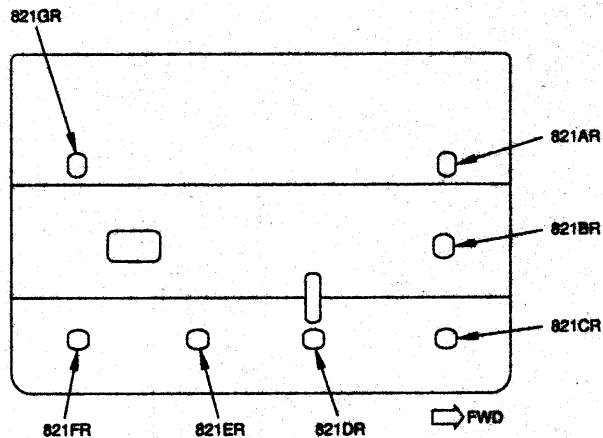


FORWARD LARGE CARGO DOOR (821)


RECOGNITION


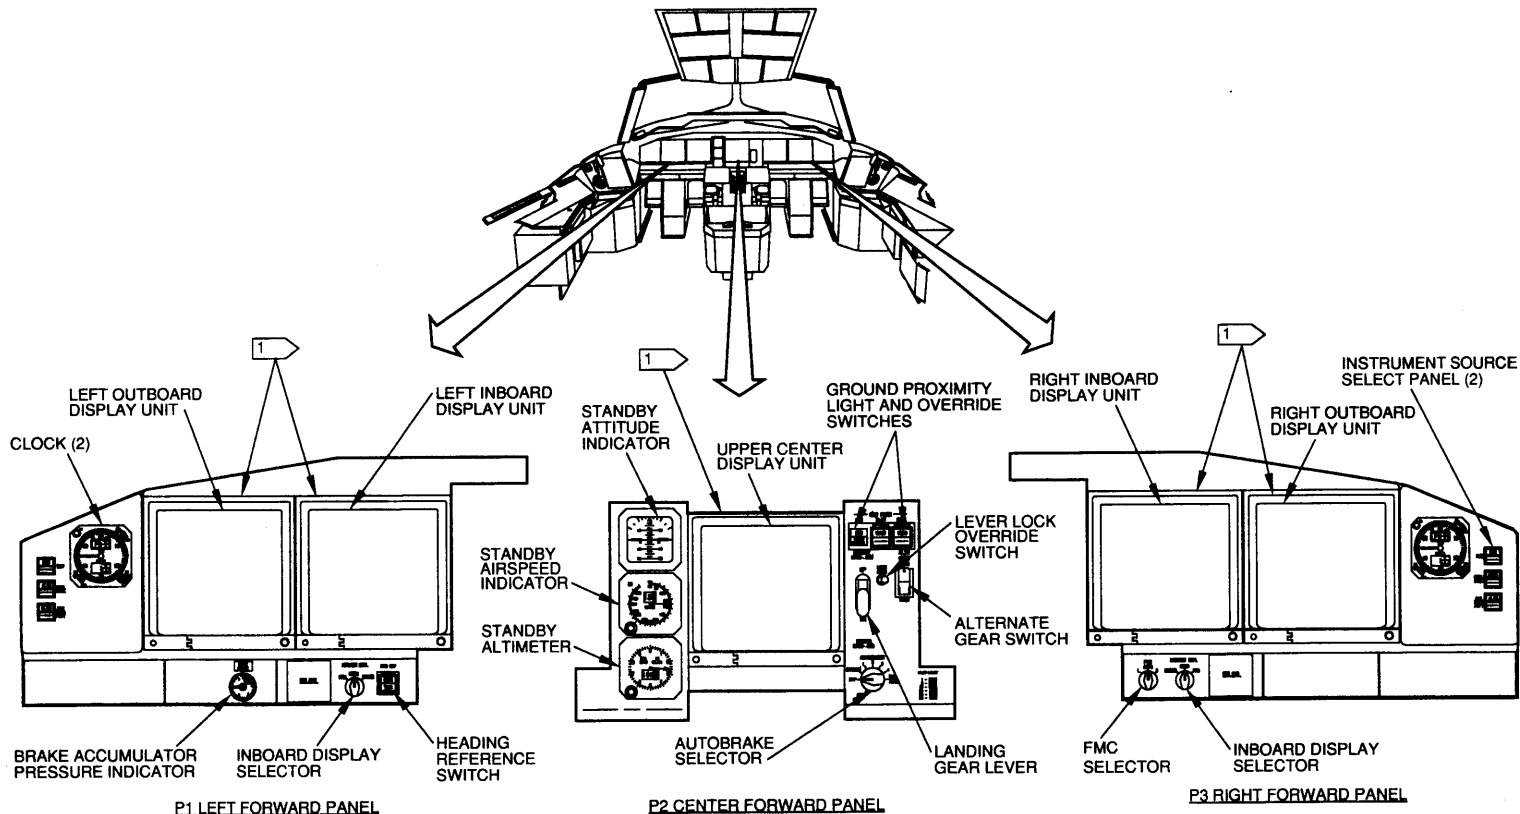


1 INSERTION DISPLAY SWITCHES FORWARD OF DISPLAY UNITS

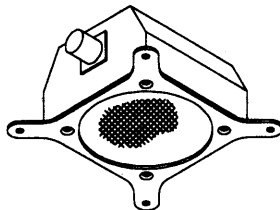
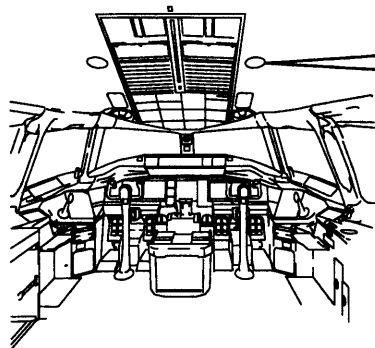


WARNING SPEAKER (2)

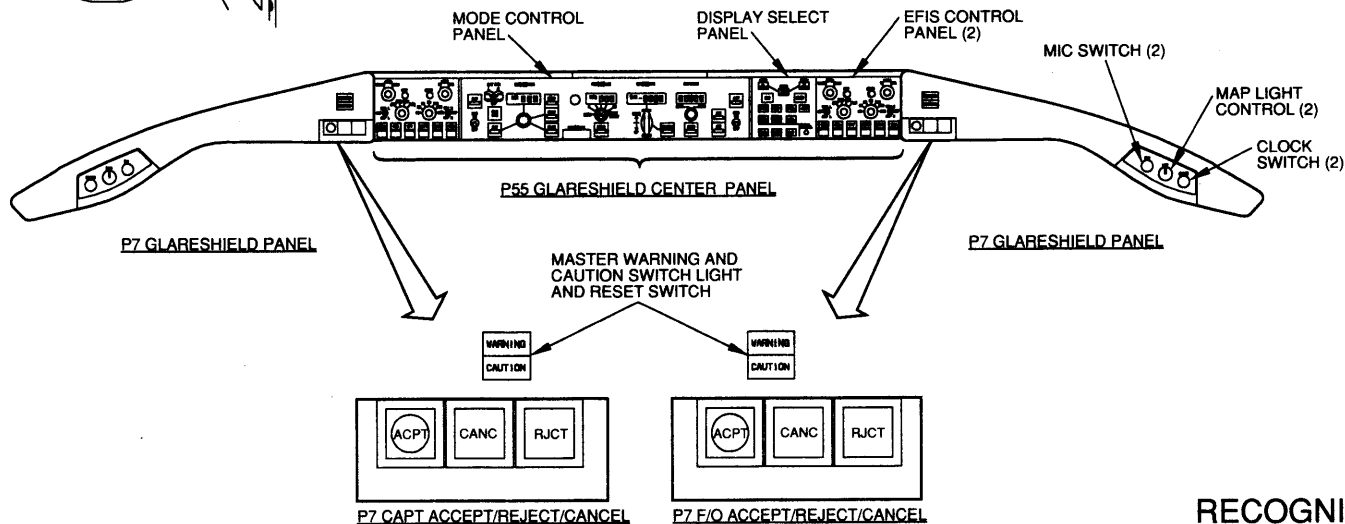

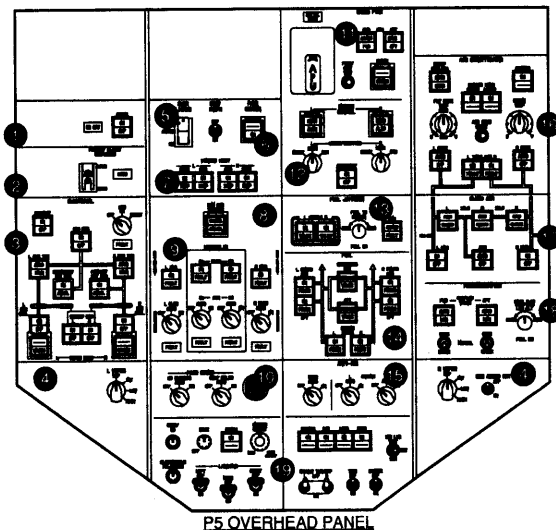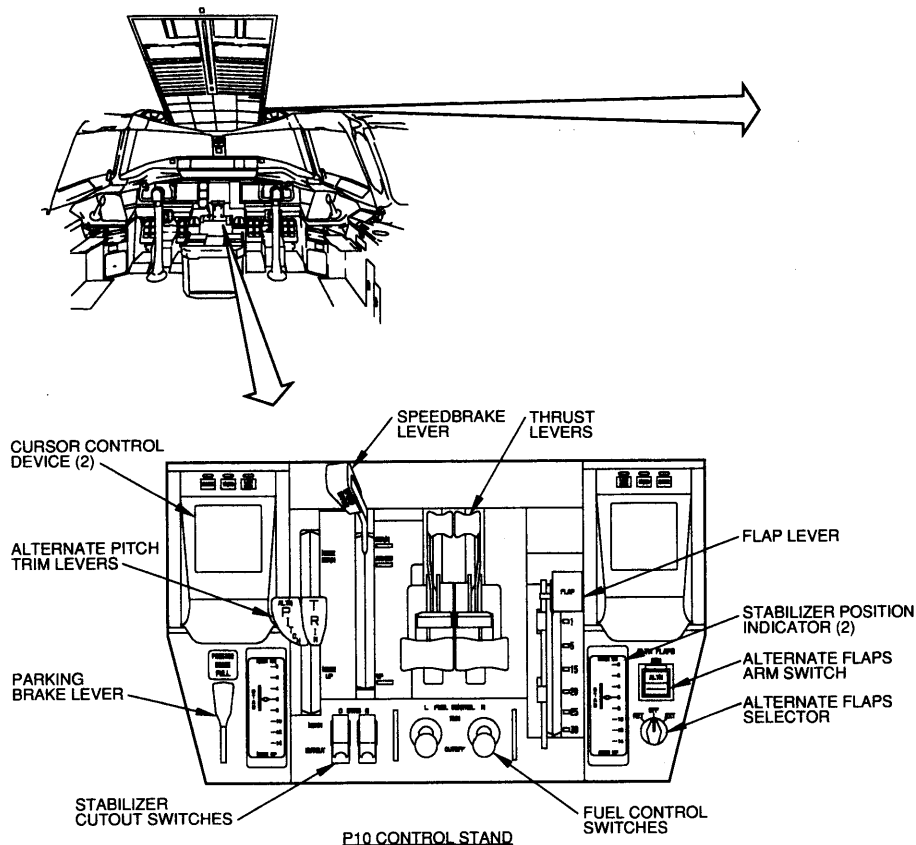


1. AIR DATA INERTIAL REFERENCE SYSTEM (ADIRS)
2. PRIMARY FLIGHT COMPUTERS
3. ELECTRICAL PANEL
4. WIPER CONTROL
5. EMERGENCY LIGHTING
6. PASSENGER OXYGEN
7. WINDOW HEAT
8. RAM AIR TURBINE
9. HYDRAULIC SYSTEM
10. PASSENGER SIGNS
11. APU AND CARGO **FIRE**
12. ENGINE START
13. FUEL JETTISON
14. FUEL MANAGEMENT
15. ANTI-ICE SYSTEM
16. AIR CONDITIONING
17. BLEED AIR SYSTEM
18. PRESSURIZATION CONTROL
19. LIGHTING

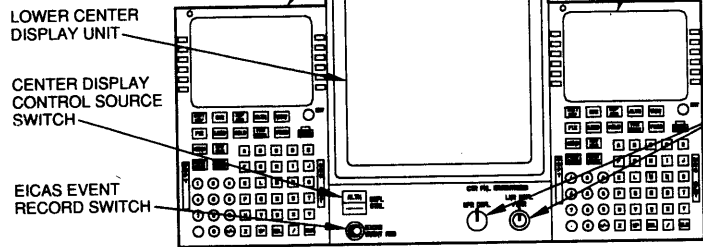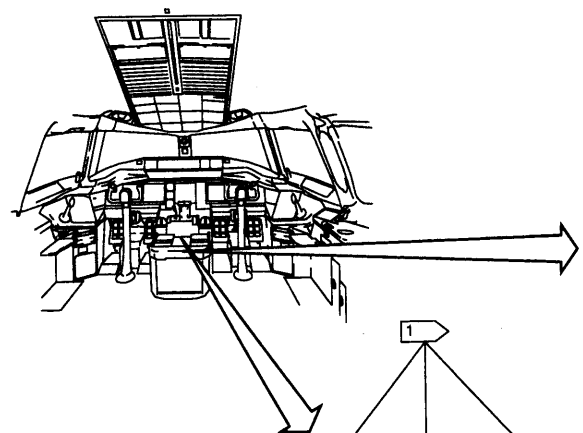



P9 FORWARD AISLE STAND PANEL

1 INSERTION DISPLAY SWITCHES BELOW CONTROL DISPLAY UNITS AND CENTER DISPLAY UNIT

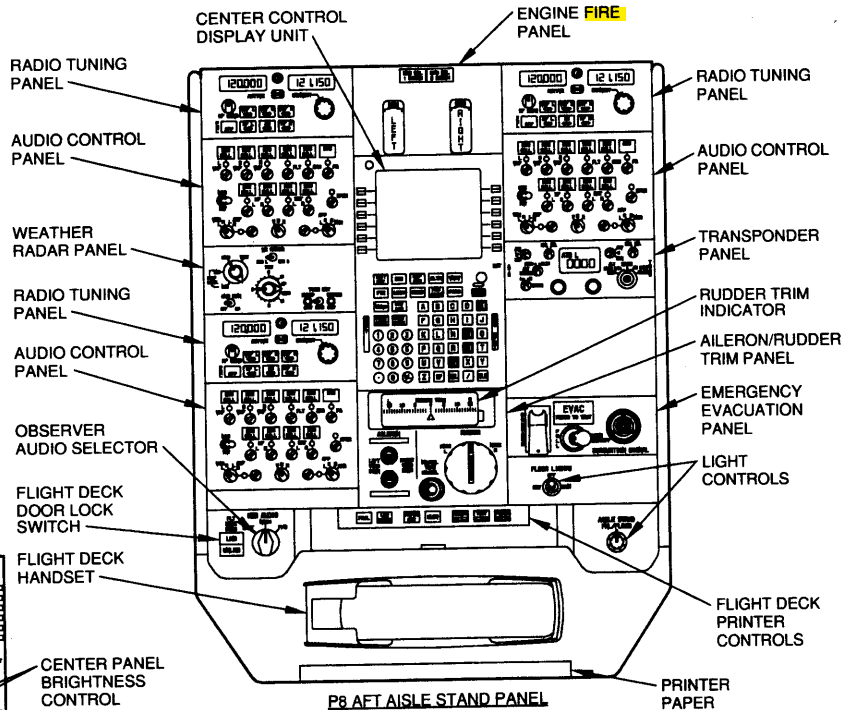


P8 AFT AISLE STAND PANEL

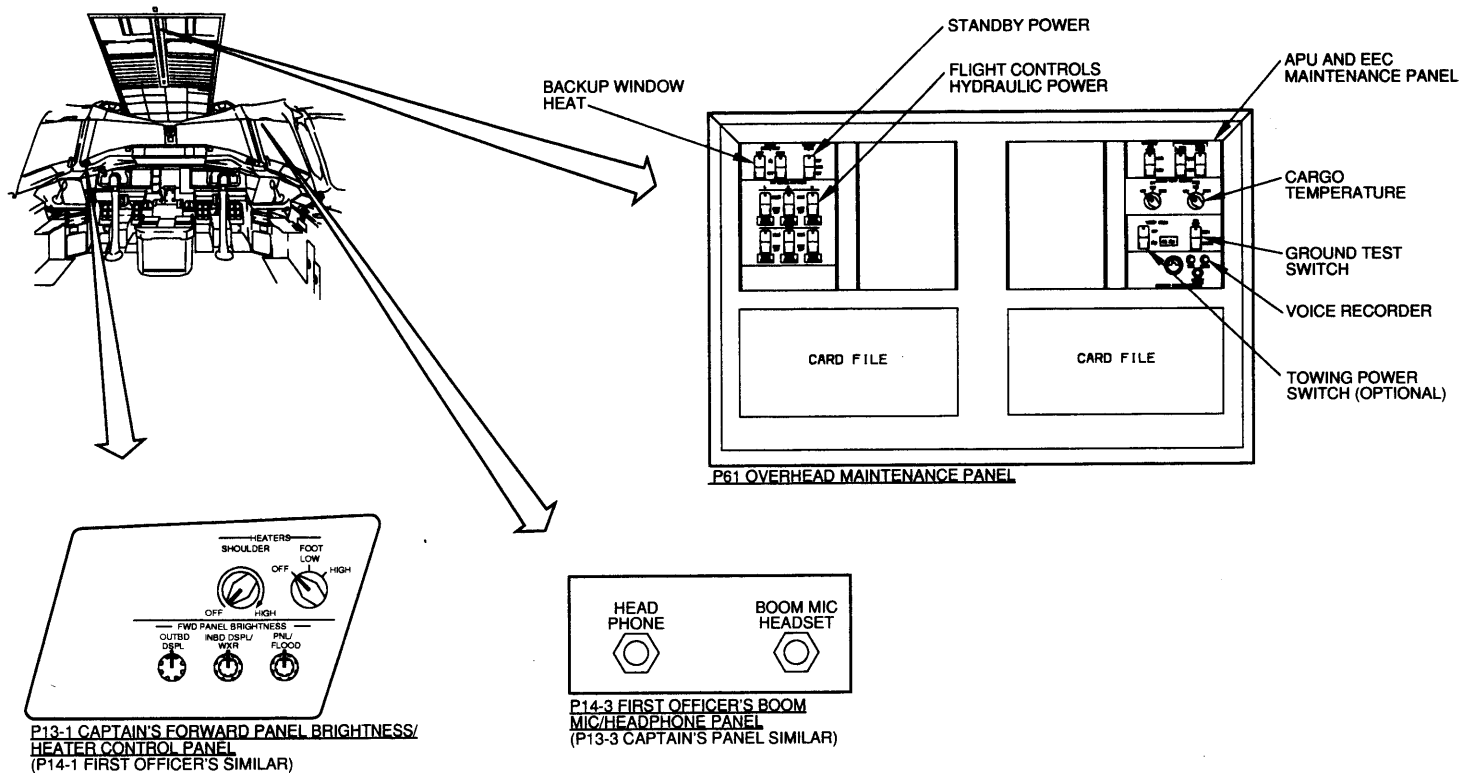




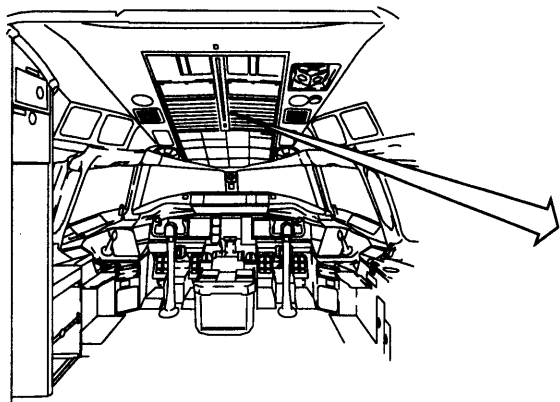


H	
G	
F	
E	
D	
C	
B	
A	
1 2 3 4 5 6 7 8 9 10 11 12 13	14 15 16 17 18 19 20 21 22 23 24 25 26

P11 CIRCUIT BREAKER PANEL

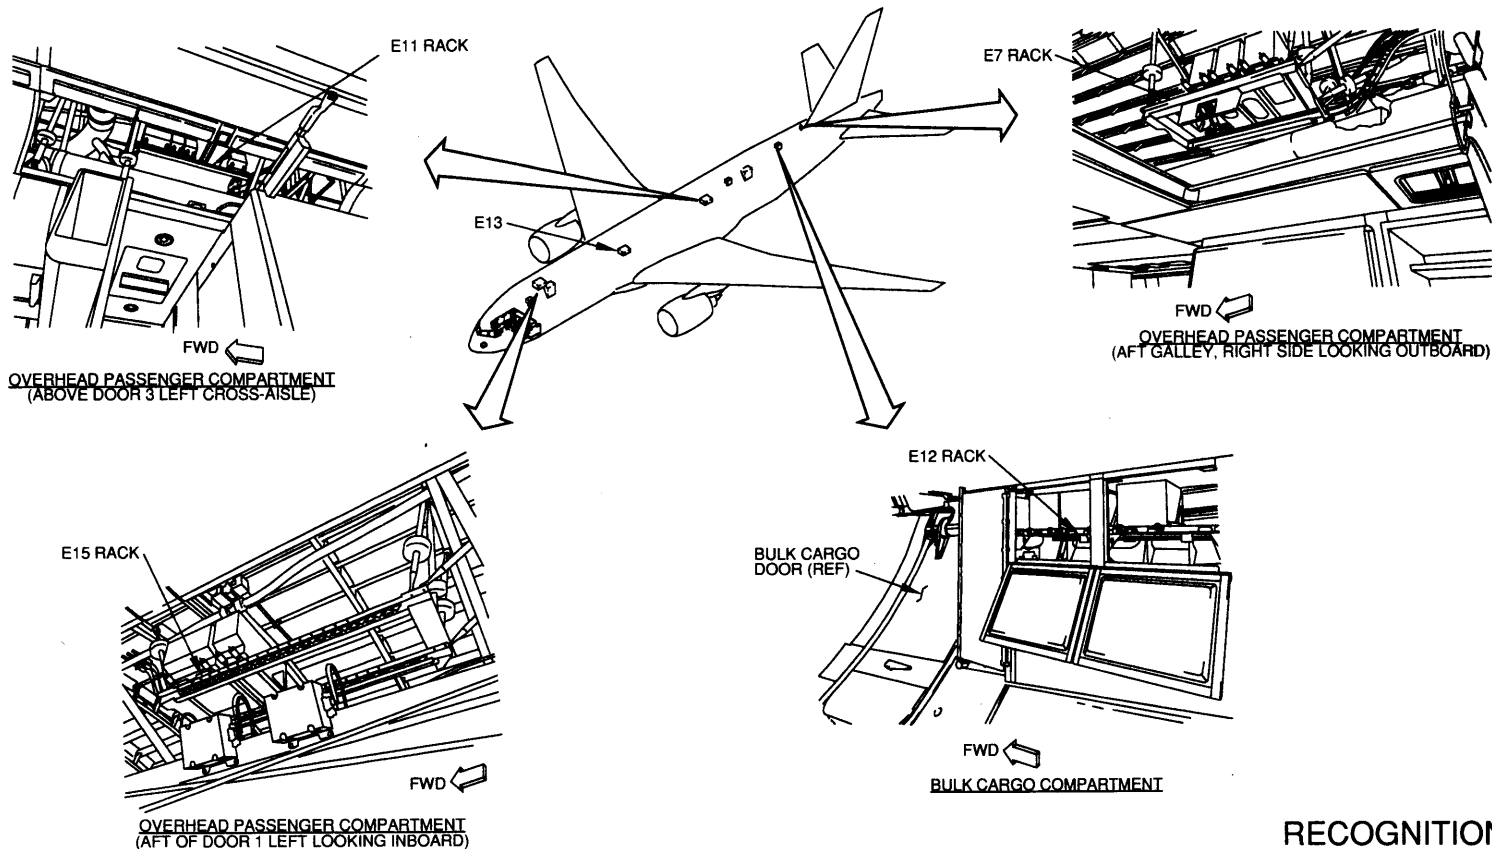

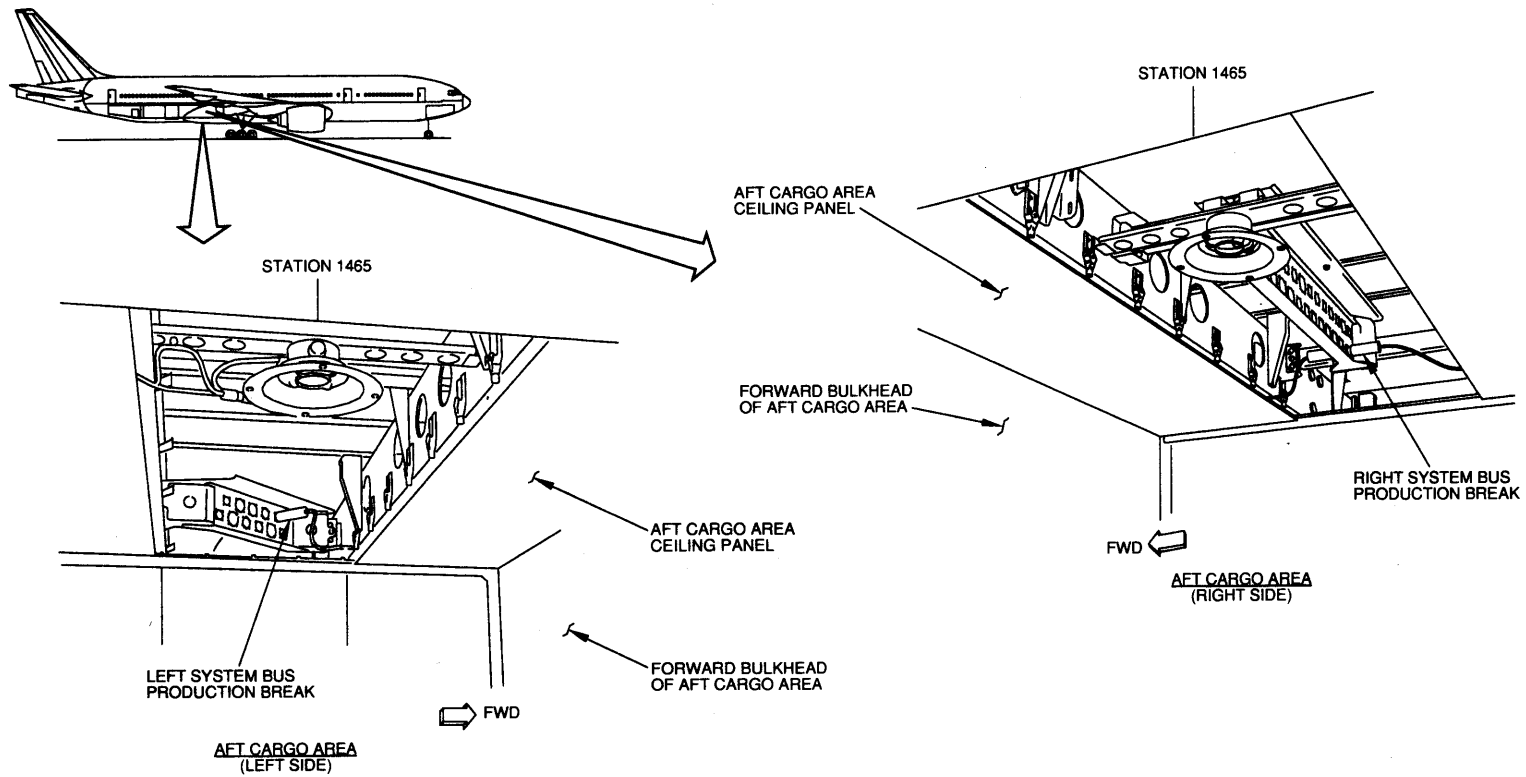

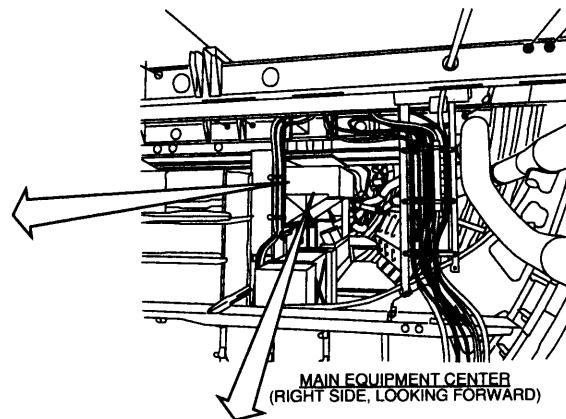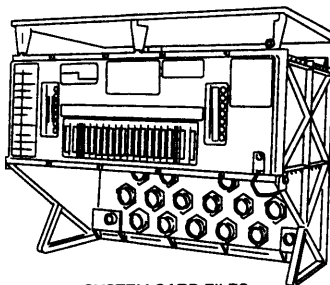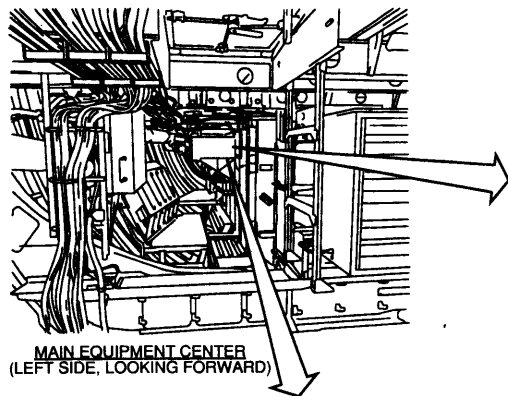


A2	PSU - PREREGULATOR CARD
A3	PSU - LINEARMONITOR CARD
A4	CENTER HYDM CARD CH2
A5	LEFT DLODS CARD
A6	LEFT ACIPS CARD
A7	SPARE
A8	SPARE
A9	APU FIREWIT DET CARD
A10	LEFT ENGINE FIREWIT DET CARD
A11	SPARE
A12	LEFT AING SIGNAL GATEWAY CARD
A13	SPARE
A14	LEFT EGS CARD
A15	RIGHT AING SIGNAL GATEWAY CARD
A16	LEFT WRIGHT ON WHEELS CARD
A17	LEFT HYDM CARD LH
A18	PSU - LINEARMONITOR CARD
A19	PSU - PREREGULATOR CARD




LEFT SYSTEMS CARD FILE (P85)

A2	PSU - PREREGULATOR CARD
A3	PSU - LINEARMONITOR CARD
A4	CENTER HYDM CARD CH1
A5	RIGHT DLODS CARD
A6	RIGHT ACIPS CARD
A7	CENTER ACIPS CARD
A8	CENTER DLODS CARD
A9	SPARE
A10	RIGHT ENGINE FIREWIT DET CARD
A11	SPARE
A12	LEFT AING SIGNAL GATEWAY CARD
A13	SPARE
A14	RIGHT EGS CARD
A15	RIGHT AING SIGNAL GATEWAY CARD
A16	RIGHT WRIGHT ON WHEELS CARD
A17	RIGHT HYDM CARD RH1
A18	PSU - LINEARMONITOR CARD
A19	PSU - PREREGULATOR CARD


RIGHT SYSTEMS CARD FILE (P84)

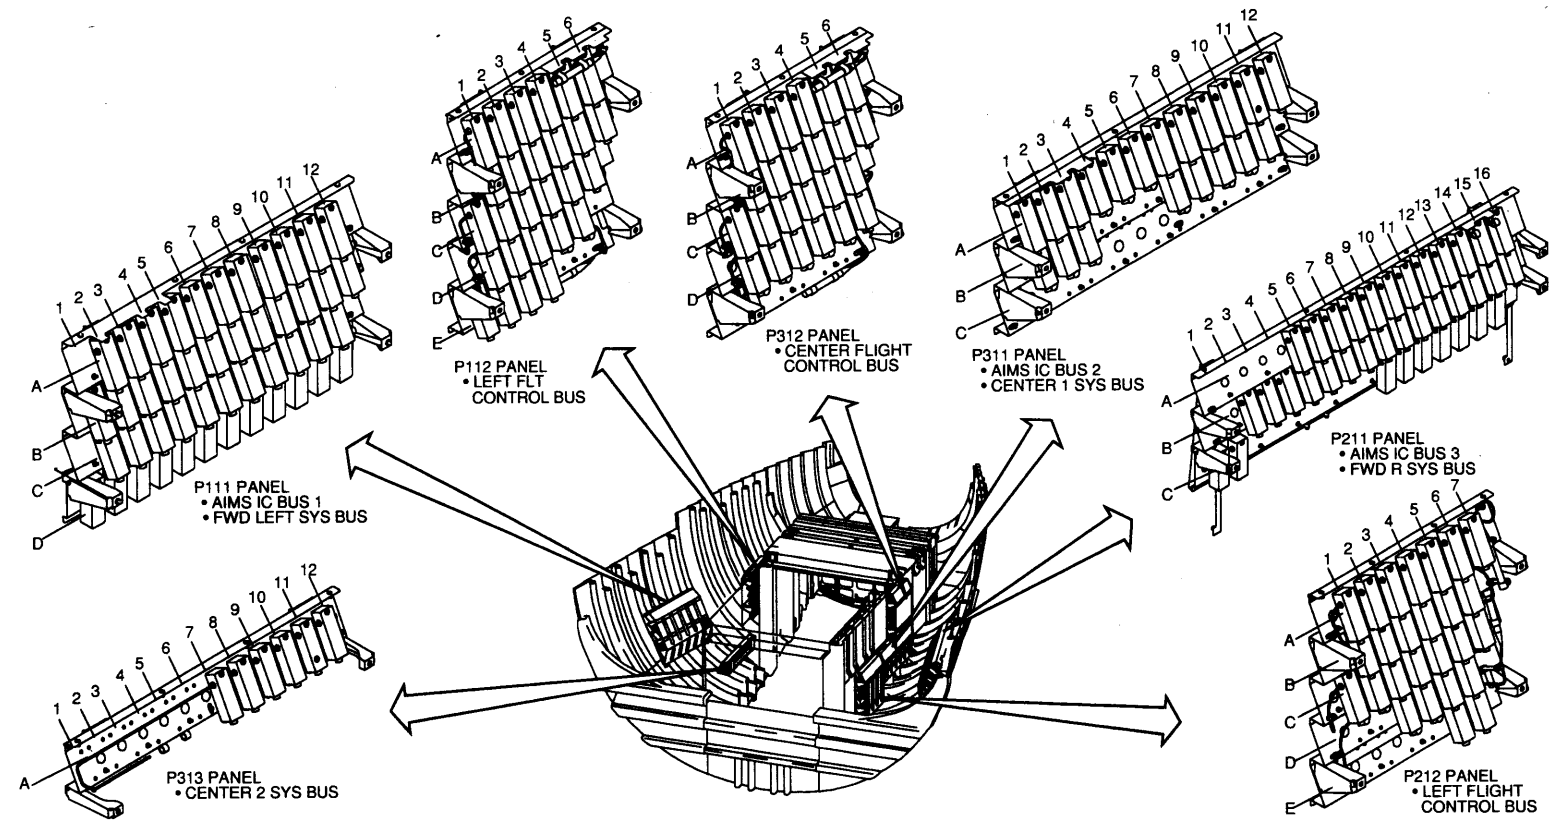

COUPLER PANELS - FORWARD EQUIPMENT CENTER

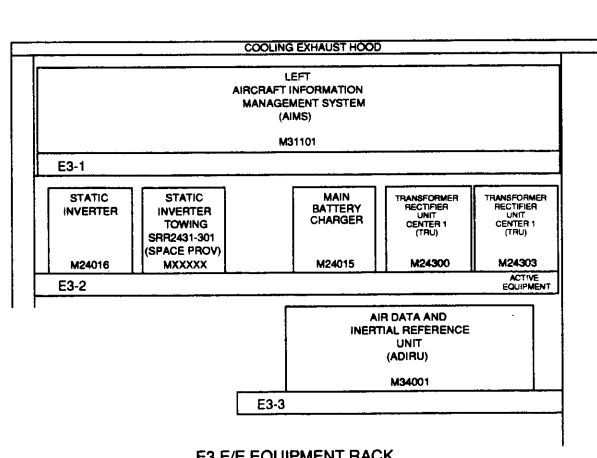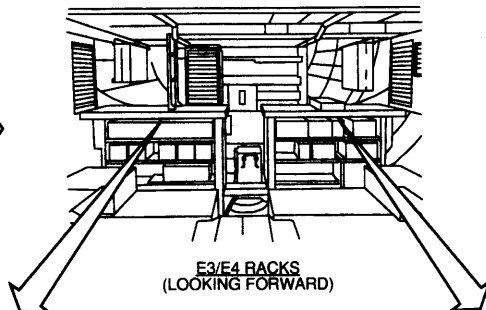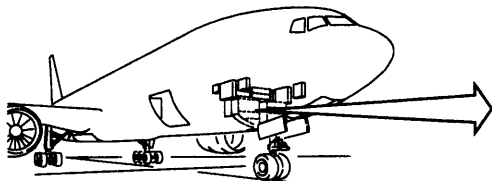



E3 E/E EQUIPMENT RACK
(LOOKING FORWARD)

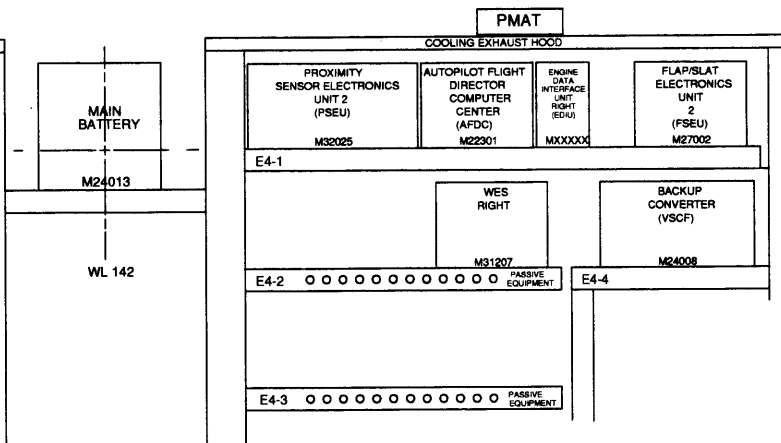

E4 E/E EQUIPMENT RACK
(LOOKING FORWARD)

<div>RIGHT</div> <div>AIRCRAFT INFORMATION MANAGEMENT SYSTEM (AIMS)</div> <div>M31201</div>					
E2-1					
<div>TRANSFORMER RECTIFIER UNIT RIGHT (TRU)</div> <div>M24203</div>	<div>GENERATOR CONTROL UNIT RIGHT (GCU)</div> <div>M24205</div>	<div>WINDOW HEAT & CNTRL UNIT RFWO AND LSWIDE</div> <div>M30201</div>	<div>QUICK ACCESS RECORDER (GAR)</div> <div>M45001</div>	<div>CABIN TEMPERATURE CONTROL UNIT RIGHT (CACTUS)</div> <div>M21832</div>	<div>AIR SUPPLY CABIN PRESSURE CONTROL (ASPC)</div> <div>M36112</div>
E2-2					
<div>AUTO DIR ENDRIGHT (LS)</div> <div>M34208</div>	<div>INSTRU LAND SYS RCVR RIGHT (LS)</div> <div>M34210</div>	<div>VCR RCVR MARKER BEACON (VOR) RIGHT (VHF)</div> <div>M24215</div>	<div>VHF COMM UNIT RIGHT (VHF)</div> <div>M23203</div>	<div>AIR TRAFFIC CONTROL TRANS RIGHT (ATC)</div> <div>M34209</div>	<div>DIST MEAS EQUIPMENT INTERROG RIGHT (DME)</div> <div>M34209</div>
E2-3					
<div>ENGINE VIBRA- TION MON UNIT RIGHT</div> <div>M77202</div>	<div>PRE-REC ANNOUN- CEMENT</div> <div>M23080</div>	<div>DIGITAL INTERFACE UNIT (AIRSHOW) (DIU)</div> <div>M23080</div>	<div>AUDIO ENTER- TAINMENT PLAYER 1 (AEP)</div> <div>M23075</div>	<div>AUDIO ENTER- TAINMENT MULTIPLEX 1</div> <div>M23472</div>	<div>ENTERTAINMENT MULTIPLIER CONTROLLER (EMC)</div> <div>M23074</div>
E2-4					
<div>FCDC BATTERY CENTER</div> <div>M24302</div>	<div>ACTUATOR CONTROL ELEC CENTER (ACE)</div> <div>M27321</div>	<div>AUTOPILOT FLIGHT DIRECTOR COMPUTER RIGHT (AFDC)</div> <div>M22201</div>	<div>WEIGHT BAL COMP A</div> <div>M08001</div>	<div>CALIB MODULE A M08004</div>	<div>WEIGHT BAL COMP B</div> <div>M08002</div>
E2-5					
<div>PRIMARY FLIGHT COMPUTER CENTER (PFC)</div> <div>M27206</div>	<div>FLIGHT CONTROL POWER SUPPLY ASSEMBLY CENTER (PSA)</div> <div>M24301</div>	<div>STANDBY ATTITUDE & AIR DATA REF UNIT (SAARU)</div> <div>M34002</div>			
E2-6					
E2-7					



**E2 E/E EQUIPMENT RACK
(LOOKING AFT)**

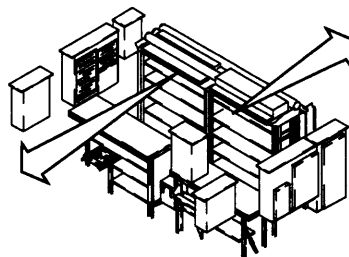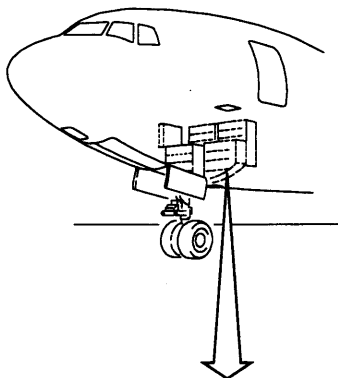


MAIN EQUIPMENT CENTER

ACTUATOR CONTROL ELEC LEFT 2 (ACE) M27122	WINDOW HEAT & CNTRL UNIT LFWO AND RSIDE M30101	BUS POWER CONTROL UNIT M24002	GENERATOR CONTROL UNIT LEFT (GCU) M24105	TRANSFORMER RECTIFIER UNIT LEFT (TRU) M24103
E1-1				
TRAFFIC ALERT & COLLISION AVOIDANCE SYS (TCAS) M34005	DIST MEAS EQUIPMENT INTERROG LEFT (DME) M34106	CABIN TEMPERATURE CONTROL UNIT LEFT (CACTUS) M21631	AIR SUPPLY CABIN PRES CTL LEFT (ASPC) M36111	VHF COMM UNIT CENTER (VHF) M23203
E1-2				
INSTRU LAND SYS RCVR LEFT (VHF) M34310	MICRO WAVE LAND SYS CTR (MLS) M34310	AIR TRAFFIC CONTROL TRANS LEFT (ATC) M34107	CABIN DISTRIBUTION SYSTEM (CDS) M23097	VOR RCVR MARKER BEACON (VOR) LEFT M34115
E1-3				
AUDIO ENTER- TAINMENT MULTIPLEX 2 M23473	AUDIO ENTER- TAINMENT PLAYER 3 M23433	CABIN SYSTEM MANAGEMENT UNIT (CSMU) 3 M23061	PASS ADDRESS CABIN INTERPHONE COKT (PAC)XX M23016	AUDIO MANAGE UNIT M3000X
E1-4				
PROXIMITY SENSOR ELECTRONICS UNIT 1 (PSEU) M32021	ENGINE DATA INTERFACE UNIT LEFT (EDIU) M3000X	ACTUATOR CONTROL ELEC LEFT 1 (ACE) M27121	WES LEFT M31107	
E1-5				
FLAPS/LAT ELECTRONICS UNIT 1 (FSEU) M27001	FLIGHT CONTROL POWER SUPPLY ASSEMBLY LEFT (PSA) M24101	FCDC BATTERY LEFT M24102	PRIMARY FLIGHT COMPUTER LEFT (PFC) M27106	
E1-6				


**E1 E/E EQUIPMENT RACK
(LOOKING AFT)**

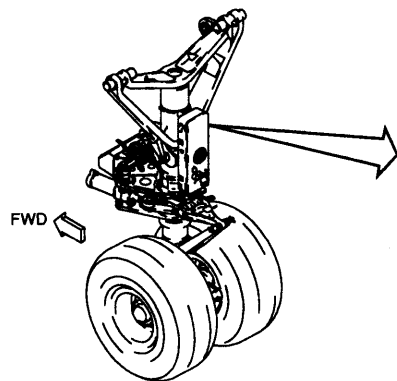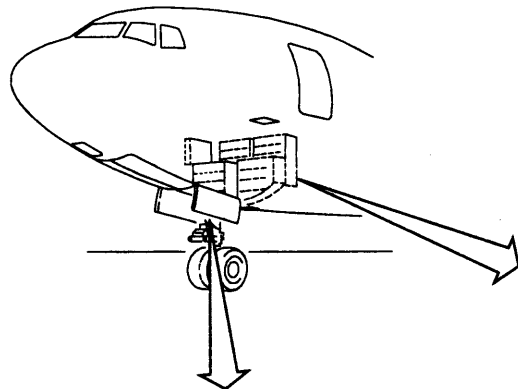



FWD



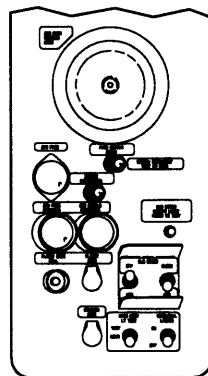


**SERVICE AND APU
SHUTDOWN PANEL (P40)**


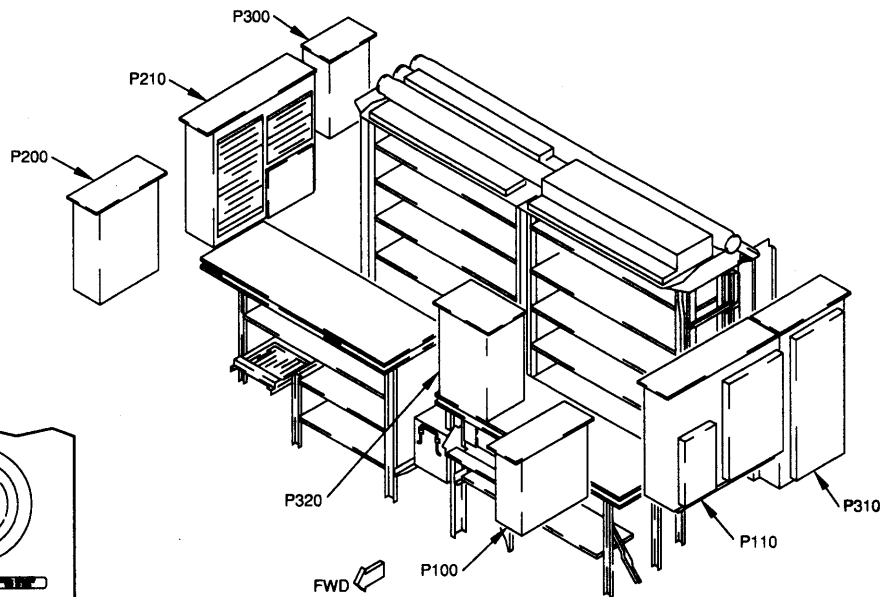




MAIN EQUIPMENT CENTER

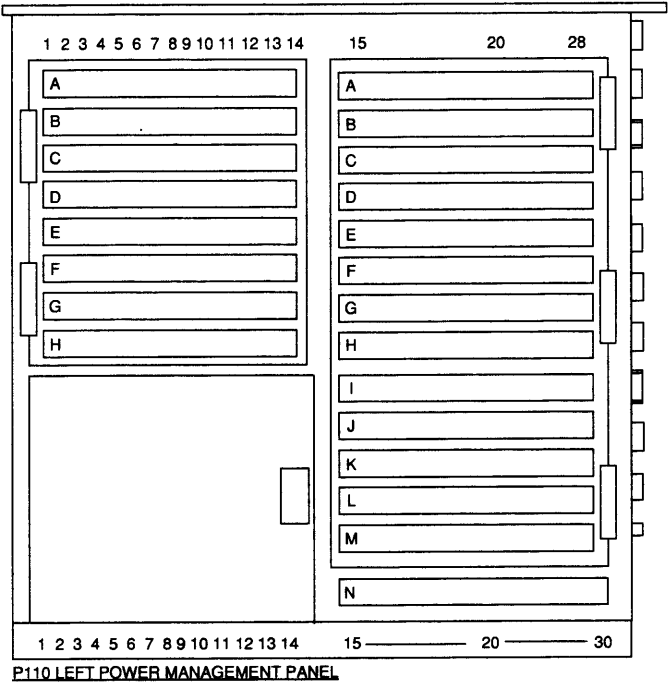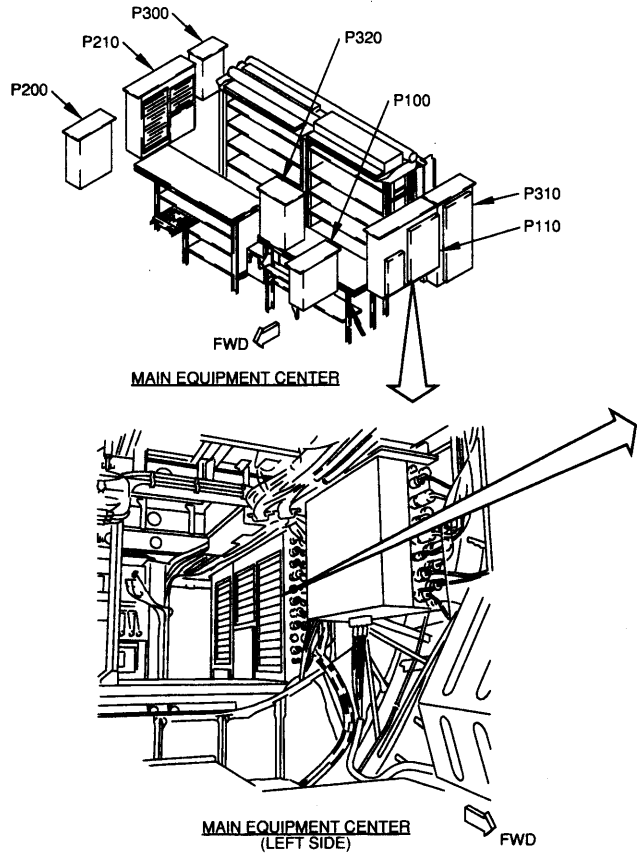


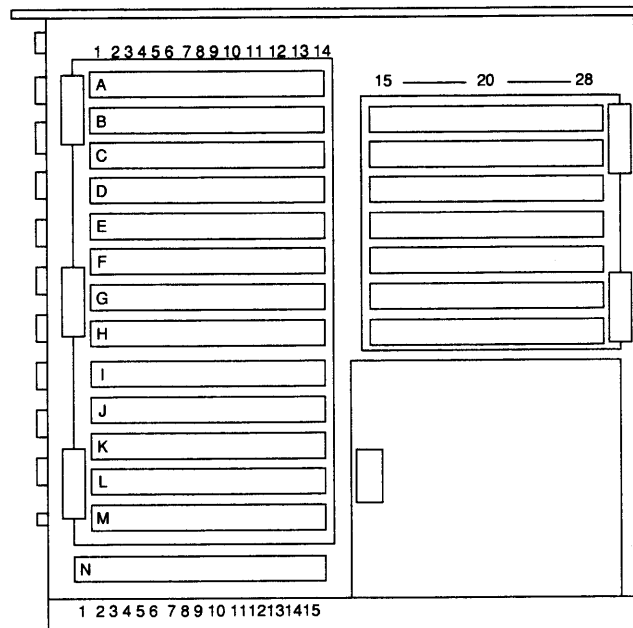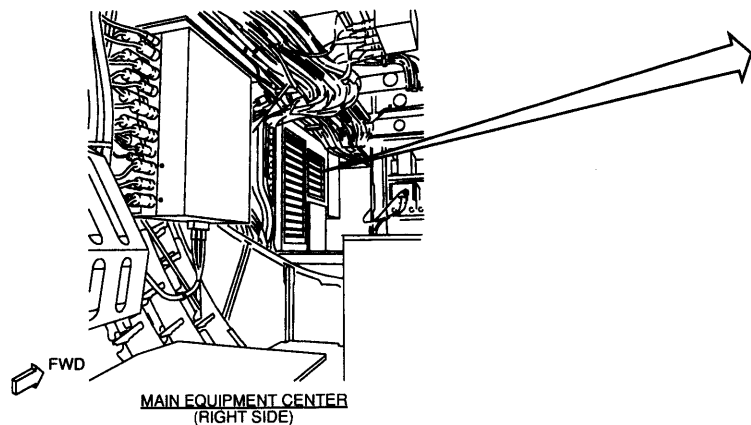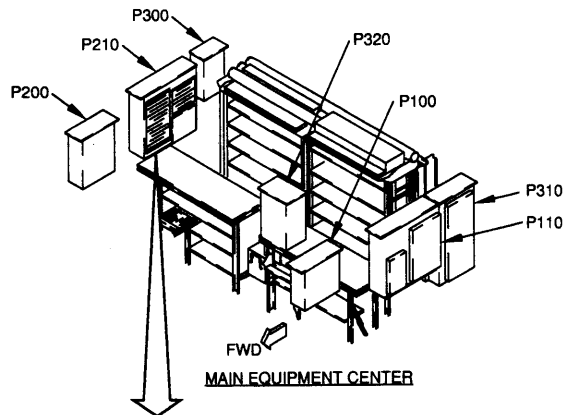




P210 RIGHT POWER MANAGEMENT PANEL

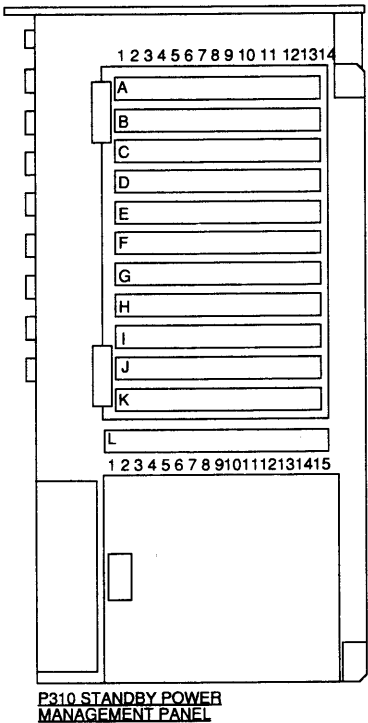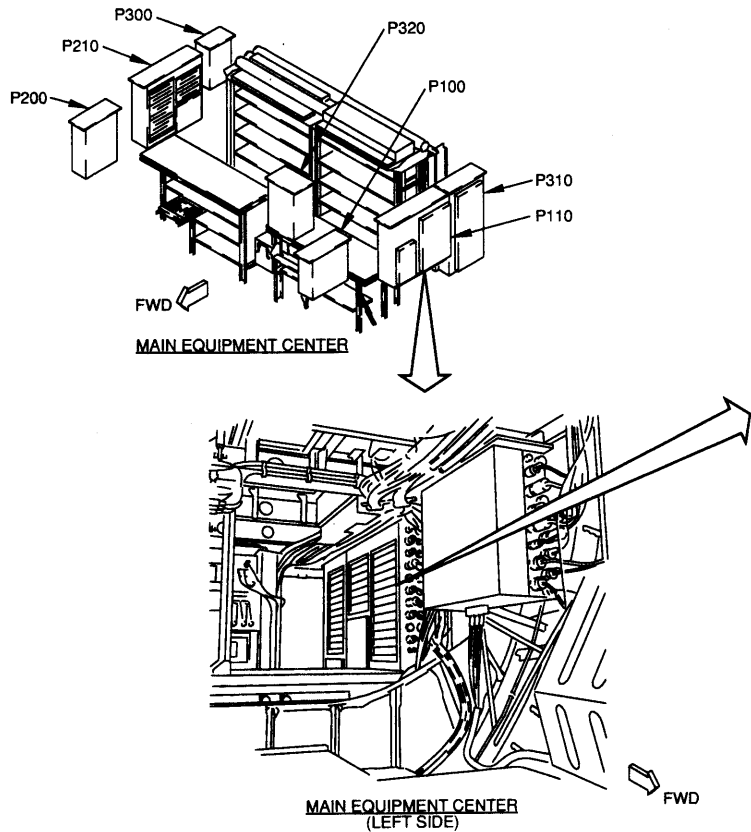


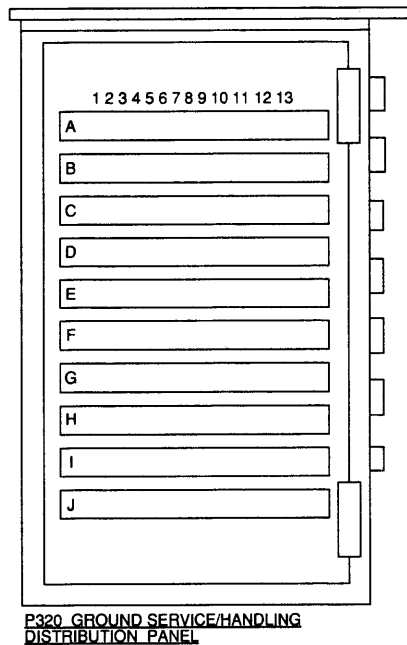
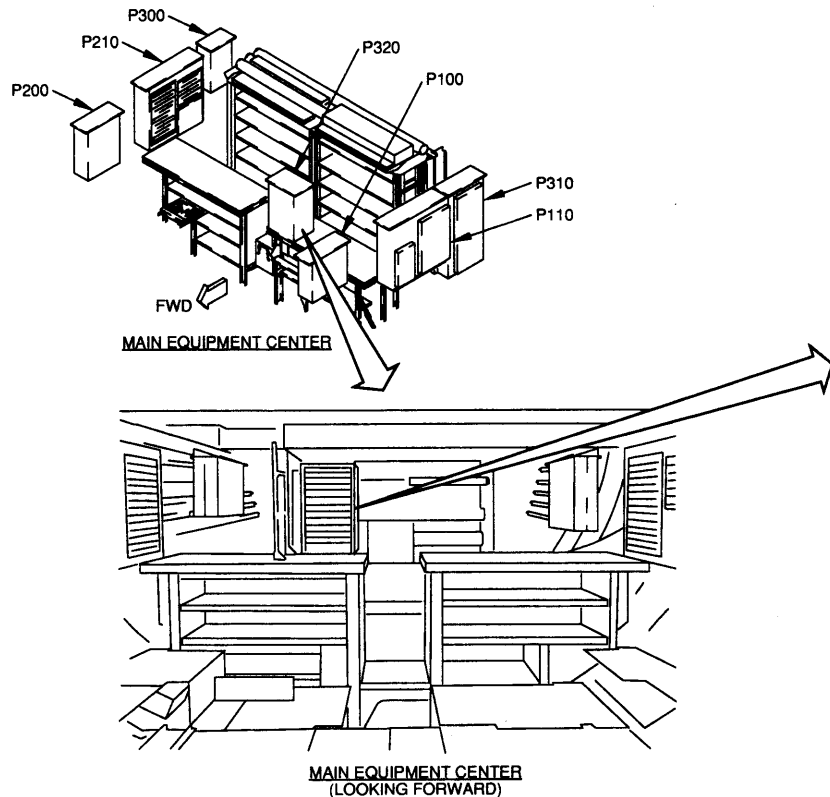


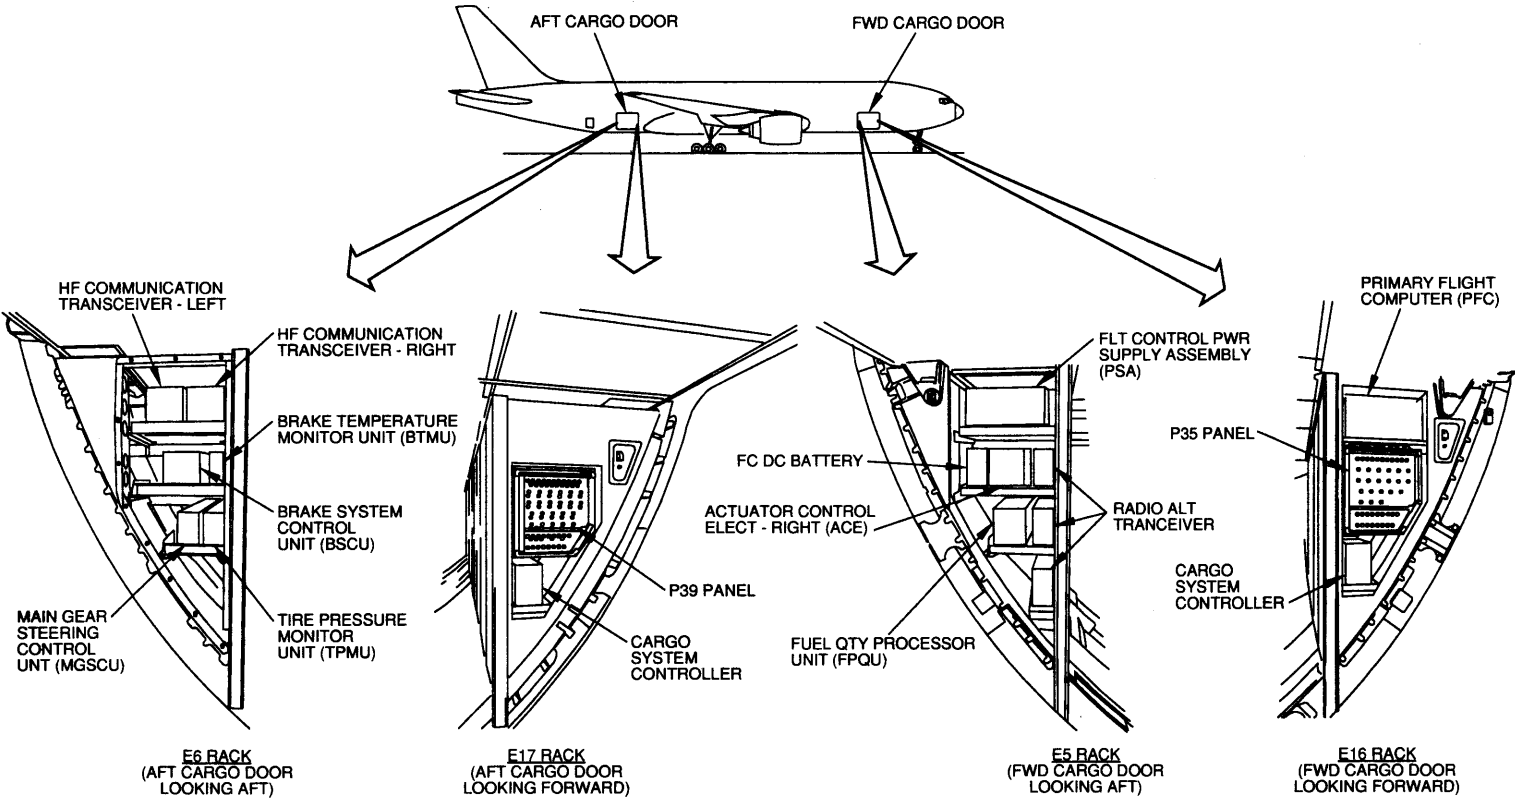

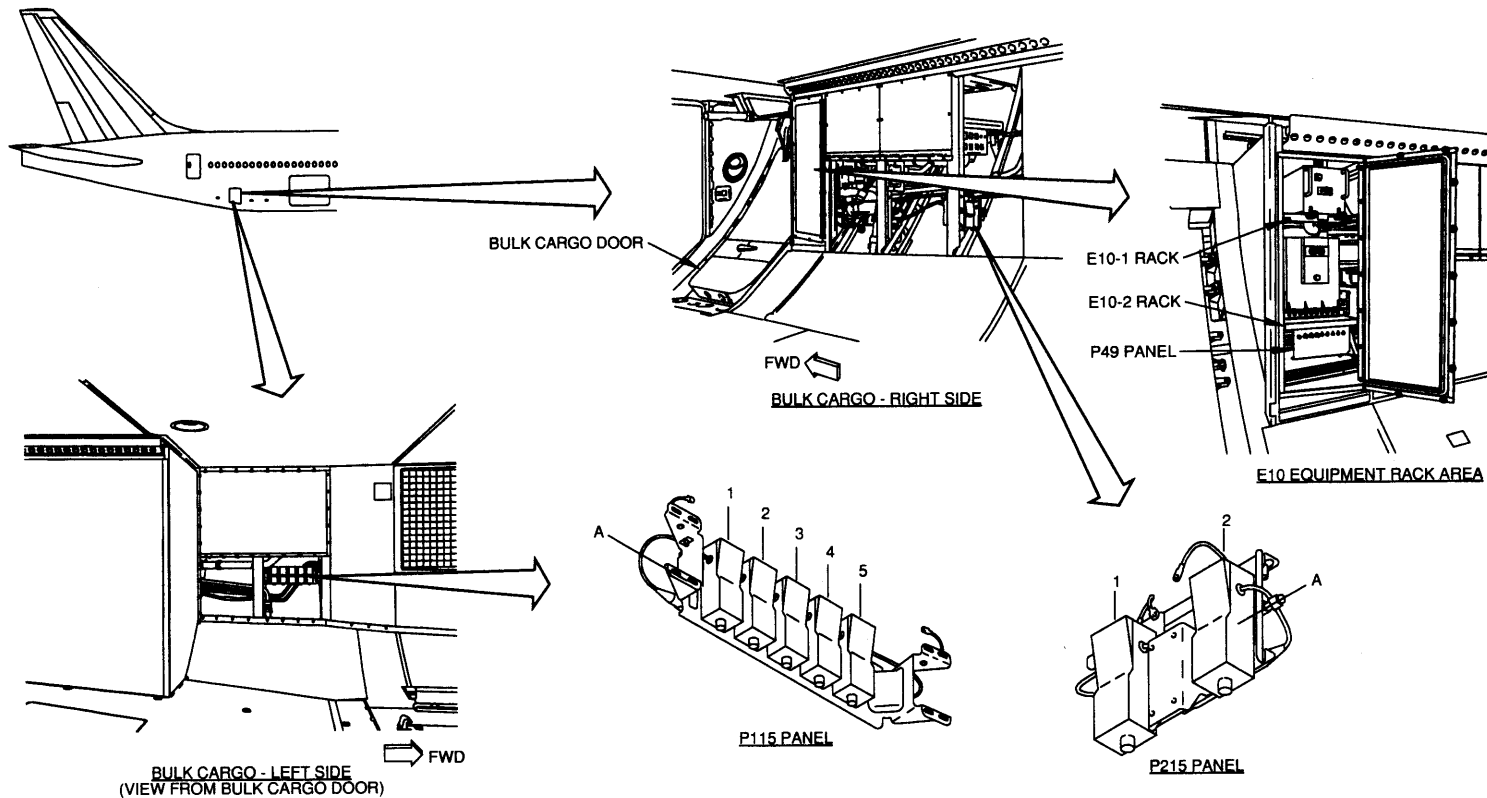

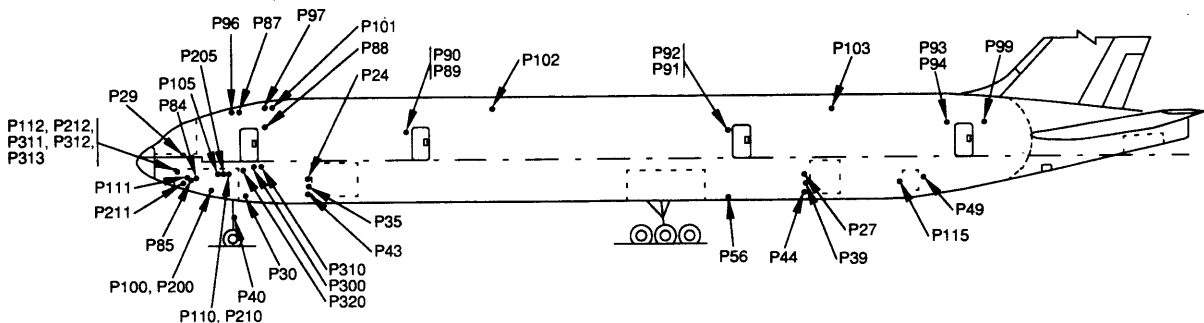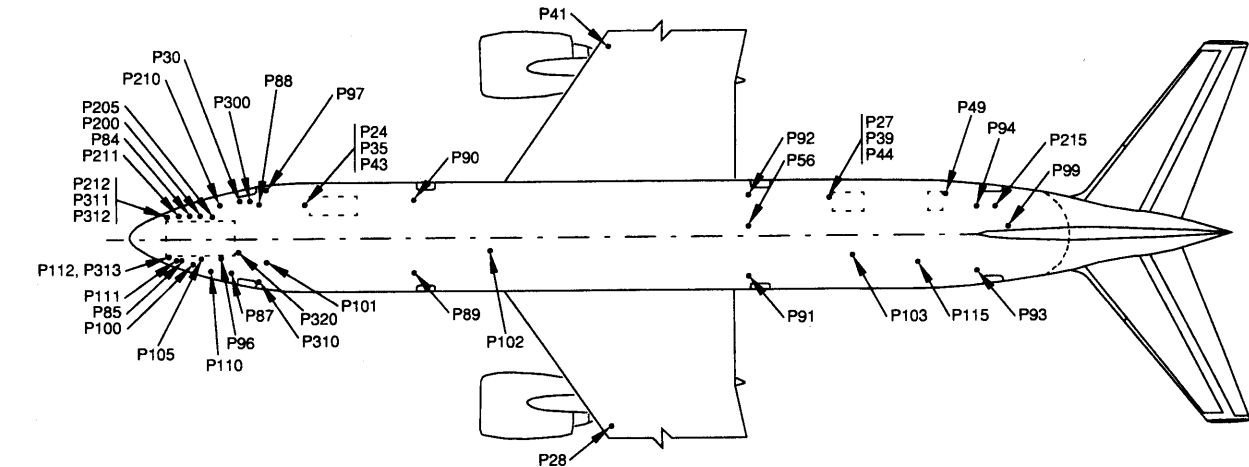


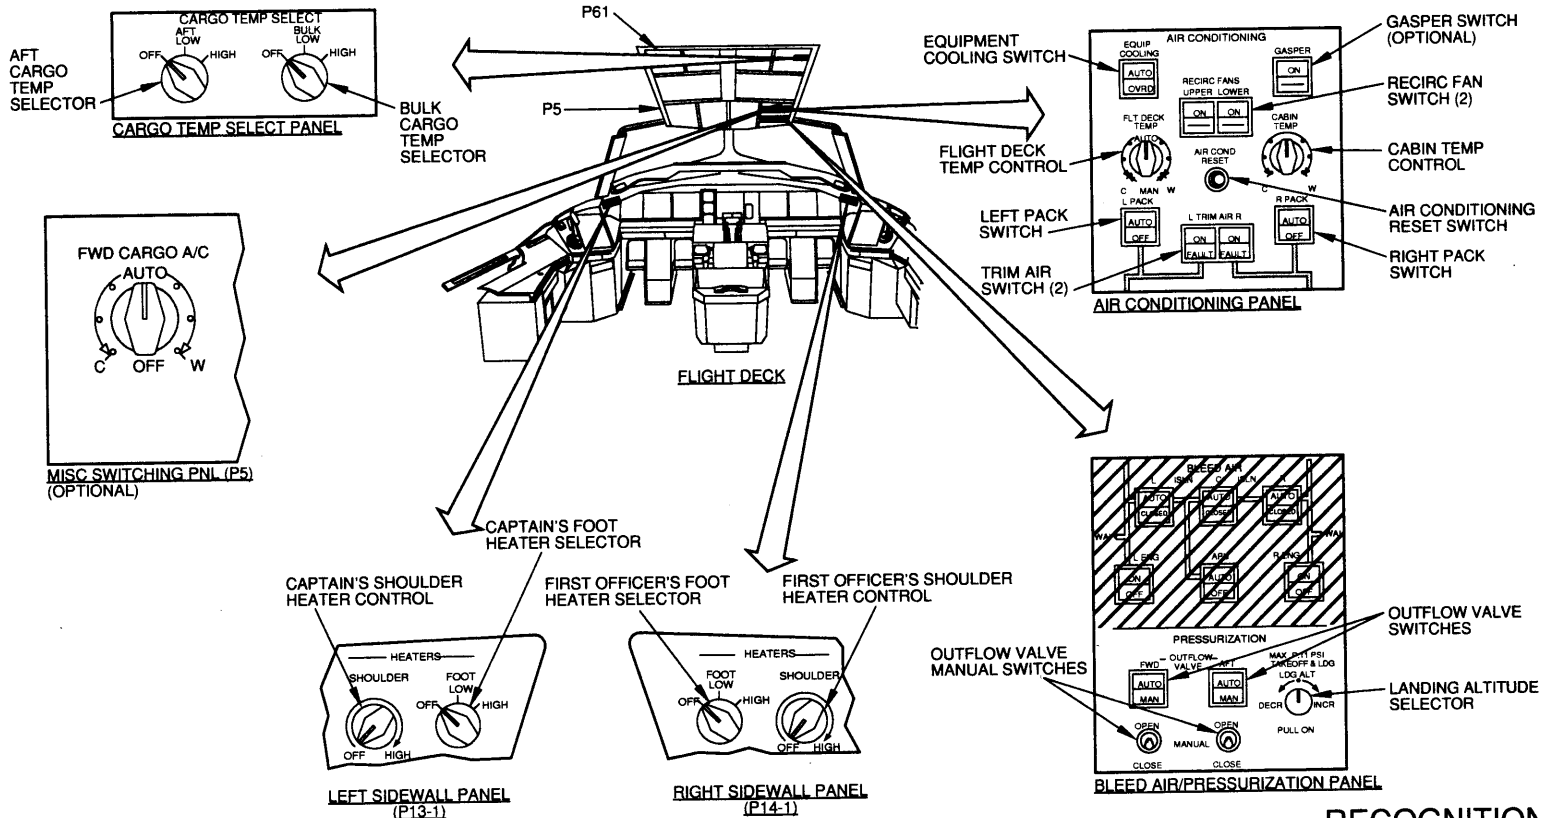

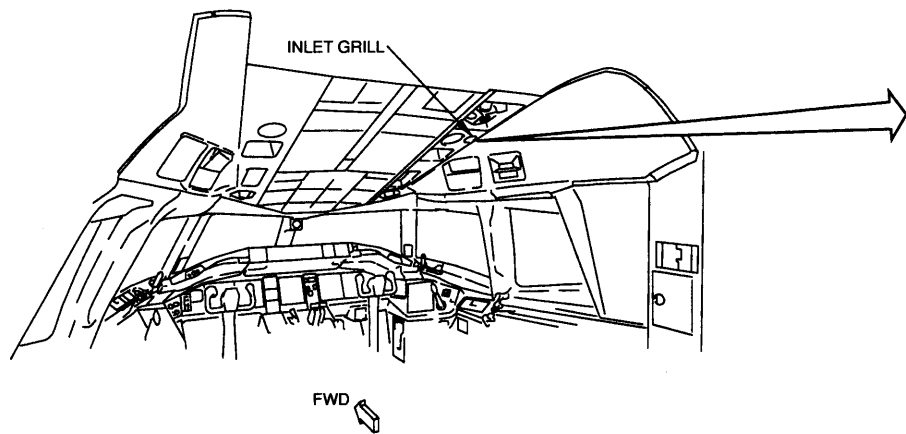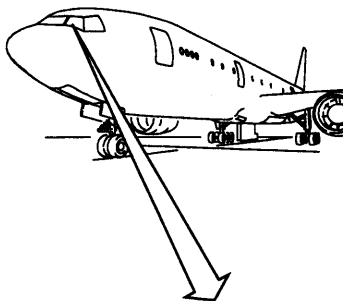






INLET GRILL


FLIGHT DECK
ZONE TEMP SENSORS

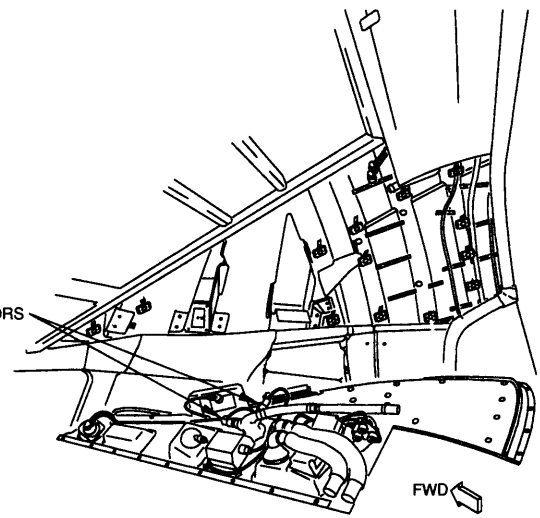



FLIGHT DECK CEILING AREA
(CEILING PANEL LOWERED)

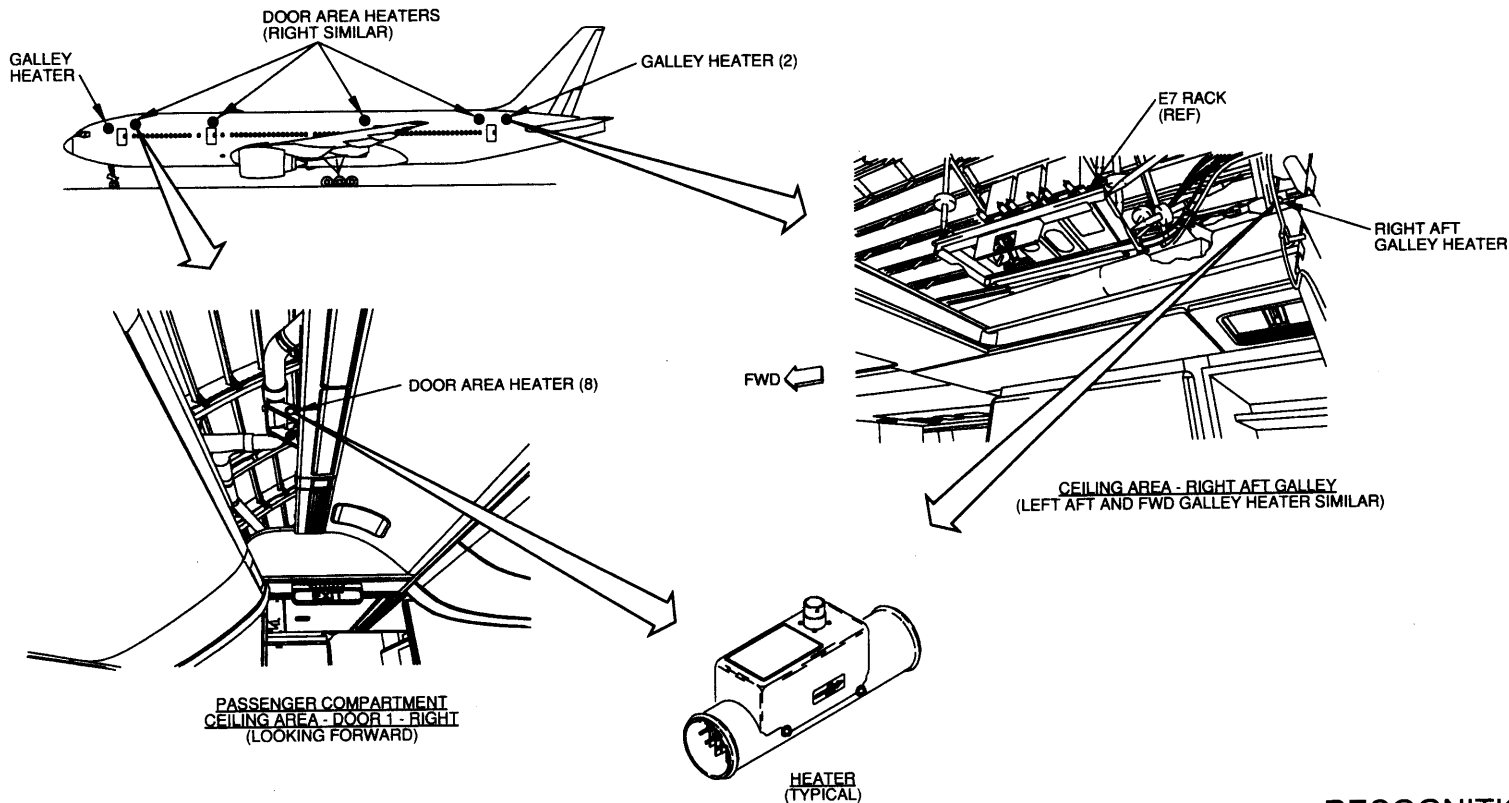

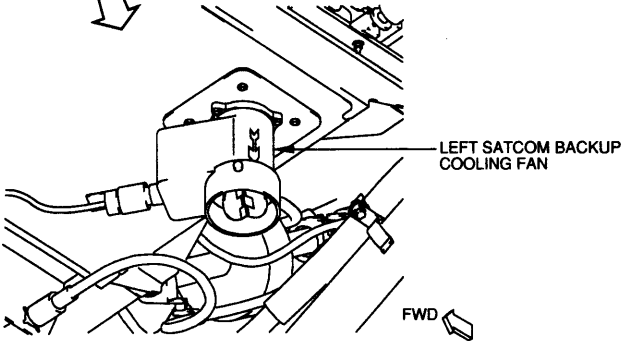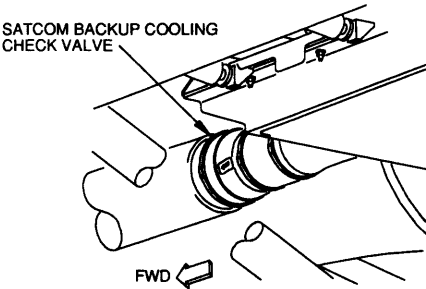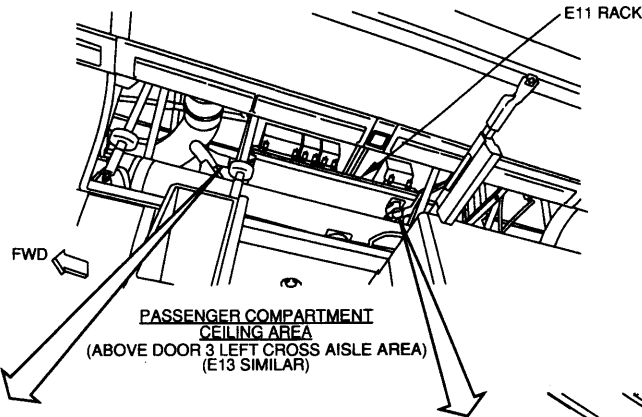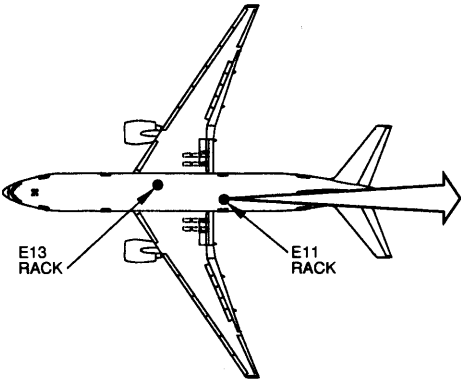

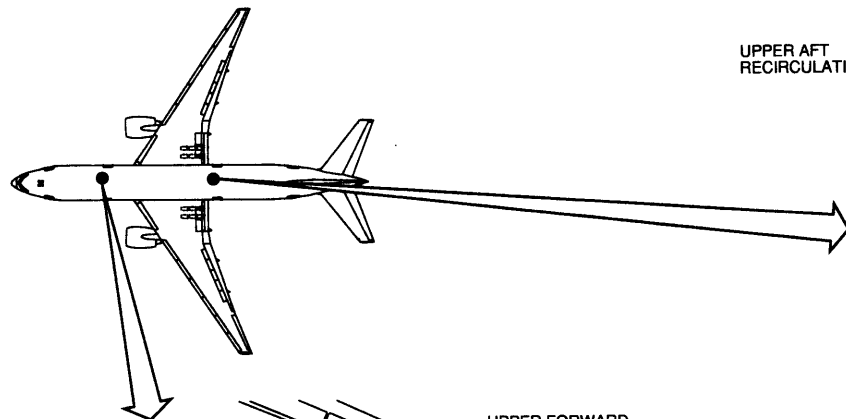


UPPER AFT
RECIRCULATION FAN

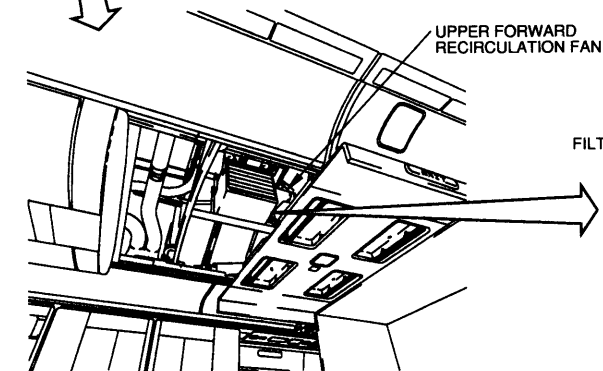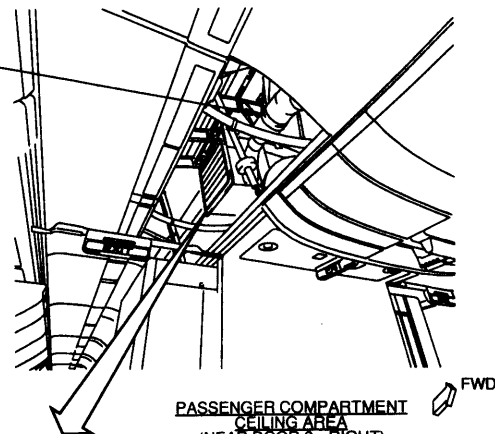


FWD

PASSENGER COMPARTMENT
CEILING AREA
(NEAR DOOR 2 - RIGHT)


FILTER (4)

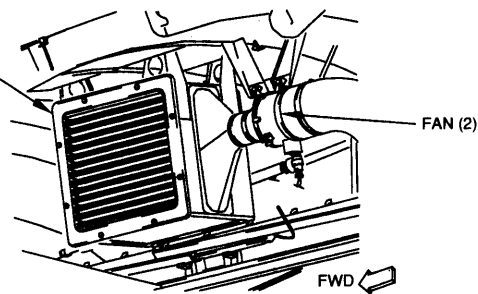

UPPER RECIRCULATION
FAN/FILTER INSTALLATION





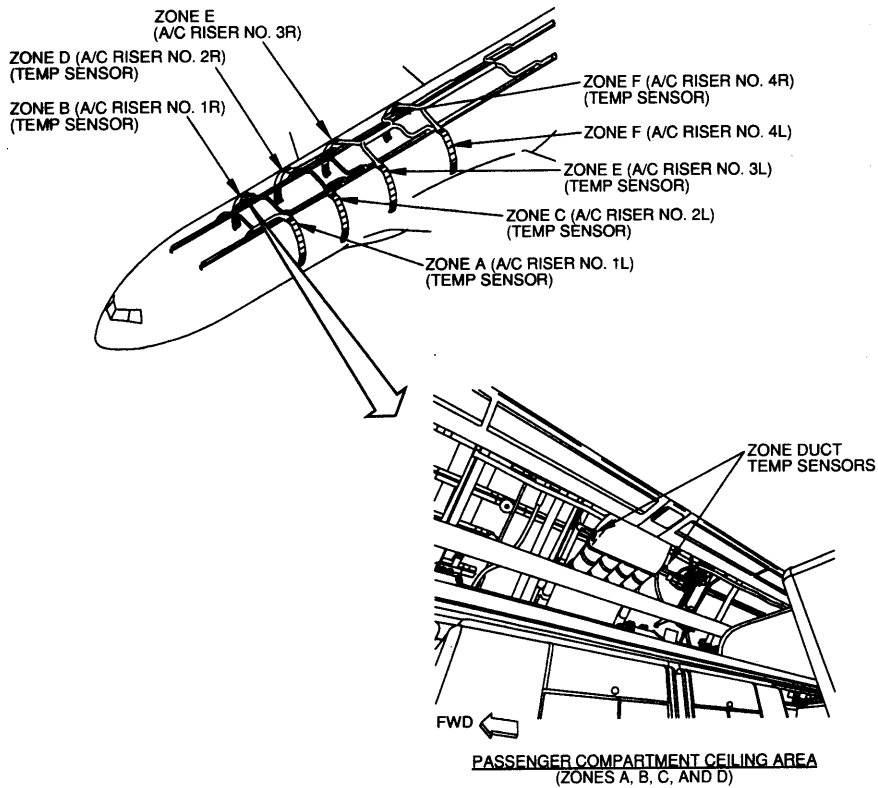



NOTE: ZONE DUCT TEMP SENSORS ARE LOCATED ON DISTRIBUTION RISERS 1 - 4.
ZONE E, F DUCT TEMP SENSORS ARE LOCATED ABOVE INBOARD CEILING PANELS.


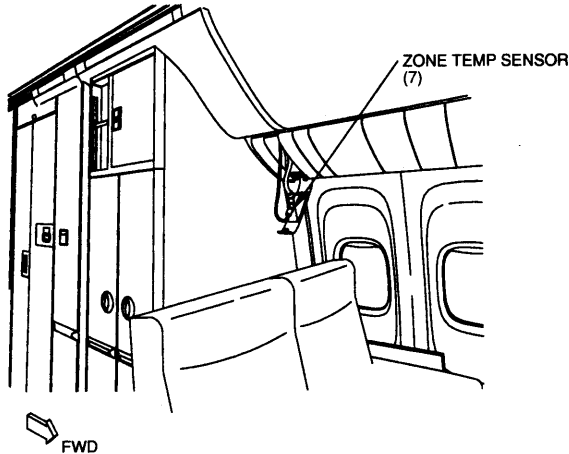


ZONE	STATION	GENERAL LOCATION
A	464	(3RD WINDOW AFT OF DOOR 1)
B	629	(11TH WINDOW AFT OF DOOR 1)
C	901	(4TH WINDOW AFT OF DOOR 2)
D#1	1021	(10TH WINDOW AFT OF DOOR 2)
D#2	1122	(1ST WINDOW FWD OF DOOR 3)
E	1364	(7TH WINDOW AFT OF DOOR 3)
F	1796	(11TH WINDOW AFT OF DOOR 4)


ZONE TEMP SENSOR LOCATIONS

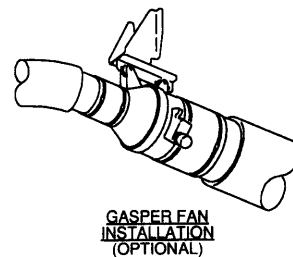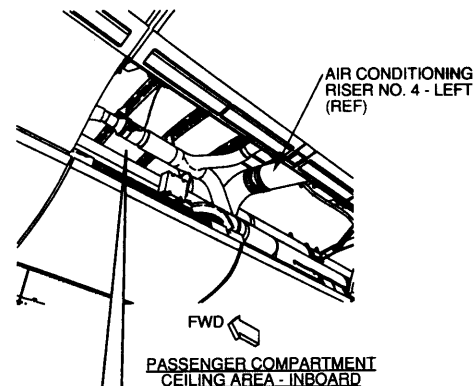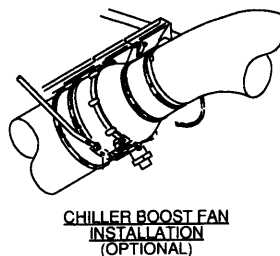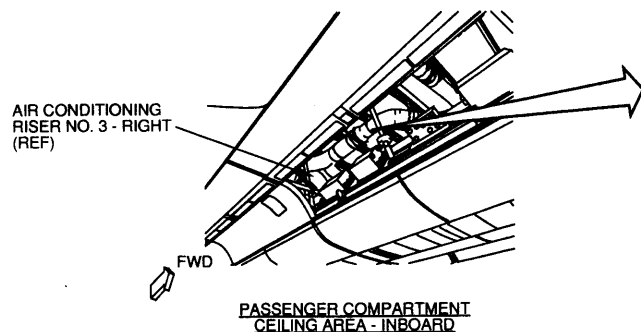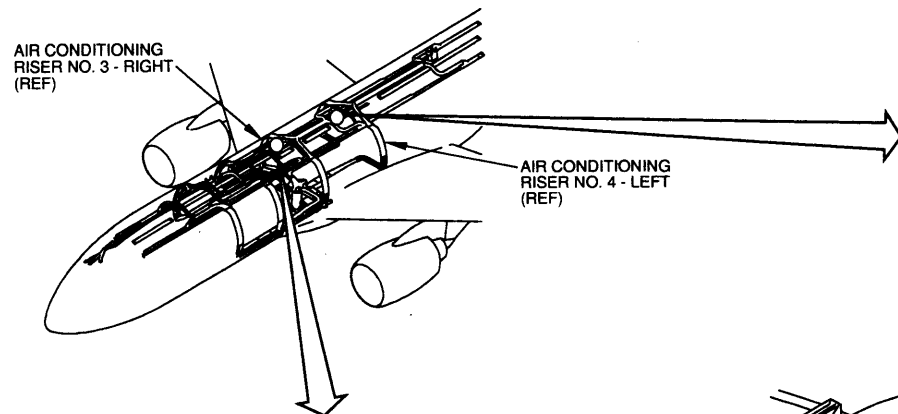

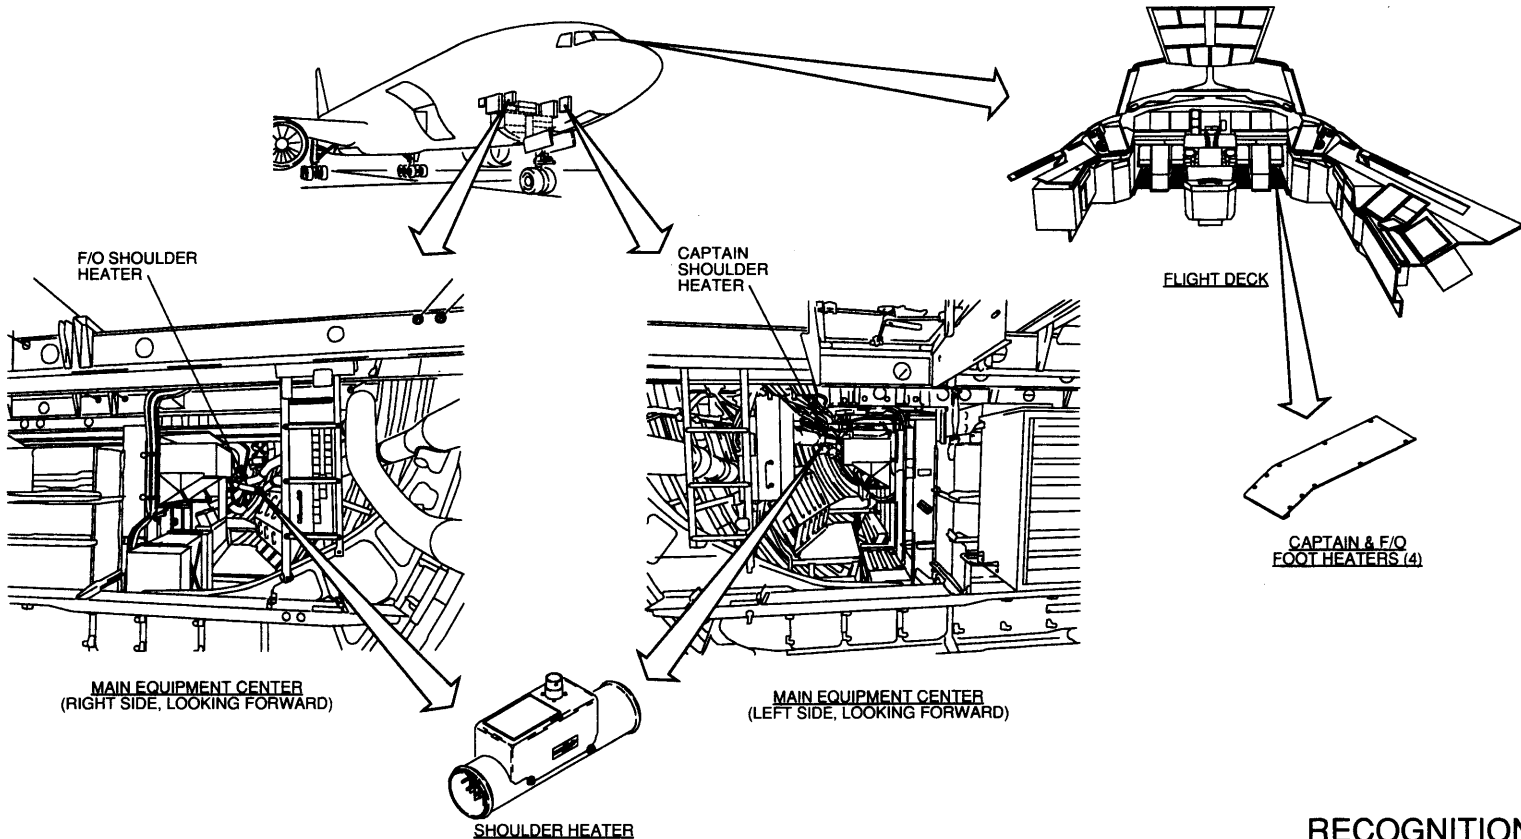

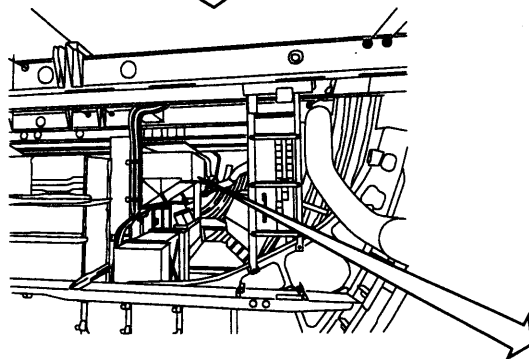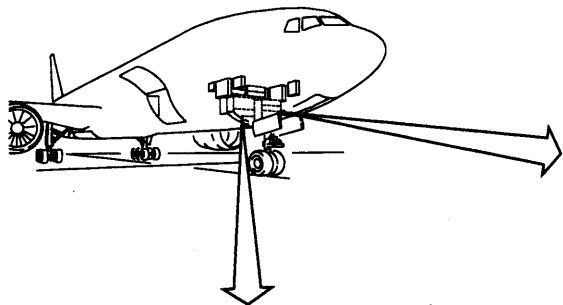

MAIN EQUIPMENT CENTER
(RIGHT SIDE LOOKING FORWARD)

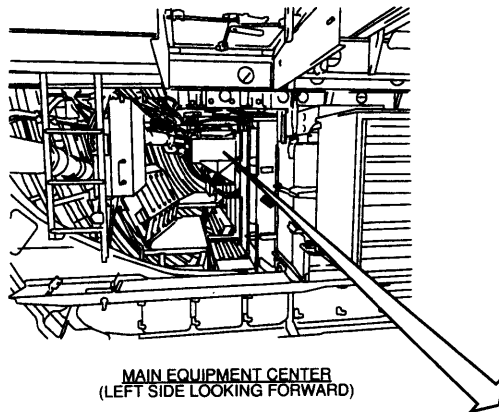

MAIN EQUIPMENT CENTER
(LEFT SIDE LOOKING FORWARD)

RIGHT ECS MISCELLANEOUS
CARD (ECSCM)


1	PRU - INTERPOLATOR CARD
2	PRU - LINEARIZATION CARD
3	CENTER HYDRA CARD
4	RIGHT FLOOR CARD
5	RIGHT ACPS CARD
6	CENTER ACPS CARD
7	CENTER FLOOR CARD
8	SPACE
9	RIGHT ENGINE PRESENT DET CARD
10	SPACE
11	LEFT AING SIGNAL GATWAY CARD
12	SPACE
13	RIGHT AING SIGNAL GATWAY CARD
14	RIGHT WEIGHT ON WHEELS CARD
15	RIGHT HYDRA CARD
16	PRU - LINEARIZATION CARD
17	PRU - INTERPOLATOR CARD


RIGHT SYSTEMS CARD FILE (P84)



LEFT ECS MISCELLANEOUS
CARD (ECSCM)

1	PRU - INTERPOLATOR CARD
2	PRU - LINEARIZATION CARD
3	CENTER HYDRA CARD
4	LEFT FLOOR CARD
5	LEFT ACPS CARD
6	SPACE
7	SPACE
8	LEFT ENGINE PRESENT DET CARD
9	SPACE
10	LEFT AING SIGNAL GATWAY CARD
11	SPACE
12	RIGHT AING SIGNAL GATWAY CARD
13	LEFT WEIGHT ON WHEELS CARD
14	LEFT HYDRA CARD
15	PRU - LINEARIZATION CARD
16	PRU - INTERPOLATOR CARD


LEFT SYSTEMS CARD FILE (P85)

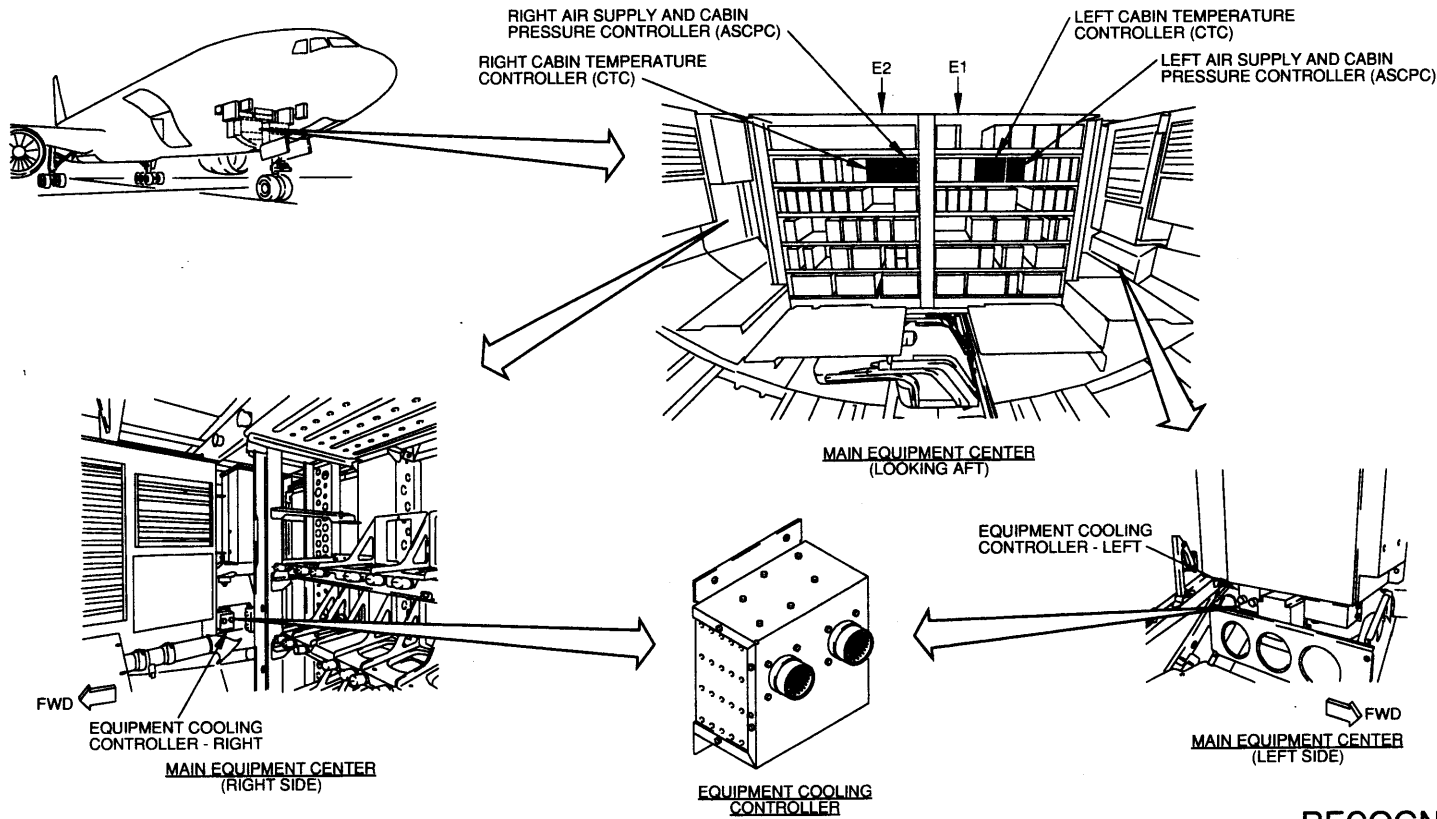

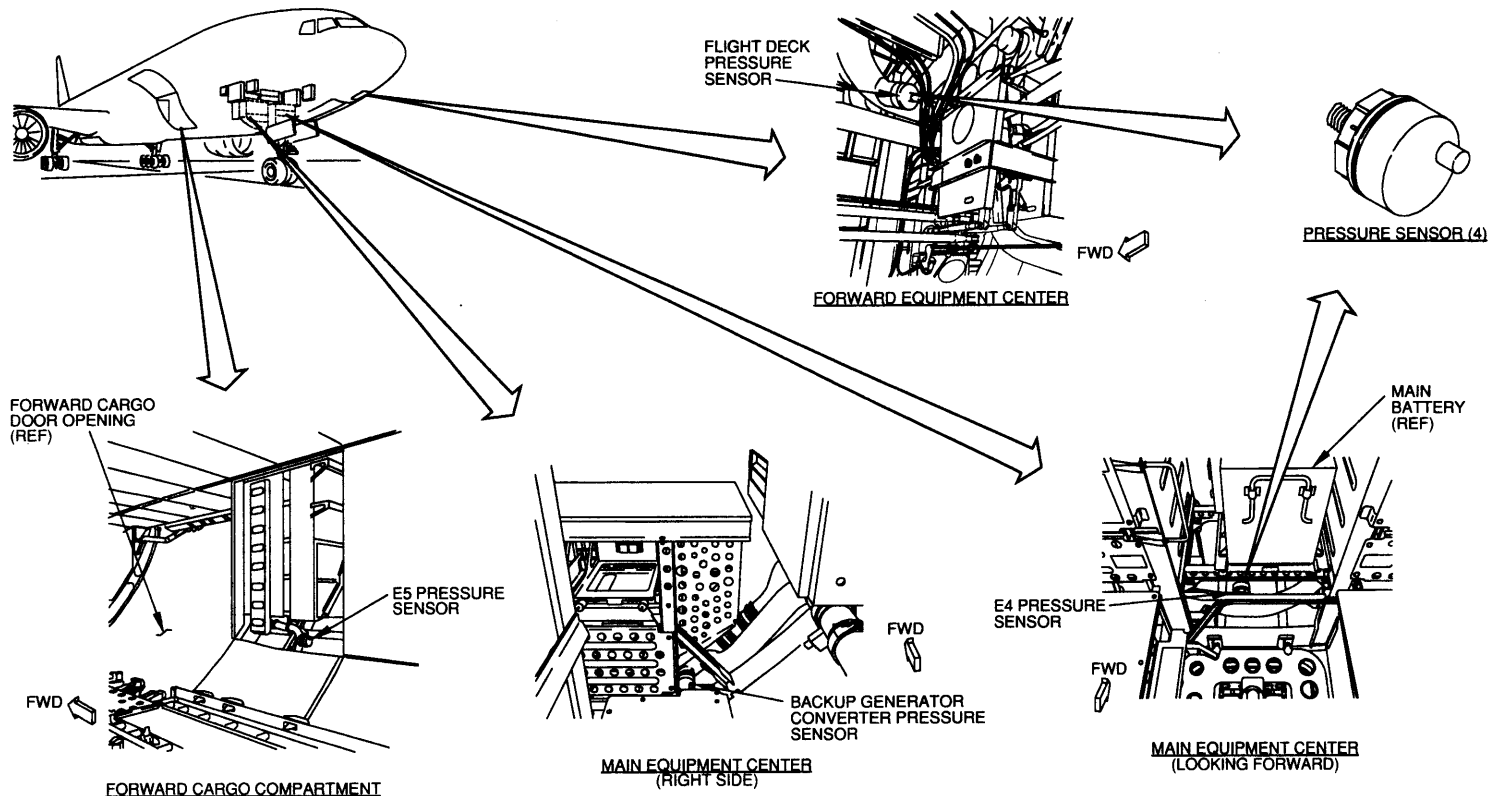


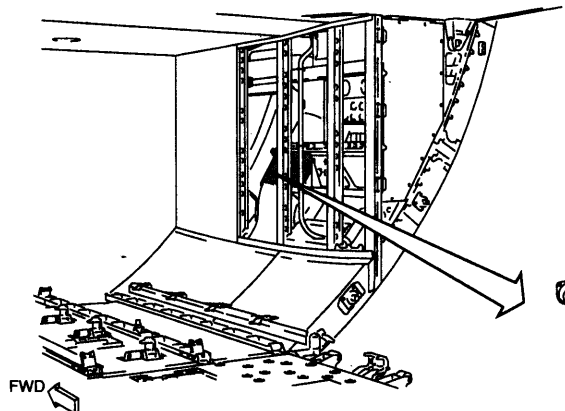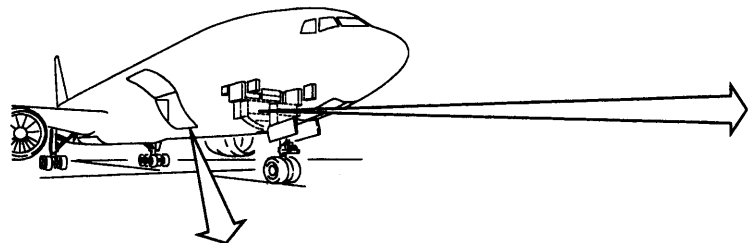


FORWARD CARGO COMPARTMENT
(FORWARD RIGHT SIDEWALL)

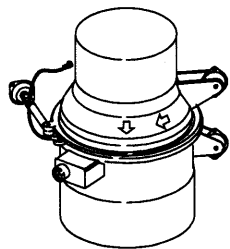


EQUIPMENT COOLING
VENT FAN

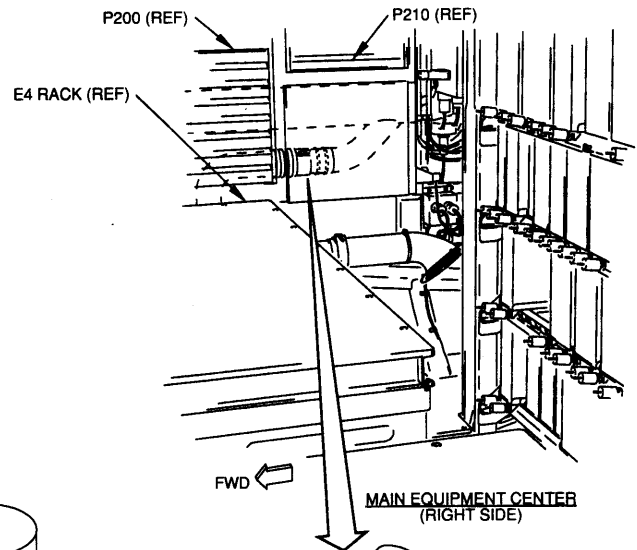



MAIN EQUIPMENT CENTER
(RIGHT SIDE)

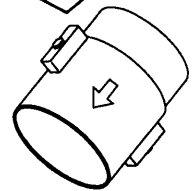



CONVERTER SUPPLEMENTAL
COOLING CHECK VALVE



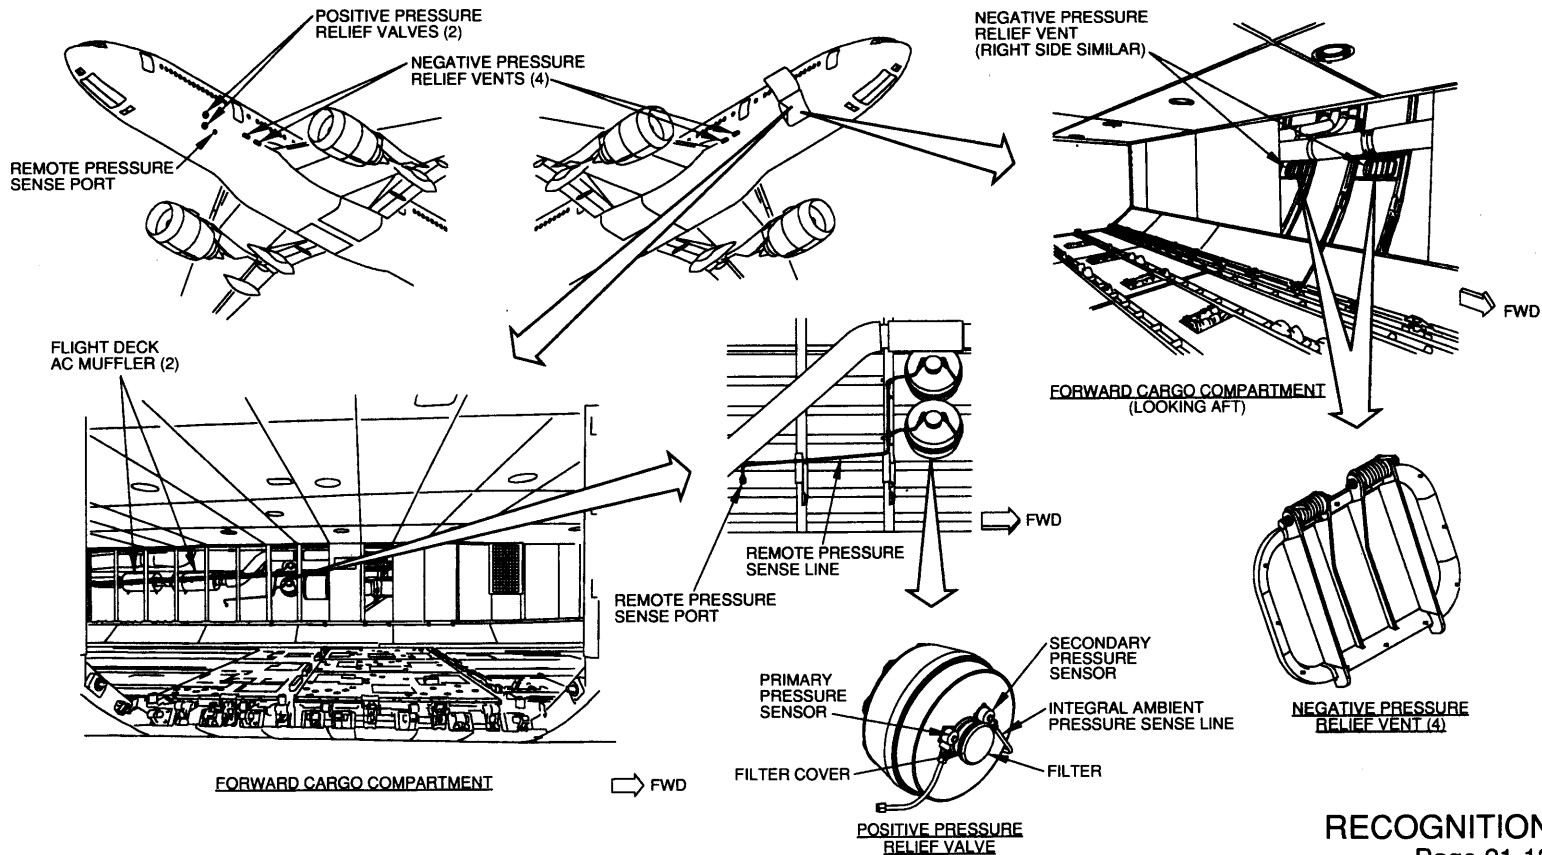


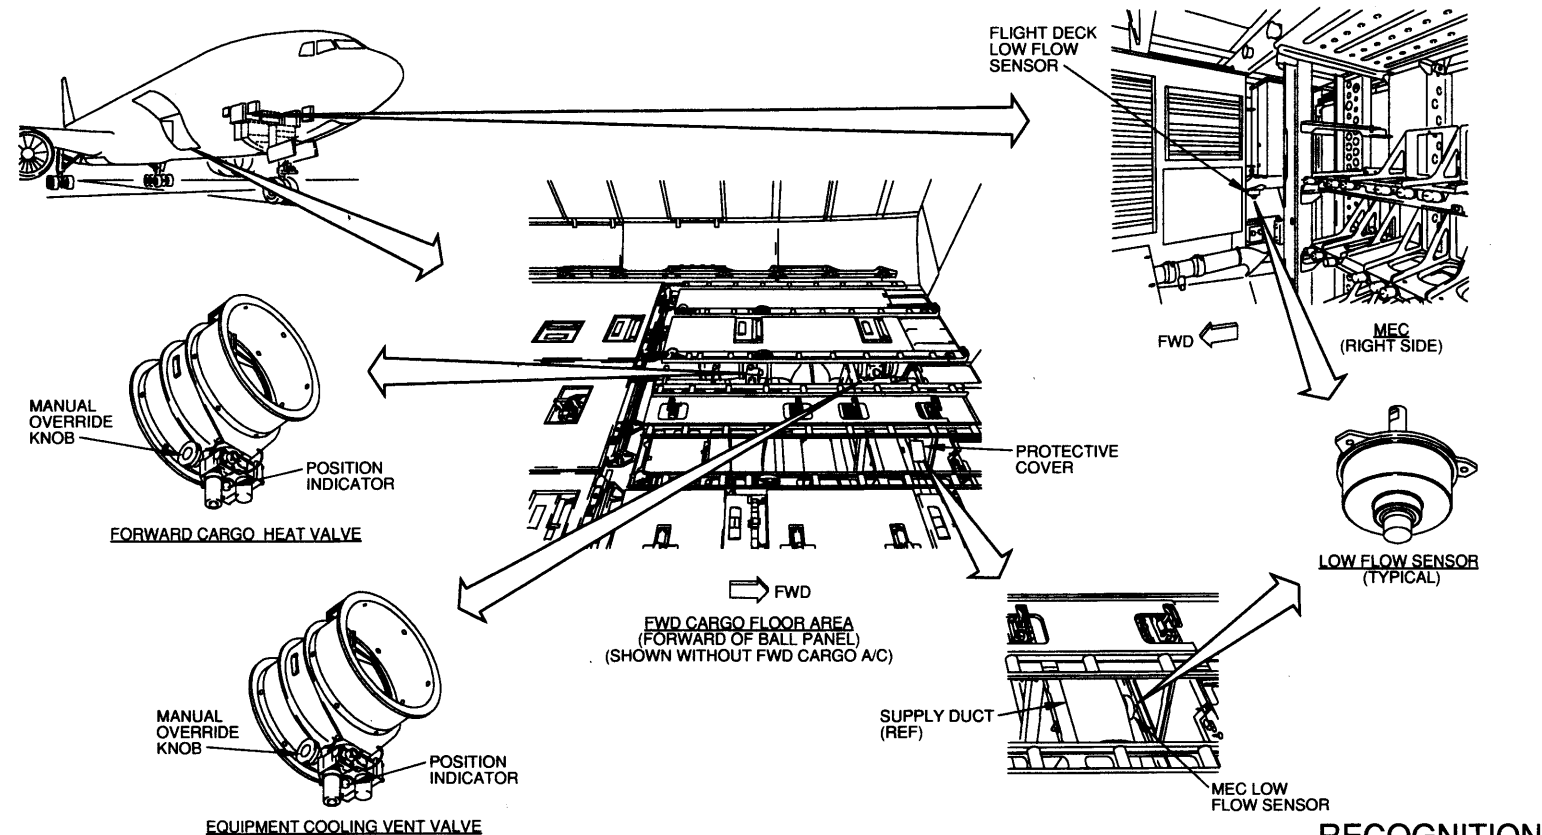

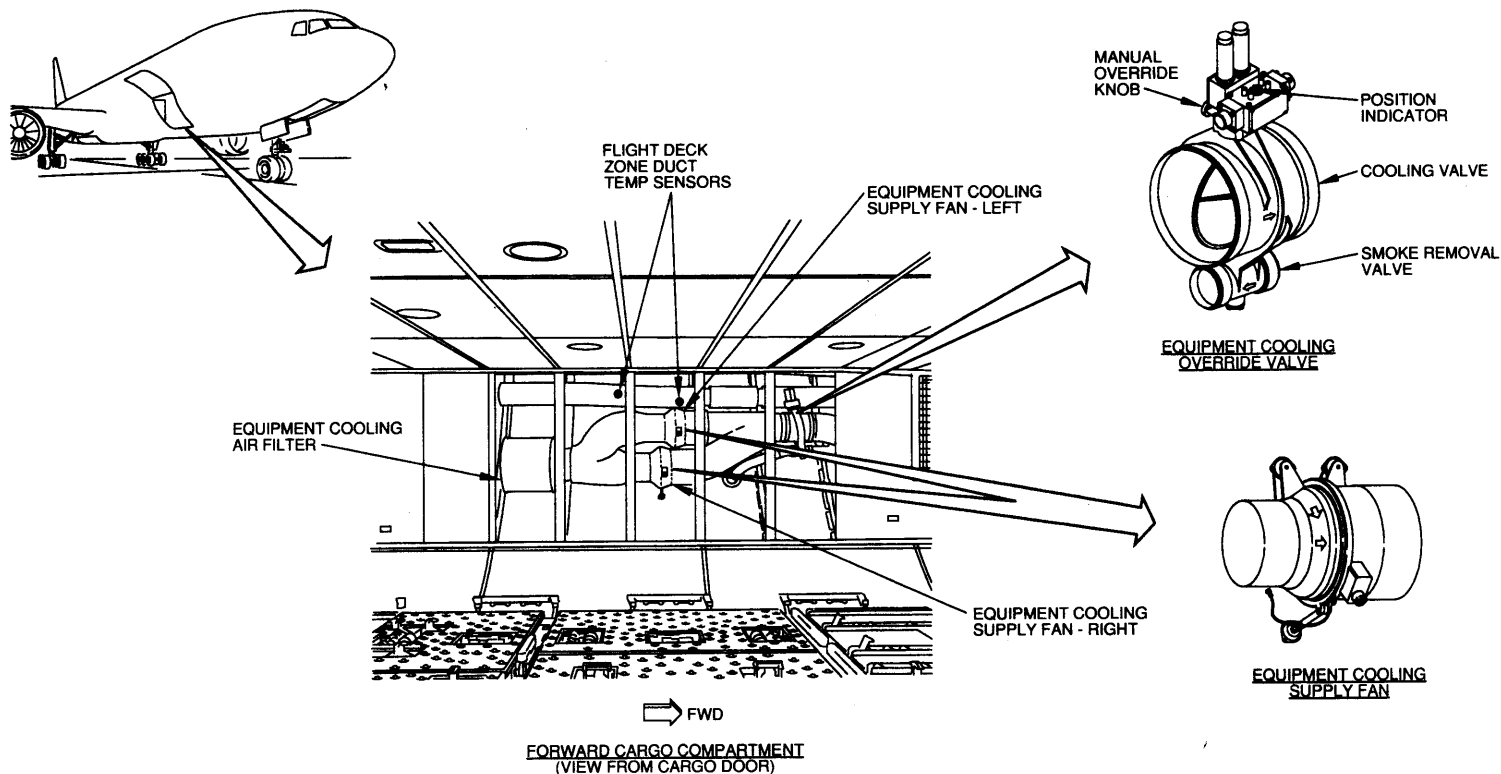


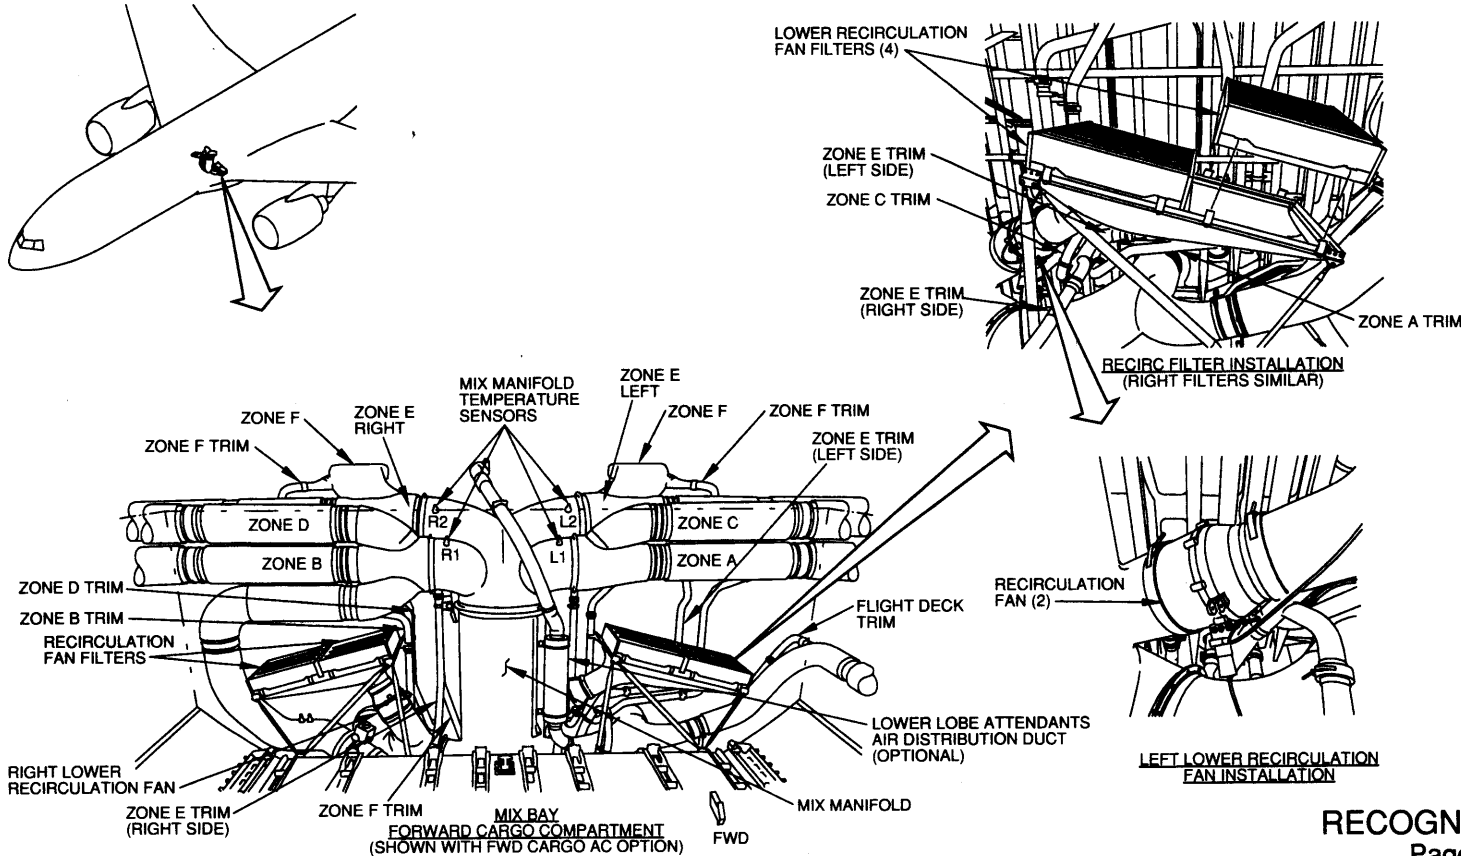

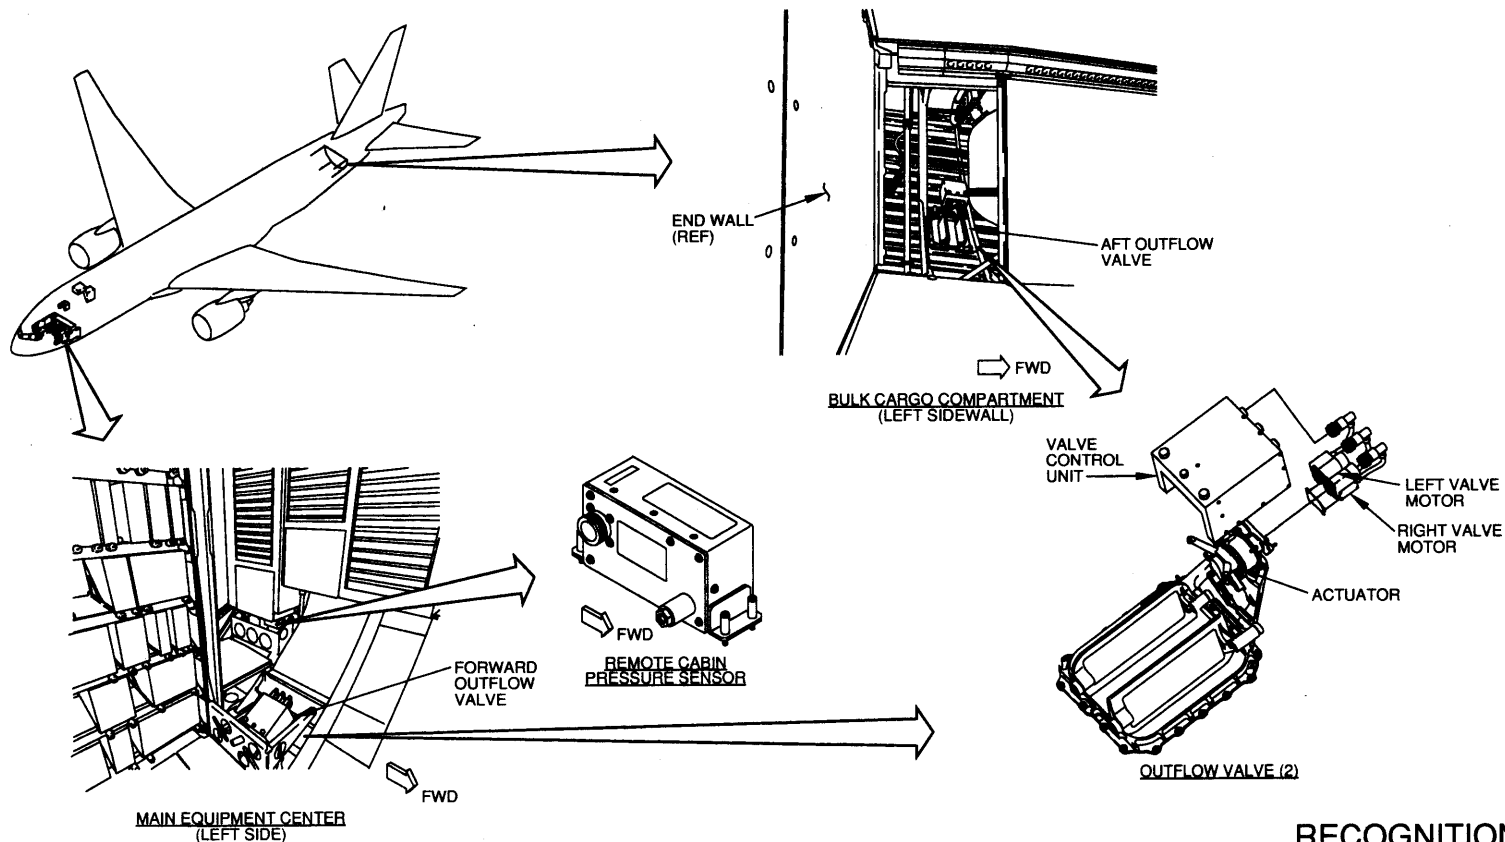


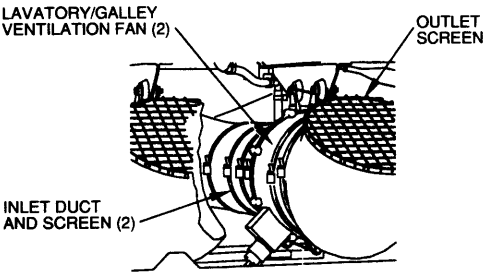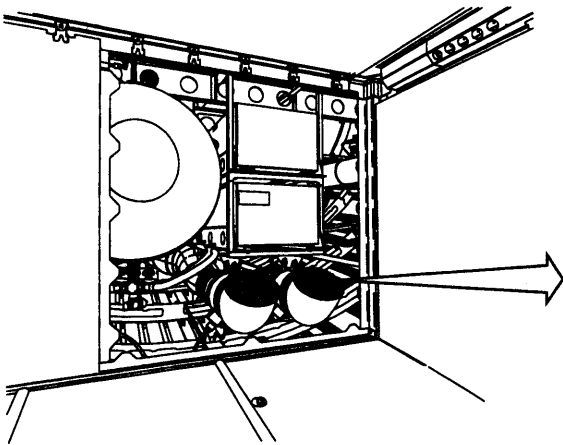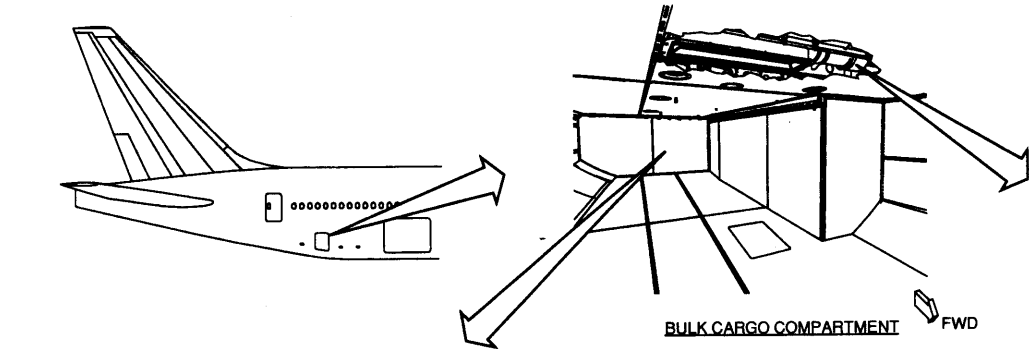



LAVATORY/GALLEY VENTILATION FAN INSTALLATION

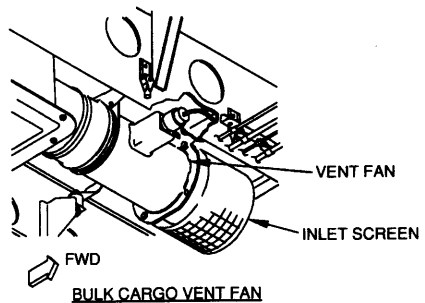




BULK CARGO VENT FAN

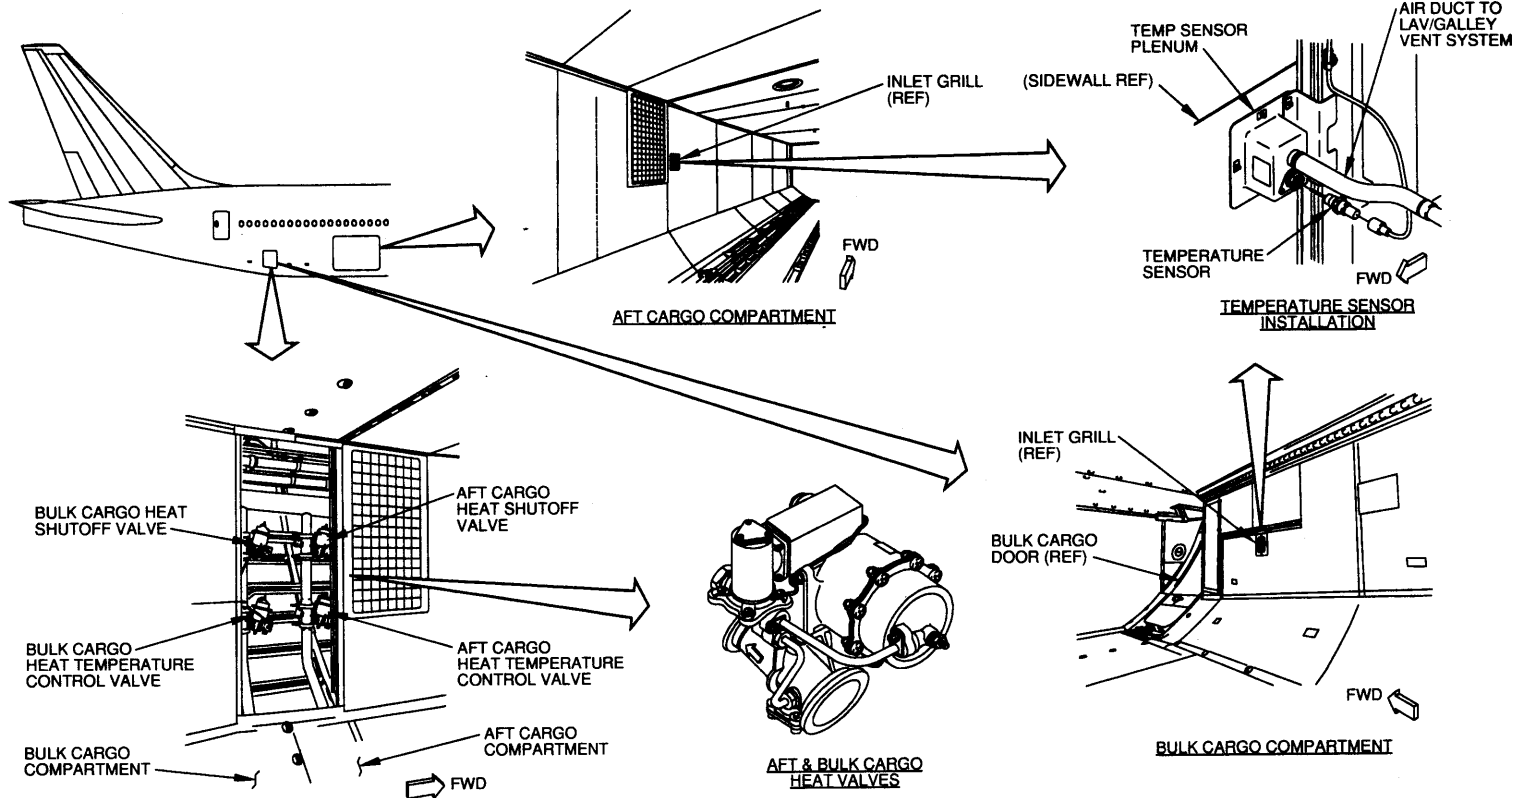

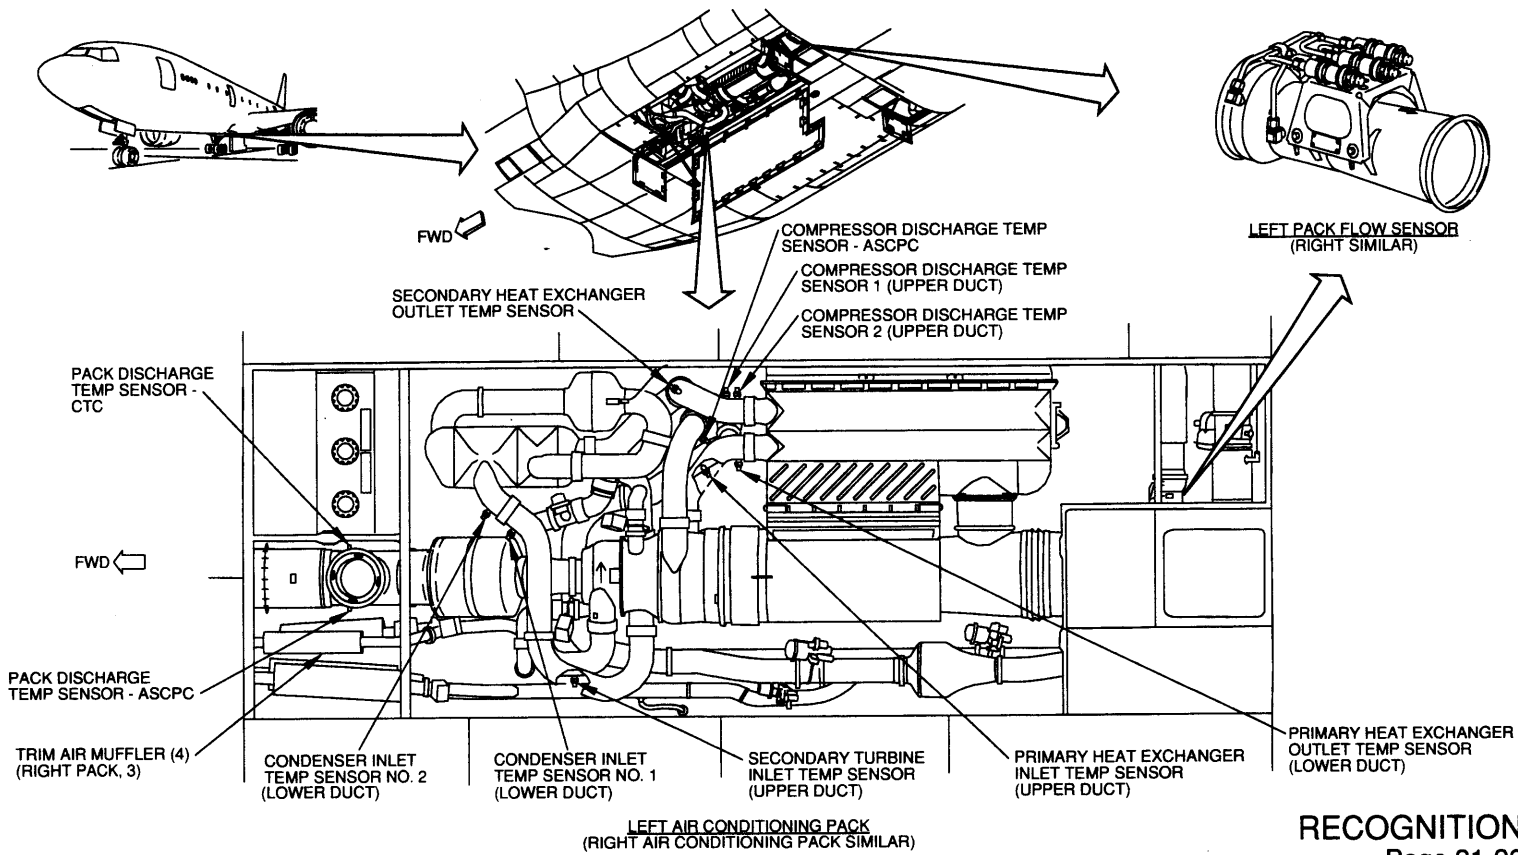

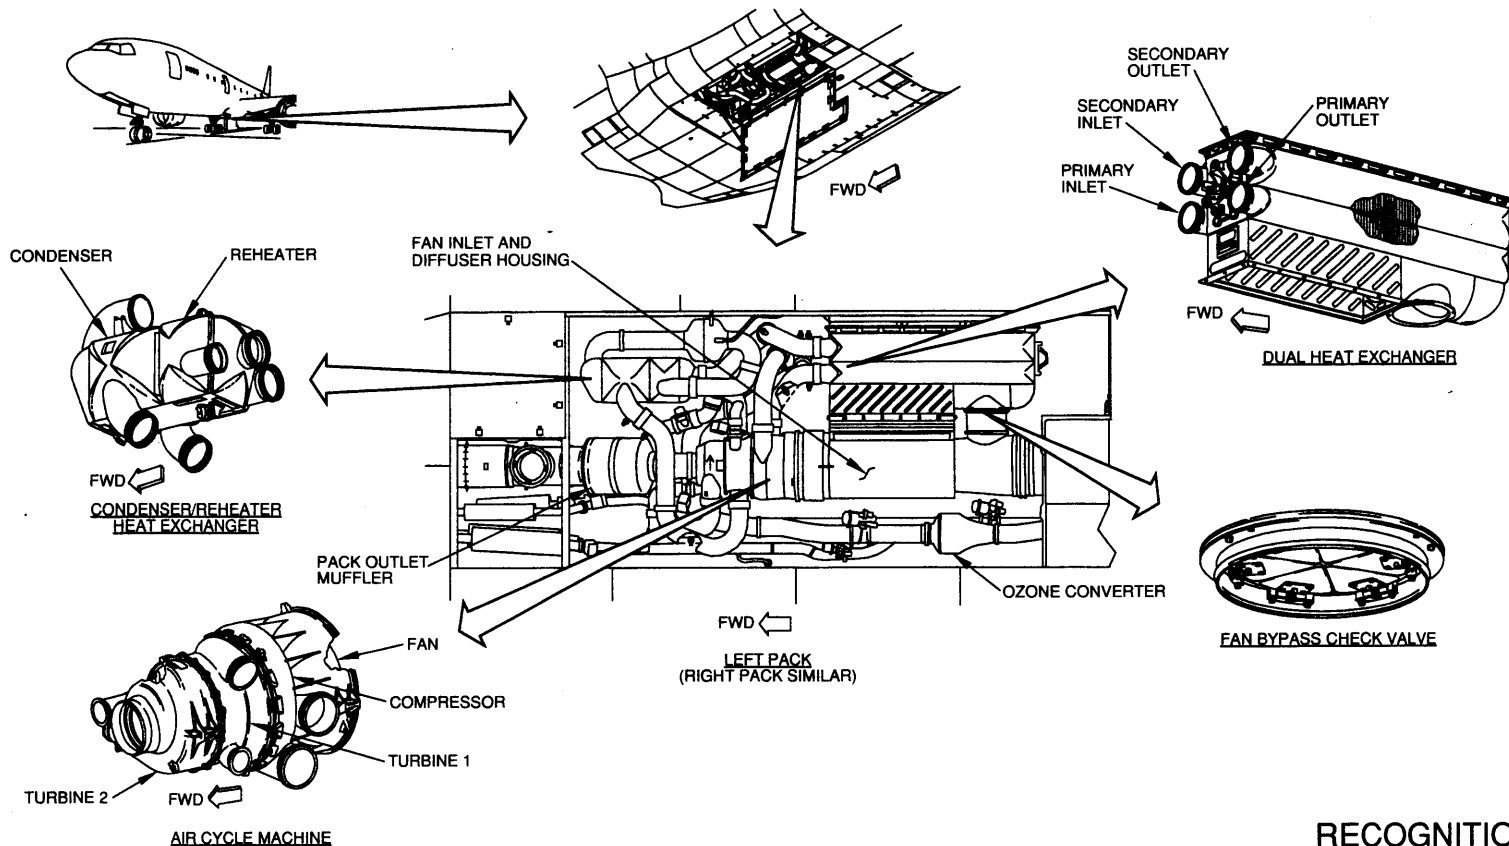

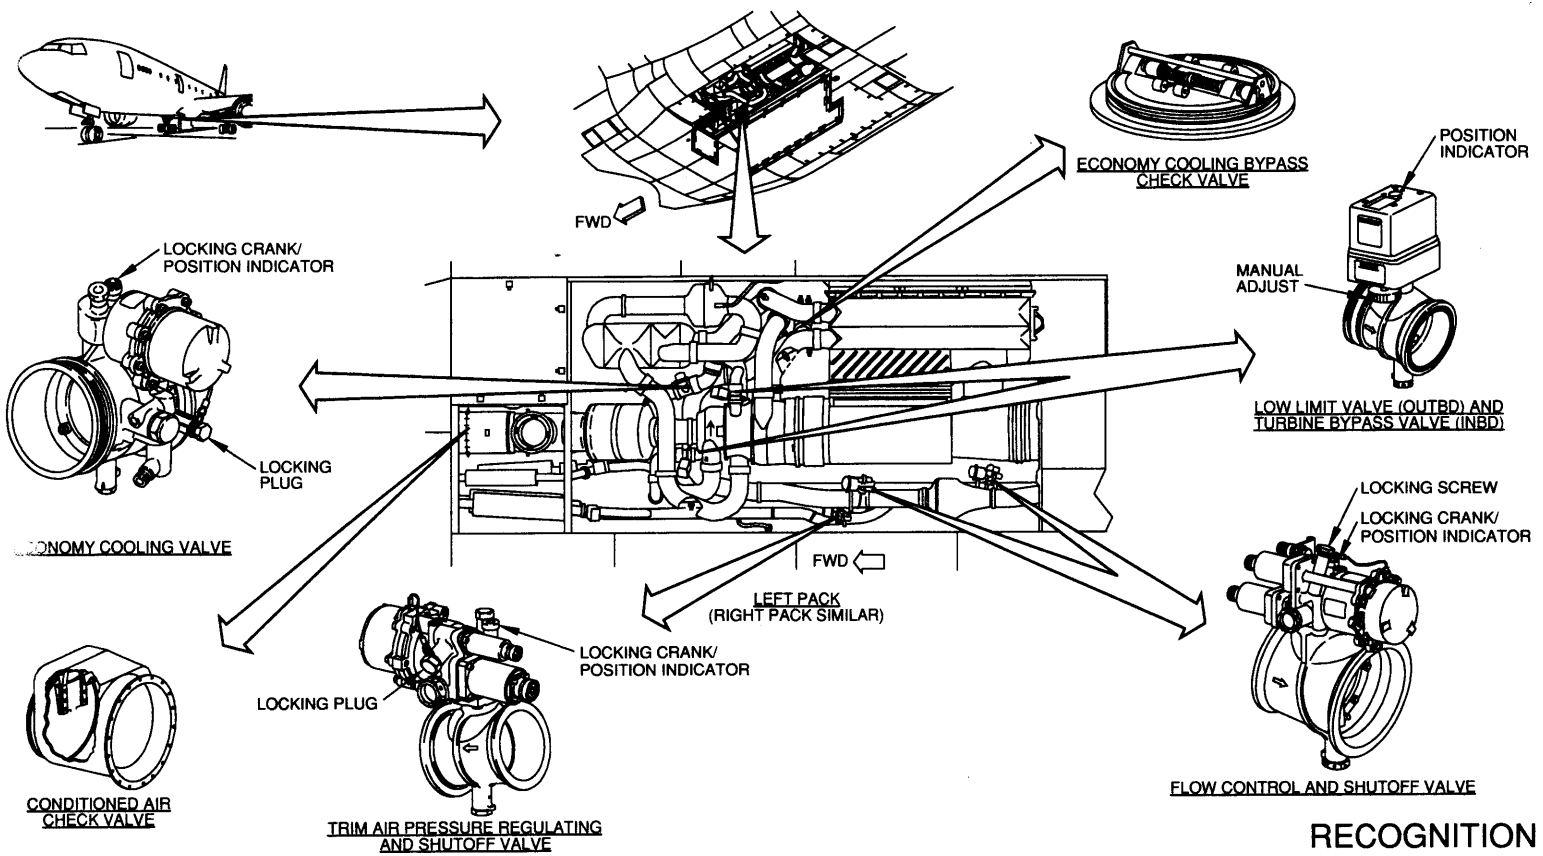

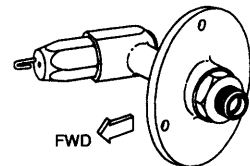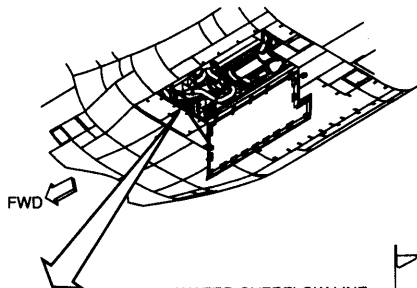


FWD

WATER SPRAY NOZZLE

RAM AIR INLET DUCT
CLEAN OUT PANEL

WATER OVERFLOW LINE

RAM AIR
INLET DUCT

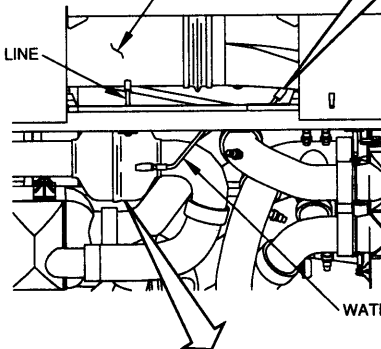

WATER DRAIN LINE

WATER OVERFLOW
LINE CONNECTIONS

WATER DRAIN LINE
CONNECTIONS





FWD


WATER COLLECTOR


FWD ←



LEFT PACK
(RIGHT PACK SIMILAR)

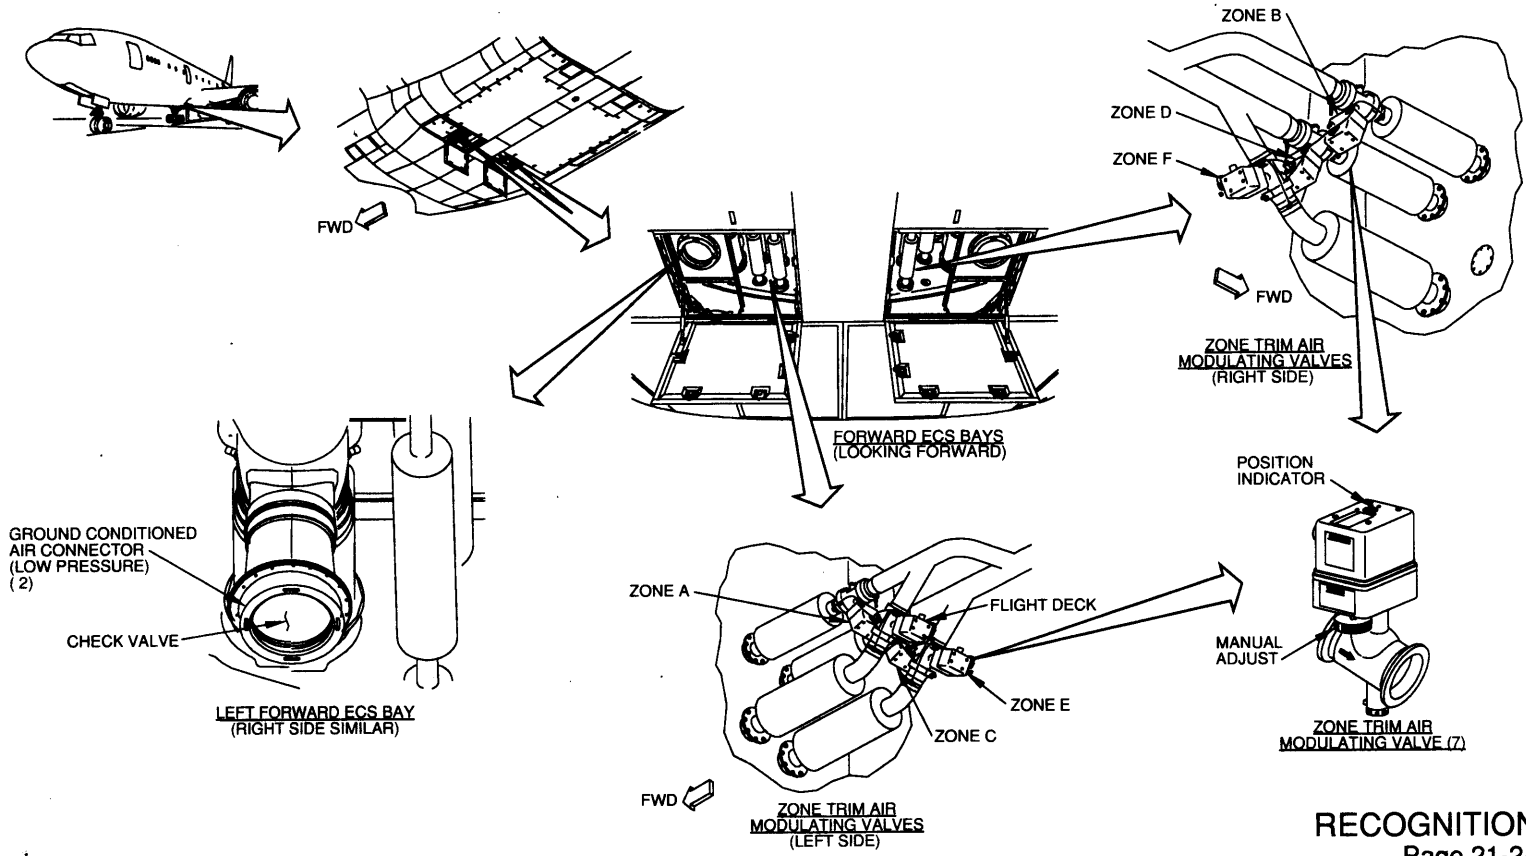

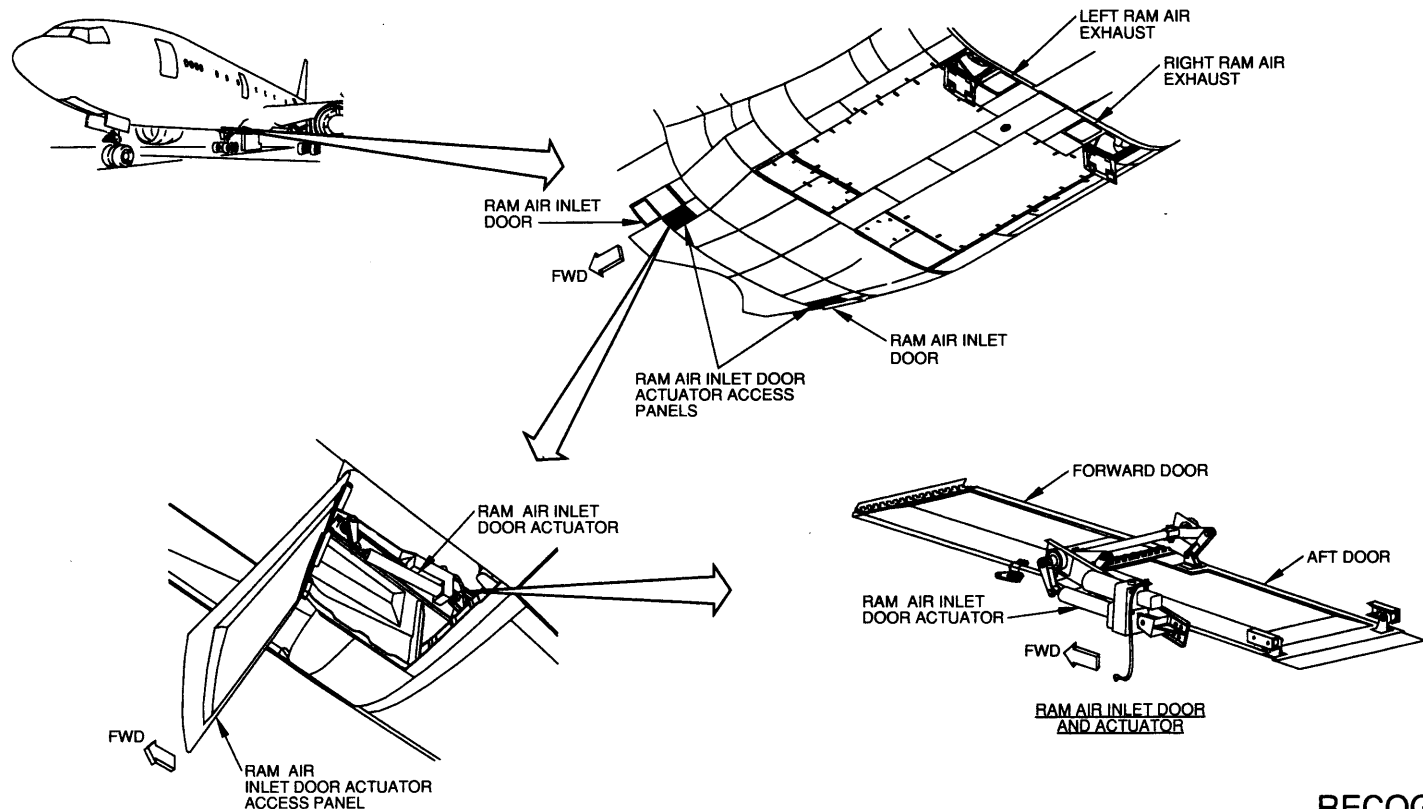


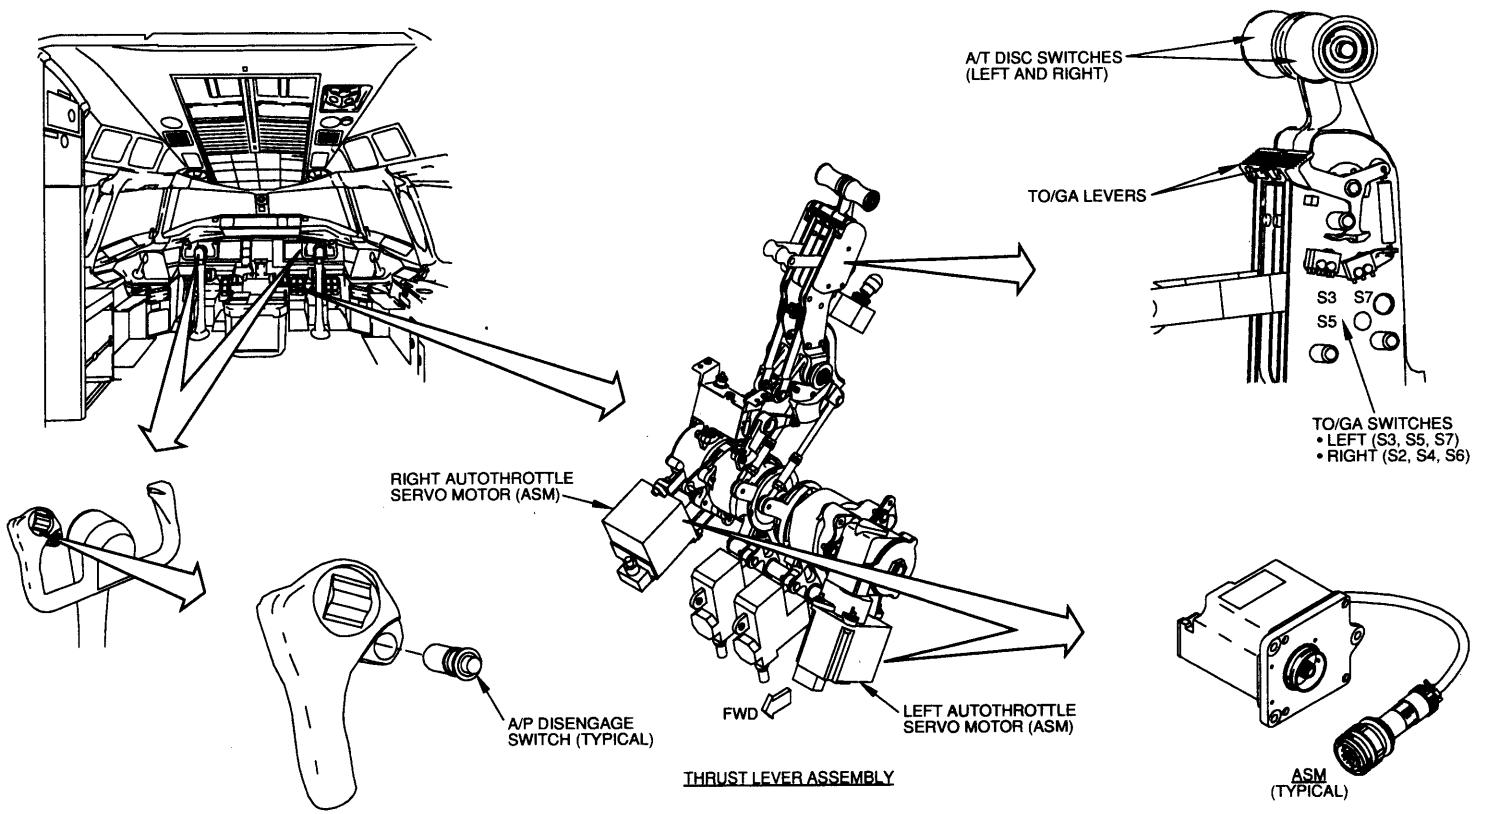

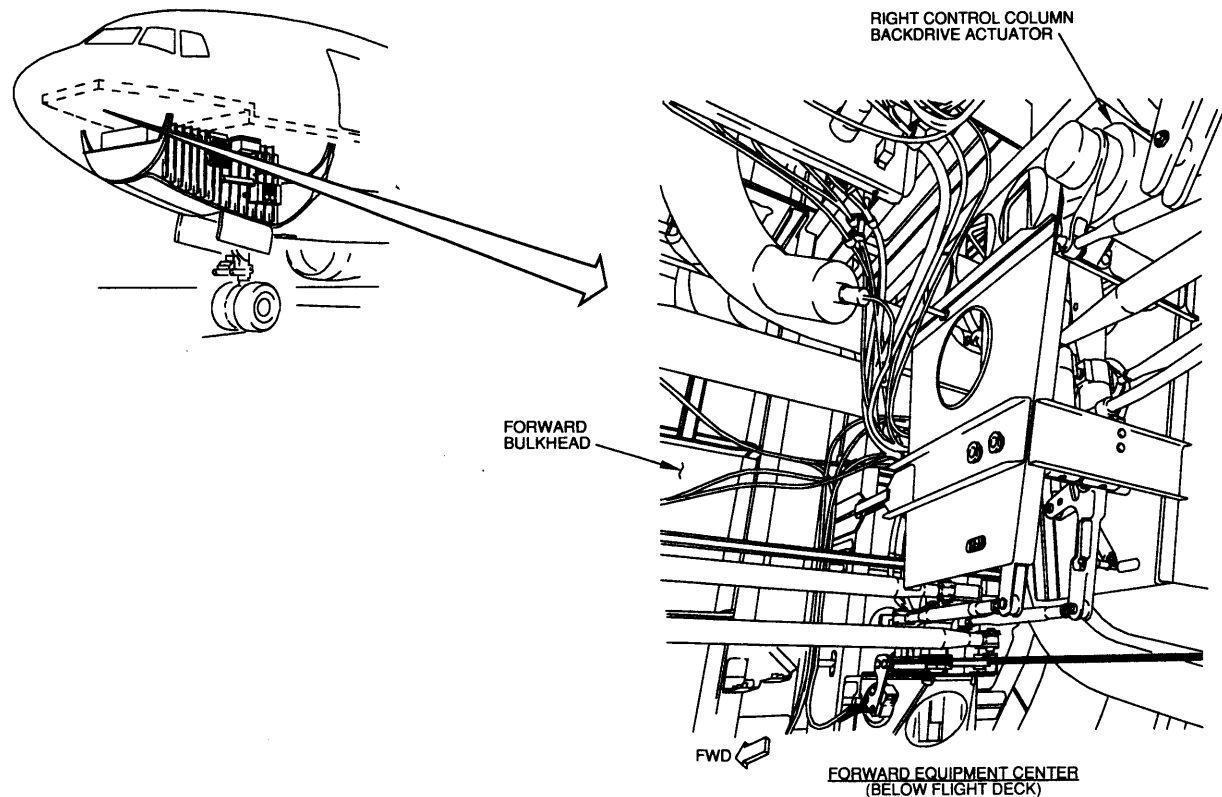

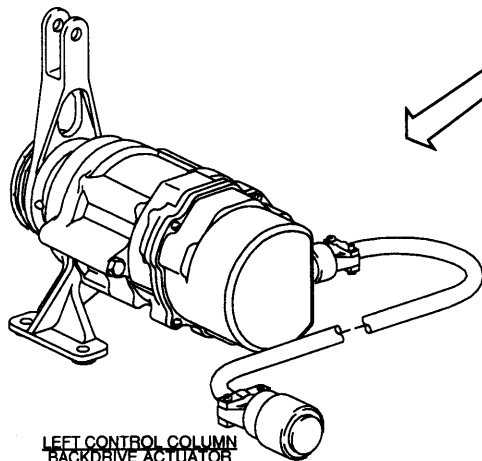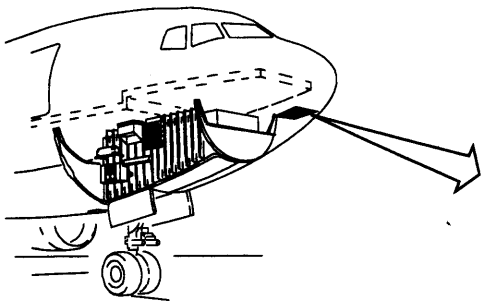


**LEFT CONTROL COLUMN
BACKDRIVE ACTUATOR**

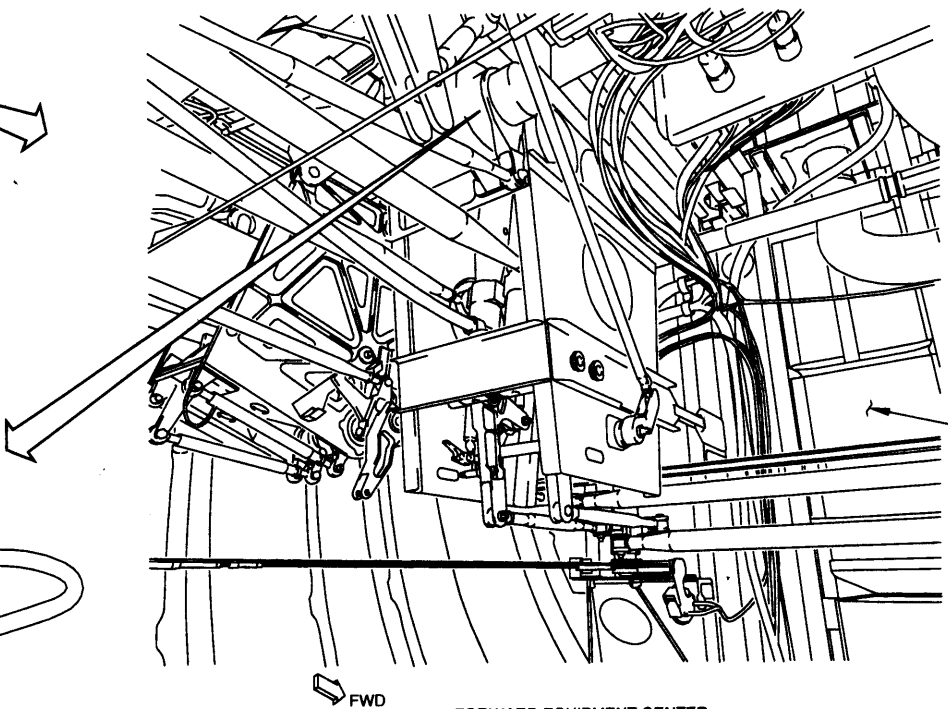


**FORWARD
BULKHEAD**

**FORWARD EQUIPMENT CENTER
(VIEW BELOW FLIGHT DECK)**

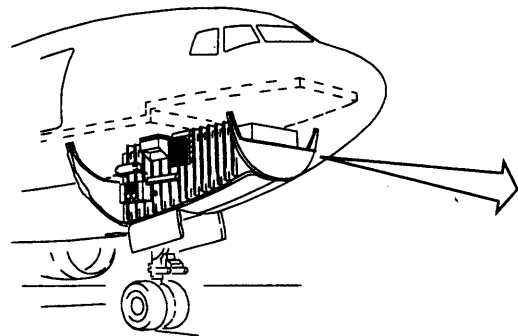

LEFT RUDDER PEDAL
BACKDRIVE ACTUATOR


LEFT CONTROL WHEEL
BACKDRIVE ACTUATOR

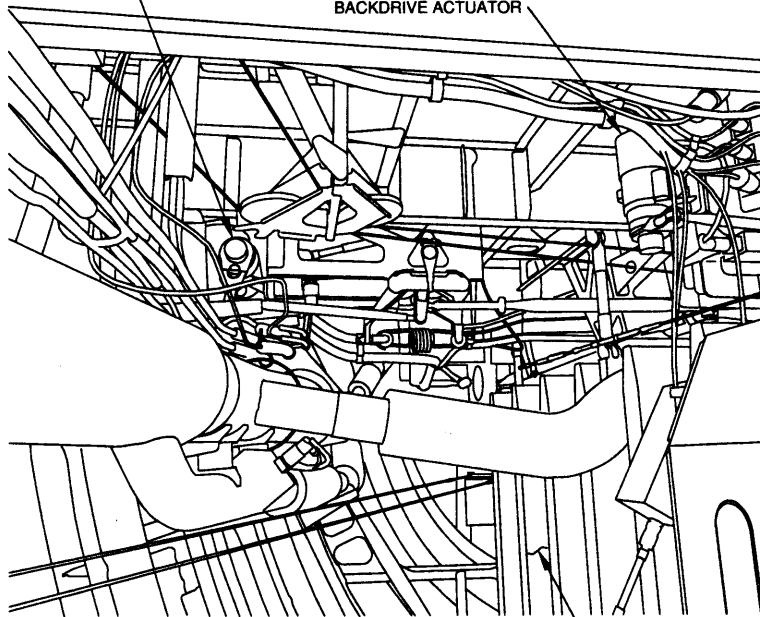

⇨ FWD

NOSE WHEEL WELL
BULKHEAD


MAIN EQUIPMENT CENTER
(LEFT SIDE LOOKING FORWARD)

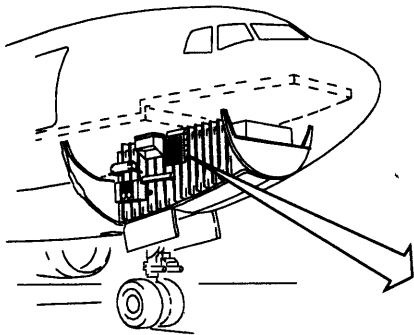

NOSE WHEEL WELL
BULKHEAD




RIGHT CONTROL WHEEL
BACKDRIVE ACTUATOR


RIGHT RUDDER PEDAL
BACKDRIVE ACTUATOR

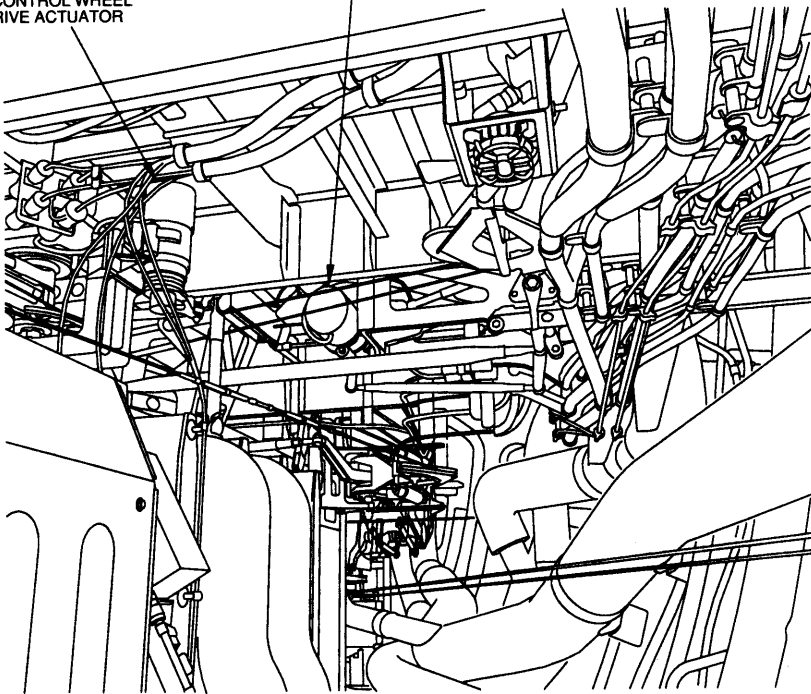

FWD


MAIN EQUIPMENT CENTER
(RIGHT SIDE LOOKING FORWARD)

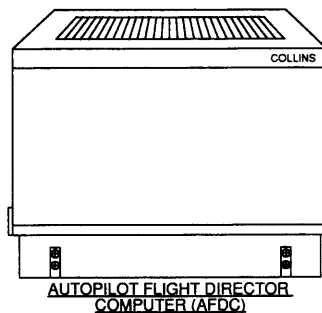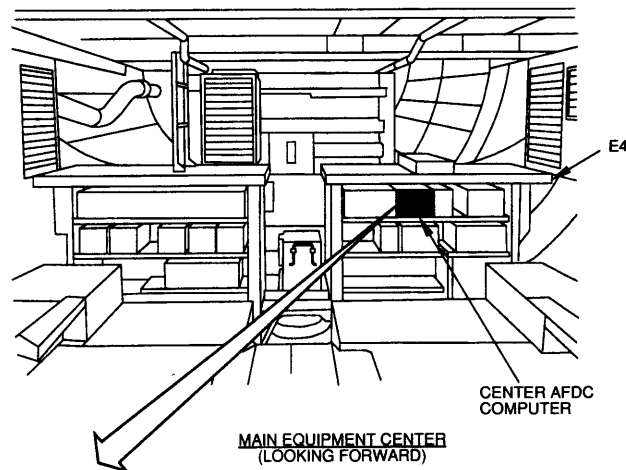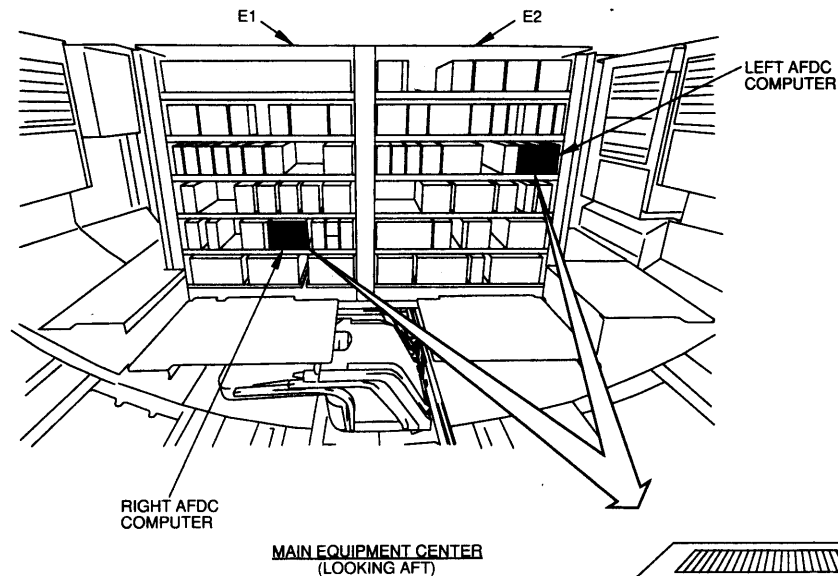

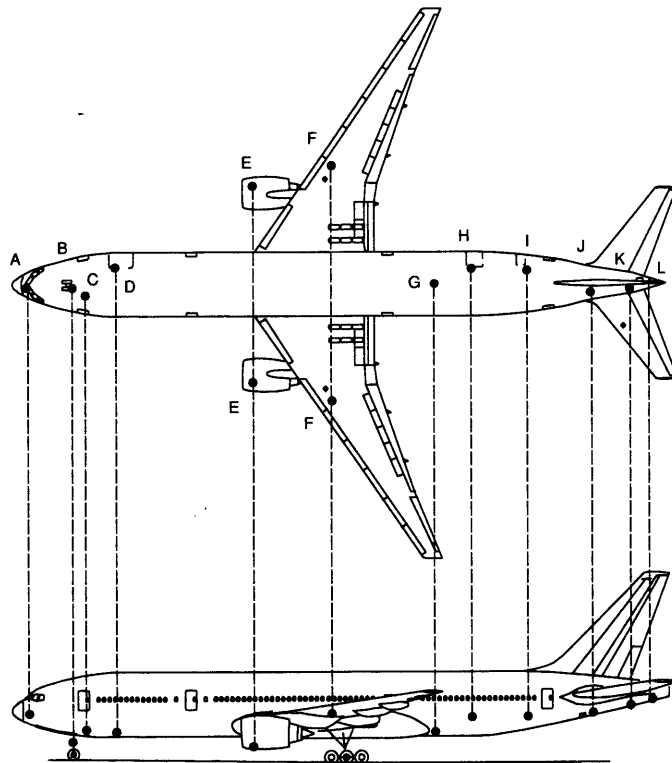

- A - FORWARD EQUIPMENT CENTER
- B - P40 NOSE GEAR ELECTRICAL SERVICE PANEL
- C - E3 RACK MAIN EQUIPMENT CENTER
- D - P35 FORWARD CARGO HANDLING ACCESSORY PANEL
- E - LEFT AND RIGHT ENGINE NACELLE
- F - LEFT AND RIGHT REFUEL STATION
- G - P56 WHEEL WELL ELECTRICAL SERVICE PANEL
- H - AFT CARGO HANDLING
- I - BULK CARGO ACCESS
- J - FORWARD TAIL CONE
- K - MID TAIL CONE
- L - APU COMPARTMENT



SERVICE INTERPHONE JACK LOCATIONS

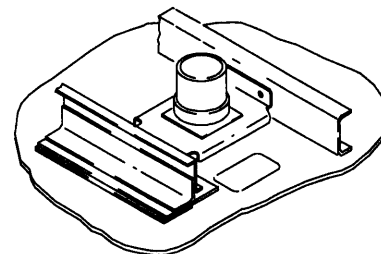



JACK
(TYPICAL)





HEADSET

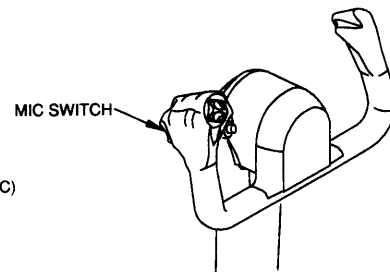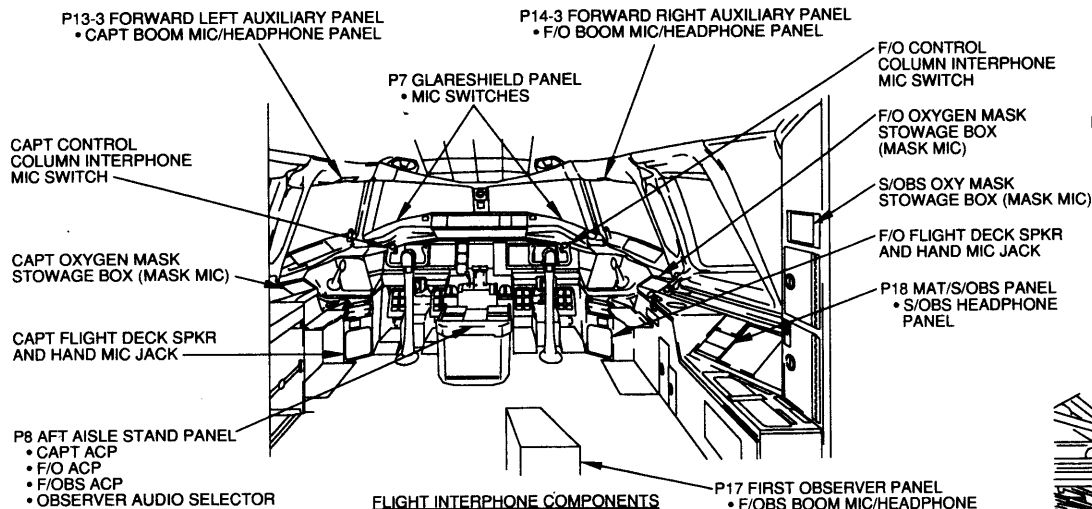


CAPTAIN CONTROL COLUMN
(FIRST OFFICER SIMILAR)

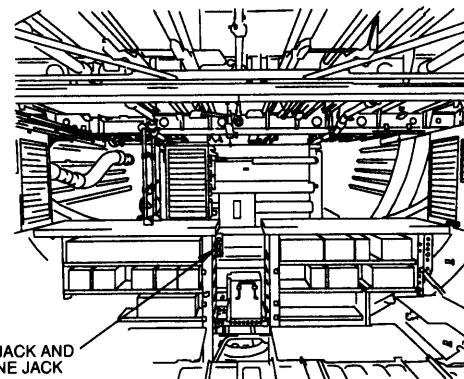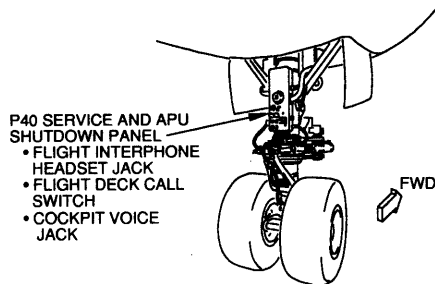


MAIN EQUIPMENT CENTER
(VIEW LOOKING FORWARD)

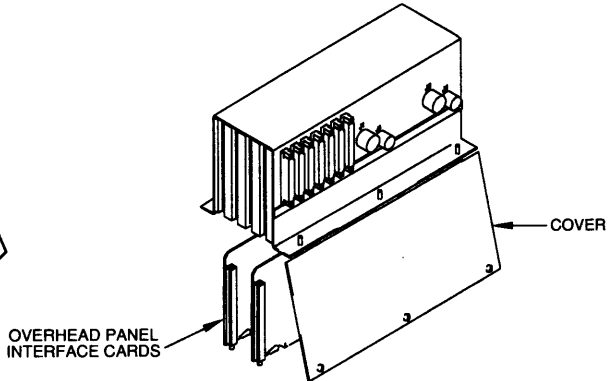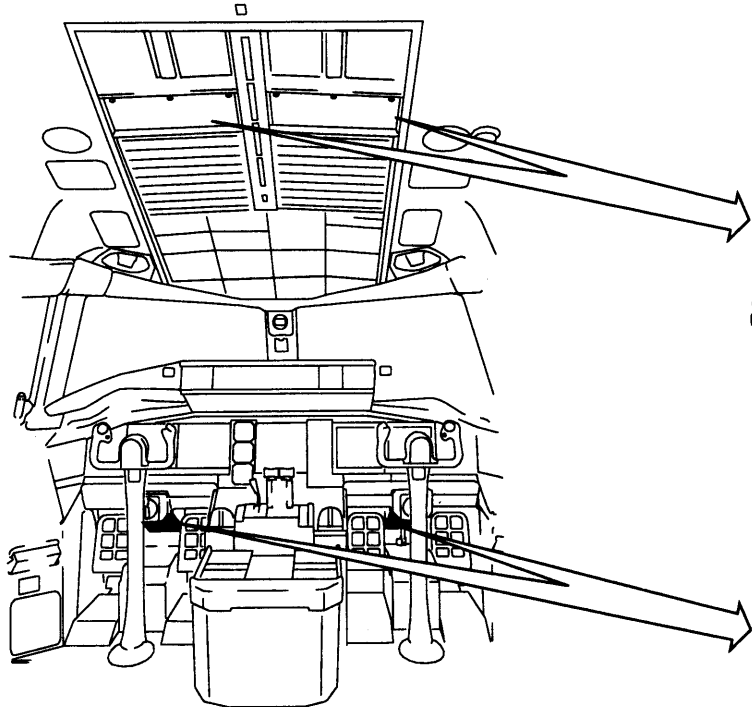


**OVERHEAD PANEL
CARD FILE (OPCF)**

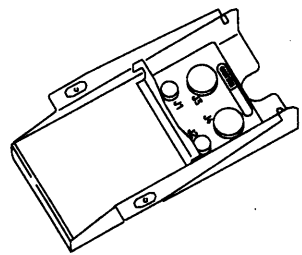


**PANEL DATA CONCENTRATOR
UNIT (PDCU)**

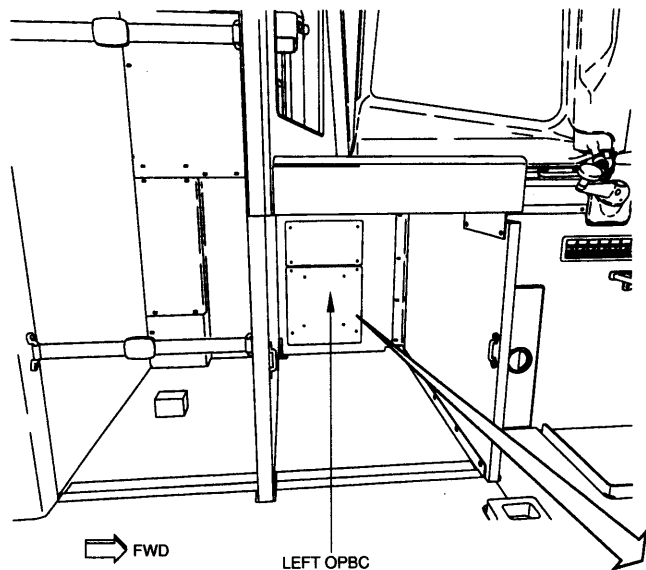




**FLIGHT DECK
(LEFT SIDE VIEW)**

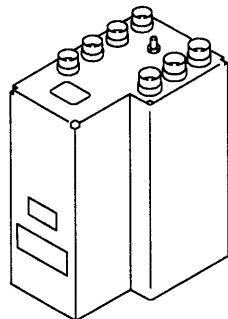


**OVERHEAD PANEL BUS
CONTROLLER (OPBC)**

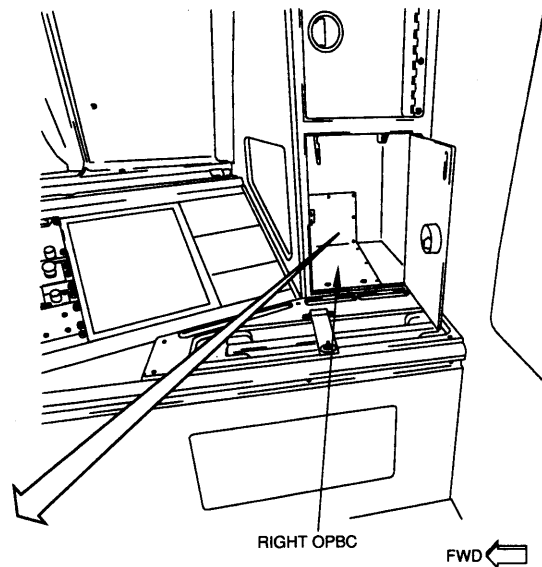


**FLIGHT DECK
(RIGHT SIDE VIEW)**

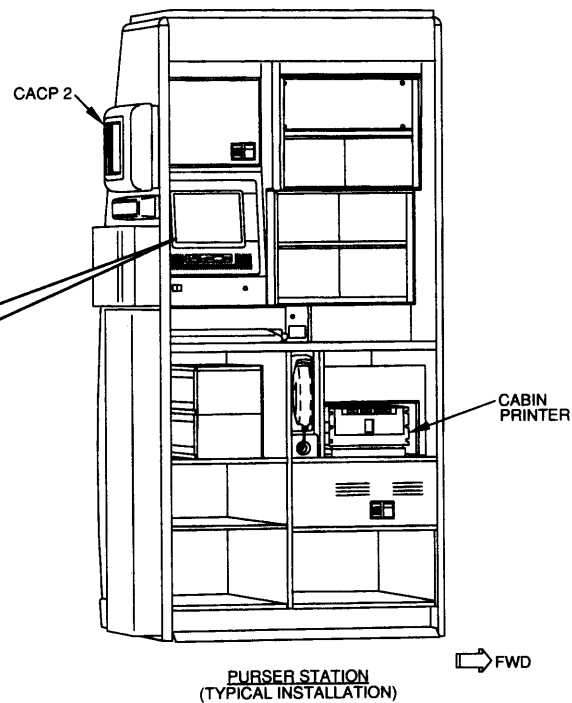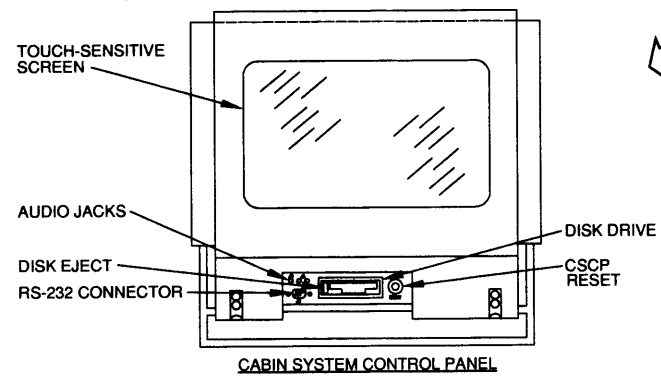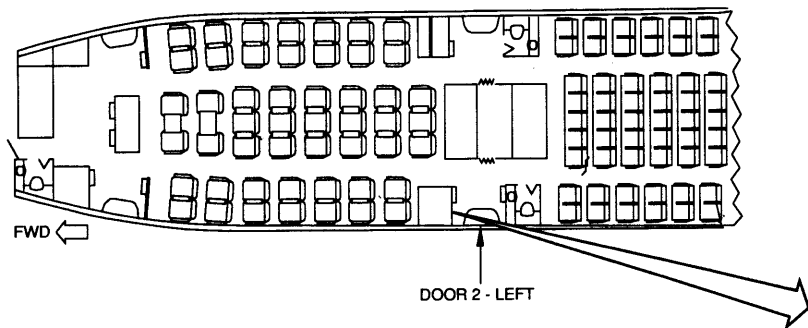


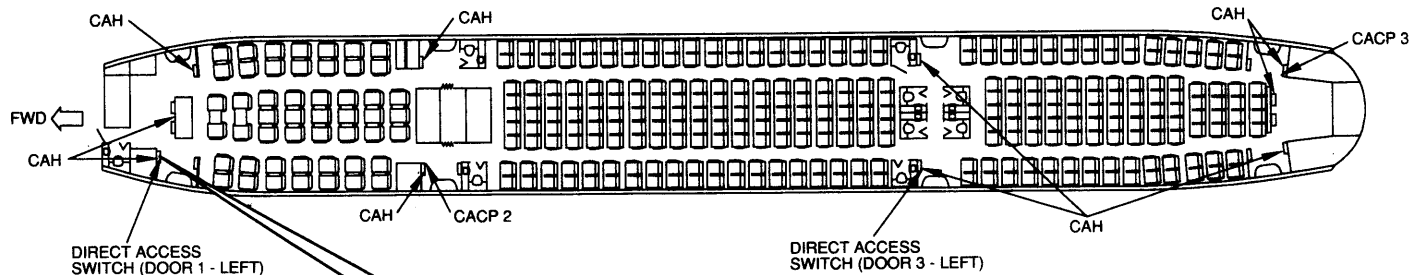


TYPICAL 3-CLASS CONFIGURATION

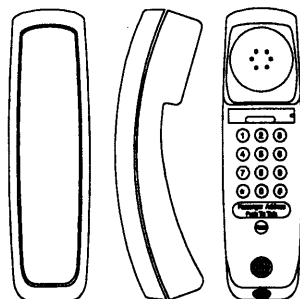


CABIN ATTENDANT HANDSET (CAH)

 


CAH CRADLE

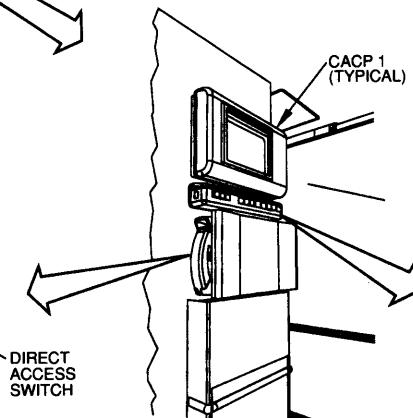



DOOR 1 - LEFT

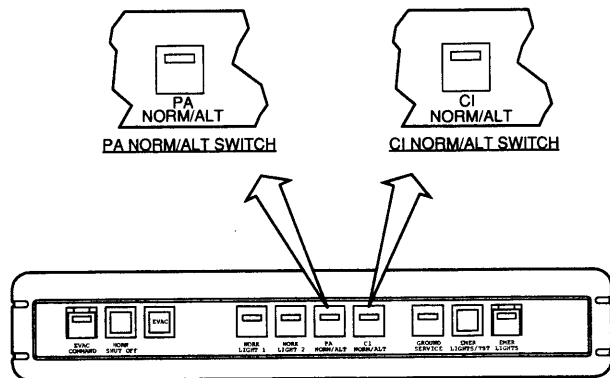


ATTENDANT SWITCH PANEL (TYPICAL)

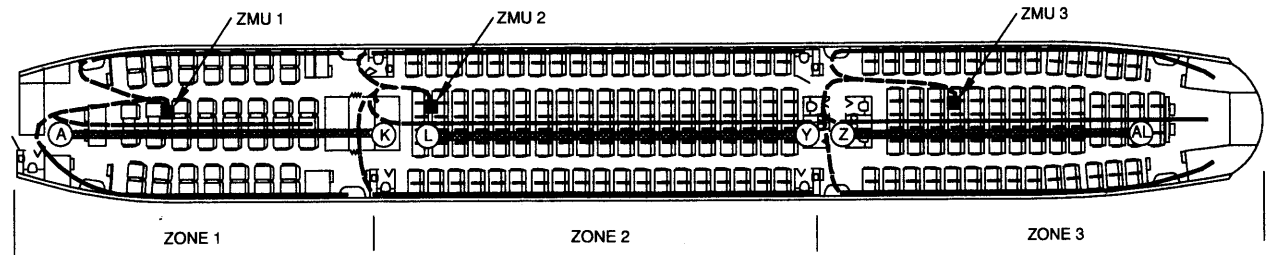



TYPICAL 3-CLASS CONFIGURATION

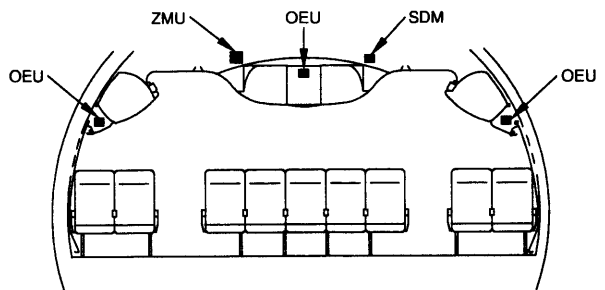 


CABIN CROSS-SECTION
(TYPICAL) (LOOKING AFT)

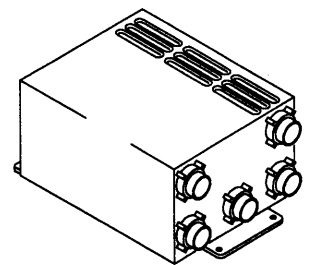



ZONE MANAGEMENT
UNIT (ZMU)

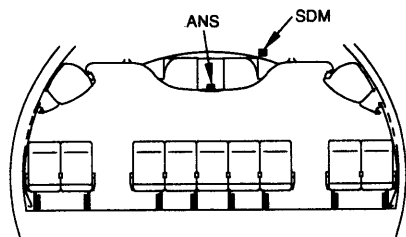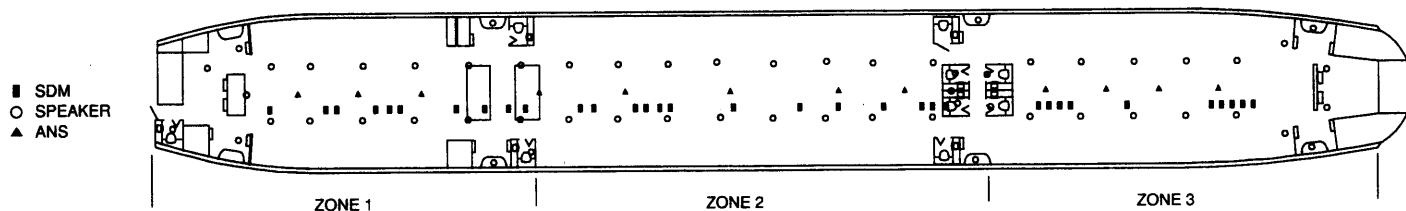


CABIN CROSS-SECTION
(TYPICAL) (LOOKING AFT)

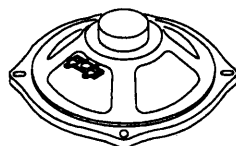



CABIN SPEAKER

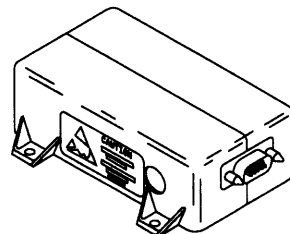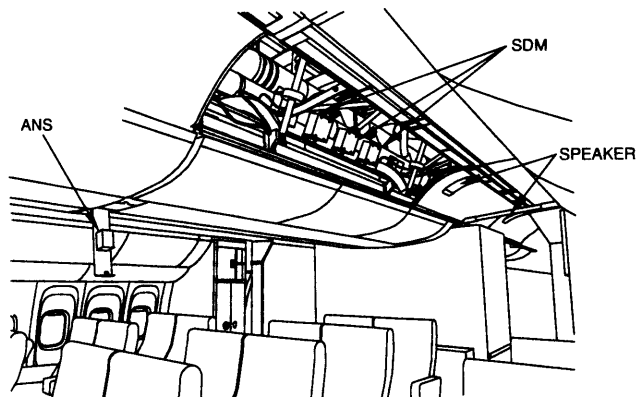


AMBIENT NOISE SENSOR (ANS)

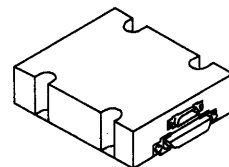


SPEAKER DRIVE MODULE (SDM)

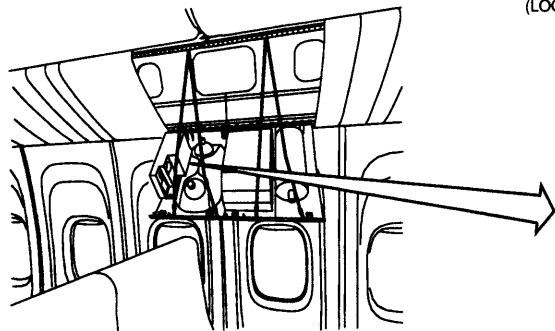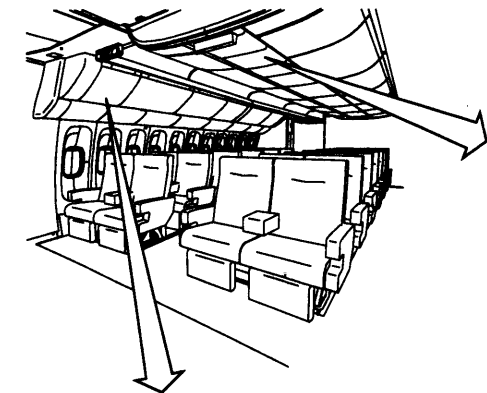


OUTBOARD PASSENGER SERVICE UNIT (PSU)
(TYPICAL)

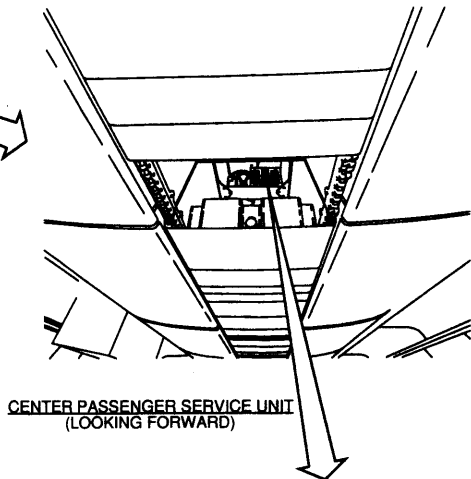


CENTER PASSENGER SERVICE UNIT
(LOOKING FORWARD)

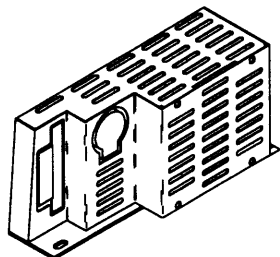



OVERHEAD ELECTRONICS UNIT (OEU)

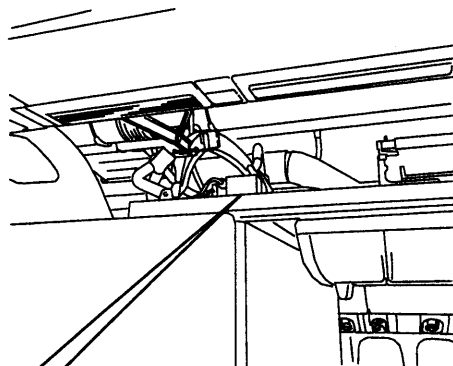



➡ FWD
LAVATORY MODULE
(TYPICAL)



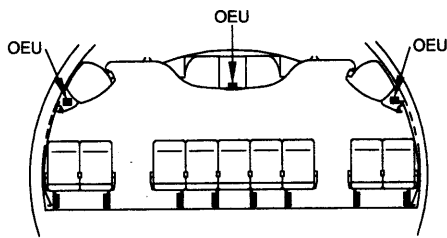


CABIN CROSS-SECTION
(TYPICAL) (LOOKING AFT)

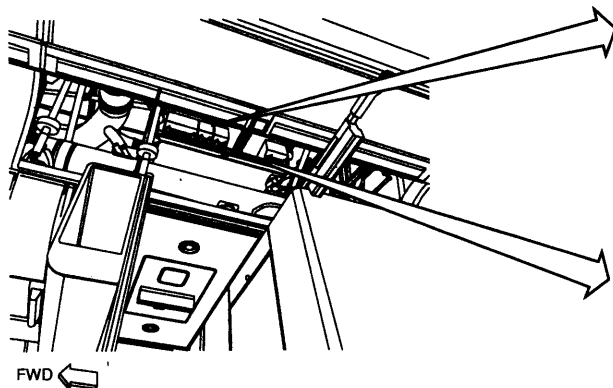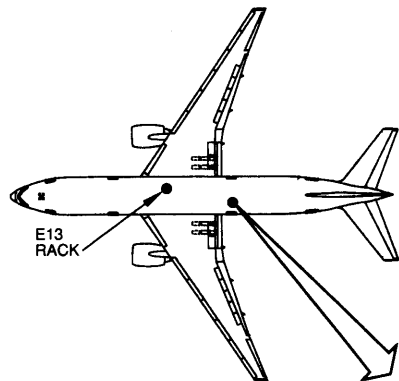

E11 RACK INSTALLATION
(ABOVE DOOR 3 LEFT CROSS-AISLE AREA)
(E13 RACK SIMILAR)


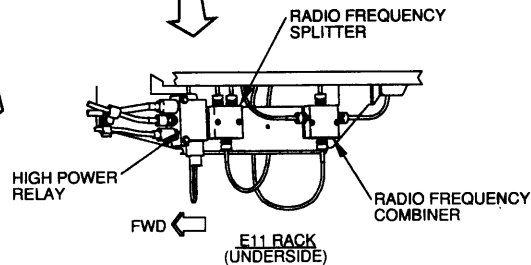
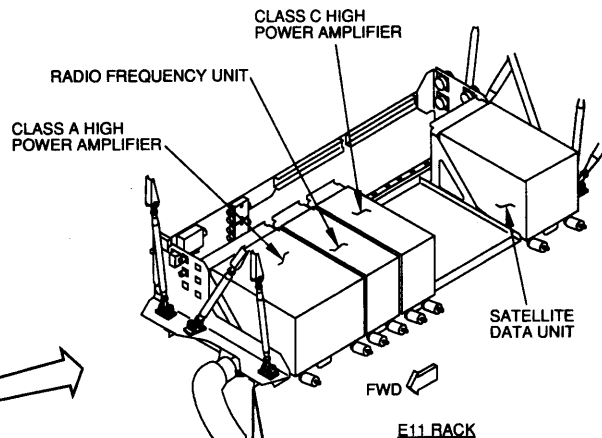



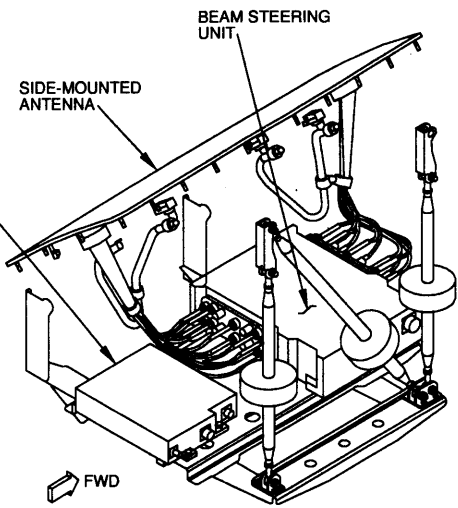
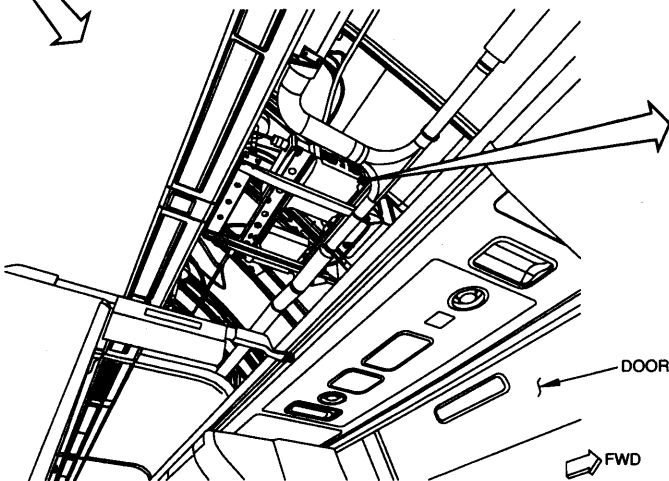
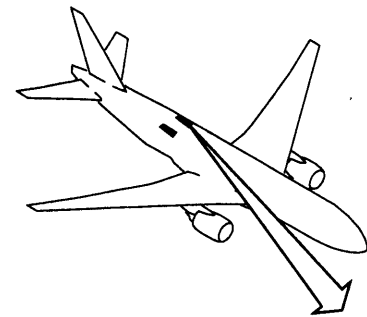



PORT SIDE-MOUNTED HIGH GAIN ANTENNA, LOW NOISE AMPLIFIER/DIPLEXER AND BEAM STEERING UNIT INSTALLATION

PORT SIDE-MOUNTED HIGH GAIN ANTENNA

NOTE: PORT INSTALLATION SHOWN,
STARBOARD INSTALLATION SIMILAR.

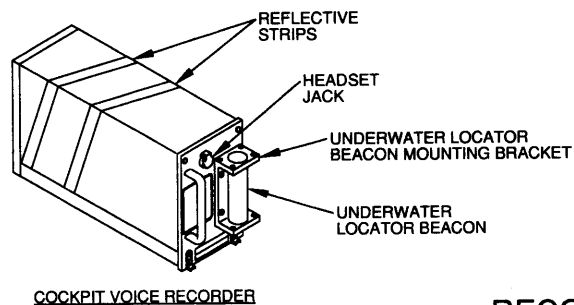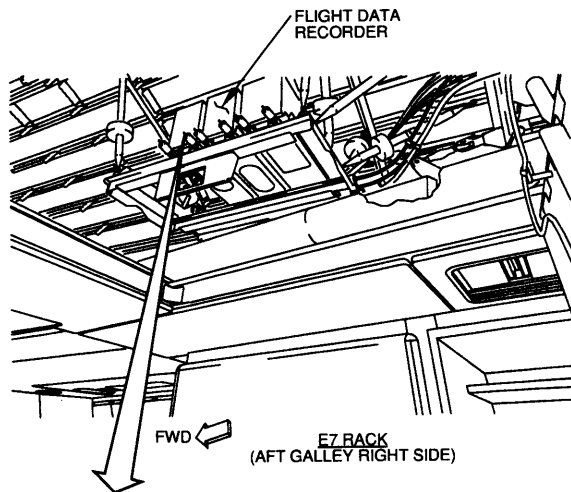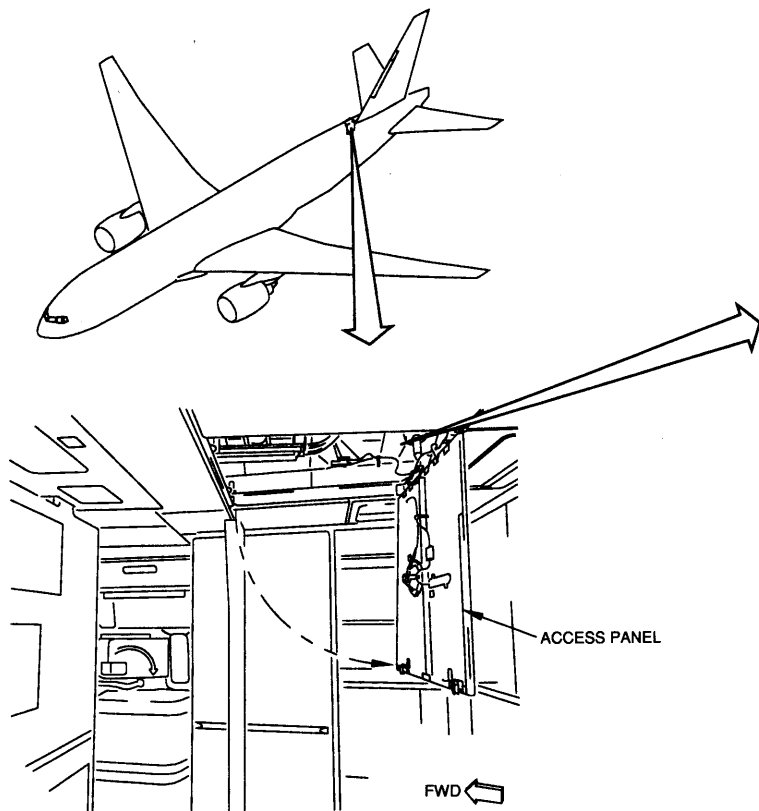

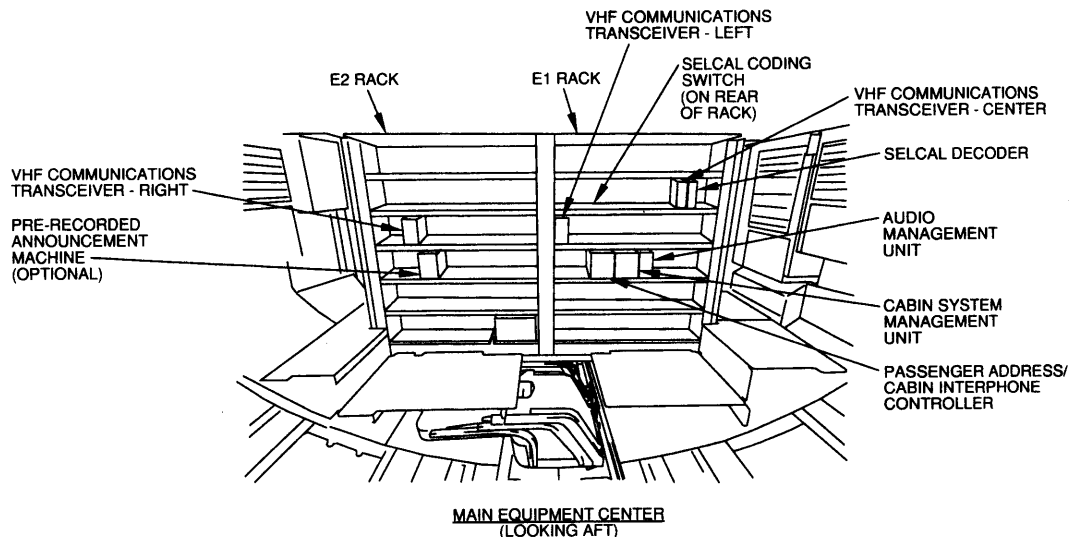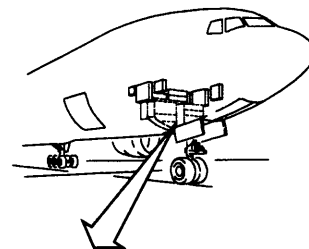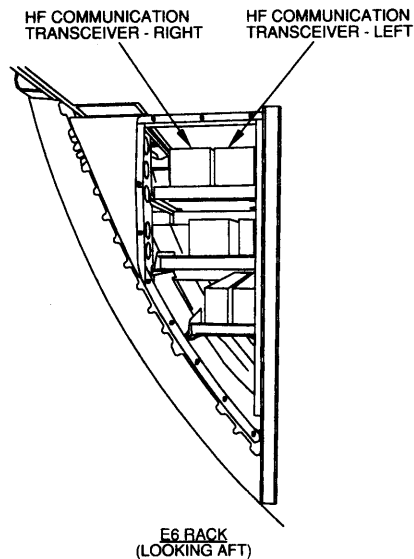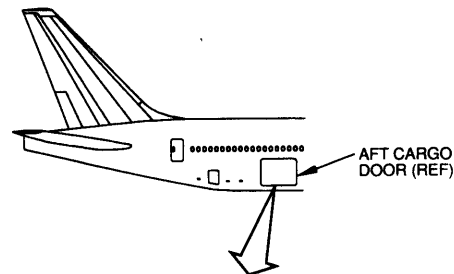

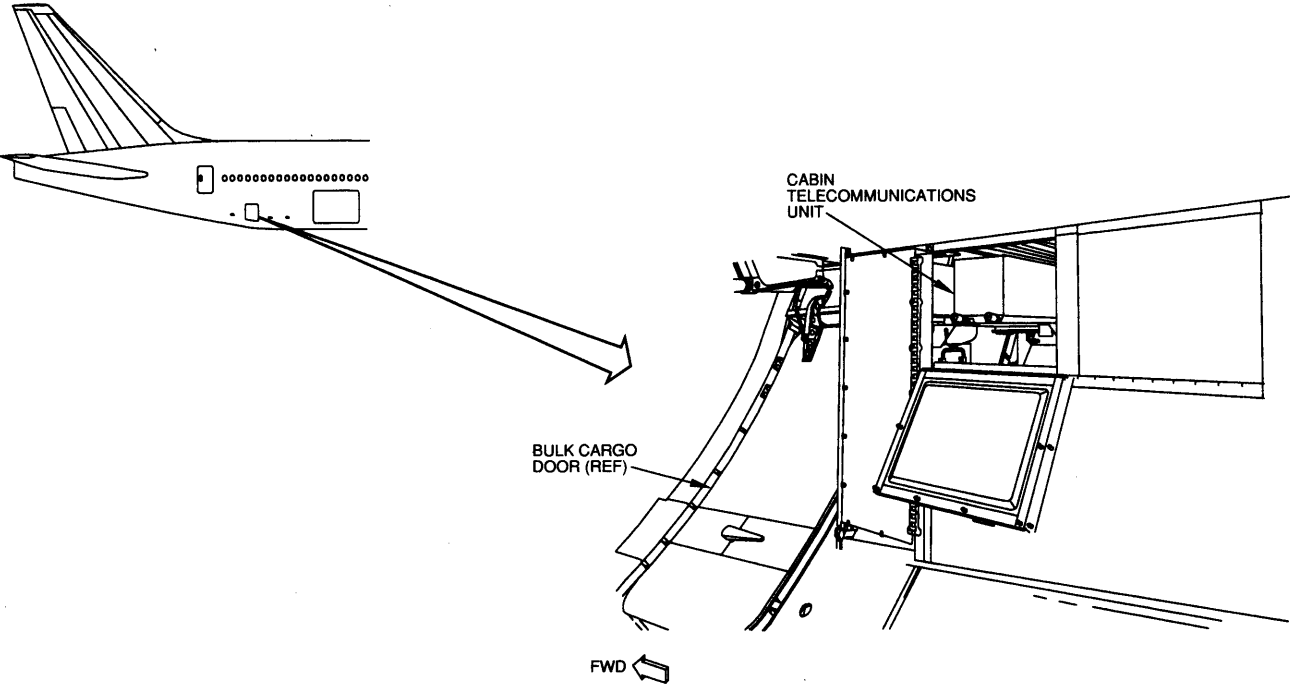



CABIN
TELECOMMUNICATIONS
UNIT


BULK CARGO
DOOR (REF)

FWD


E12 RACK INSTALLATION


PASSENGER TELEPHONE EQUIPMENT

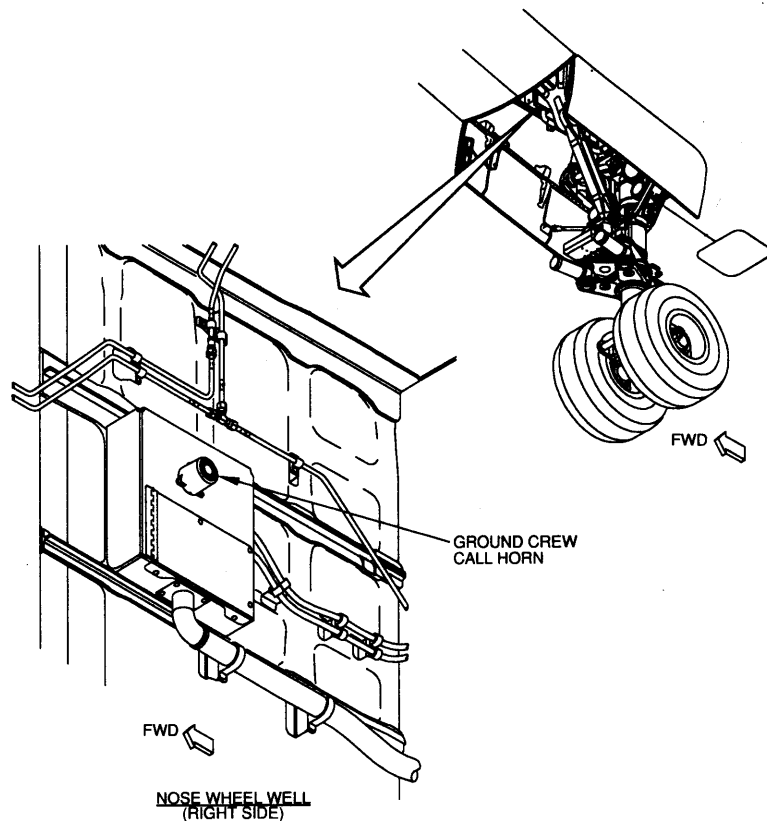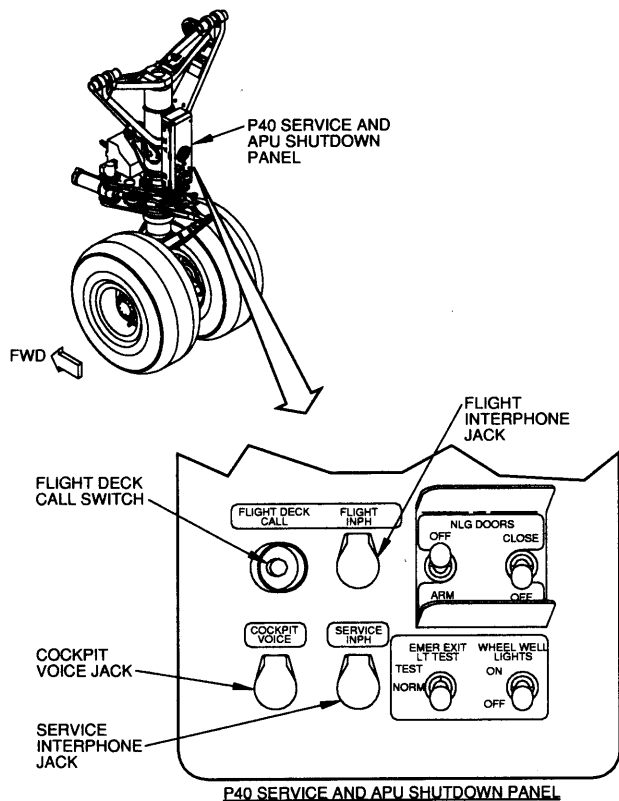


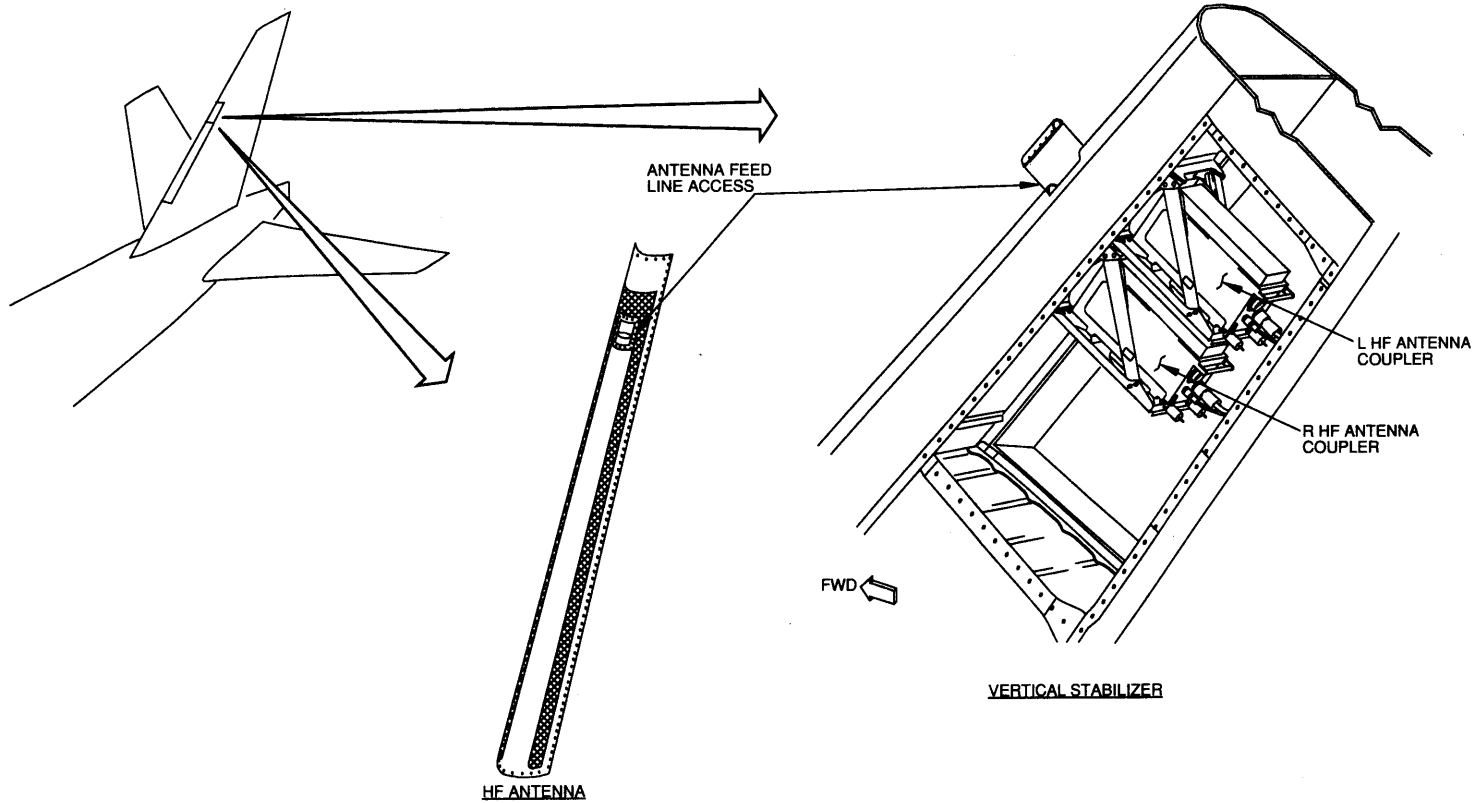


HF ANTENNA AND COUPLERS

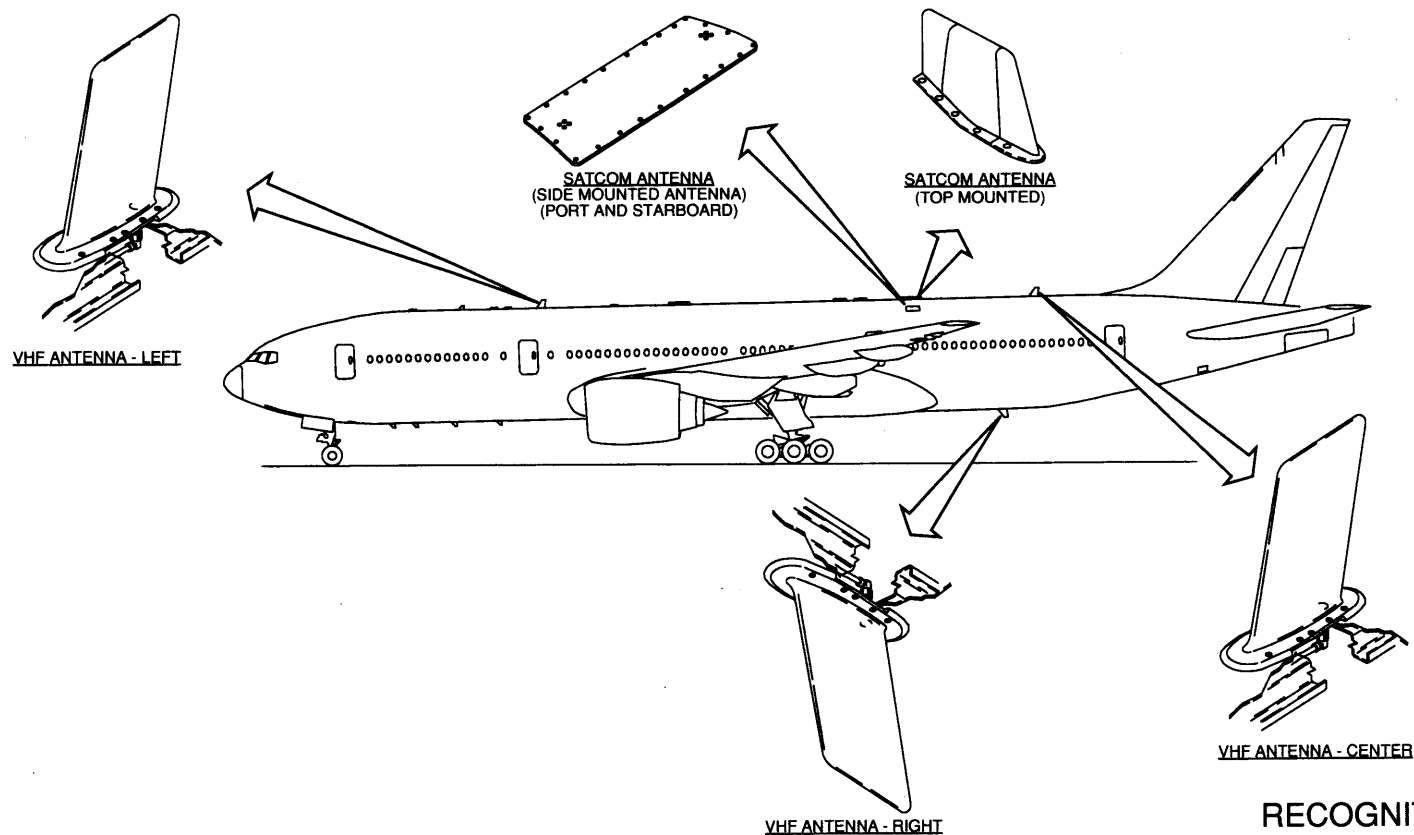

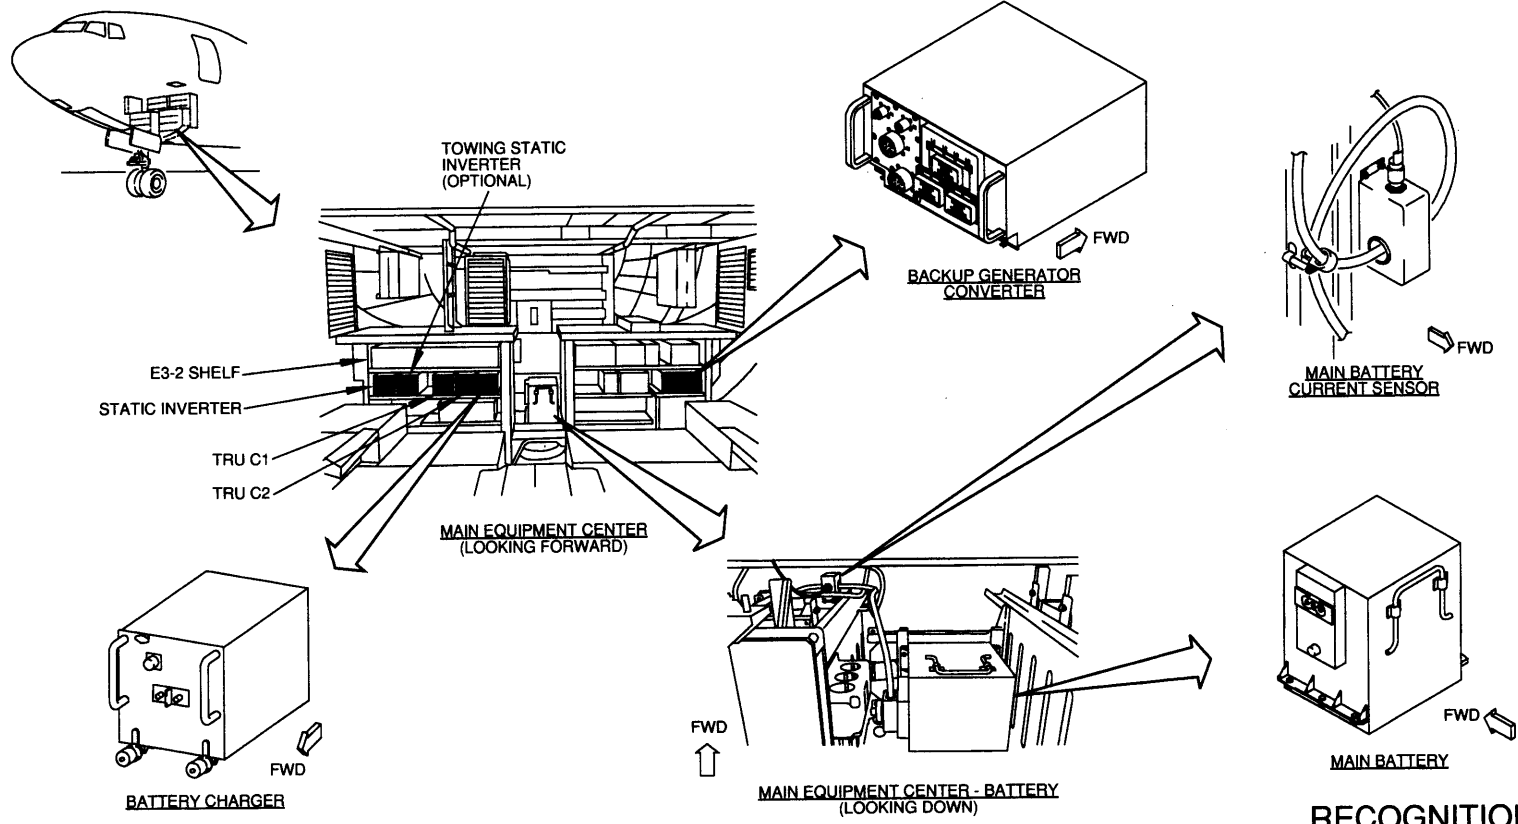


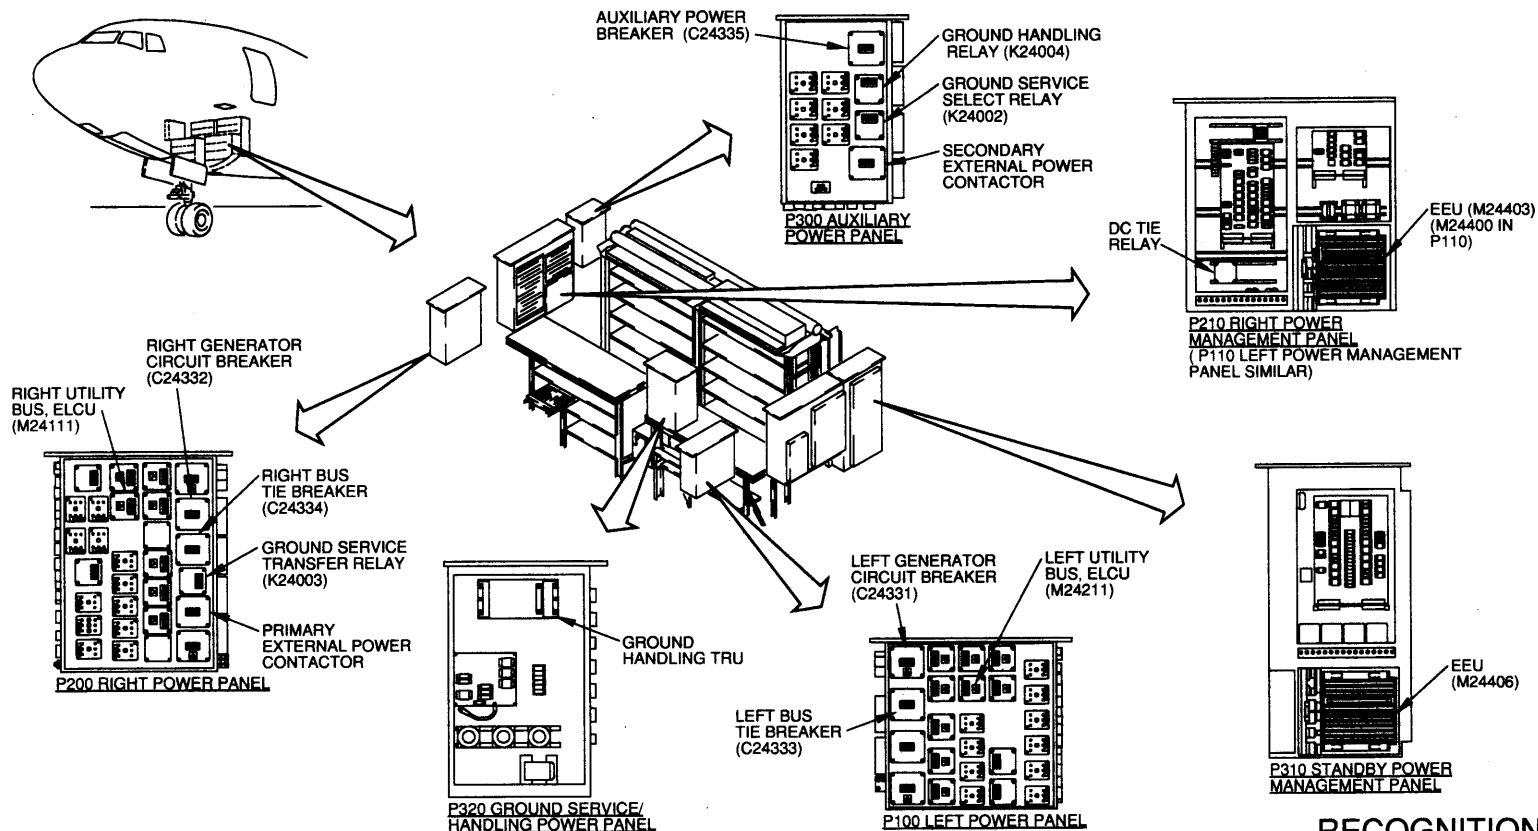




RECOGNITION

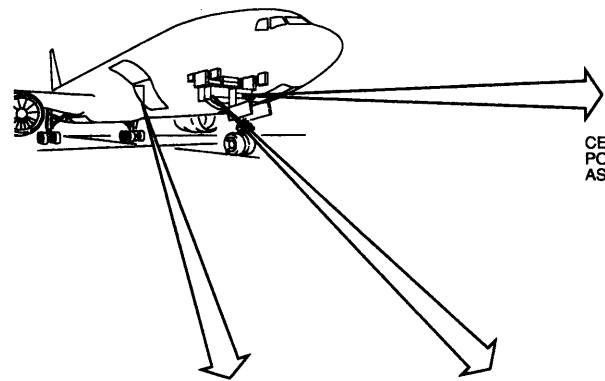


CENTER FCDC BATTERY
CENTER FLIGHT CONTROL POWER SUPPLY ASSEMBLY

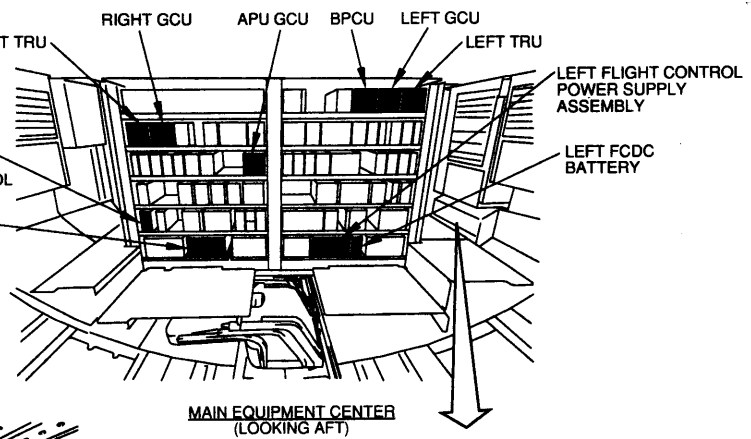




RIGHT FLIGHT CONTROL POWER SUPPLY ASSEMBLY

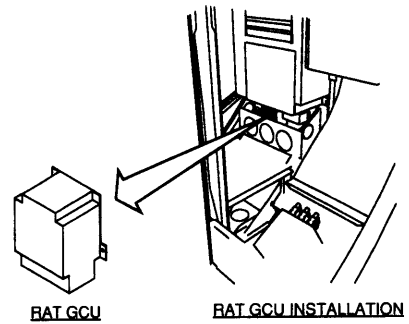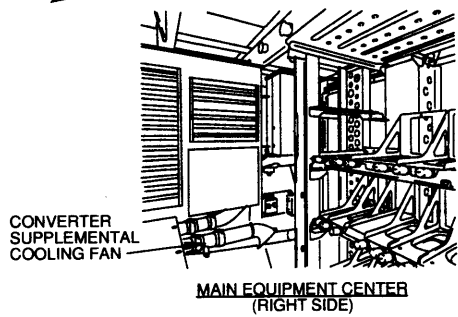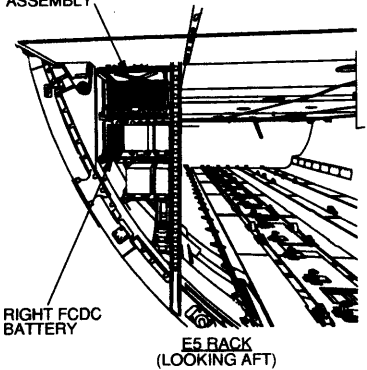




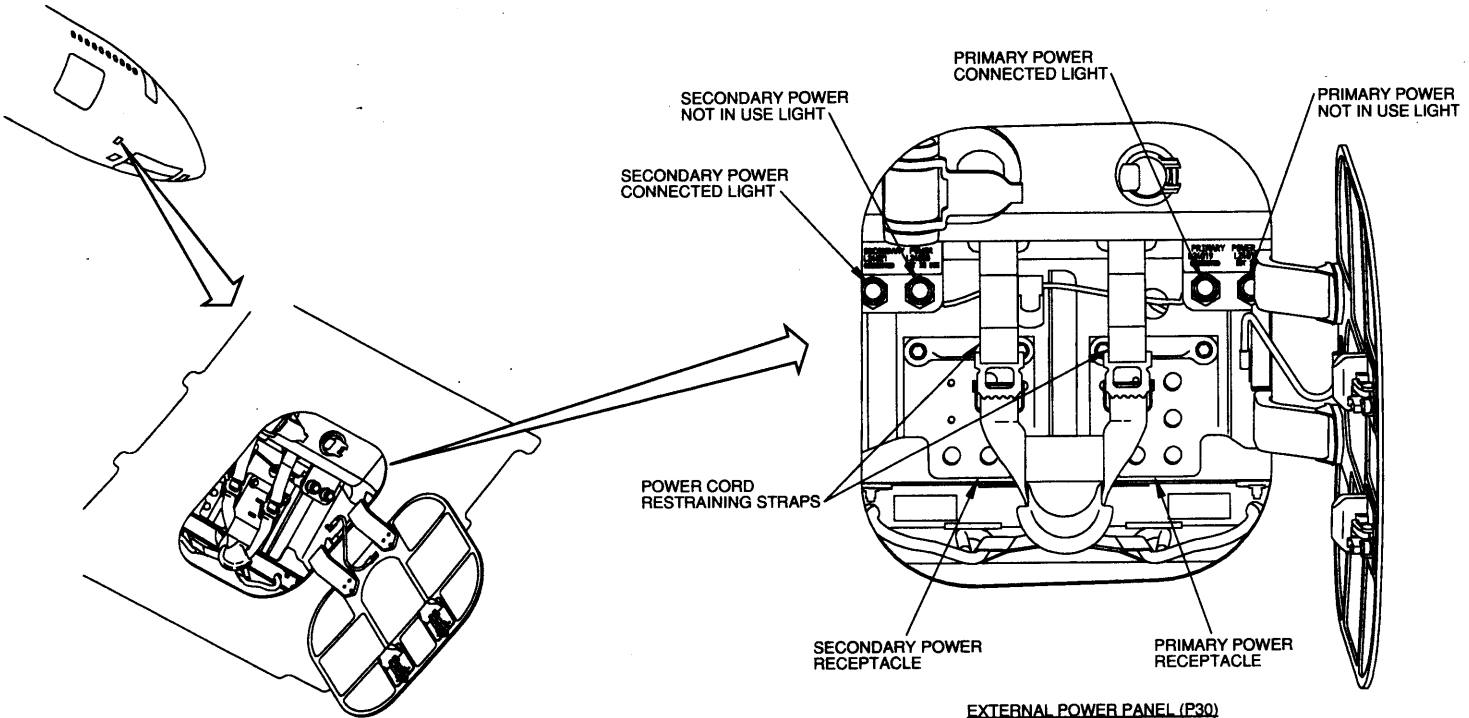

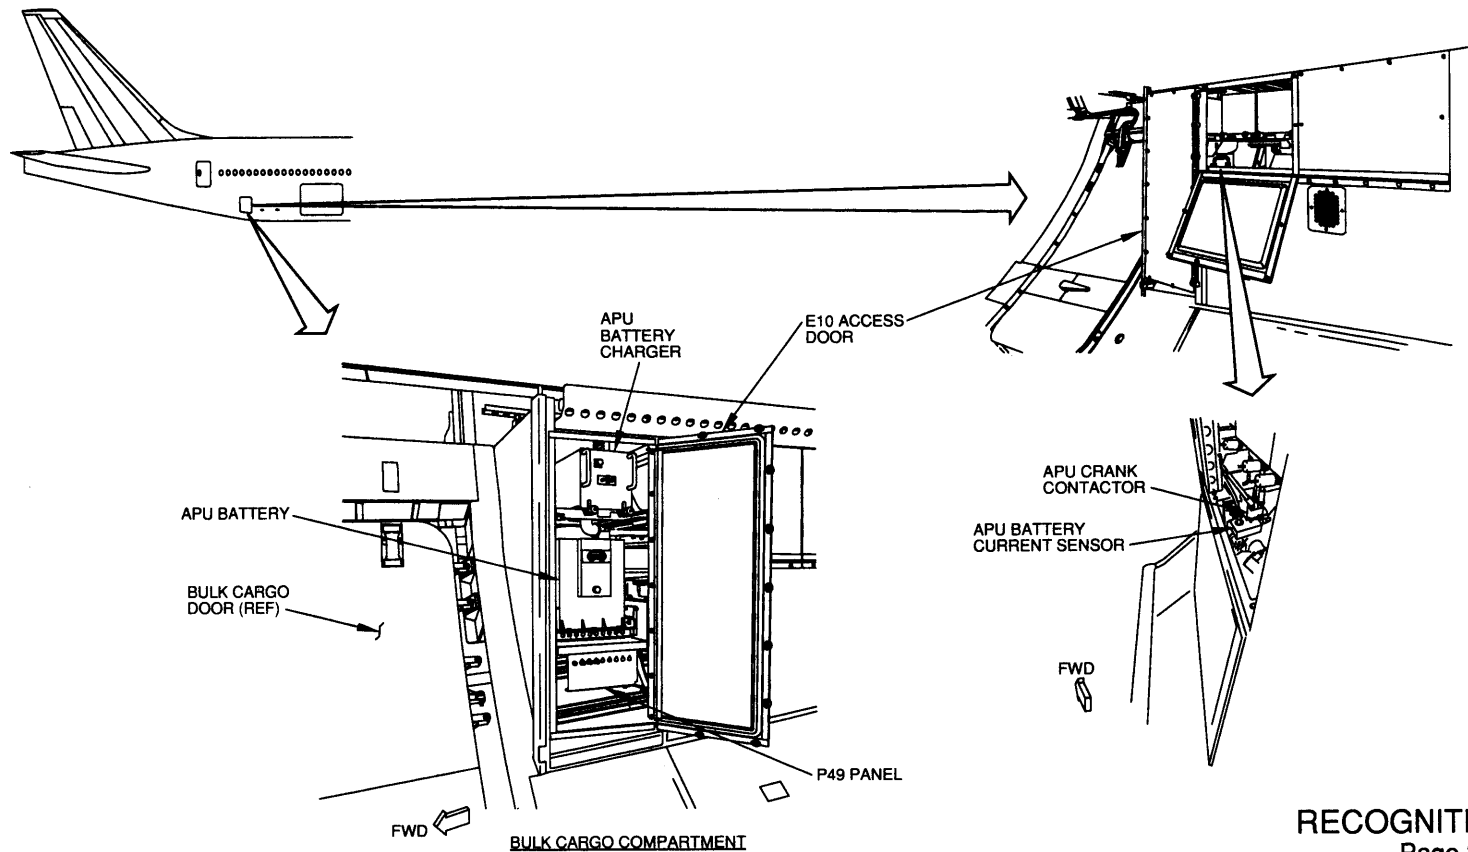


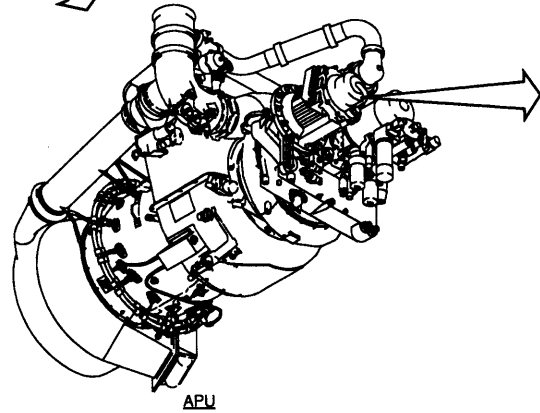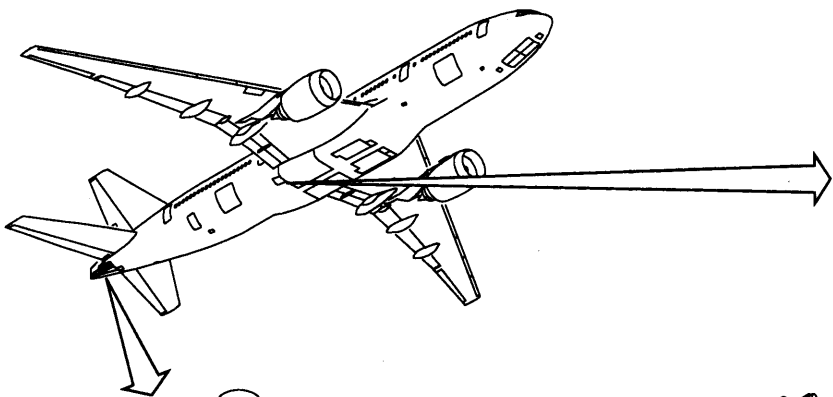


APU

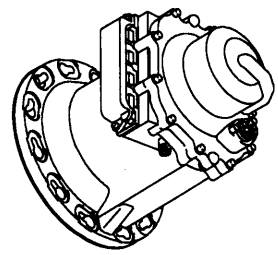

APU GENERATOR

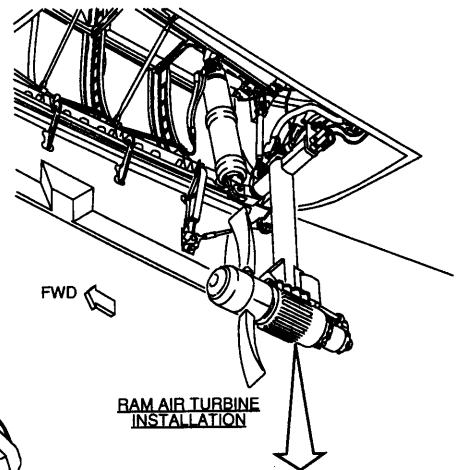



**RAM AIR TURBINE
INSTALLATION**

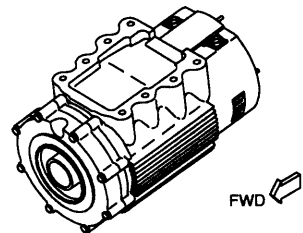




**RAM AIR TURBINE
GENERATOR**

FWD

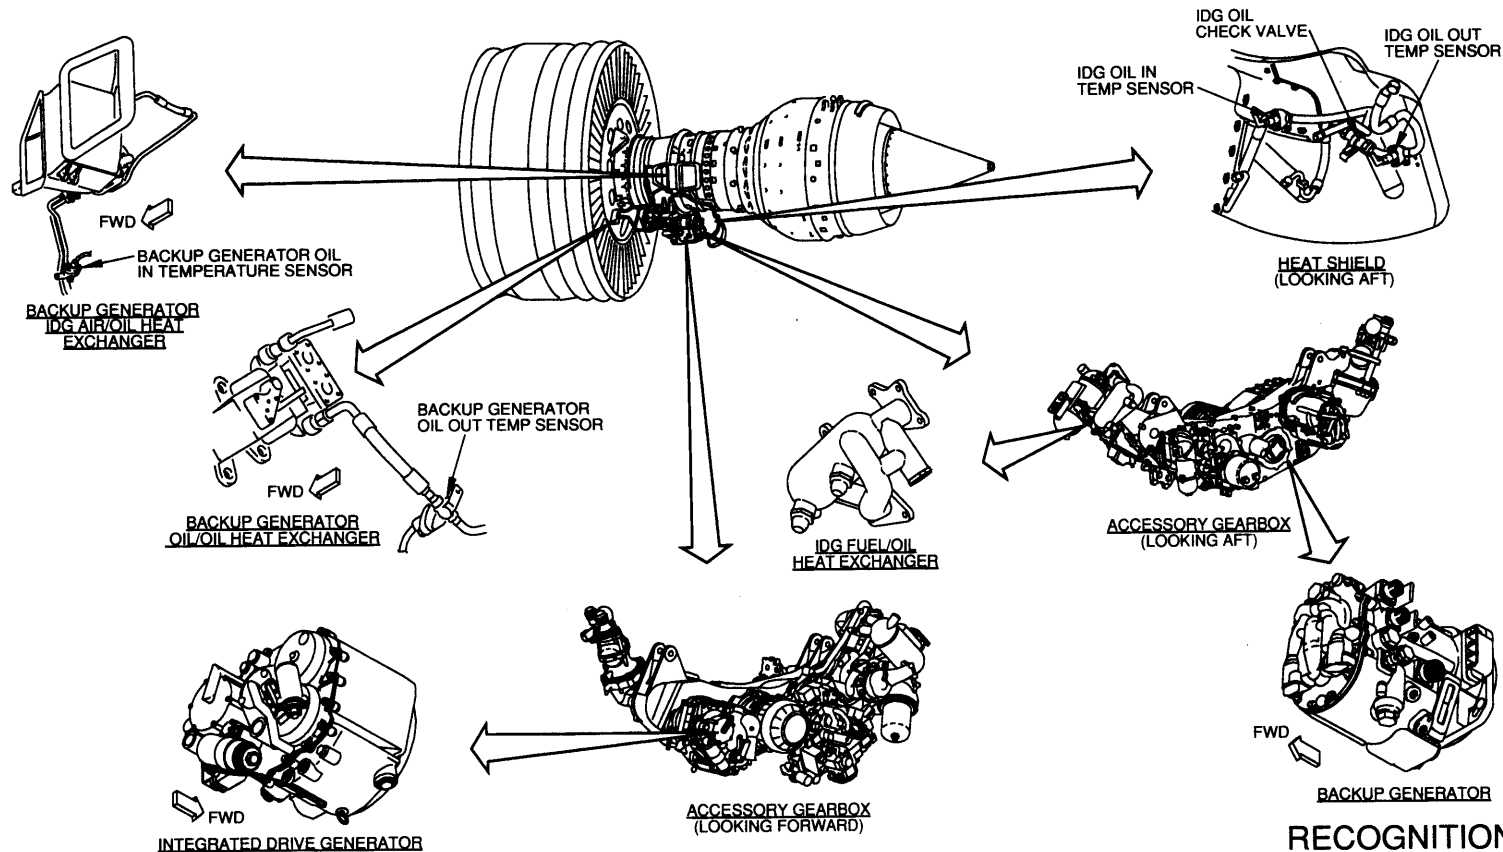


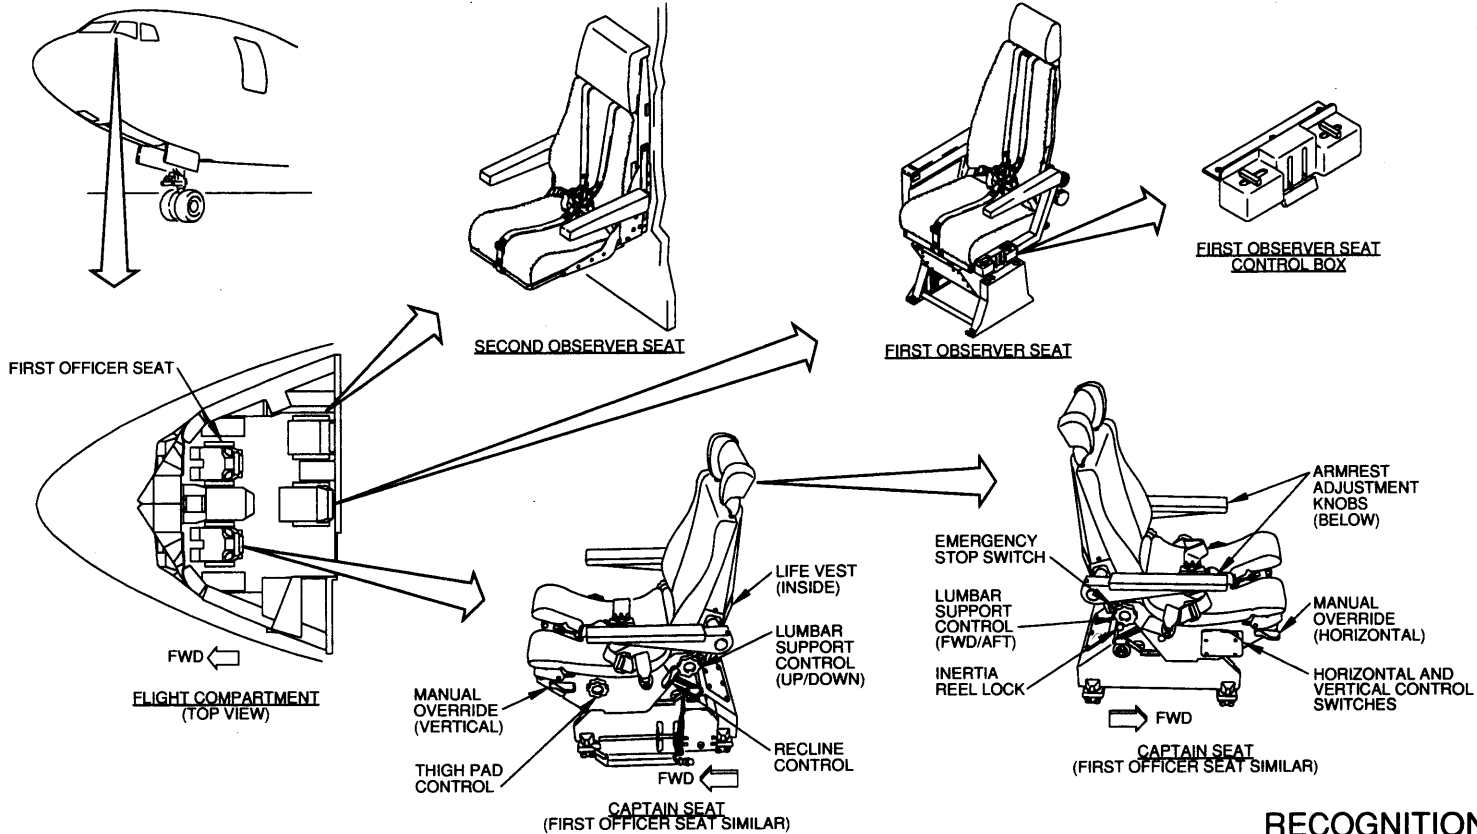

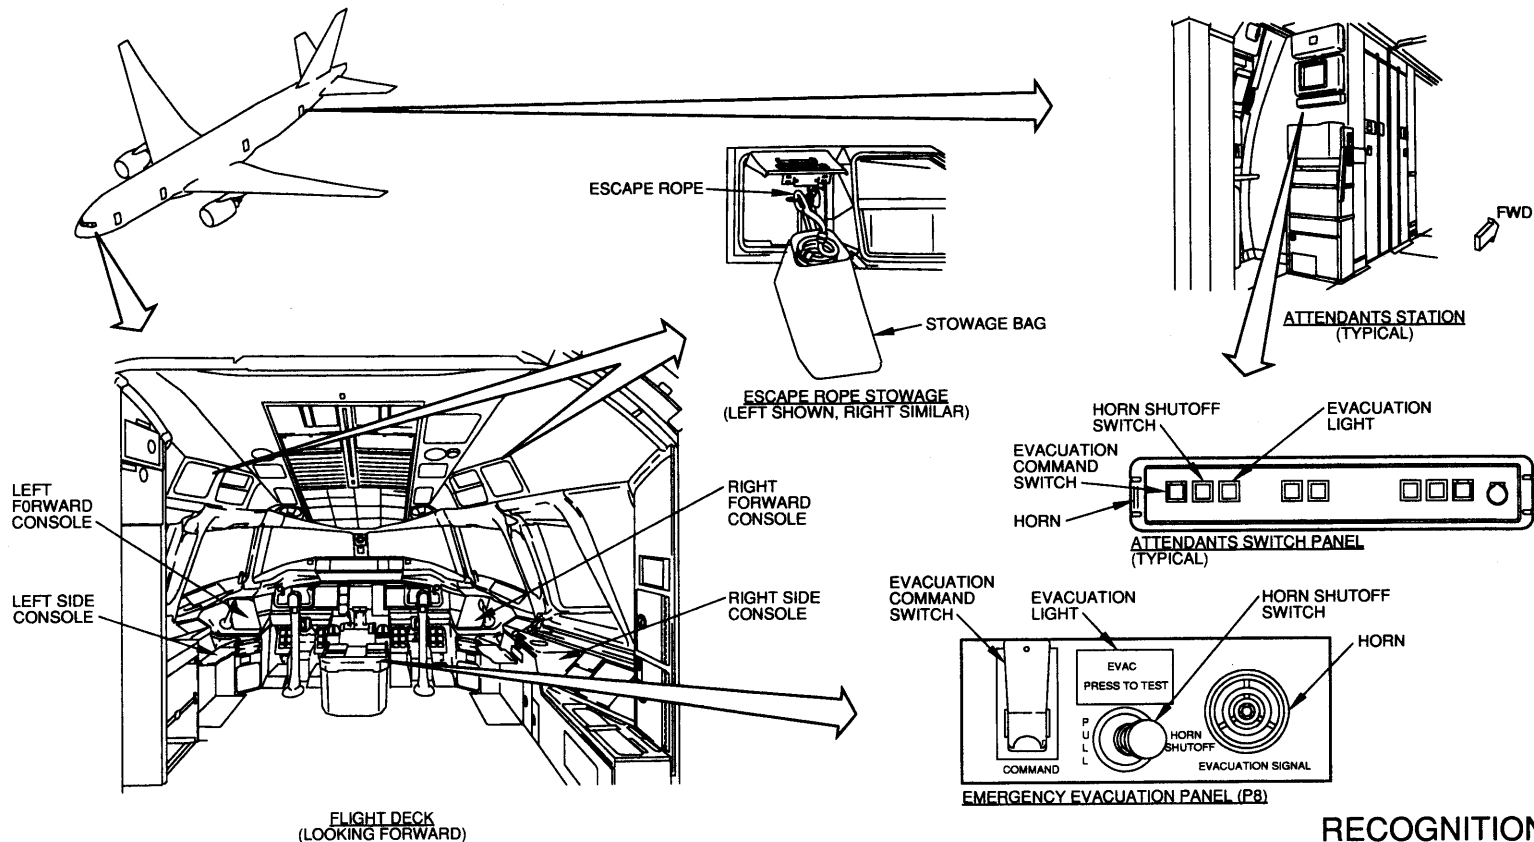


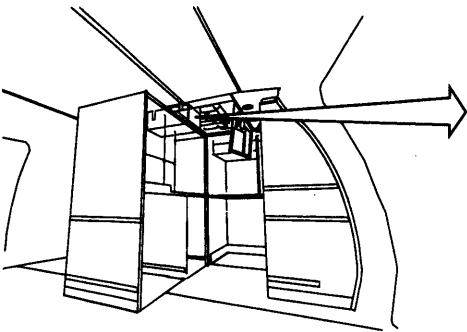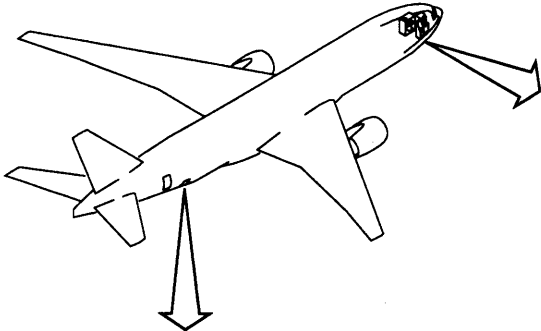


SECTION 41/43 GALLEY
(TYPICAL)

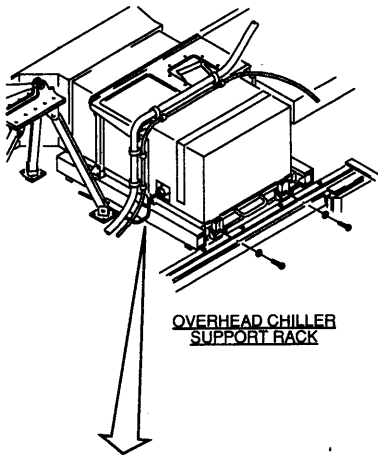


OVERHEAD CHILLER
SUPPORT RACK

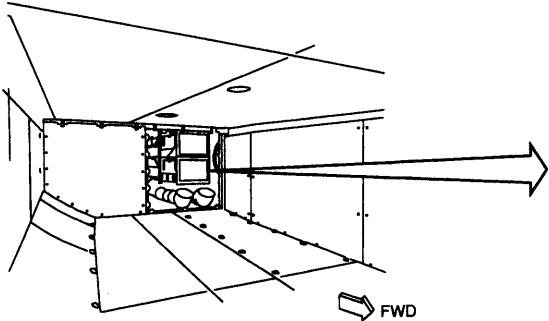


BULK CARGO COMPARTMENT
(VIEW THROUGH BULK CARGO DOOR)

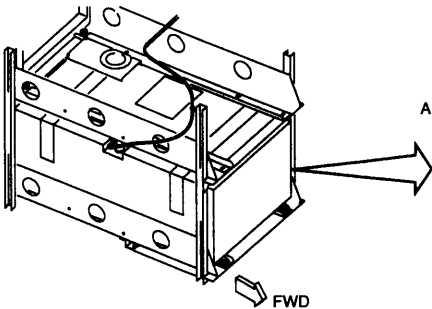


LOWER LOBE (AFT GALLEY)
AIR CHILLER SUPPORT RACK

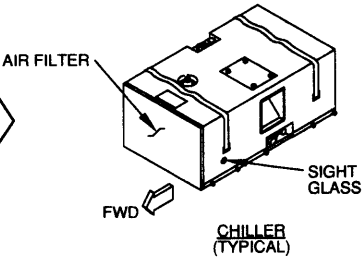

CHILLER
(TYPICAL)

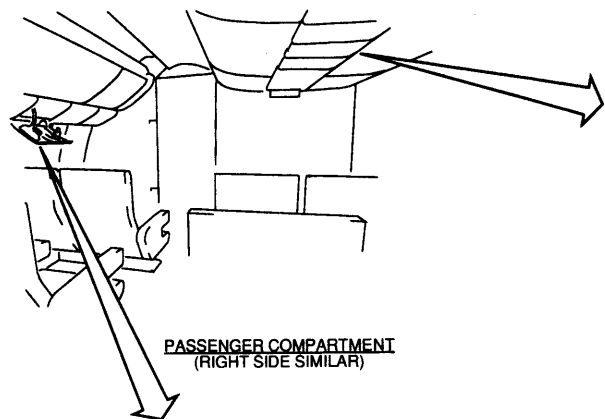


PASSENGER COMPARTMENT
(RIGHT SIDE SIMILAR)

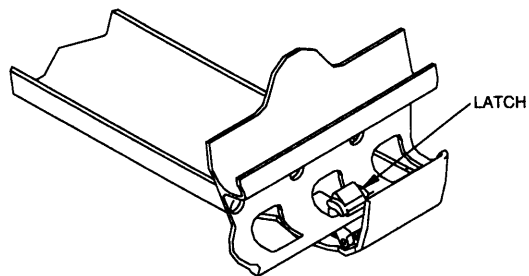


READING
LIGHTS
PSU

LATCH ACCESS FOR
OUTBOARD PSU

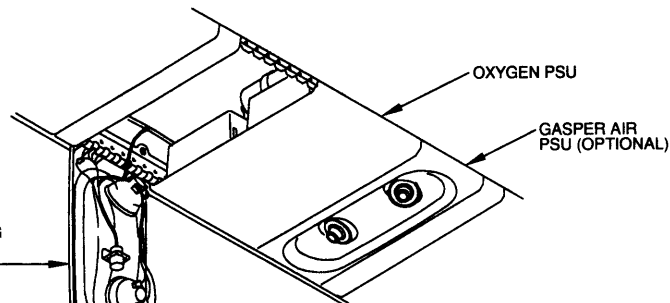


CENTER PSU


LATCH
ACCESS
HOLE (2)

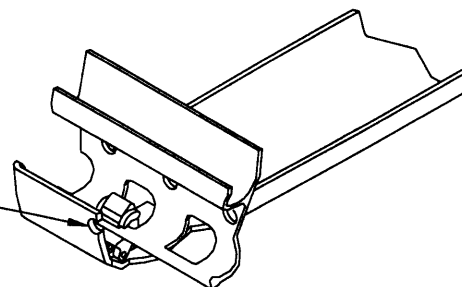


LATCH ACCESS FOR
CENTER PSU

NOTE: THE LATCH ACCESS FOR THE OUTBOARD PSU IS BETWEEN THE
BOTTOM OF THE STOWAGE BIN AND THE TOP OF THE PSU DOOR.

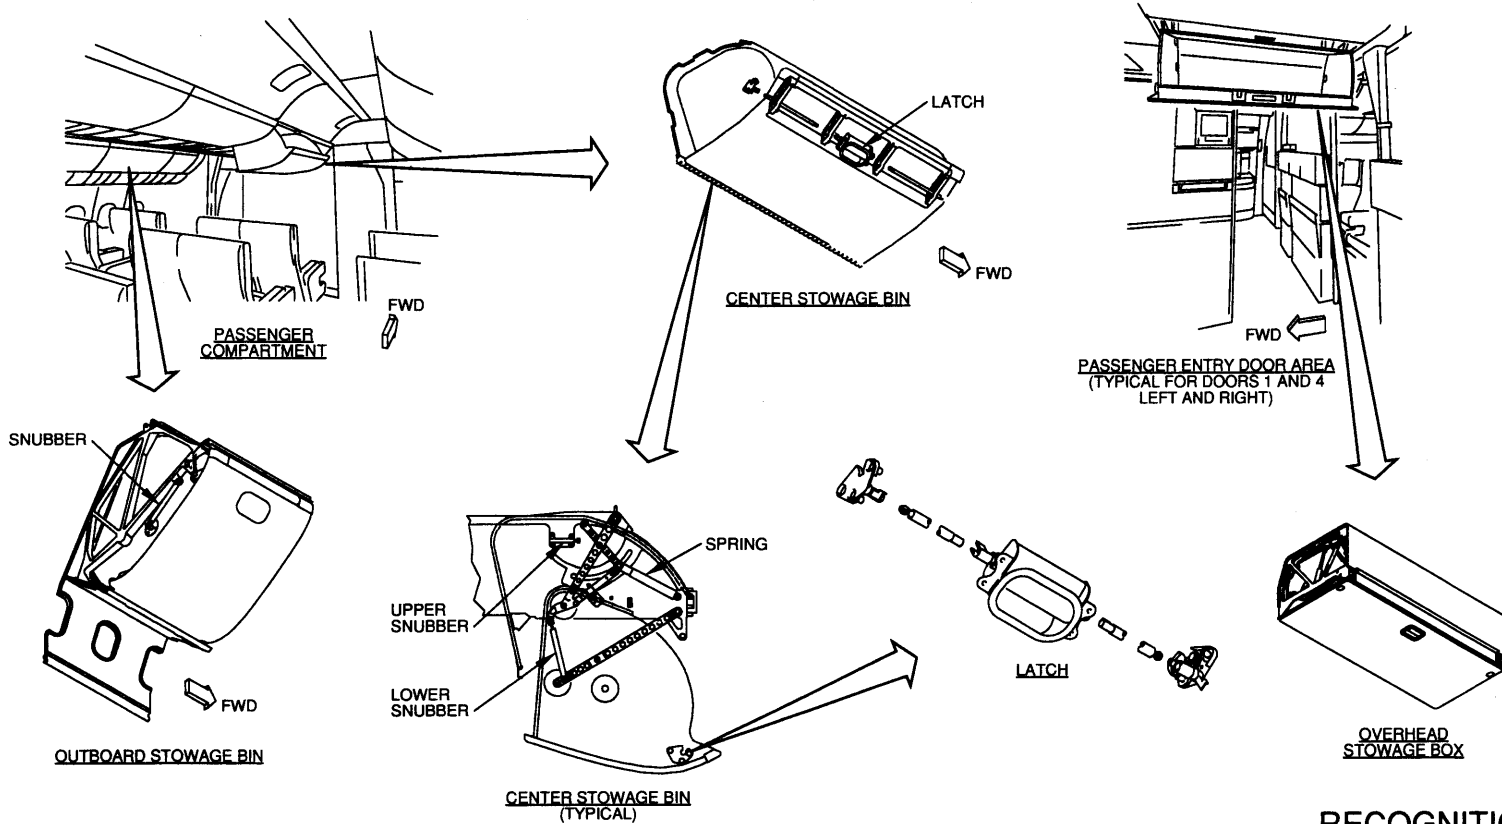


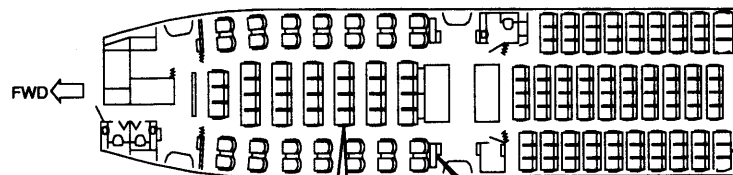


SEAT VIDEO
DISPLAY
(IN ARM REST)
(OPTIONAL)

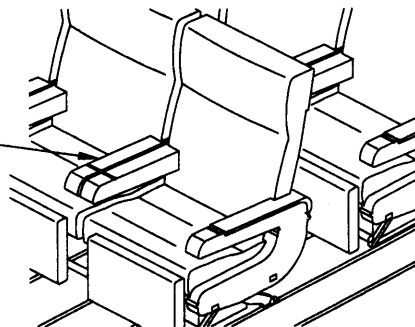


FIRST CLASS SEATS
(TYPICAL)




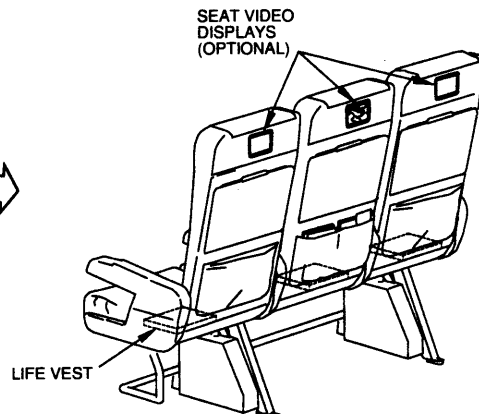



ECONOMY SEATS
(TYPICAL)

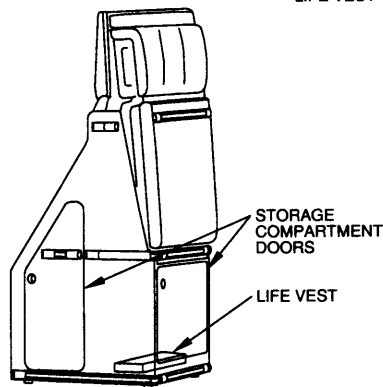



ATTENDANT SEAT
(TYPICAL)





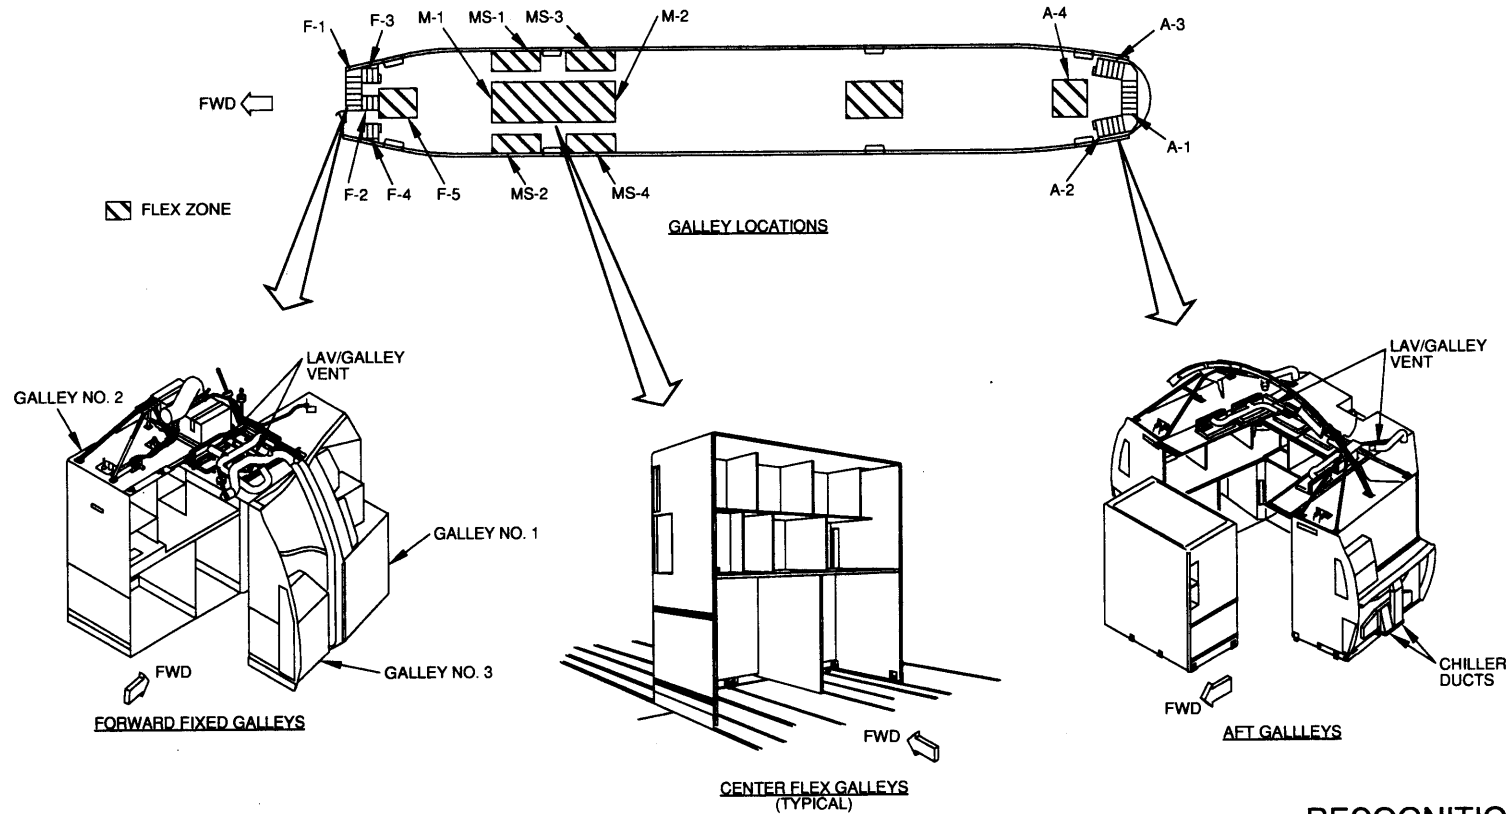


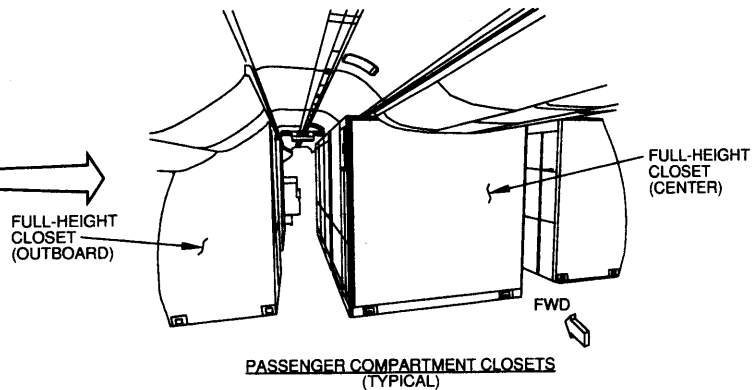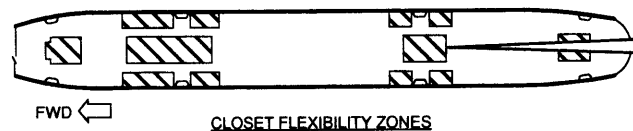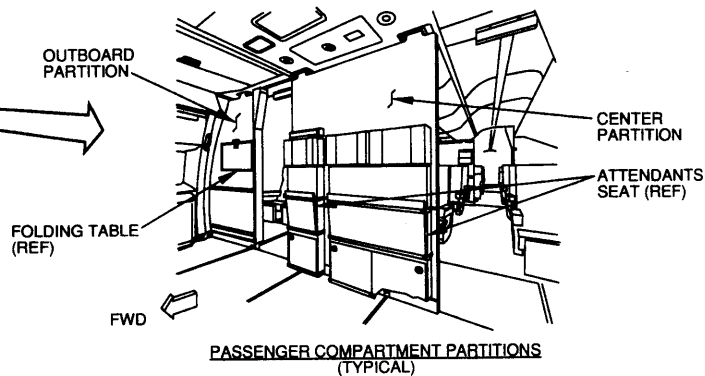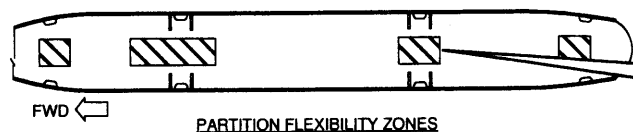

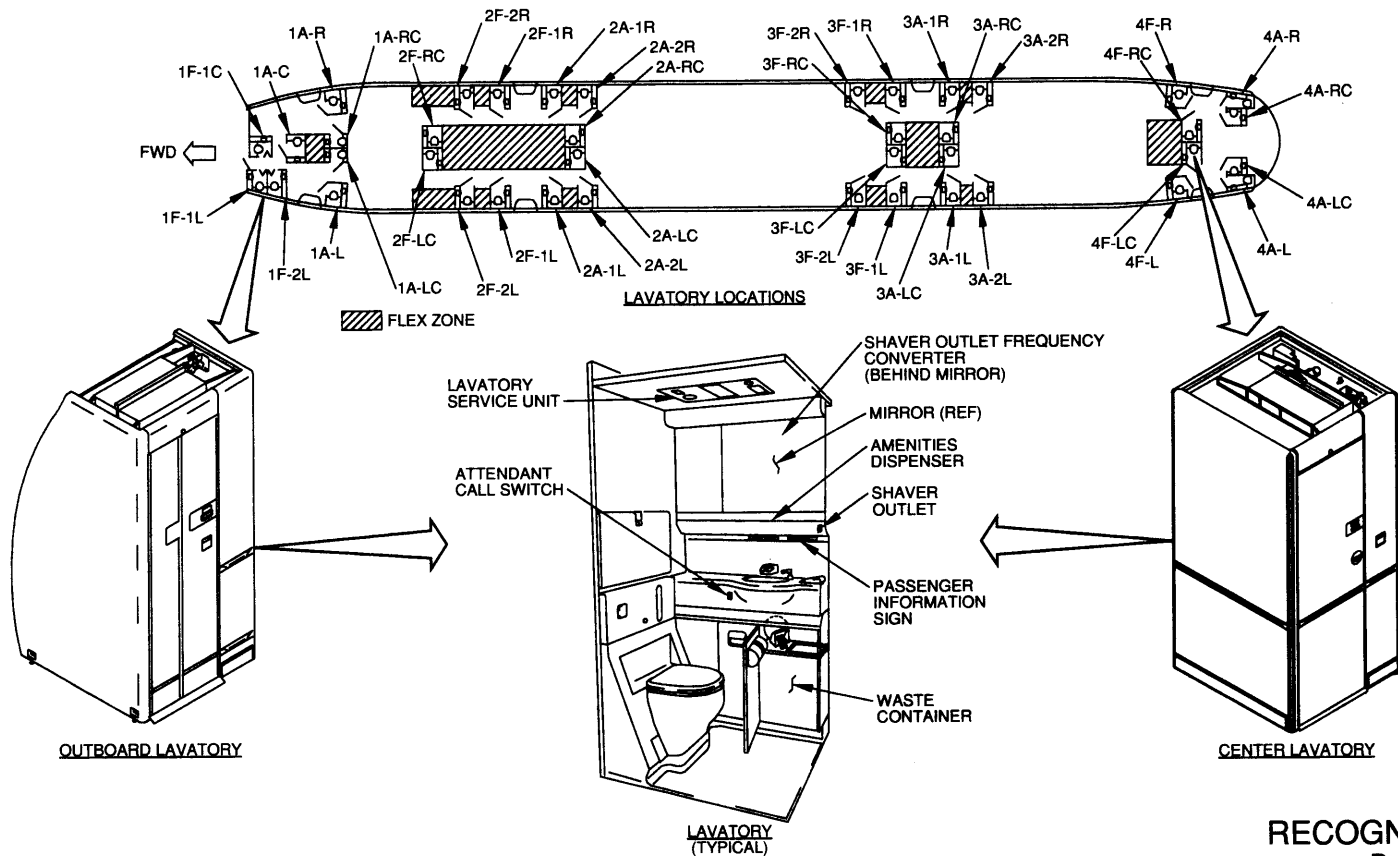

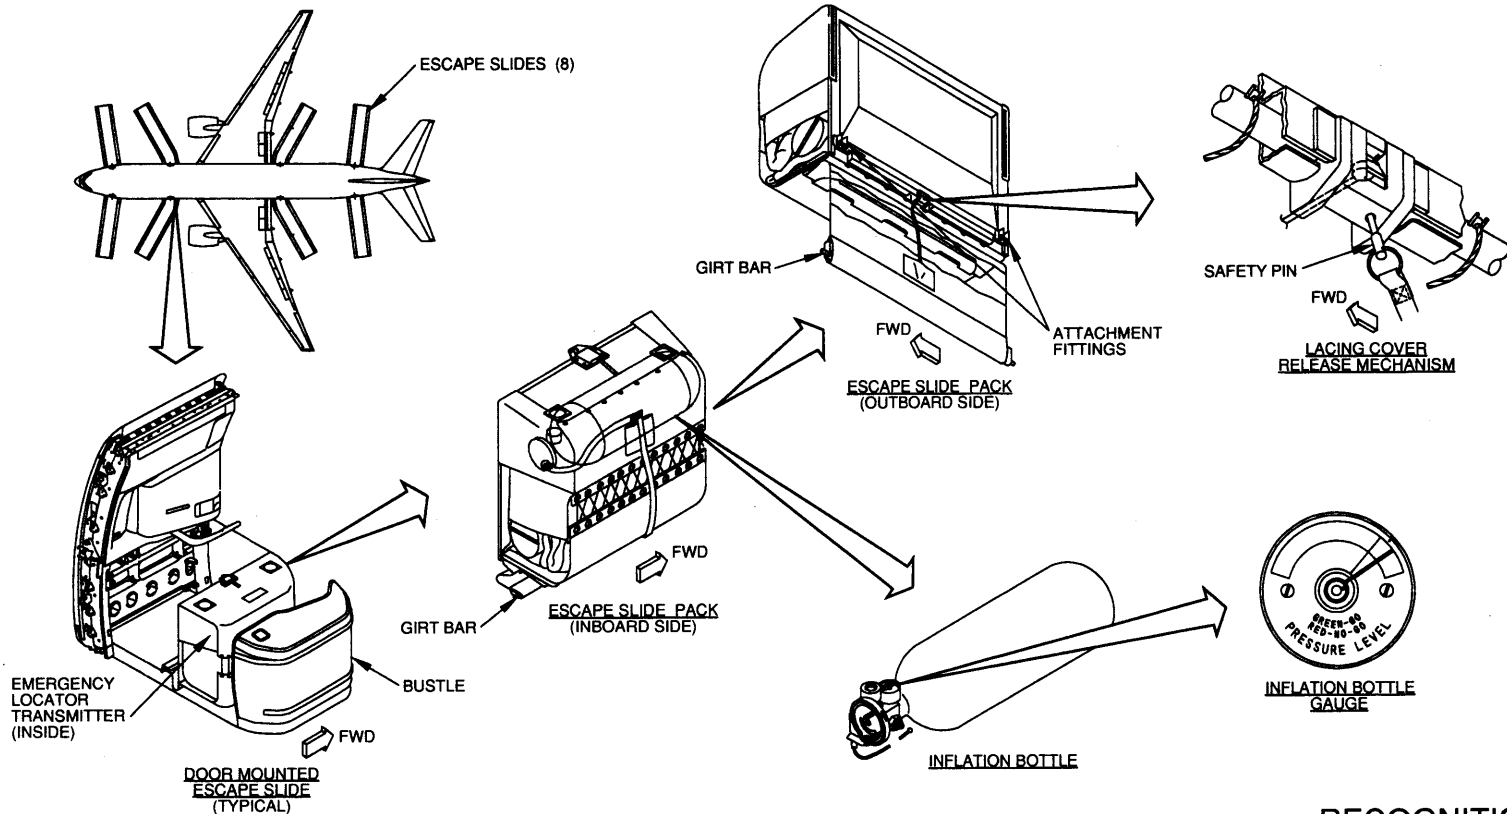

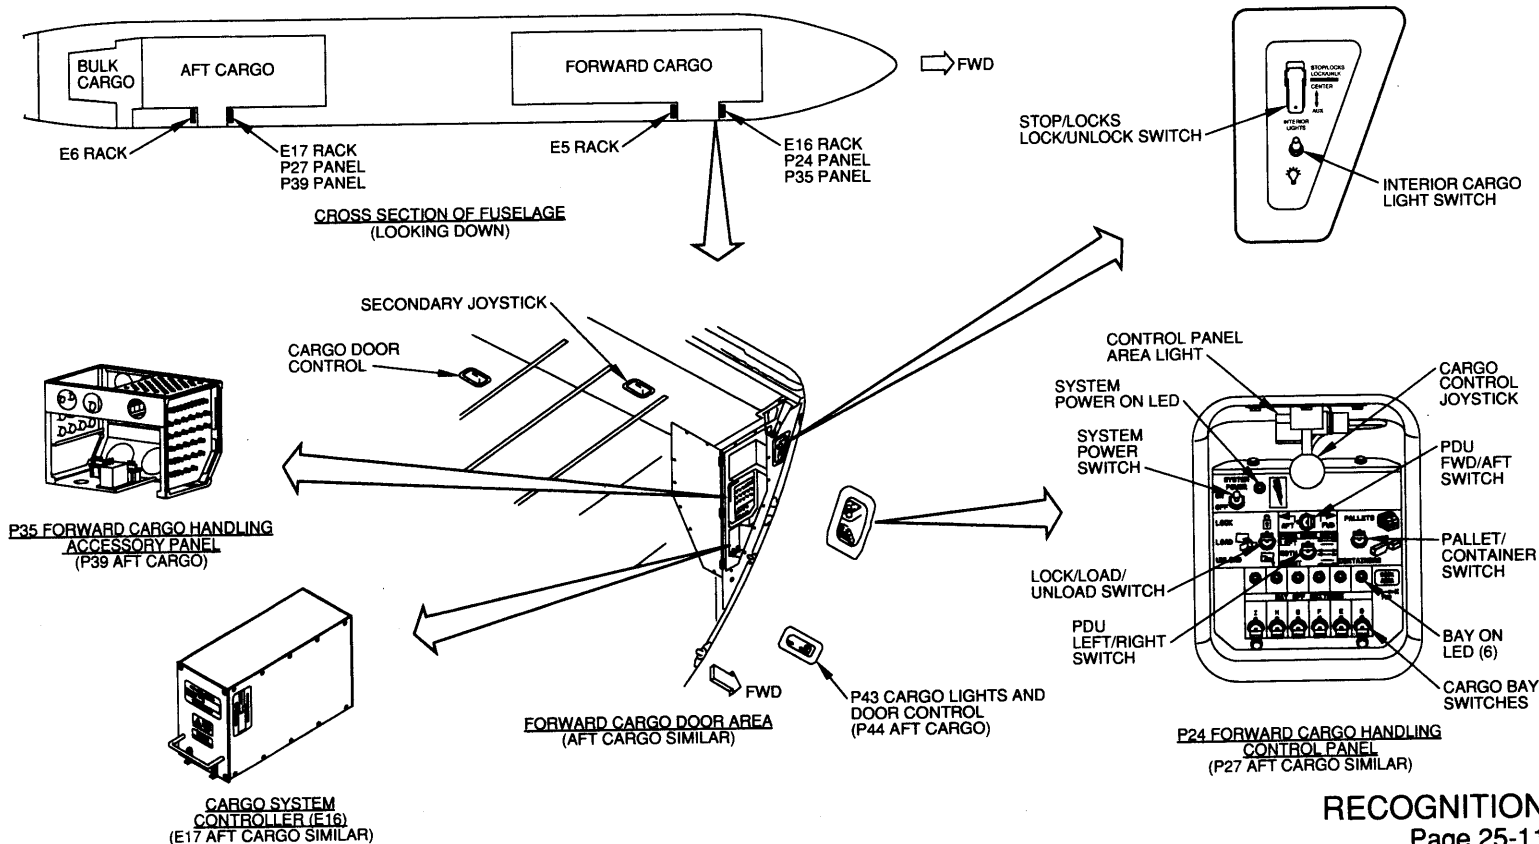

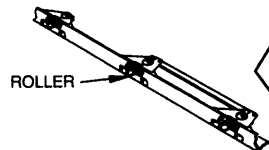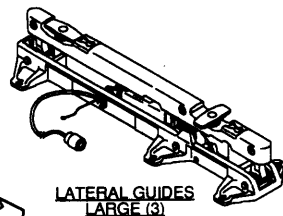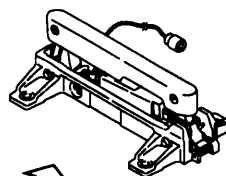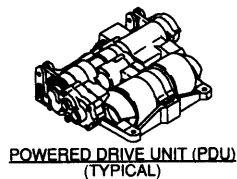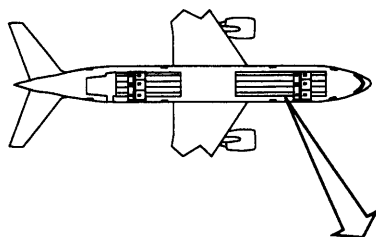

SIDE GUIDE RAIL

END STOP (10)

**PARTIAL
LOAD STOP**

**DOUBLE
PALLET LOCK**

ROLLER TRAY

**FORWARD CARGO HANDLING SYSTEM
(AFT CARGO SIMILAR)**

**SINGLE
PALLET LOCK**

**LONGITUDINAL
PDU**

**LATERAL
PDU**




**AFT BALL
PANEL (2)**

**SILL
ROLLER (5)**



**CENTER
STOP/LOCK (2)**

**AUXILIARY
STOP/LOCK (2)
(OPTIONAL)**




**FWD BALL
PANEL (3)**

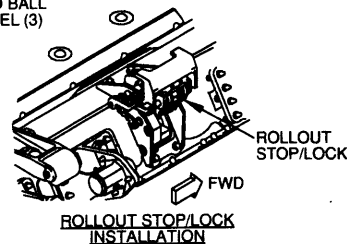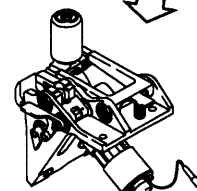
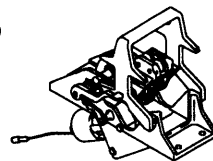


RECOGNITION

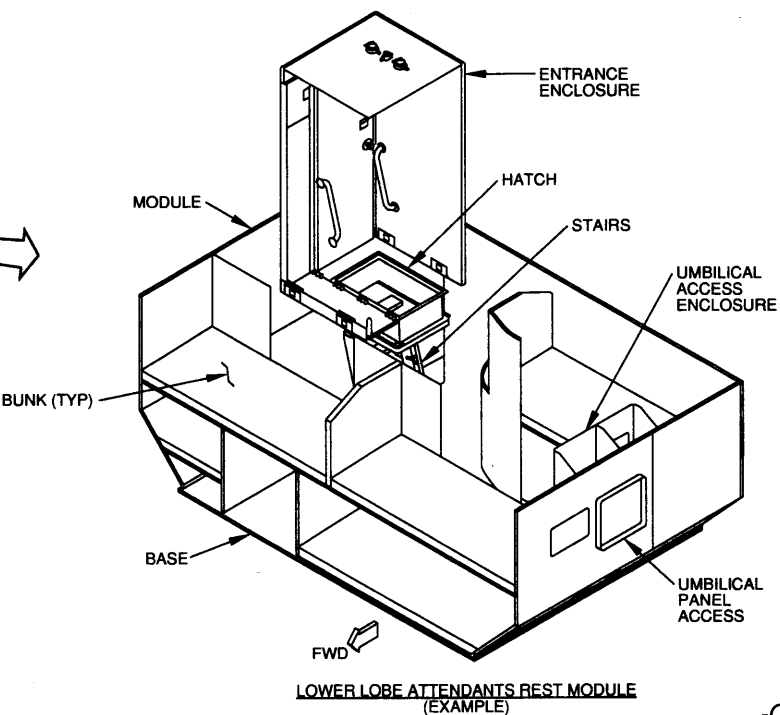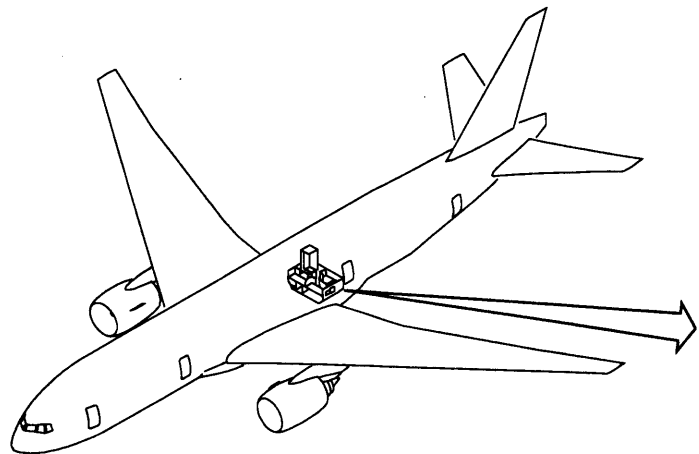


LOWER LOBE ATTENDANTS REST MODULE
(EXAMPLE)

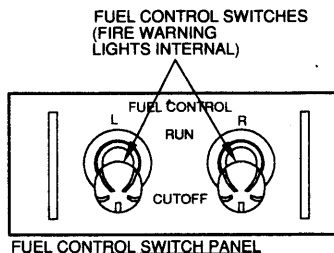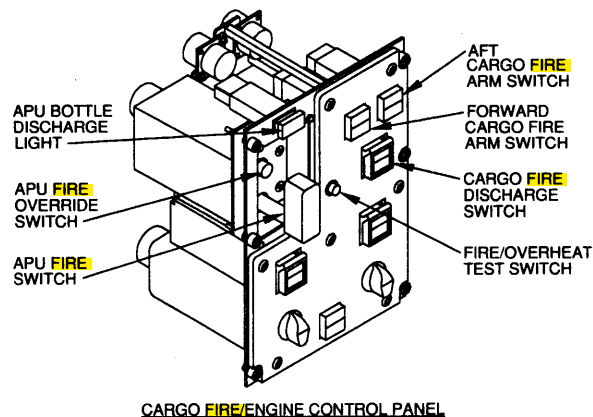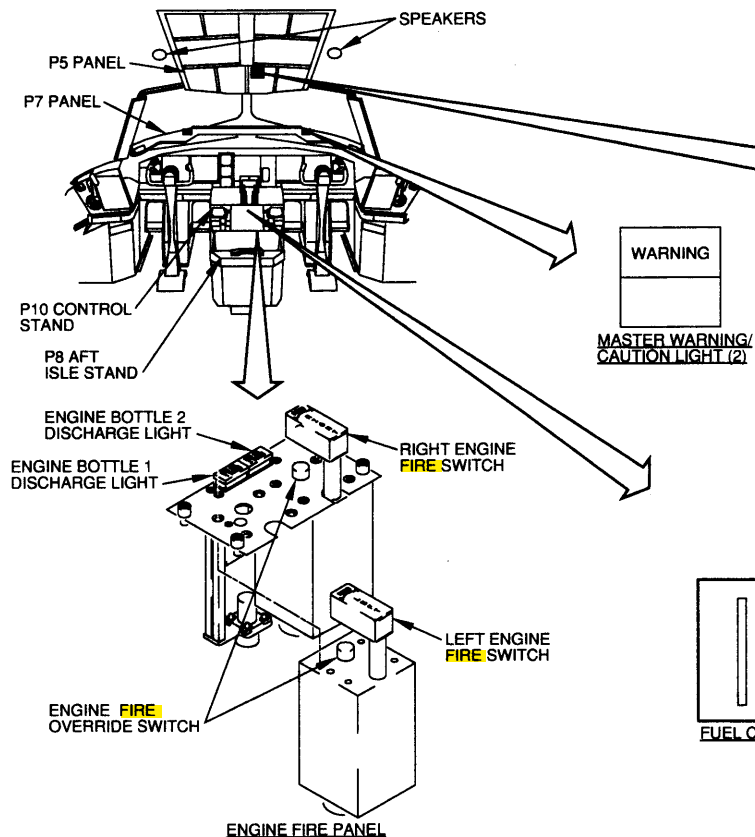

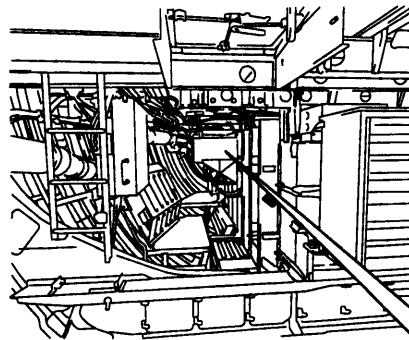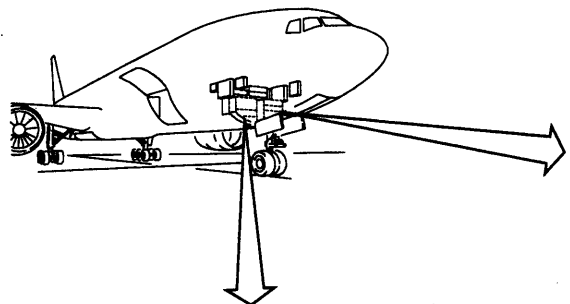

MAIN EQUIPMENT CENTER
(LEFT SIDE LOOKING FORWARD)

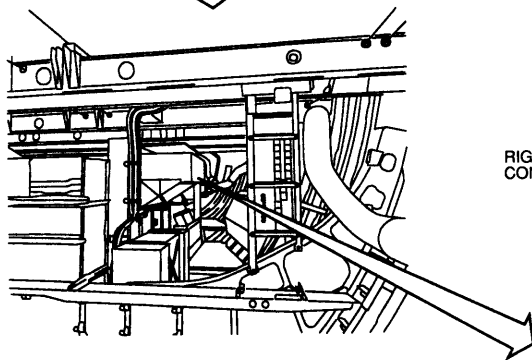

MAIN EQUIPMENT CENTER
(RIGHT SIDE LOOKING FORWARD)

CENTER DLODS
CONTROL CARD

RIGHT ENGINE FIRE
DETECTION CARD

LEFT DLODS
CONTROL CARD

APU FIRE DETECTION
CARD


LEFT ENGINE FIRE
DETECTION CARD


1	PREU - PRESELECTION CARD
2	PREU - LINE/ANNUNCIATOR CARD
3	CENTER SYSTEM CARD (LH)
4	RIGHT DLODS CARD
5	RIGHT APUIS CARD
6	CENTER APUIS CARD
7	CENTER DLODS CARD
8	SPARE
9	RIGHT ENGINE FREQUENCY DET CARD
10	SPARE
11	LEFT APUIS SIGNAL GATEWAY CARD
12	SPARE
13	RIGHT DLODS CARD
14	RIGHT APUIS SIGNAL GATEWAY CARD
15	RIGHT WEIGHT ON WHEELS CARD
16	RIGHT SYSTEM CARD (RH)
17	PREU - LINE/ANNUNCIATOR CARD
18	PREU - PRESELECTION CARD

RIGHT SYSTEMS CARD FILE (P84)







1	PREU - PRESELECTION CARD
2	PREU - LINE/ANNUNCIATOR CARD
3	CENTER SYSTEM CARD (LH)
4	RIGHT DLODS CARD
5	LEFT APUIS CARD
6	SPARE
7	APU FREQUENCY DET CARD
8	LEFT ENGINE FREQUENCY DET CARD
9	SPARE
10	LEFT APUIS SIGNAL GATEWAY CARD
11	SPARE
12	LEFT DLODS CARD
13	RIGHT APUIS SIGNAL GATEWAY CARD
14	LEFT WEIGHT ON WHEELS CARD
15	LEFT SYSTEM CARD (LH)
16	PREU - LINE/ANNUNCIATOR CARD
17	PREU - PRESELECTION CARD


LEFT SYSTEMS CARD FILE (P85)

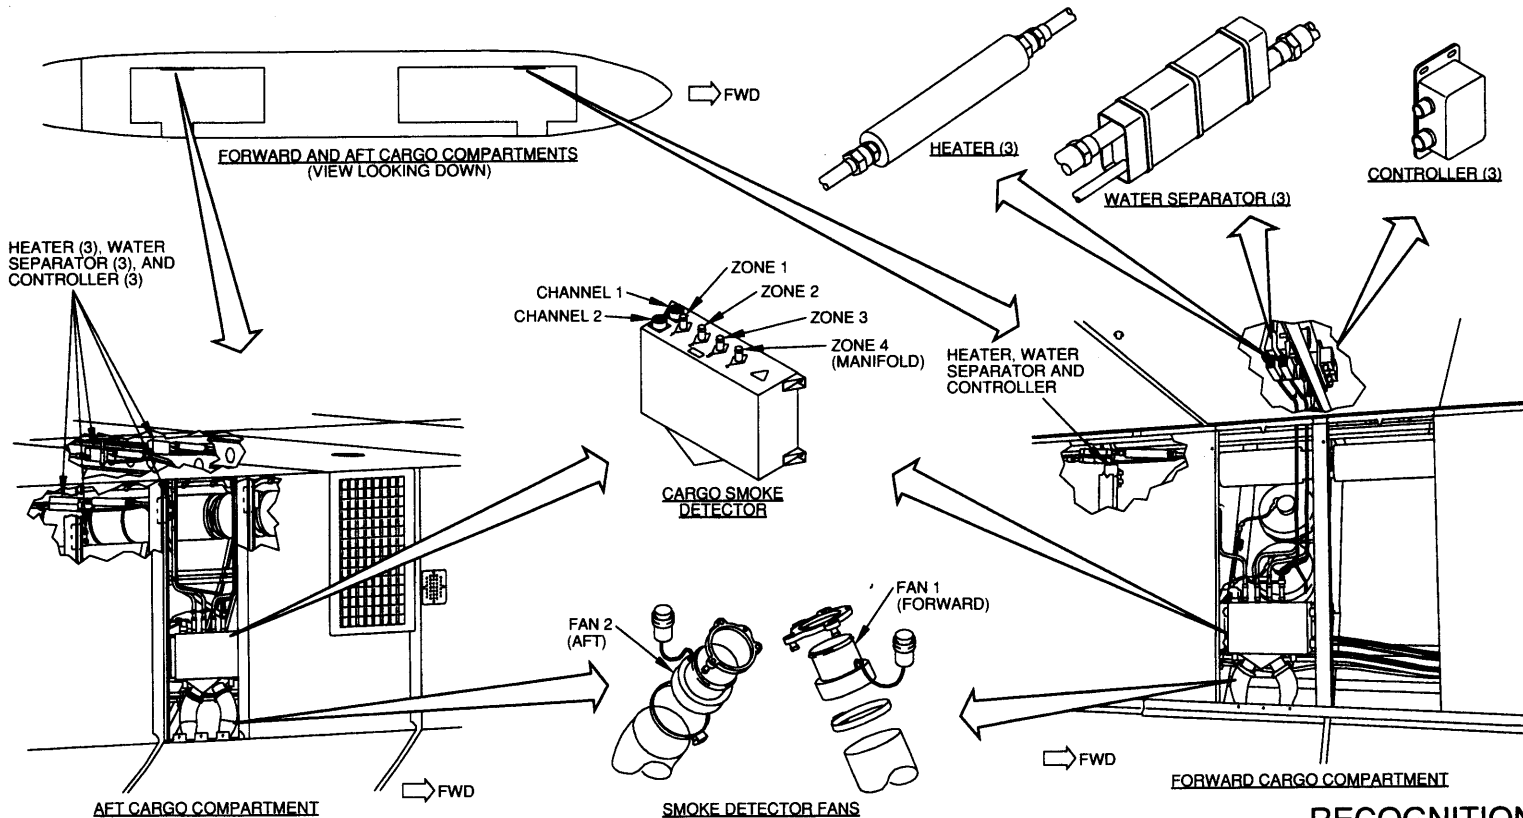

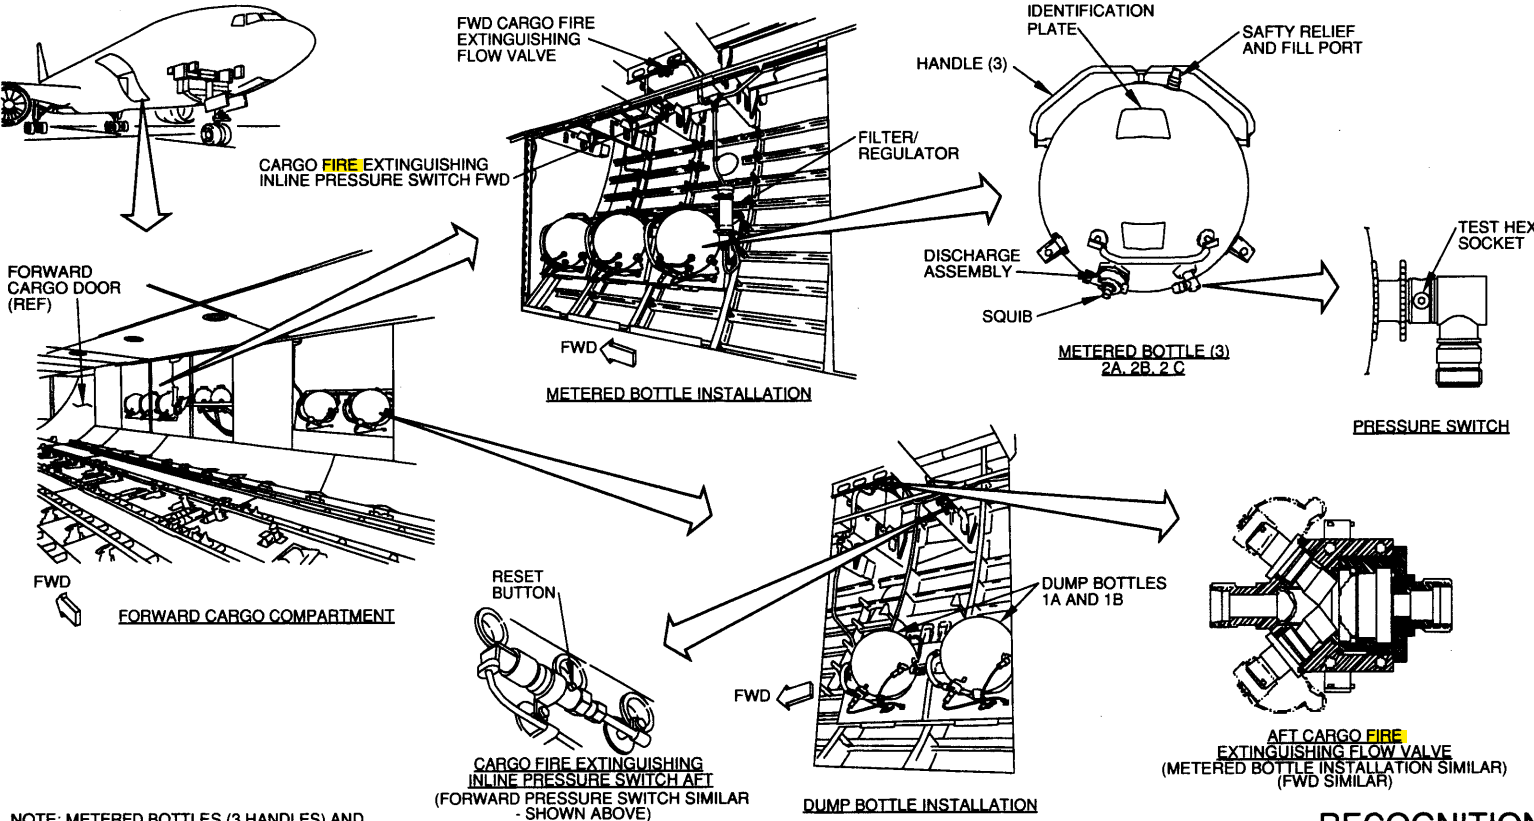


NOTE: METERED BOTTLES (3 HANDLES) AND DUMP BOTTLES (2 HANDLES) SIMILAR

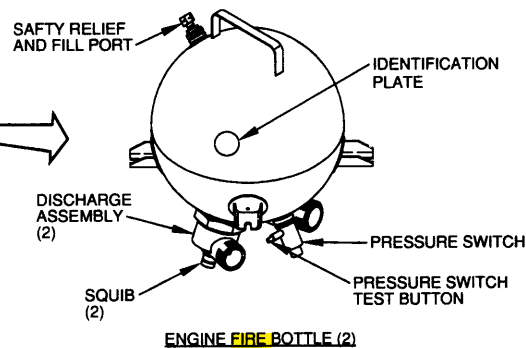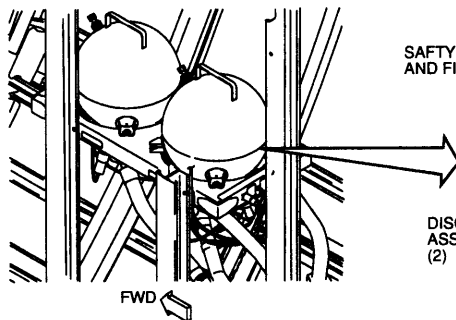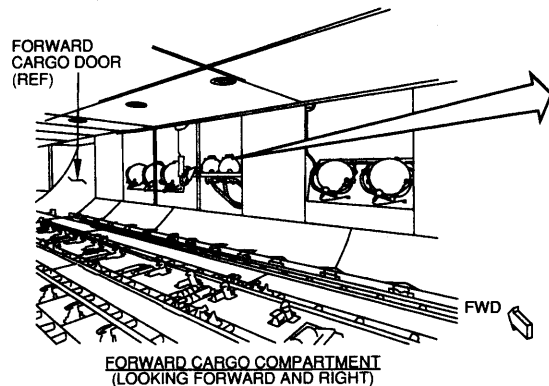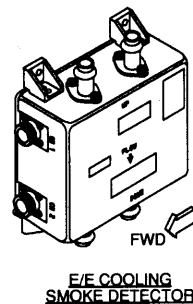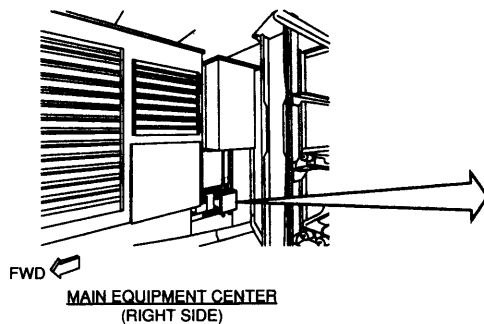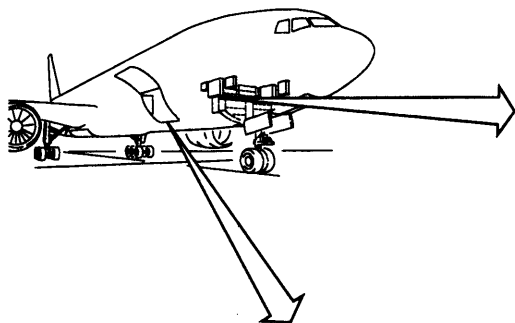

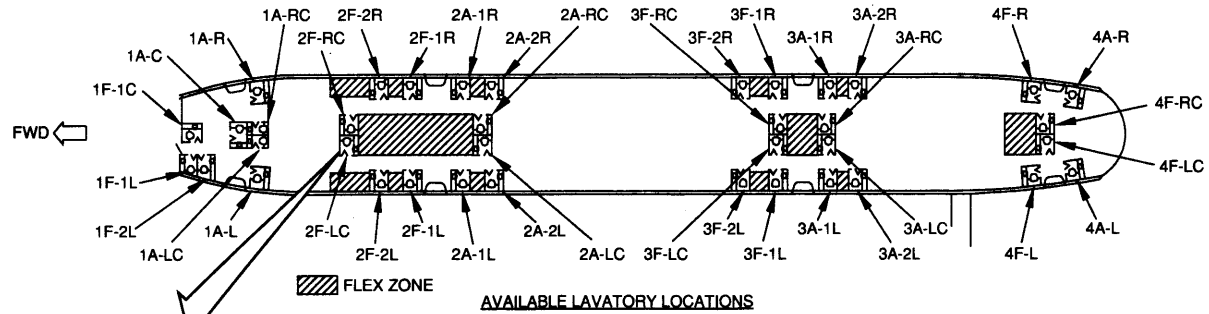

AVAILABLE LAVATORY LOCATIONS

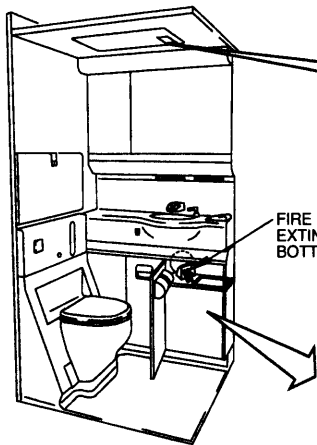

LAVATORY
(TYPICAL)

FIRE EXTINGUISHER
BOTTLE

ALARM HORN
(INTERNAL)

TEST SWITCH

INTERRUPT SWITCH


POWER-ON LED
(GREEN)

ALARM LED
(RED)


SMOKE SENSOR


FILTER
(INTERNAL)


LAVATORY SMOKE DETECTOR


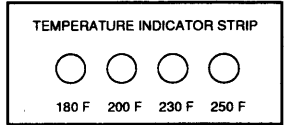



TEMPERATURE INDICATOR
(INSIDE WASTE COMPARTMENT CHUTE)

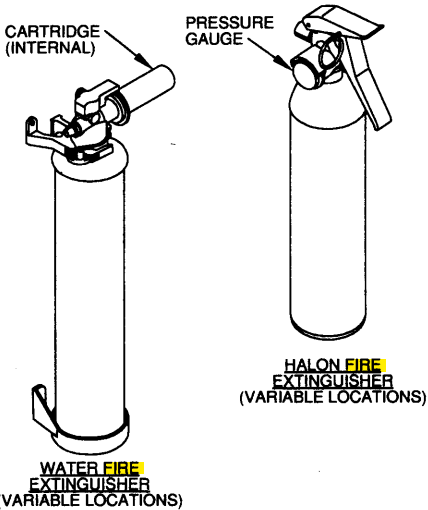

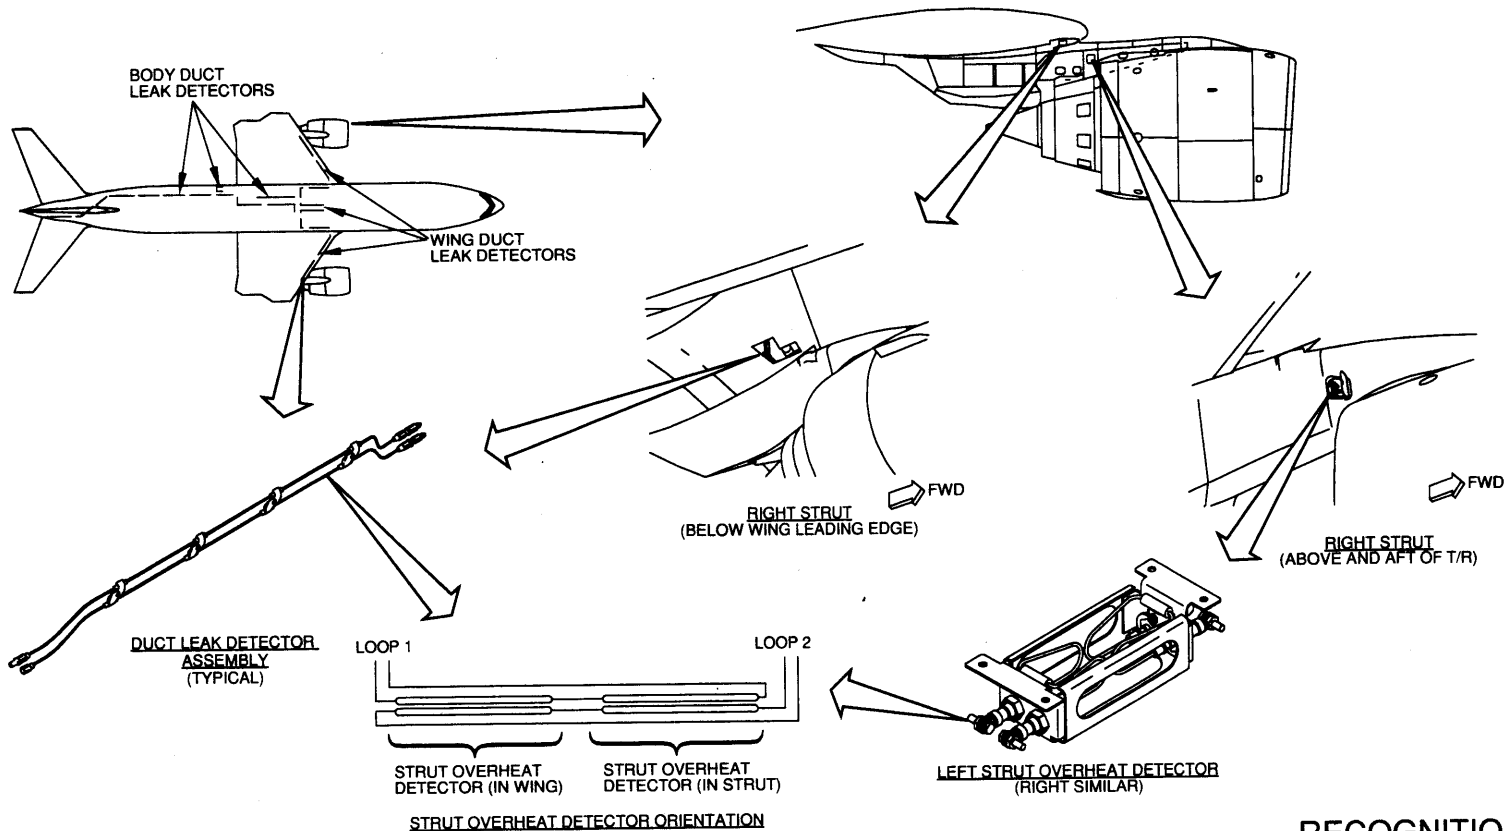


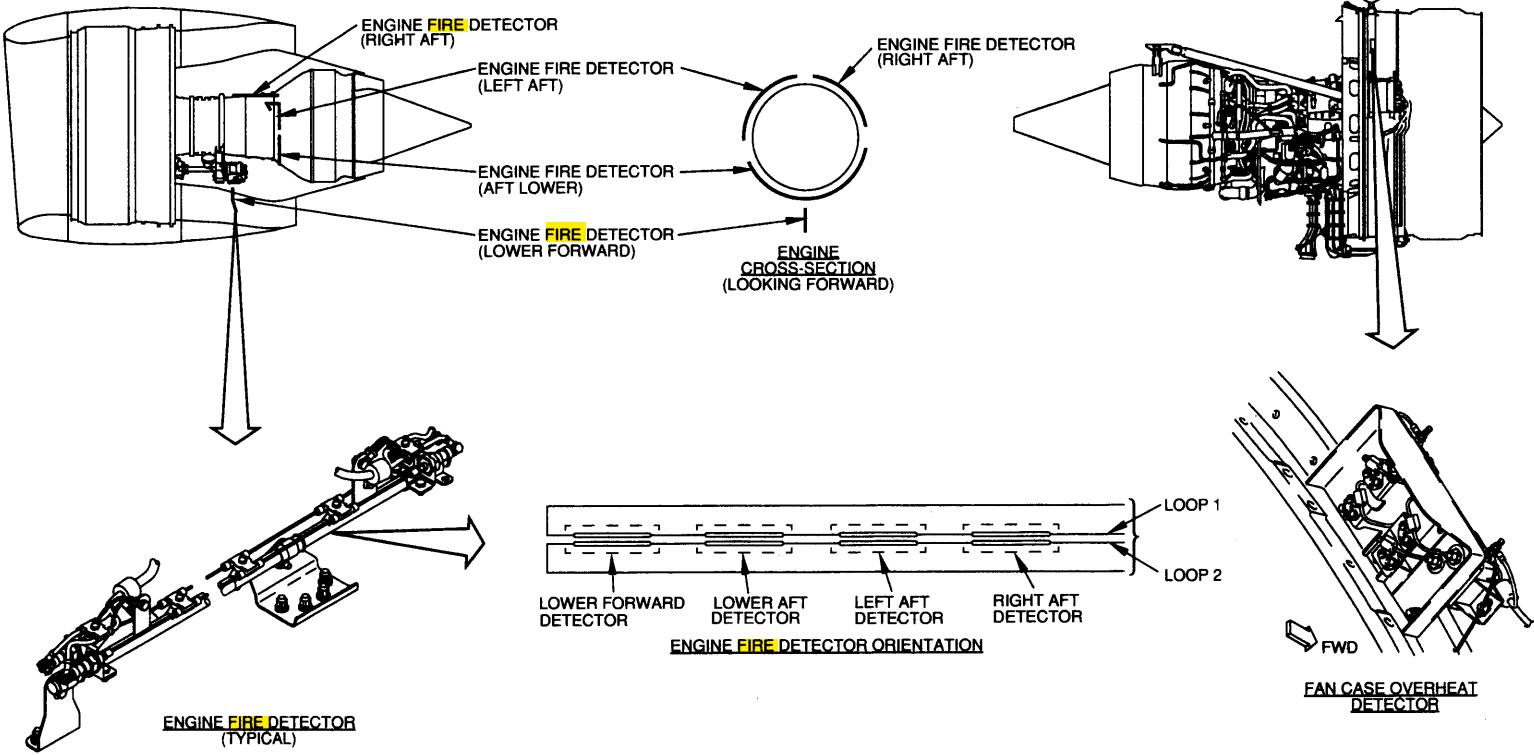


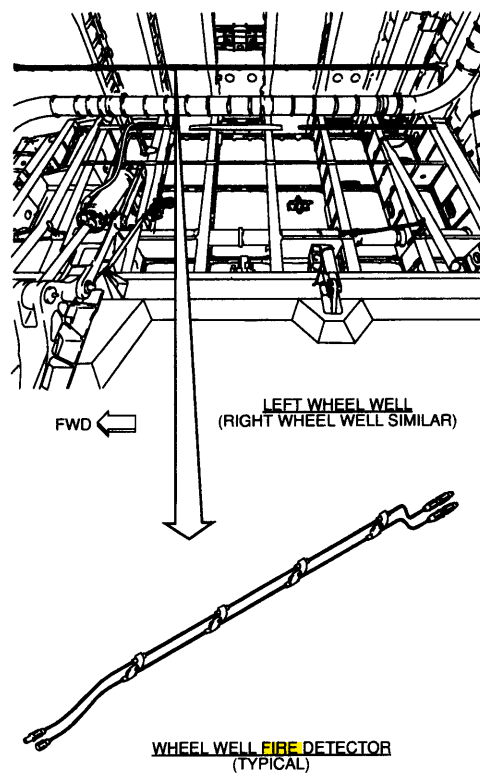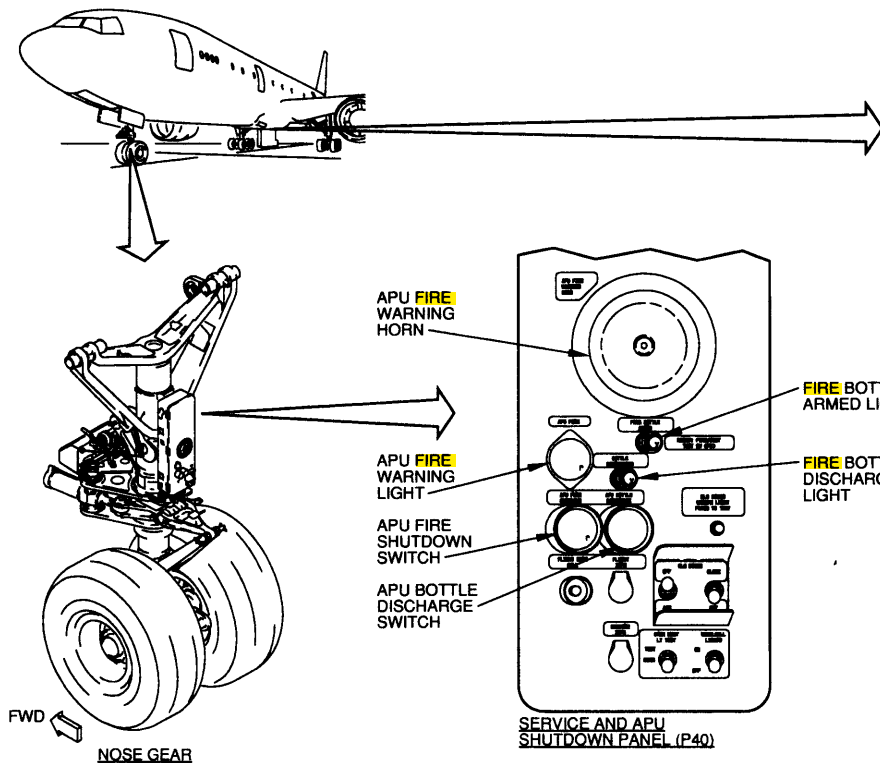


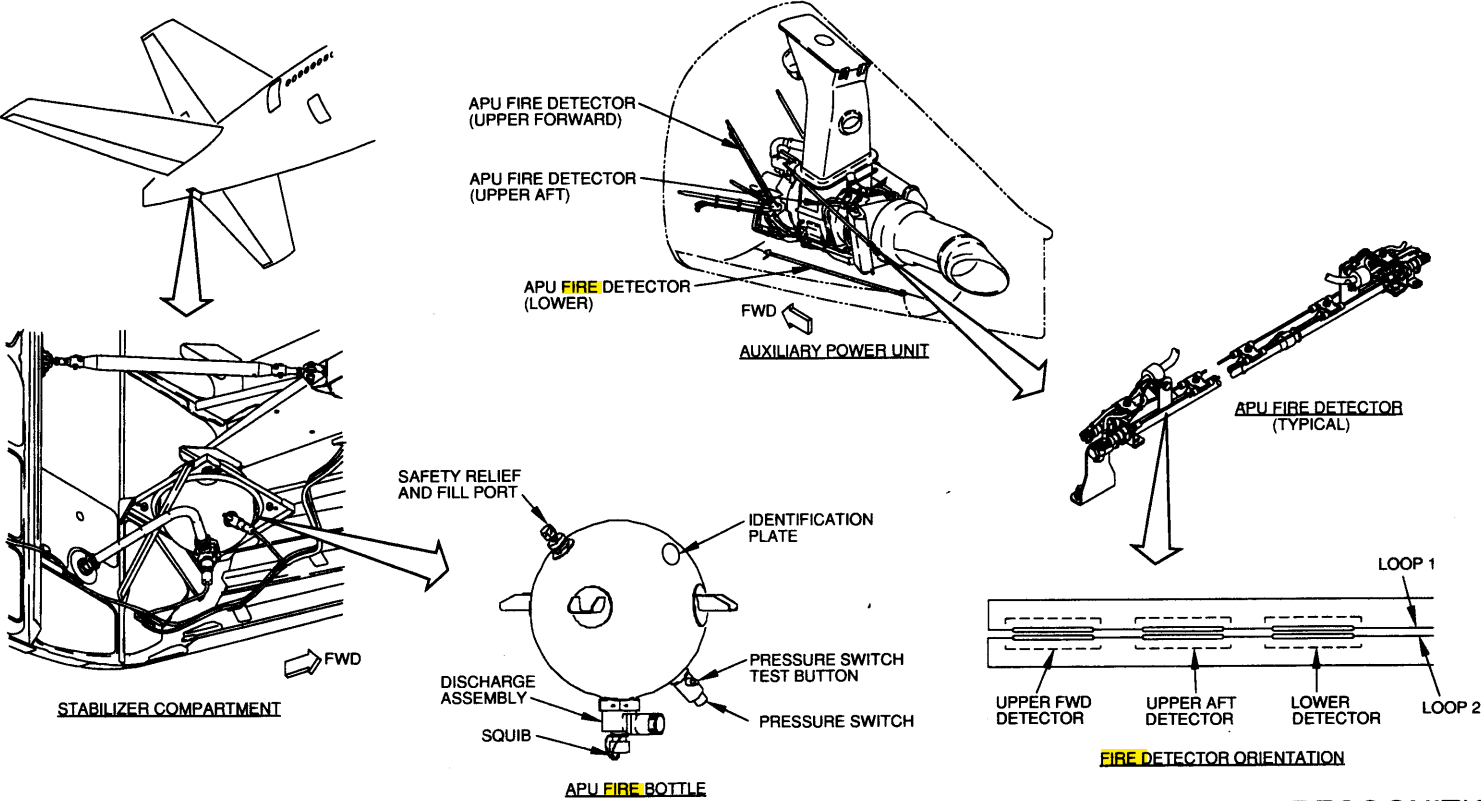


COMPONENT LOCATOR GUIDE

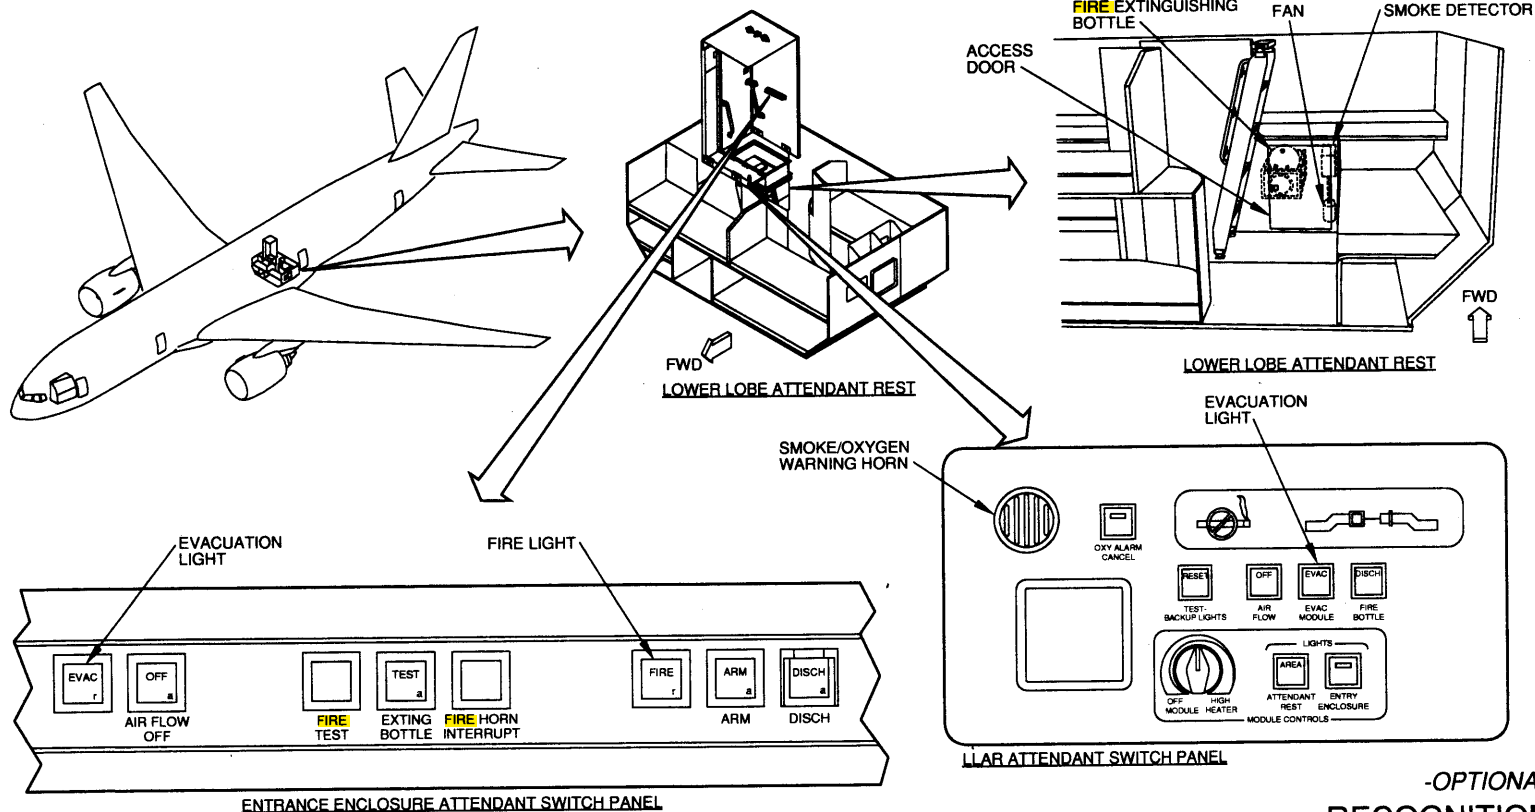


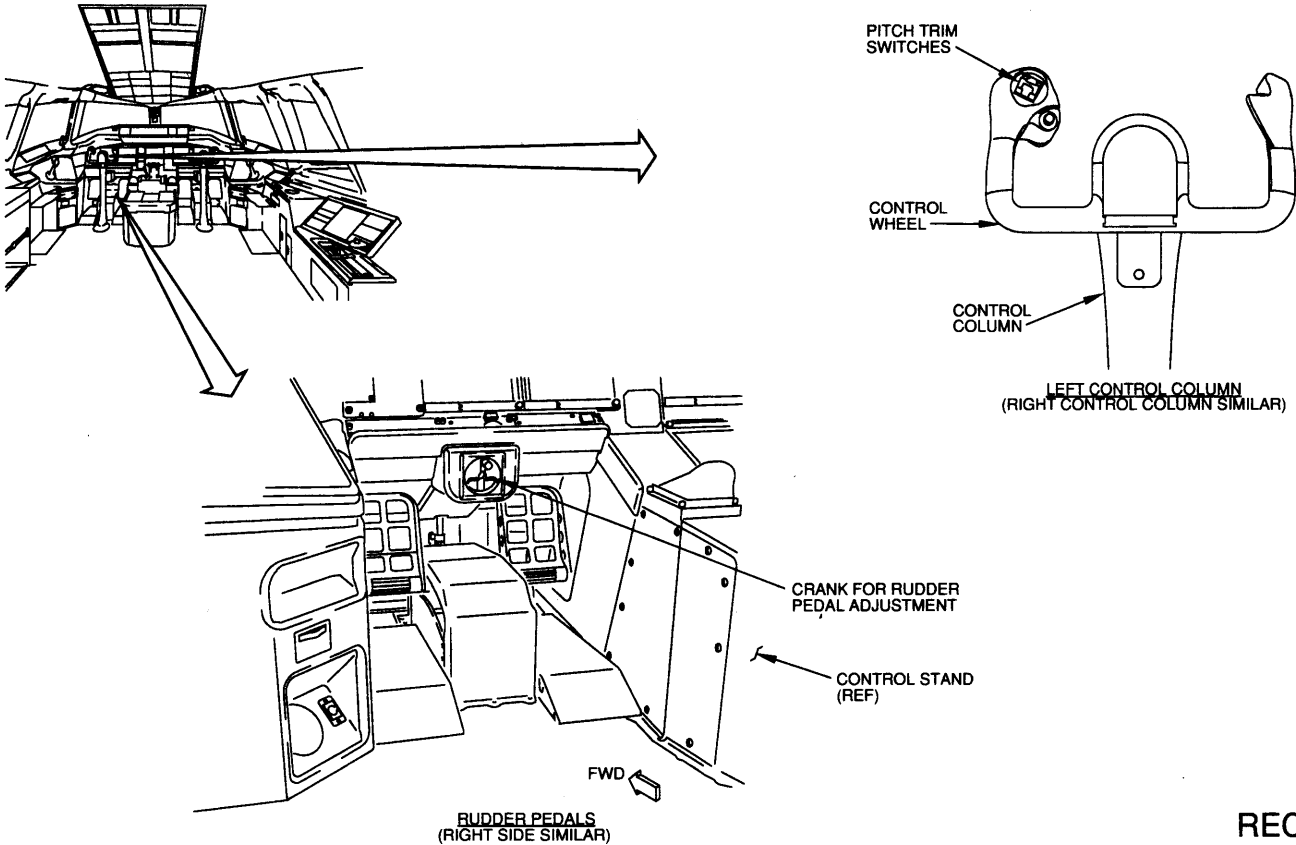


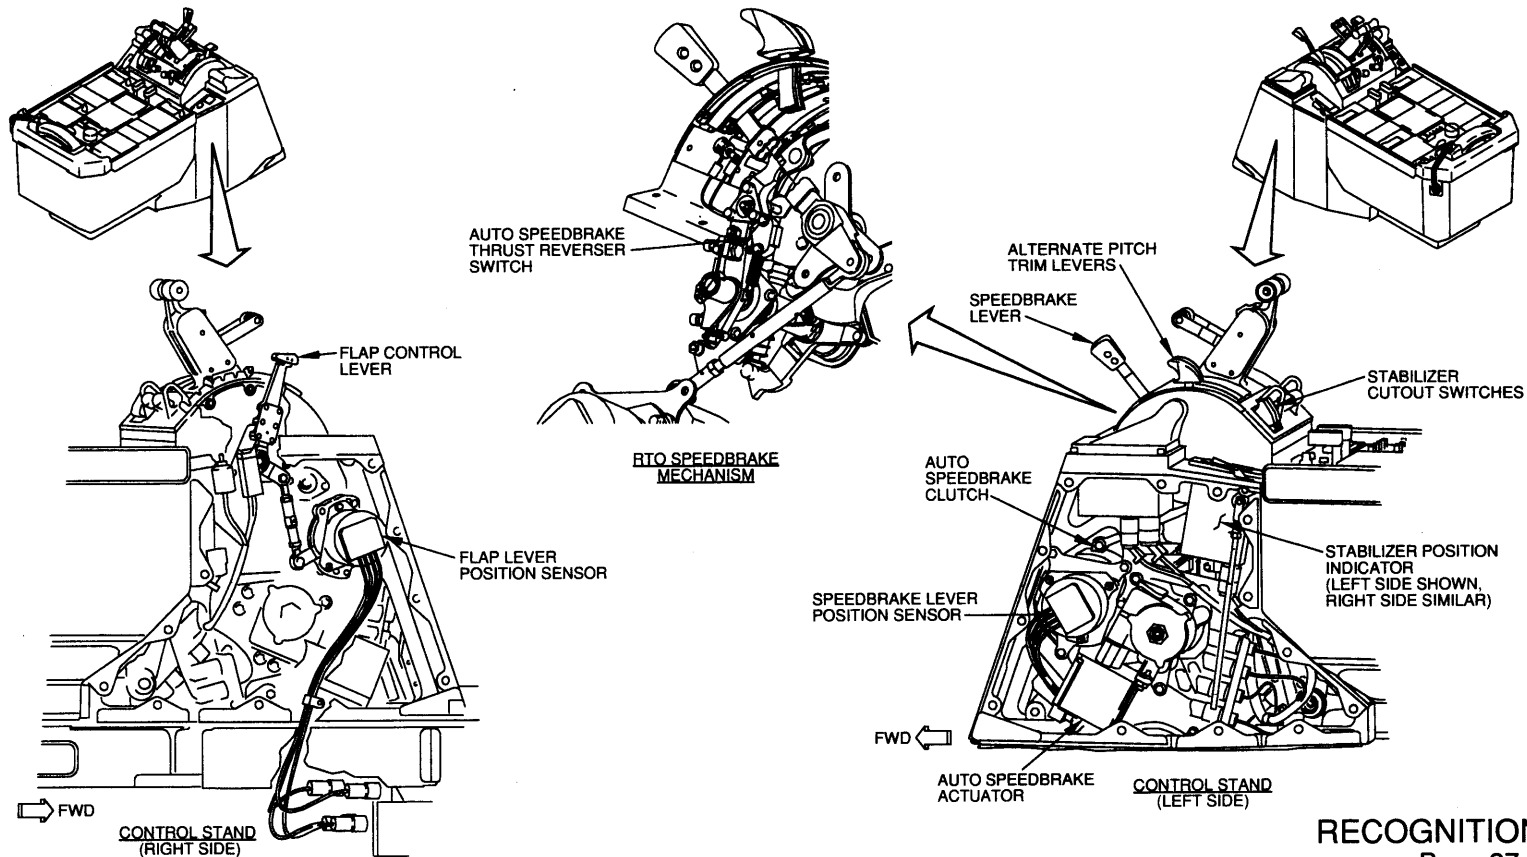



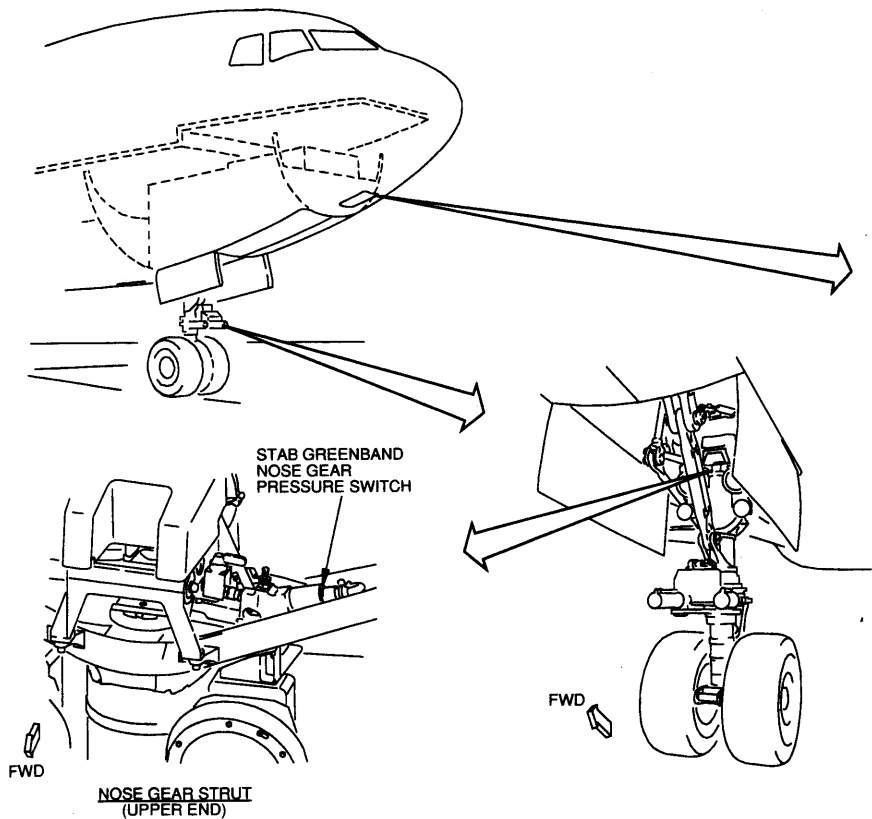


**AUTO SPEEDBRAKE
AND STABILIZER AUTO
SHUTDOWN RELAYS**

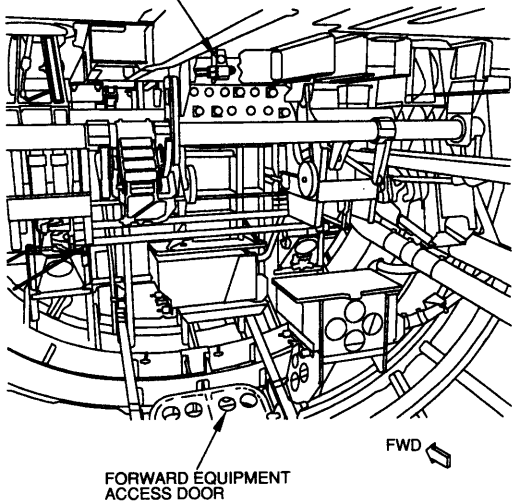


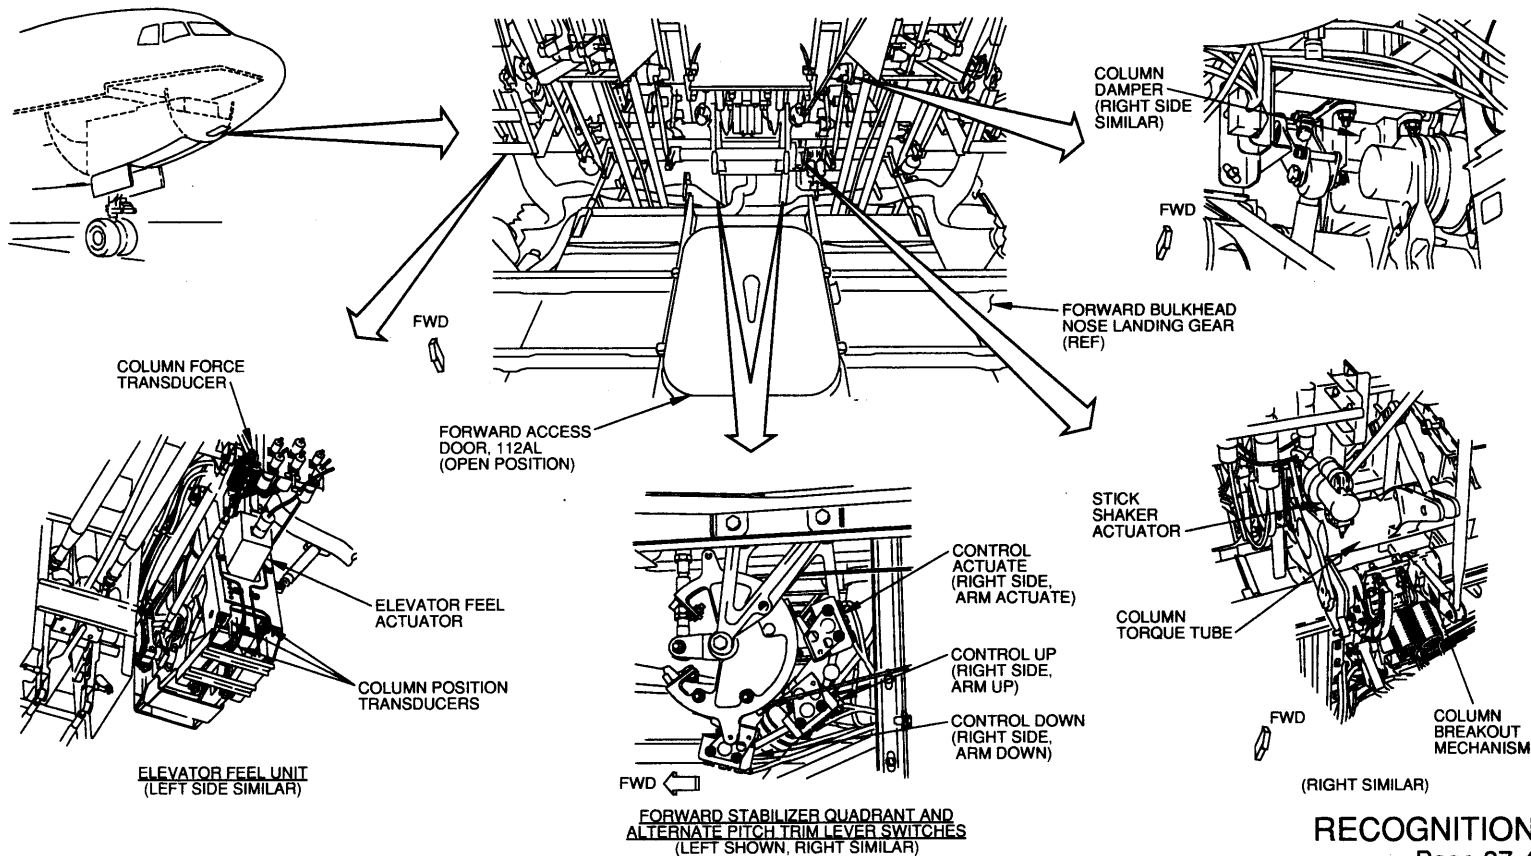

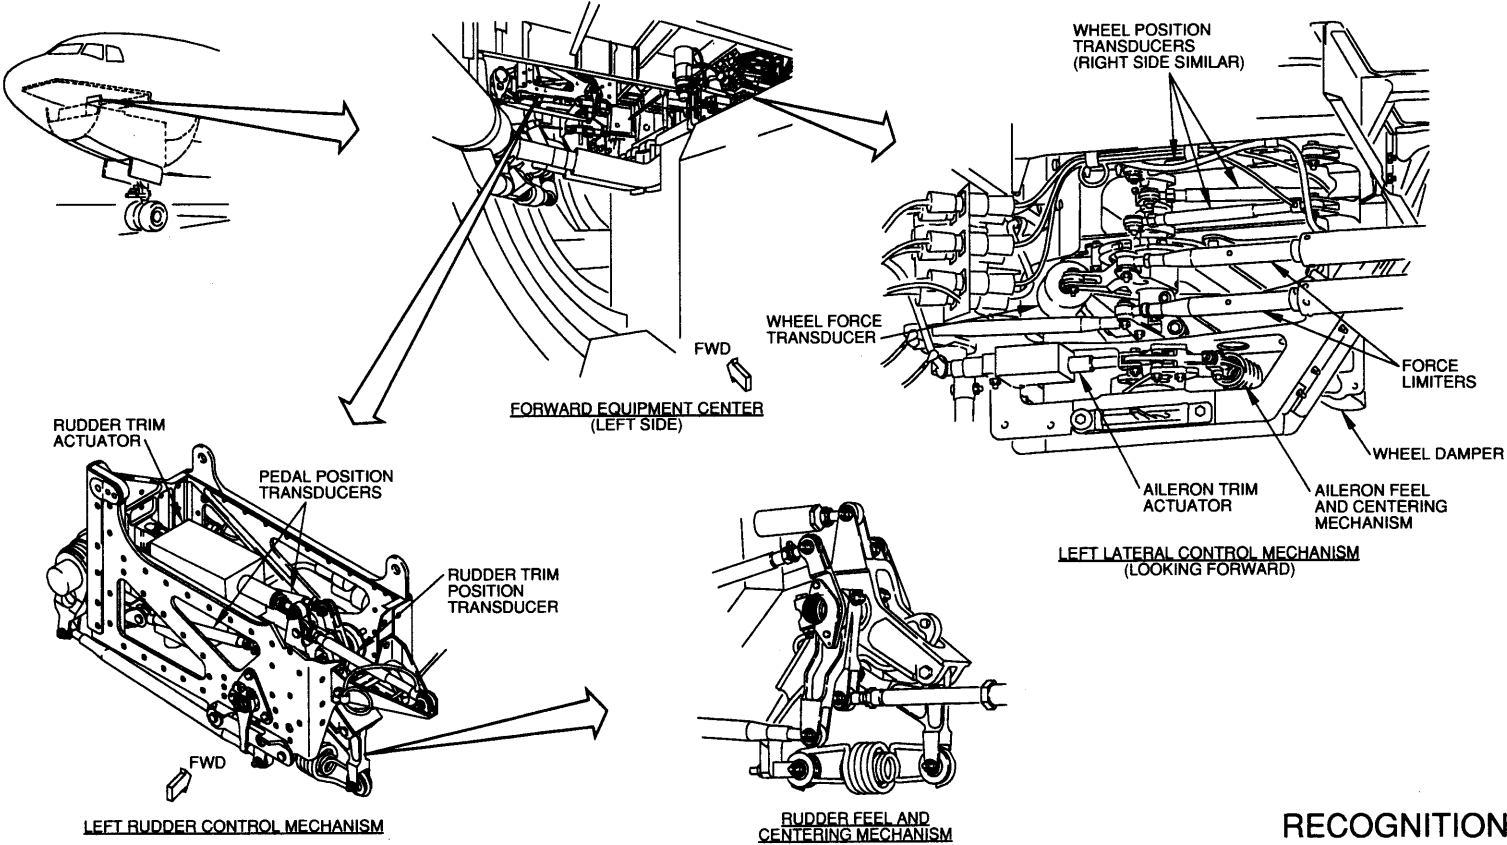

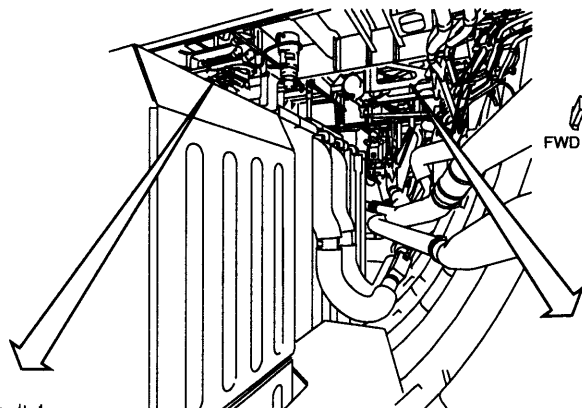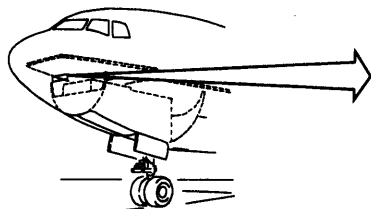


**FORWARD EQUIPMENT CENTER
(RIGHT SIDE)**


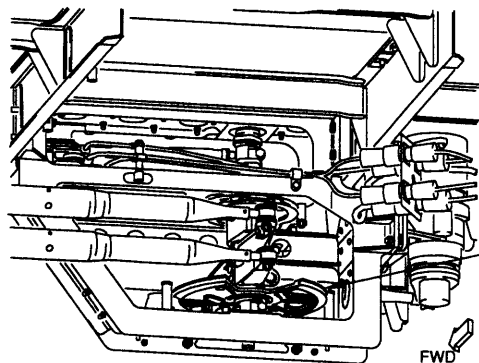


**SPOILER FORWARD
QUADRANT**


RIGHT LATERAL CONTROL MECHANISM

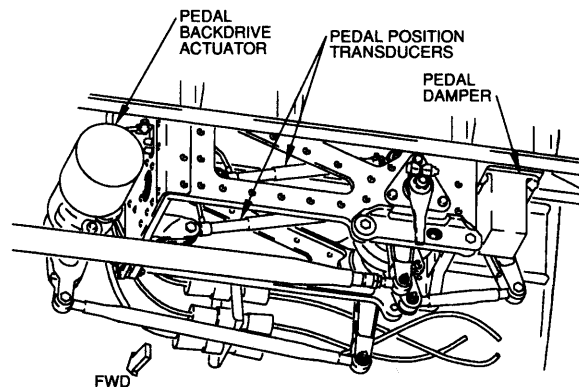


RIGHT RUDDER CONTROL MECHANISM

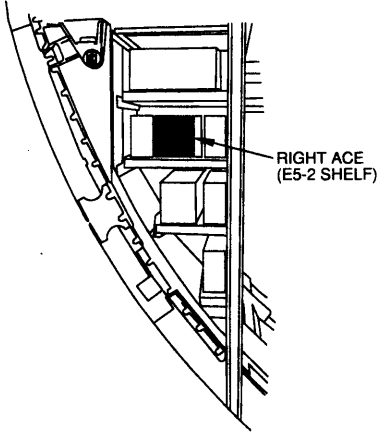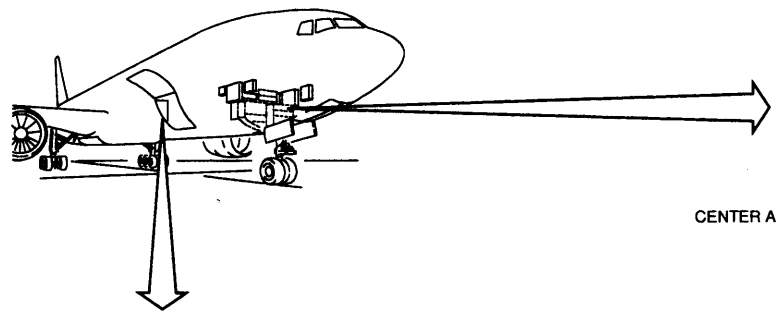


**E5 RACK
(LOOKING AFT)**

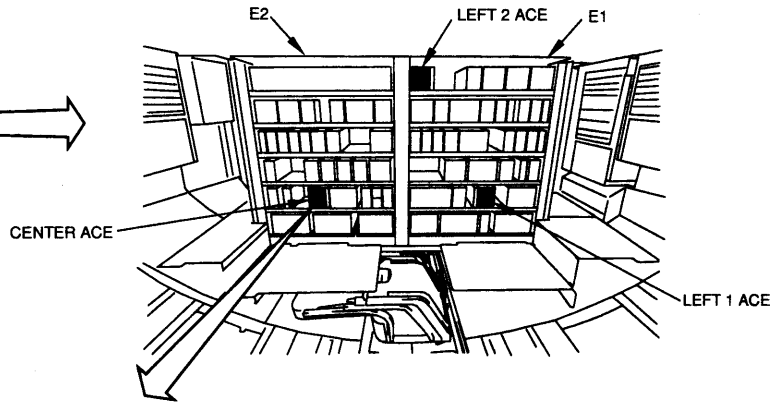



**MAIN EQUIPMENT CENTER
(LOOKING AFT)**

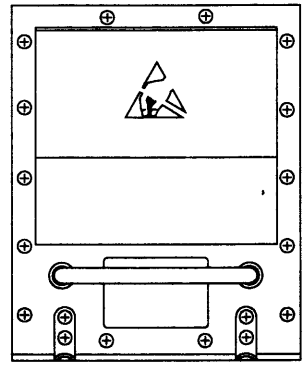


ACTUATOR CONTROL ELECTRONICS (ACE) (4)

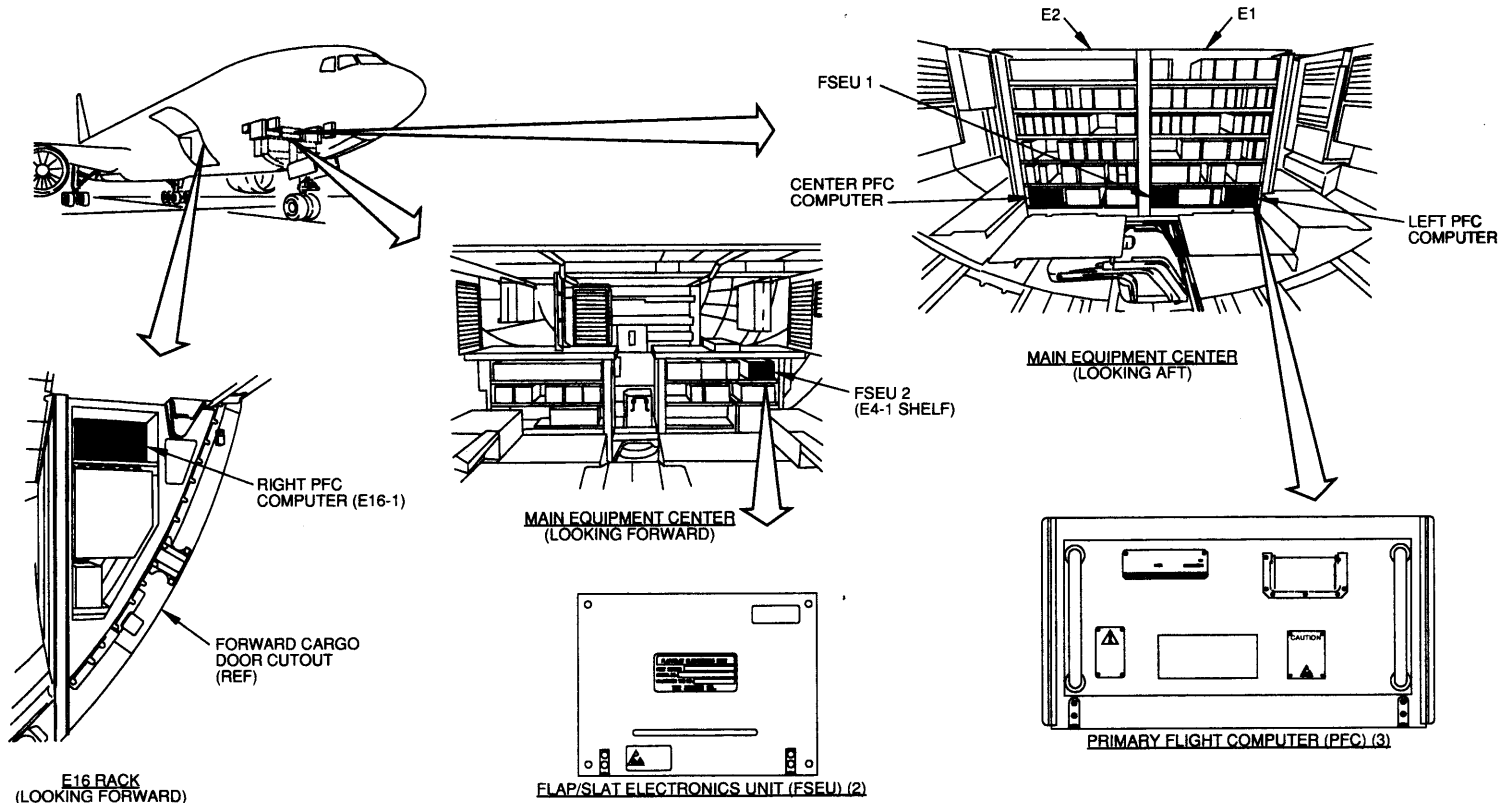

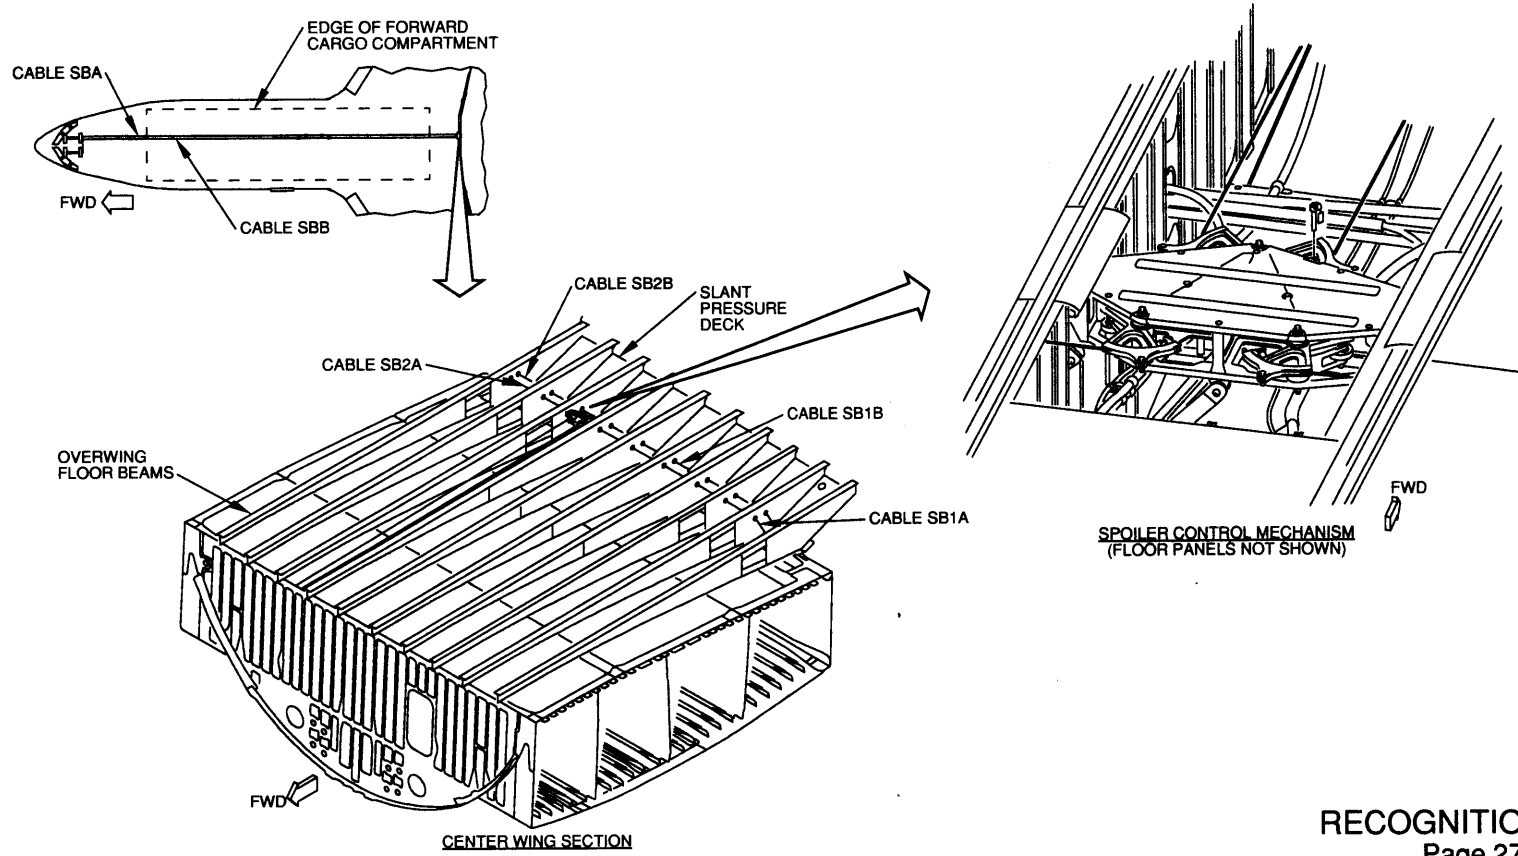

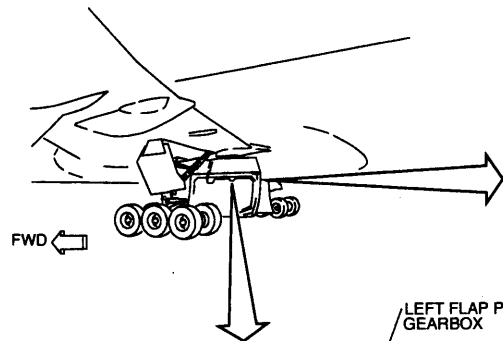


LEFT FLAP POSITION
GEARBOX

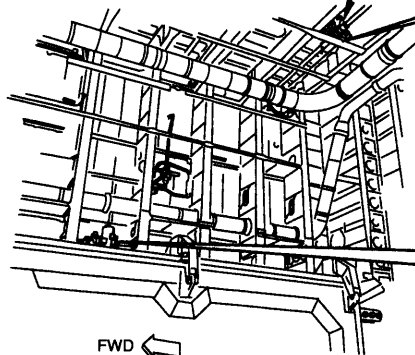

FWD

LEFT WHEEL WELL

FLAP POSITION
SENSORS

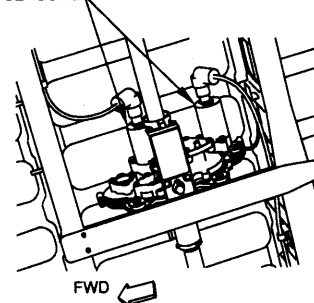


FWD

LEFT FLAP POSITION SENSOR GEARBOX
(INBOARD SIDE)

SHUTOFF SOLENOID

BYPASS SOLENOID

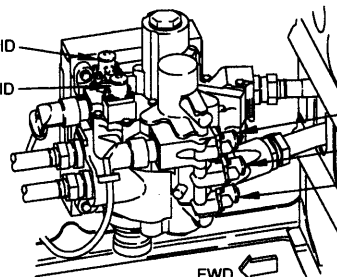


RETRACT SOLENOID


LOW SPEED SOLENOID



EXTEND SOLENOID

FWD



SLAT PRIMARY CONTROL VALVE

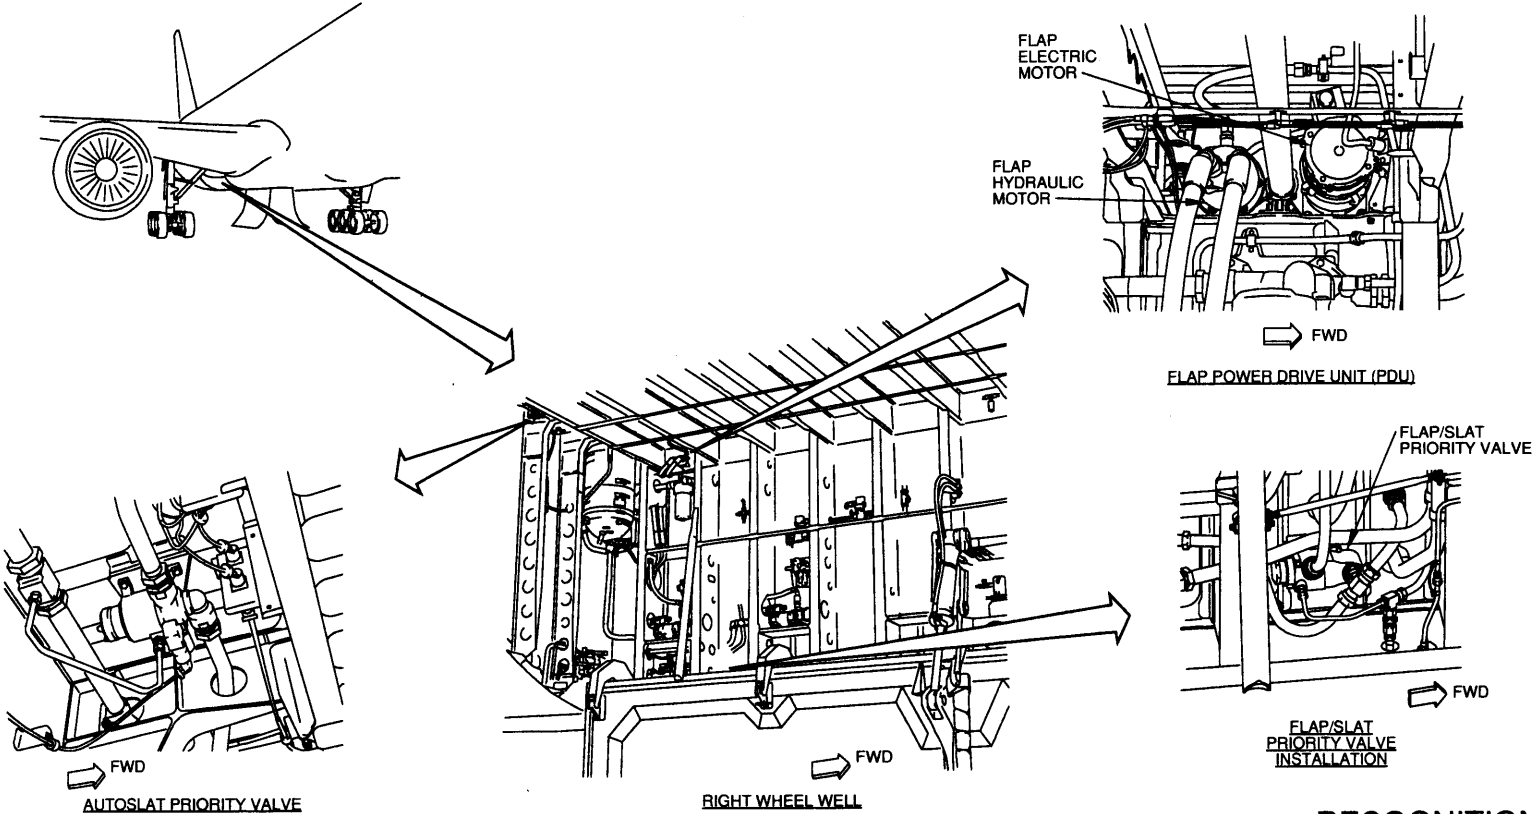

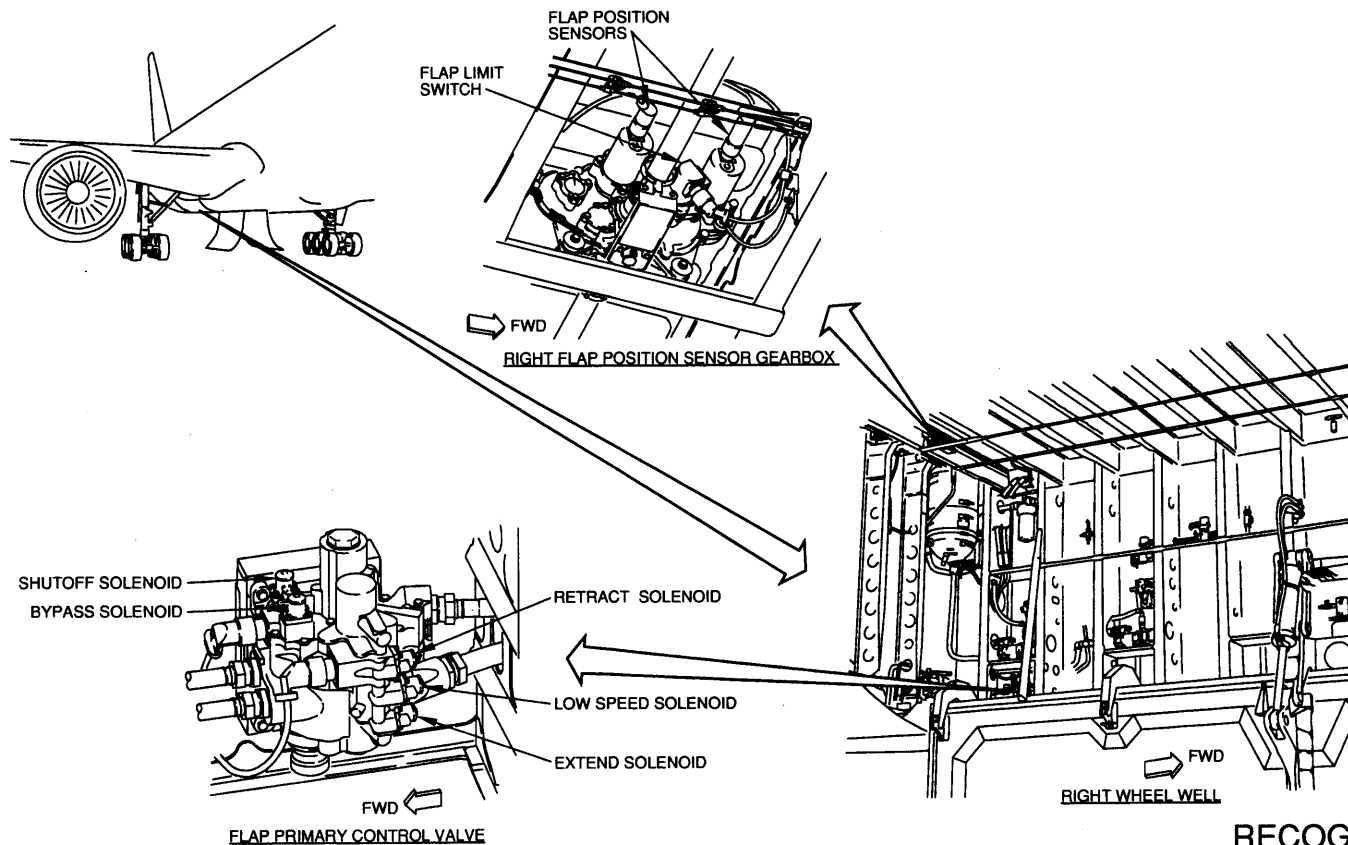


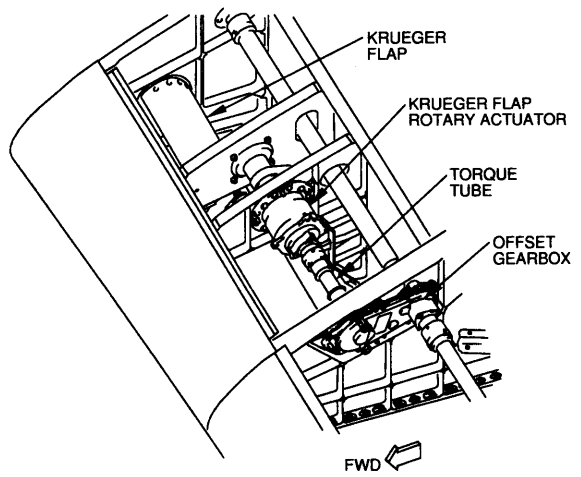
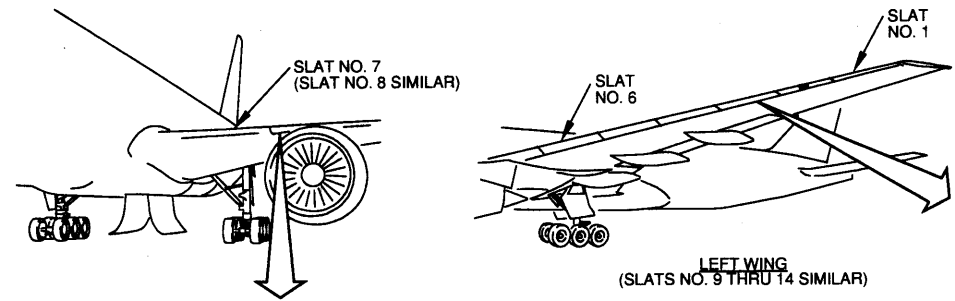


KRUEGER FLAP ROTARY ACTUATOR AND OFFSET GEARBOX

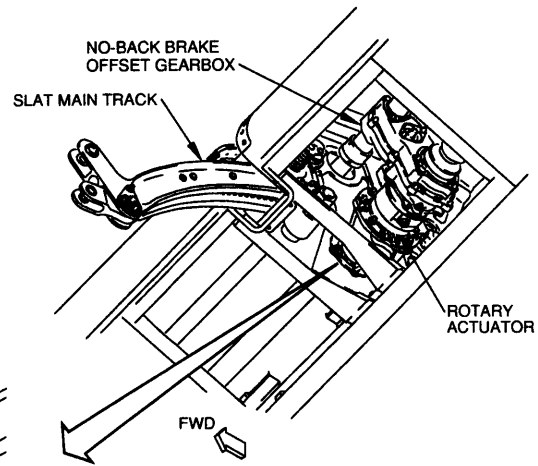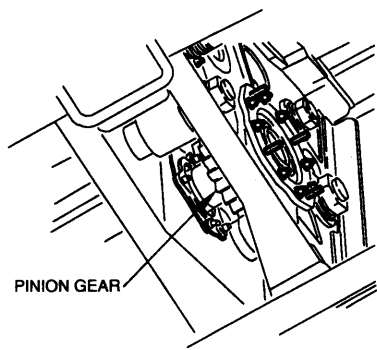


OUTBOARD SLAT NO-BACK BRAKE OFFSET GEARBOX

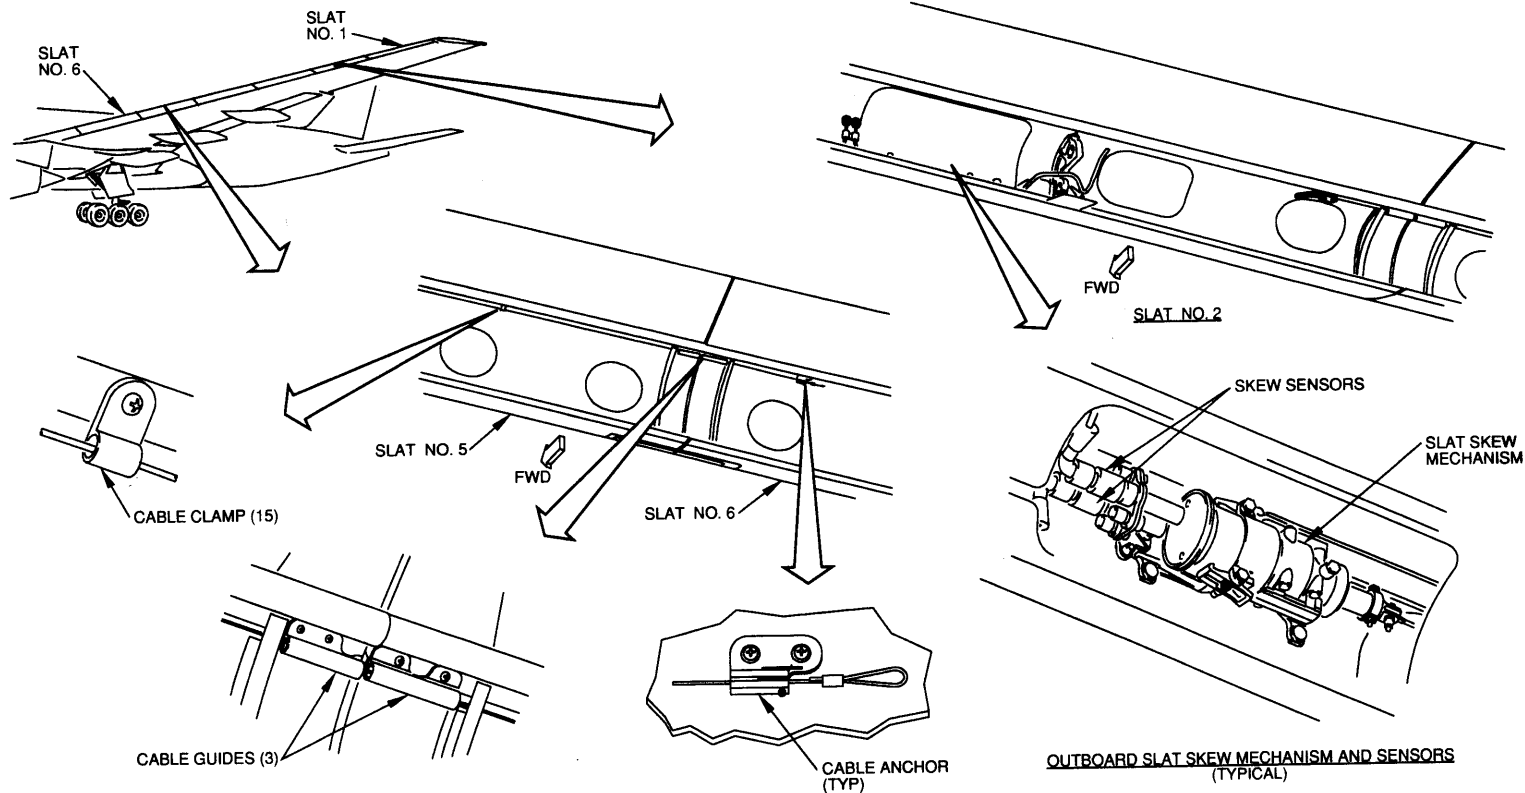


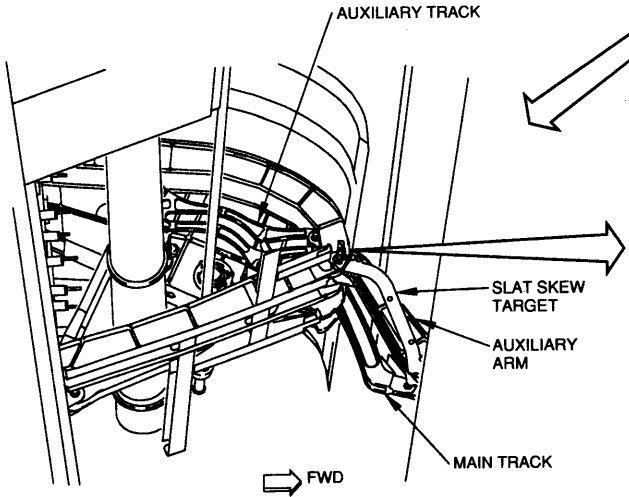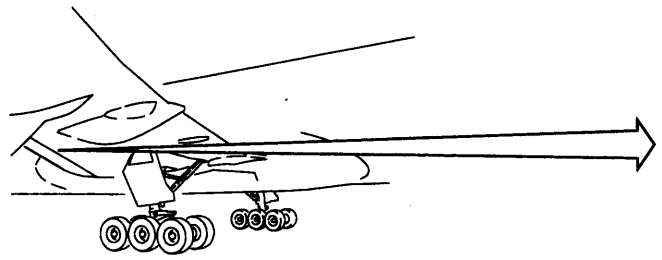






**INBOARD SLAT OUTBOARD
AUXILIARY TRACK**
(LEFT SIDE SHOWN, RIGHT SIDE SIMILAR)

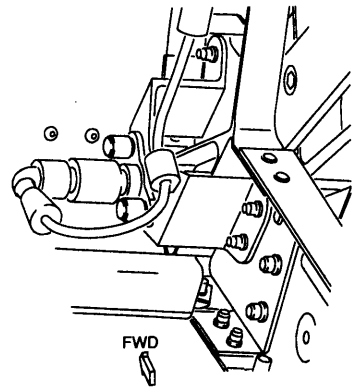


INBOARD SLAT OUTBOARD SKEW SENSORS
(INBOARD SLAT INBOARD SENSORS SIMILAR)

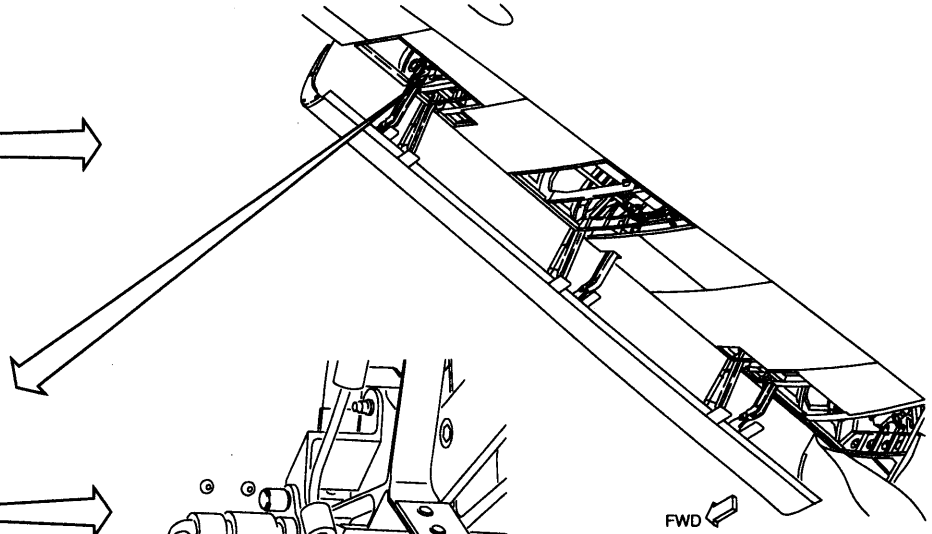


INBOARD SLAT - LEFT WING
(RIGHT WING SIMILAR)

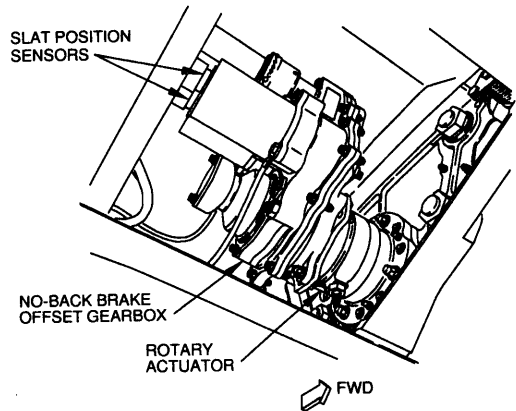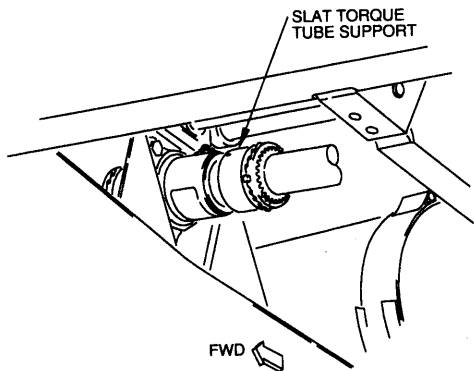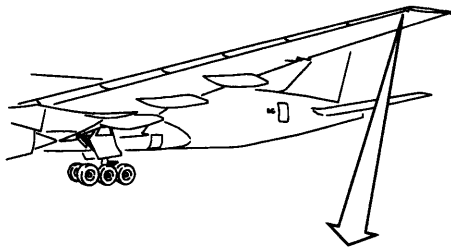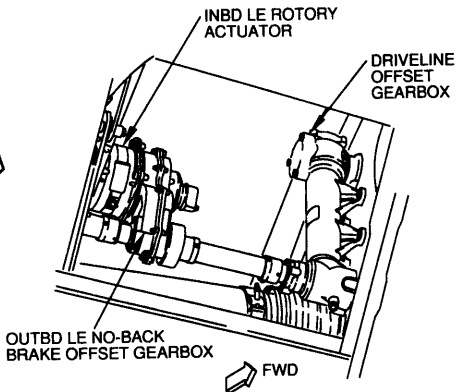
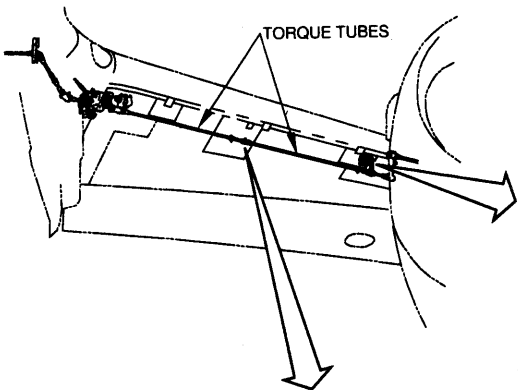


OUTBOARD LEADING EDGE NO-BACK BRAKE OFFSET GEARBOX WITH POSITION SENSORS
(RIGHT WING SIMILAR)

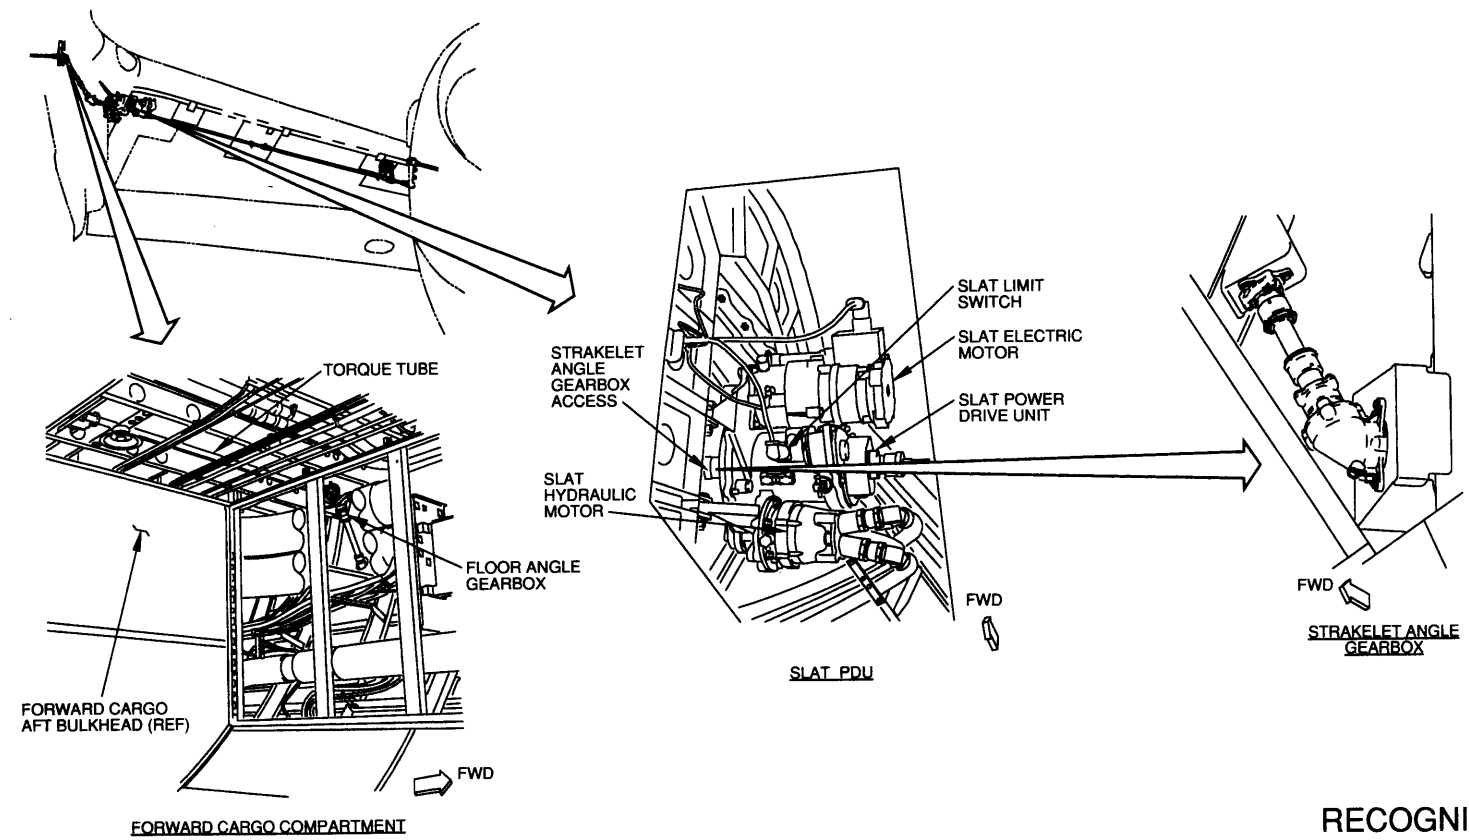


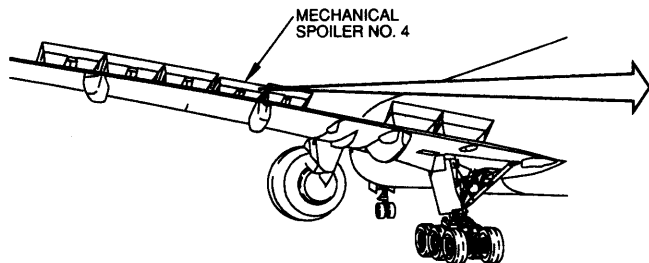






LEFT WING MECHANICAL SPOILER PCU
(RIGHT WING SIMILAR)

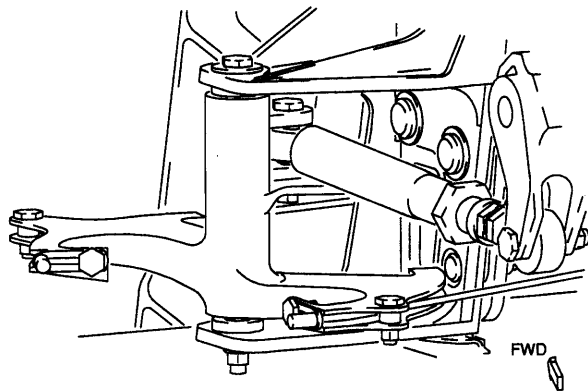
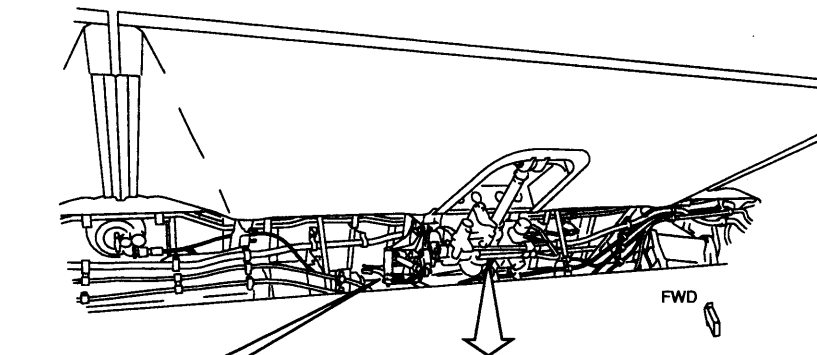


SPOILER PCU QUADRANT
(SPOILER NO. 4 SHOWN, NO. 11 SIMILAR)

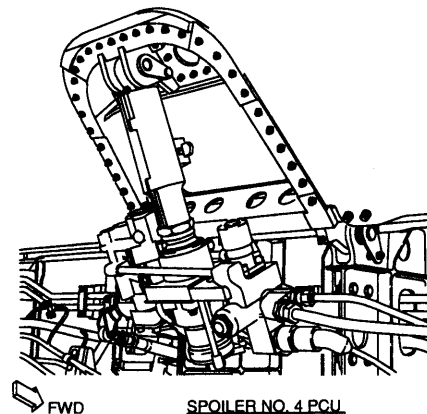




SPOILER NO. 4 PCU
(SPOILER NO. 11 SIMILAR)

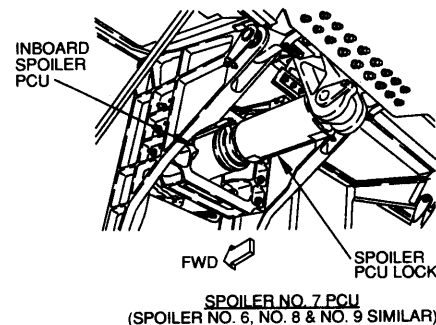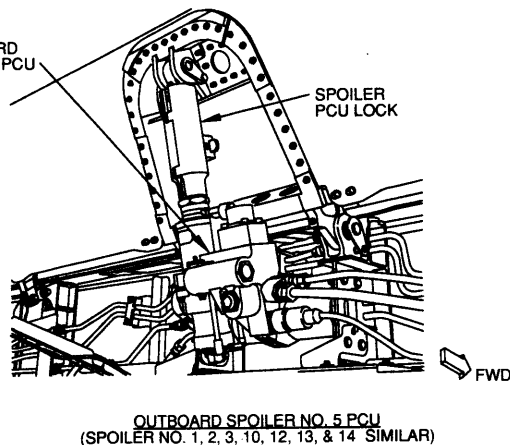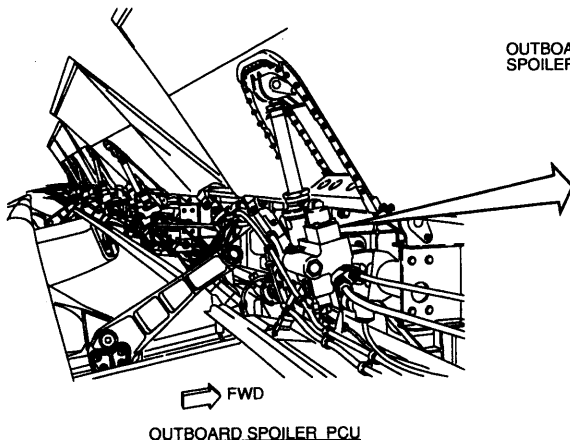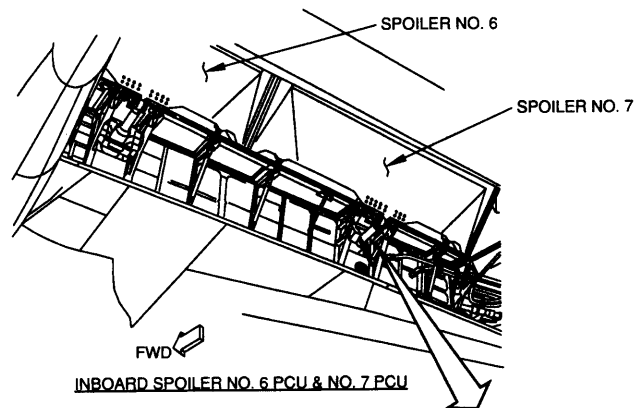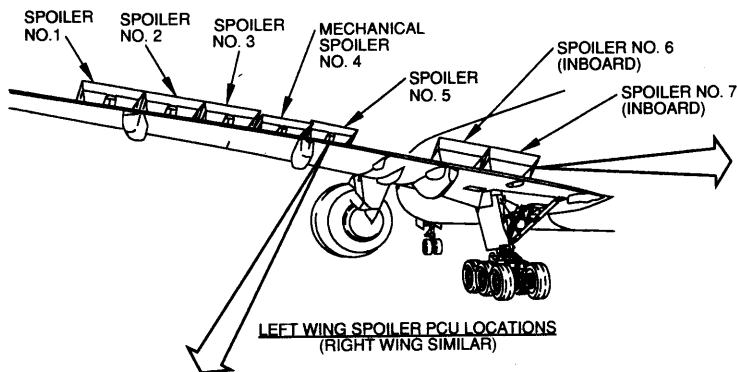

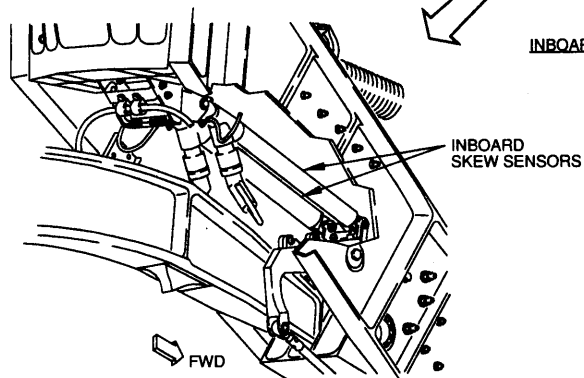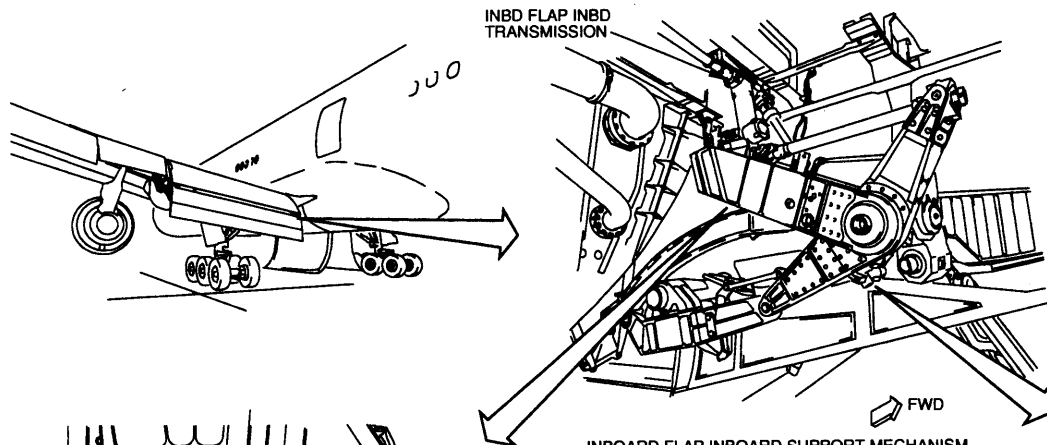




INBOARD FLAP
(RIGHT SIDE SIMILAR)

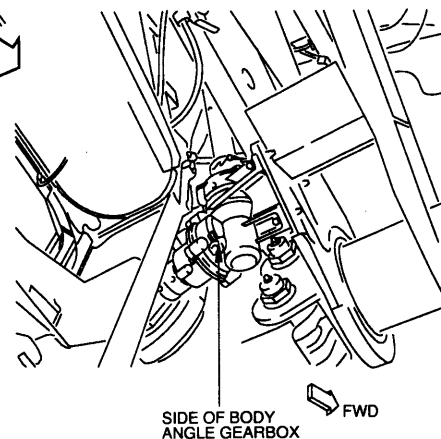

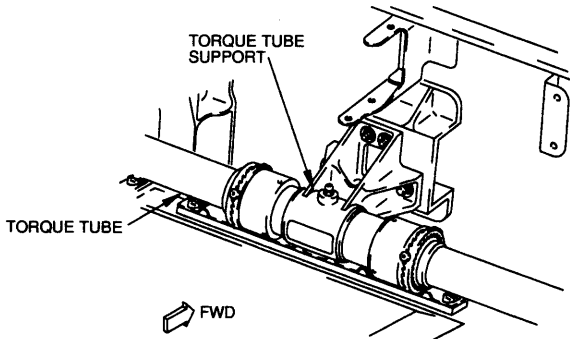
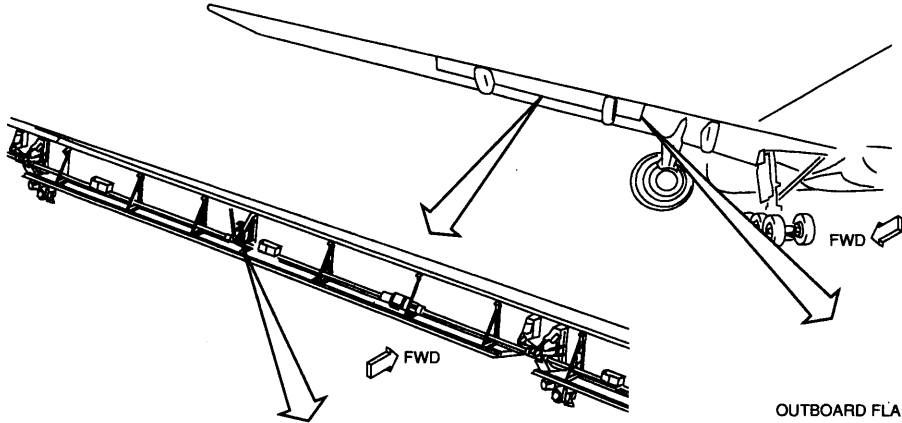


OUTBOARD TRAILING EDGE FLAP
TORQUE TUBE SUPPORT (TYPICAL)

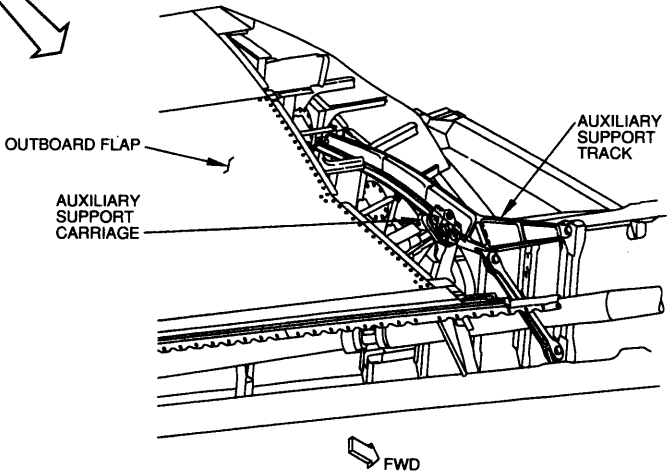



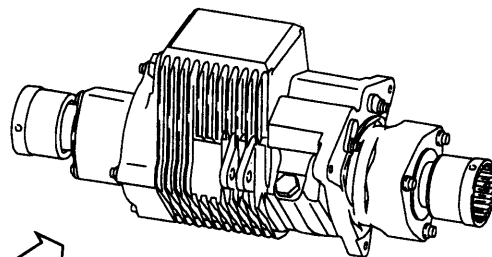
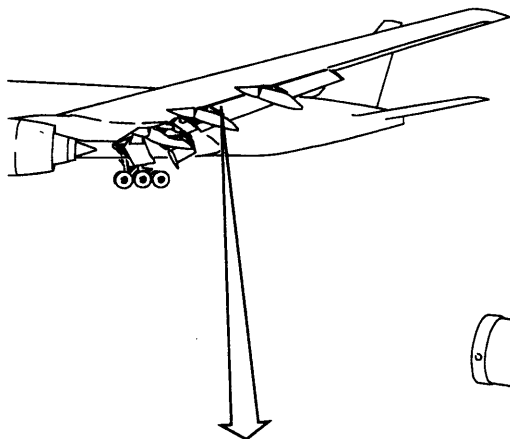


RATCHET NO-BACK BRAKE
(RIGHT SIDE SIMILIAR)

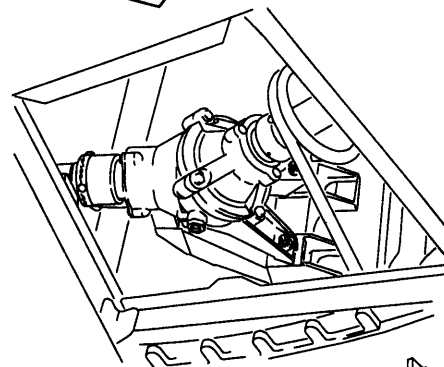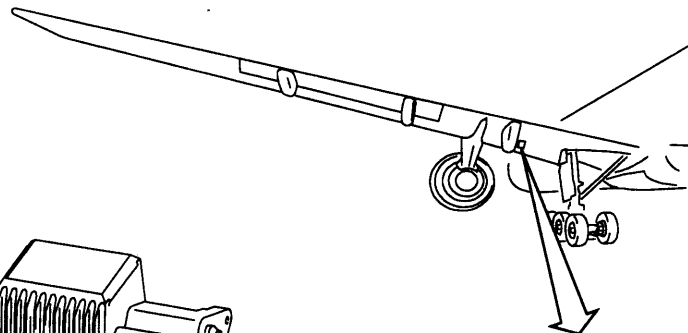



REAR SPAR ANGLE GEARBOX
(RIGHT SIDE SIMILIAR)

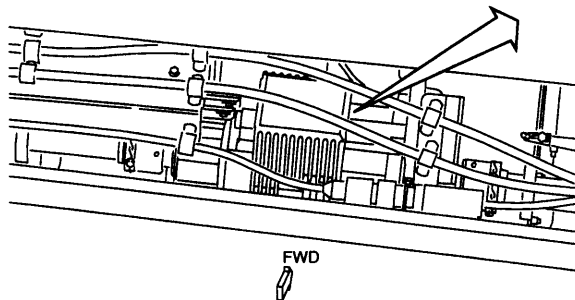

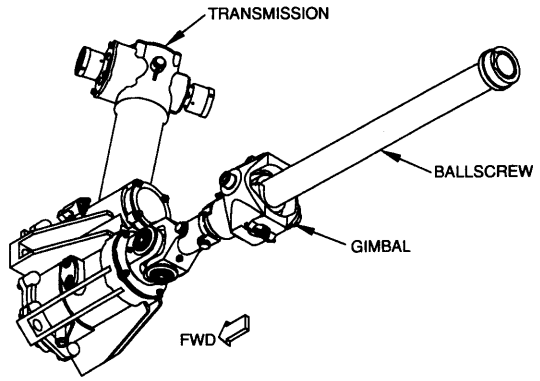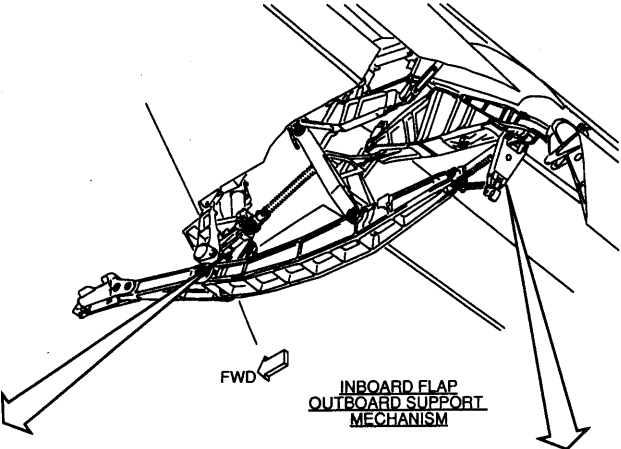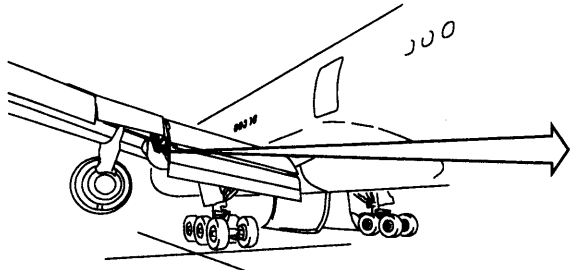


INBOARD FLAP OUTBOARD
FLAP TRANSMISSION ASSEMBLY
(GIMBAL SHOWN RETRACTED)

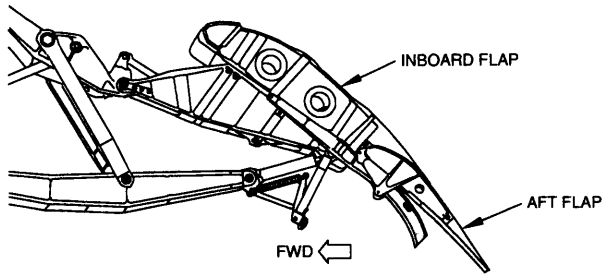

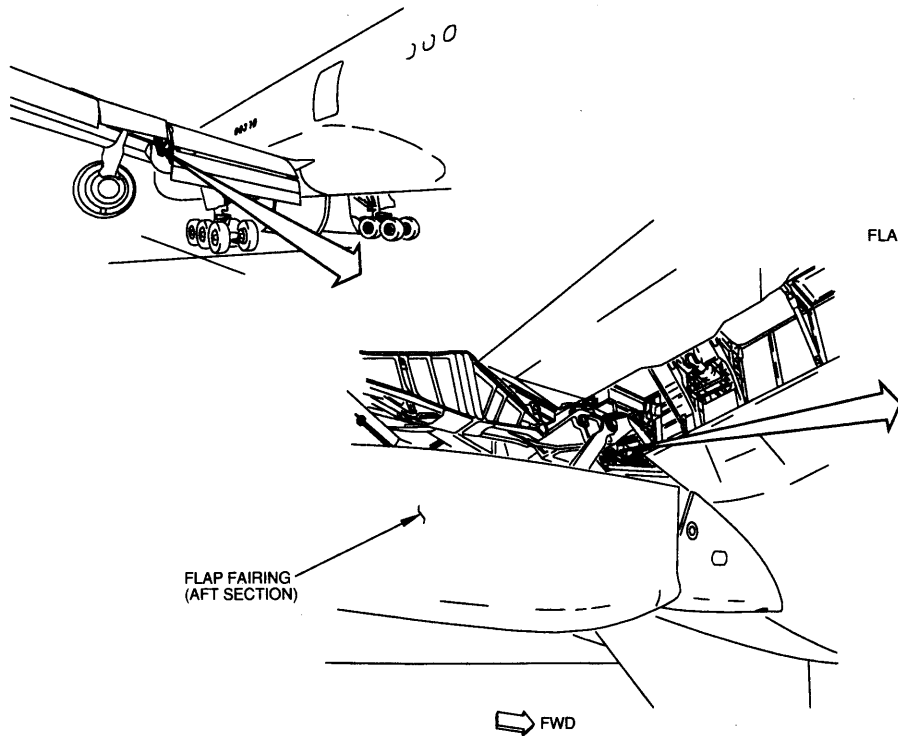


INBOARD FLAP OUTBOARD SUPPORT MECHANISM
(RIGHT SIDE SIMILAR)


FLAP SKEW SENSORS

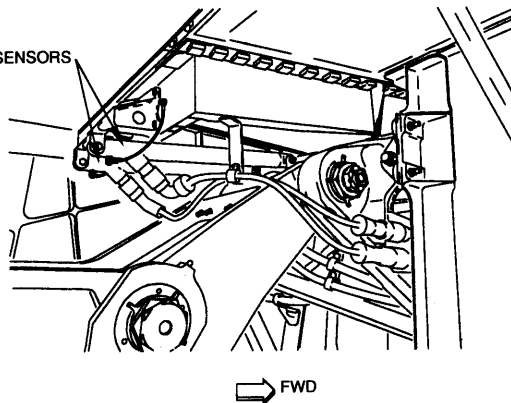


INBOARD FLAP OUTBOARD SKEW SENSOR

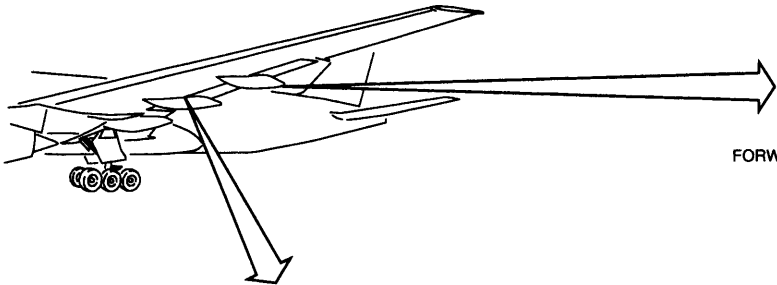


FORWARD FAIRING

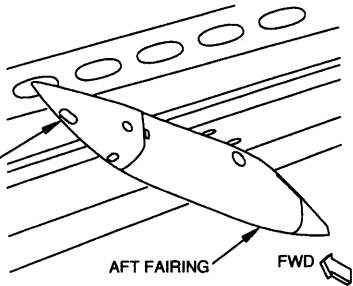



OUTBOARD FLAP OUTBOARD
SUPPORT FAIRING
(INBOARD FAIRING SIMILAR)


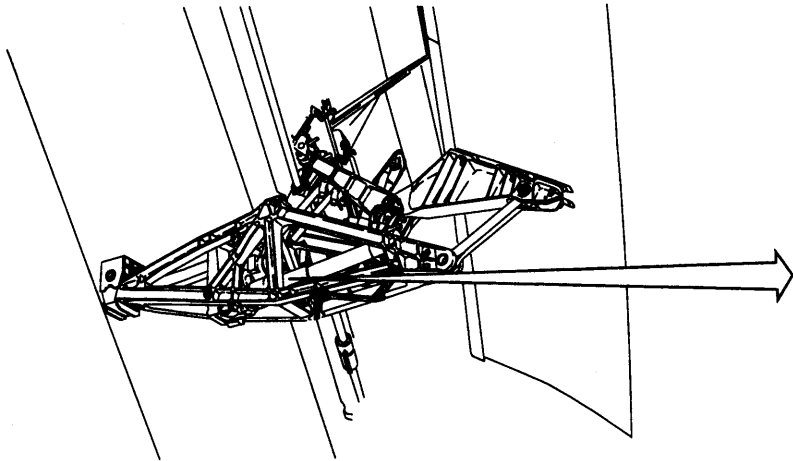


OUTBOARD FLAP INBOARD SUPPORT MECHANISM
(OUTBOARD SUPPORT MECHANISM SIMILAR)


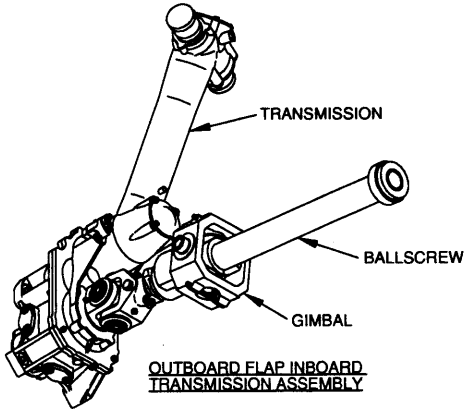


OUTBOARD FLAP INBOARD
TRANSMISSION ASSEMBLY

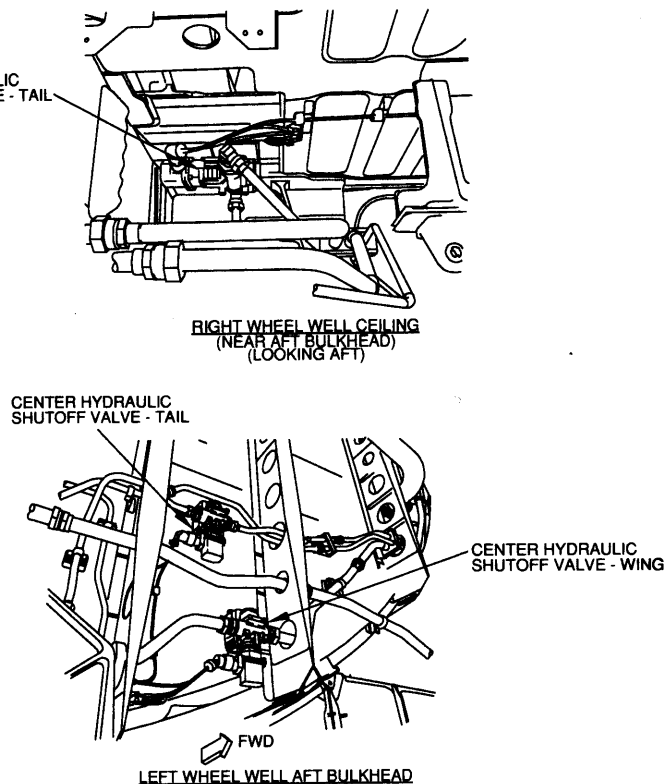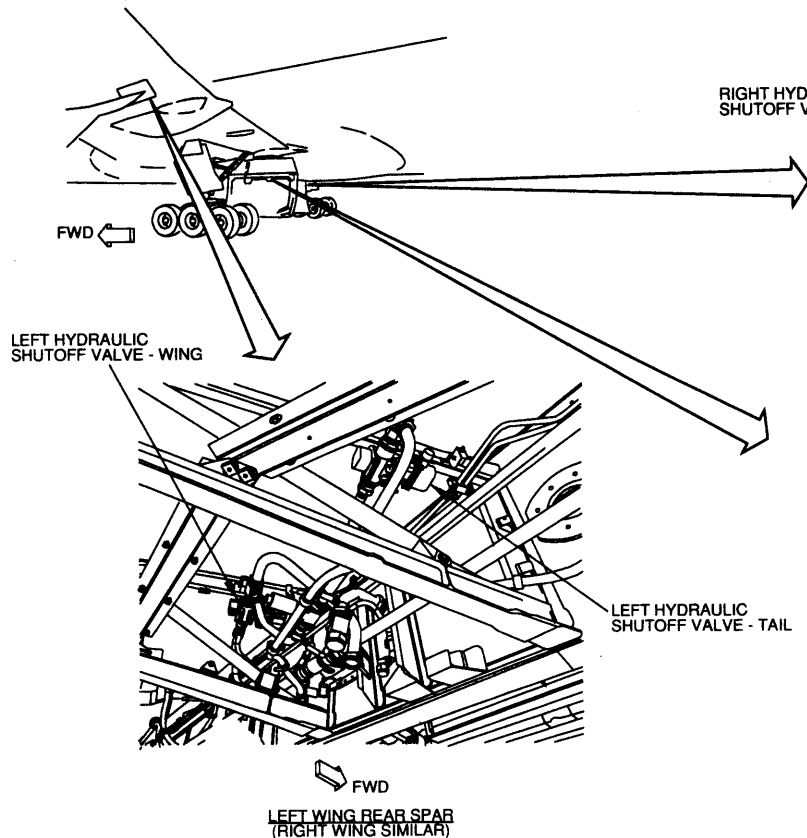


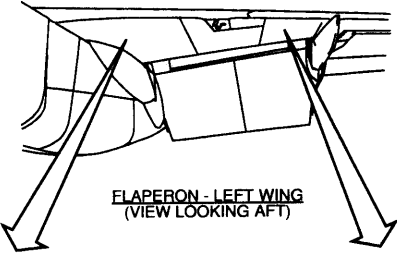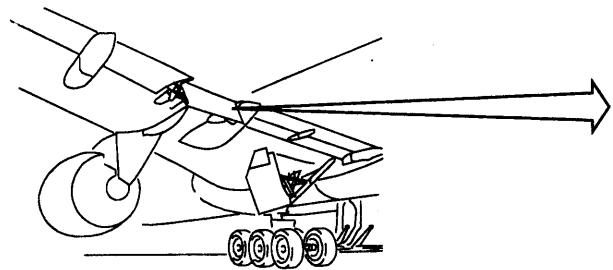


FLAPERON - LEFT WING
(VIEW LOOKING AFT)

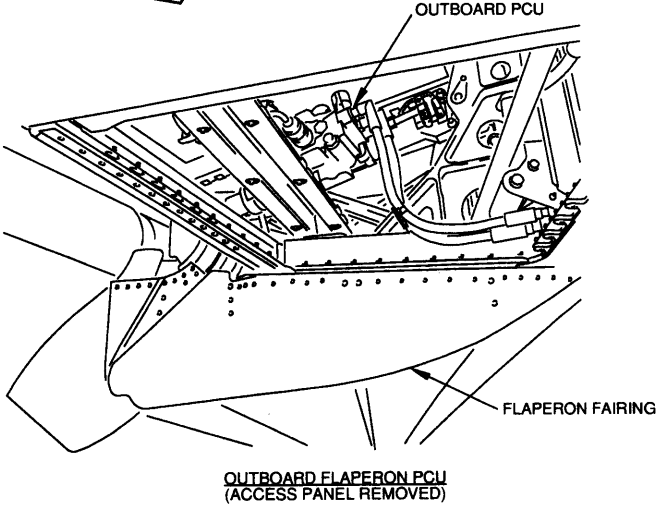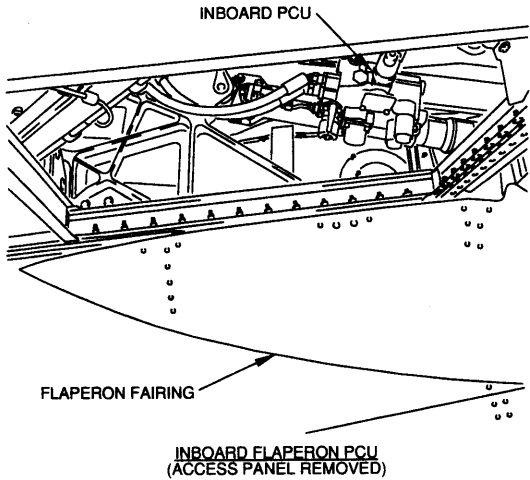



NOTE: RIGHT WING SIMILAR.


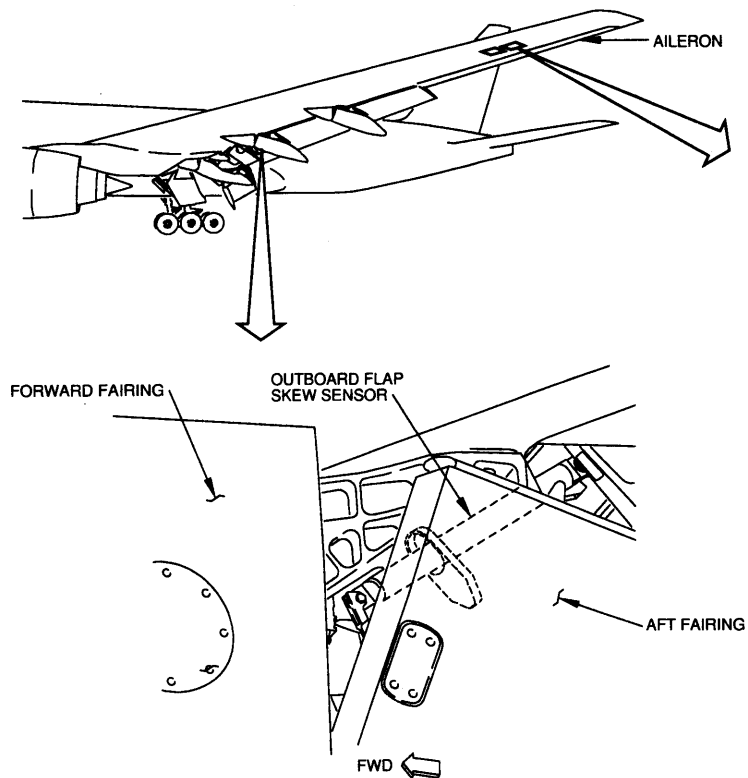


OUTBOARD FLAP INBOARD SUPPORT MECHANISM
(OUTBOARD FLAP OUTBOARD SUPPORT MECHANISM SIMILAR)

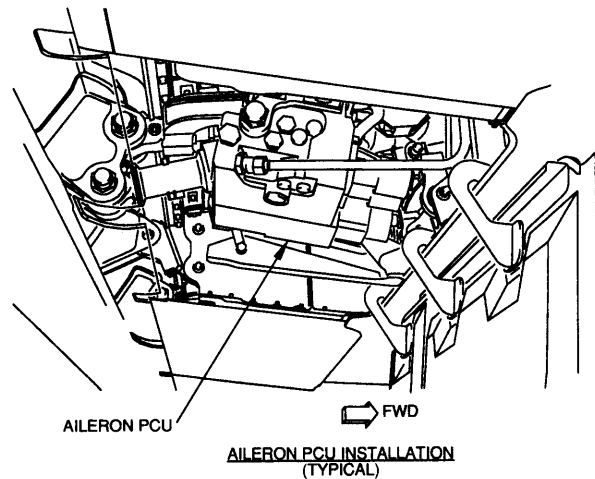


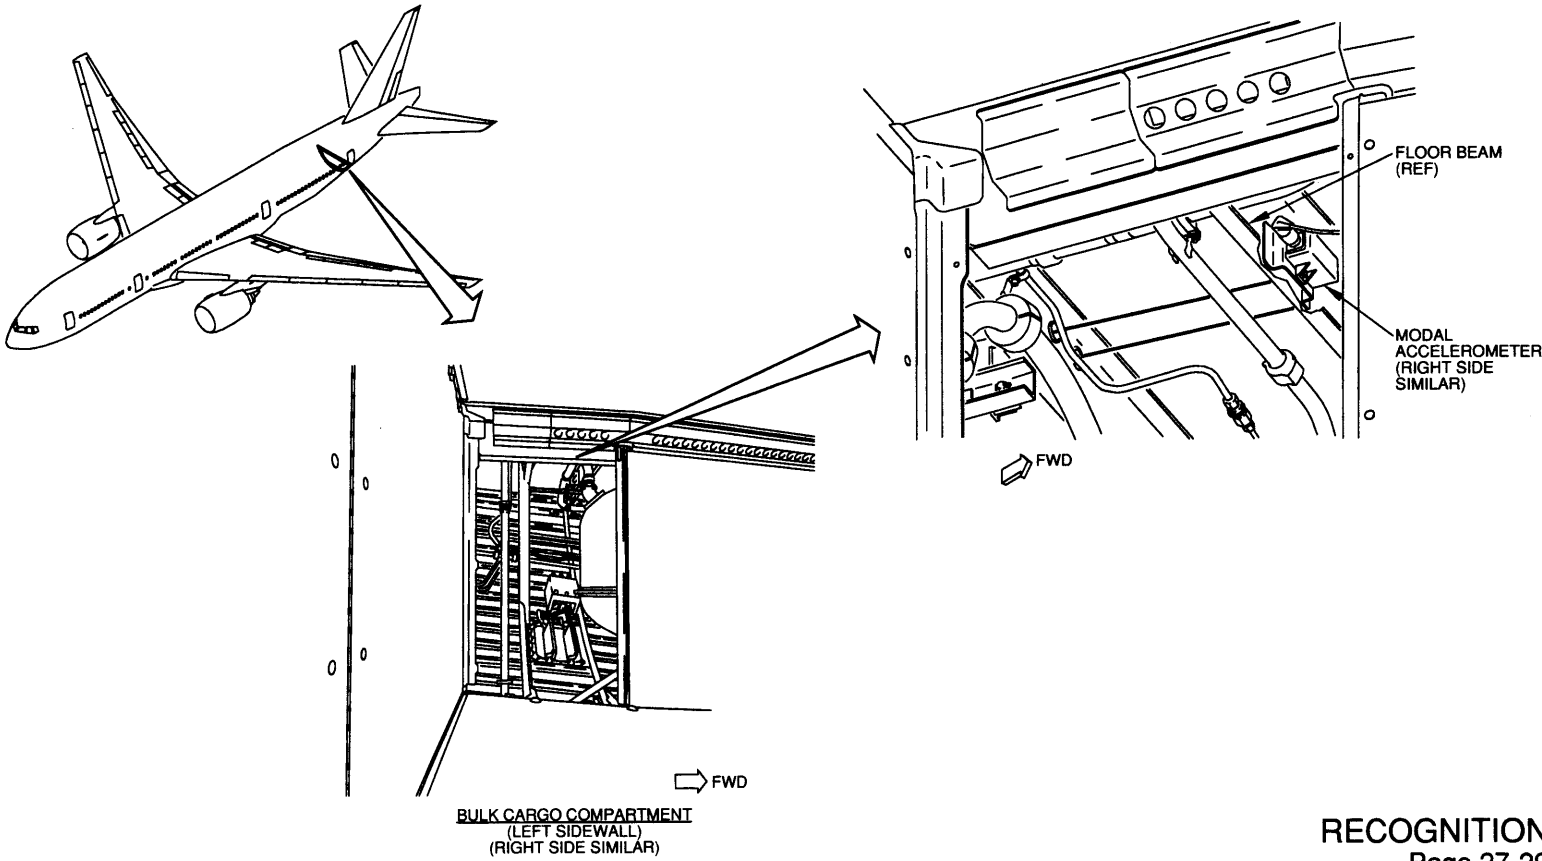

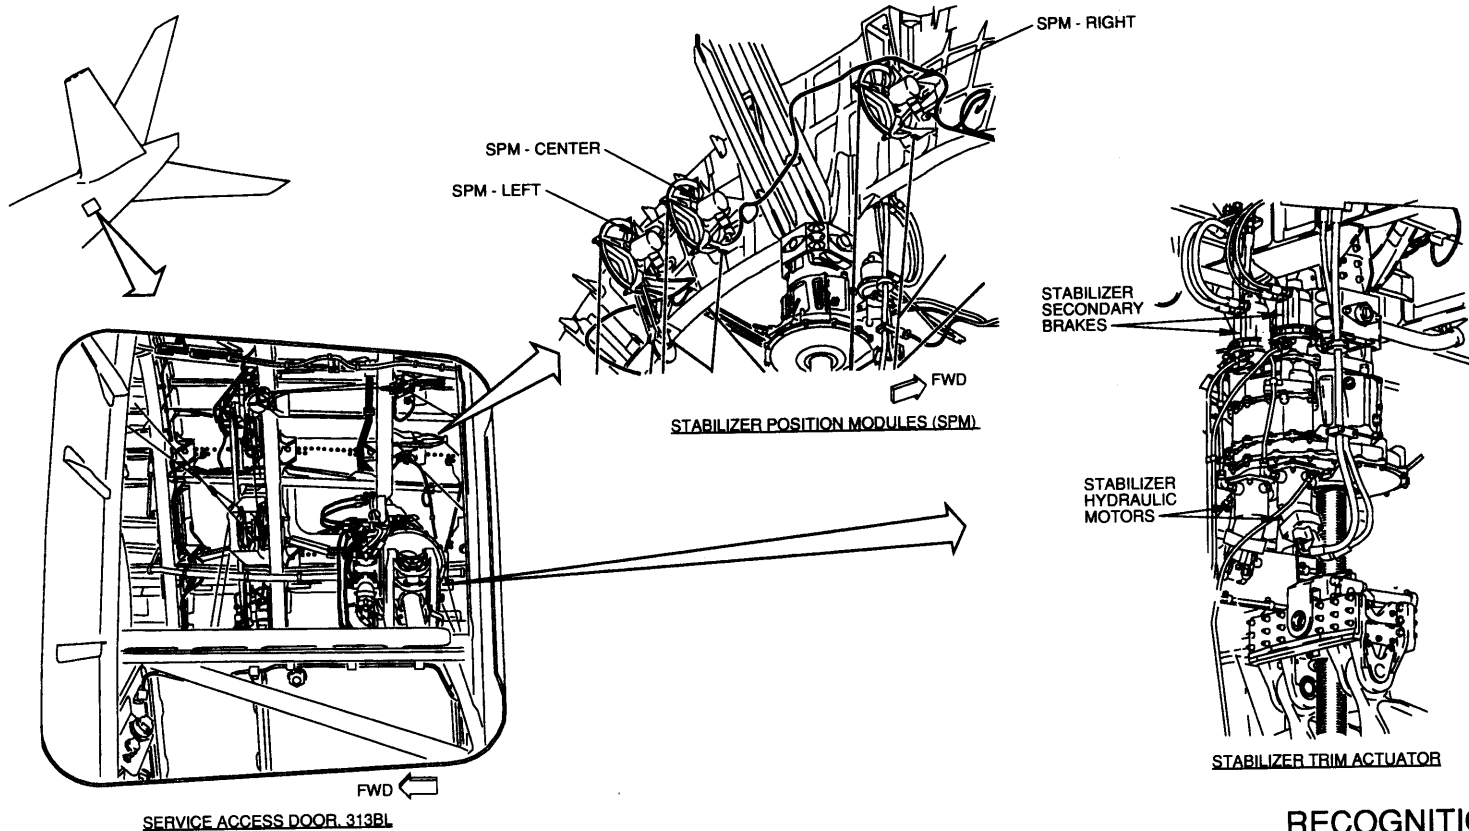


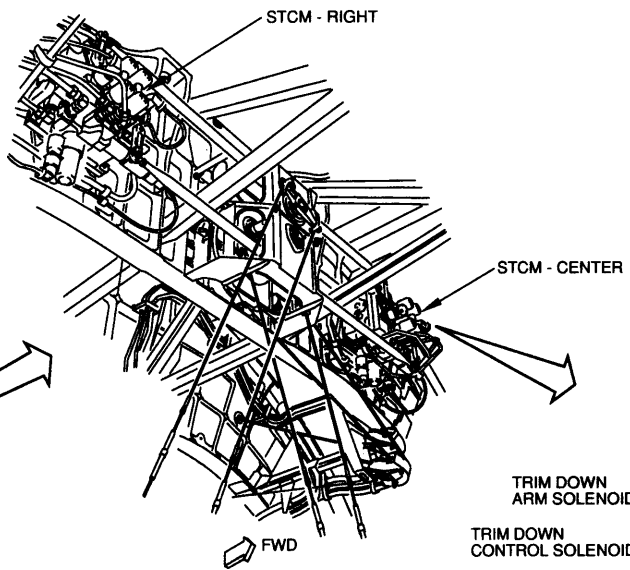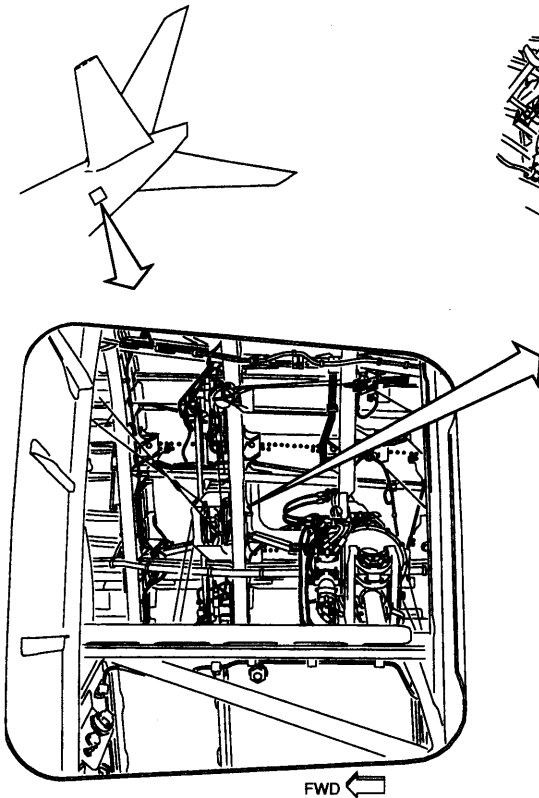





STABILIZER TRIM CONTROL MODULES (STCMS)

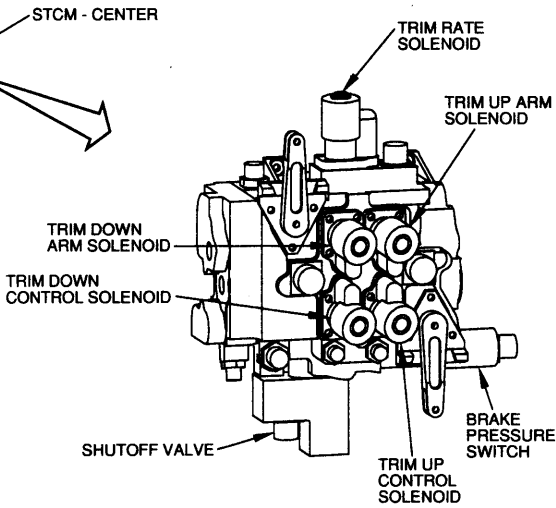


STCM - CENTER

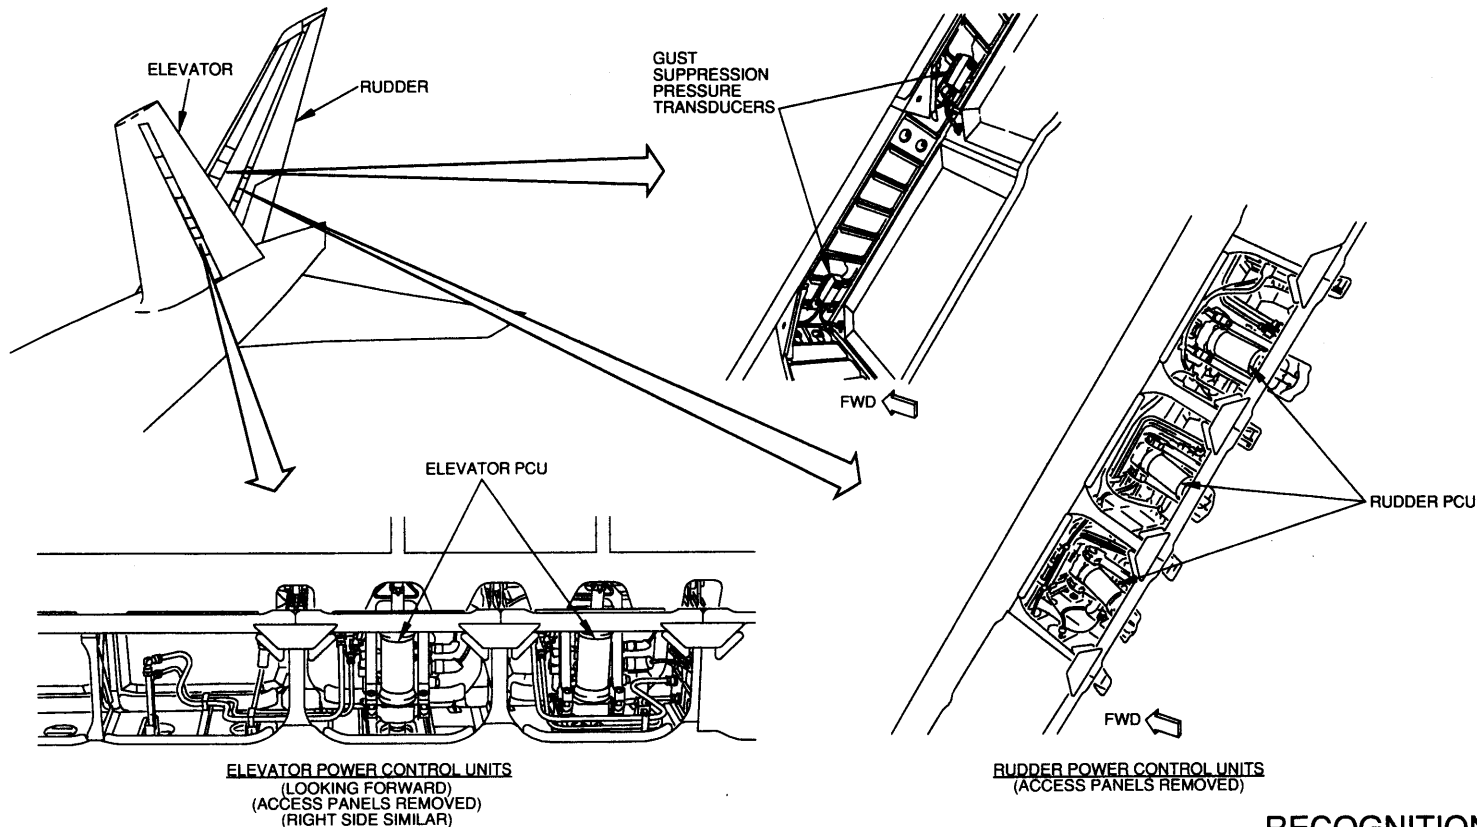

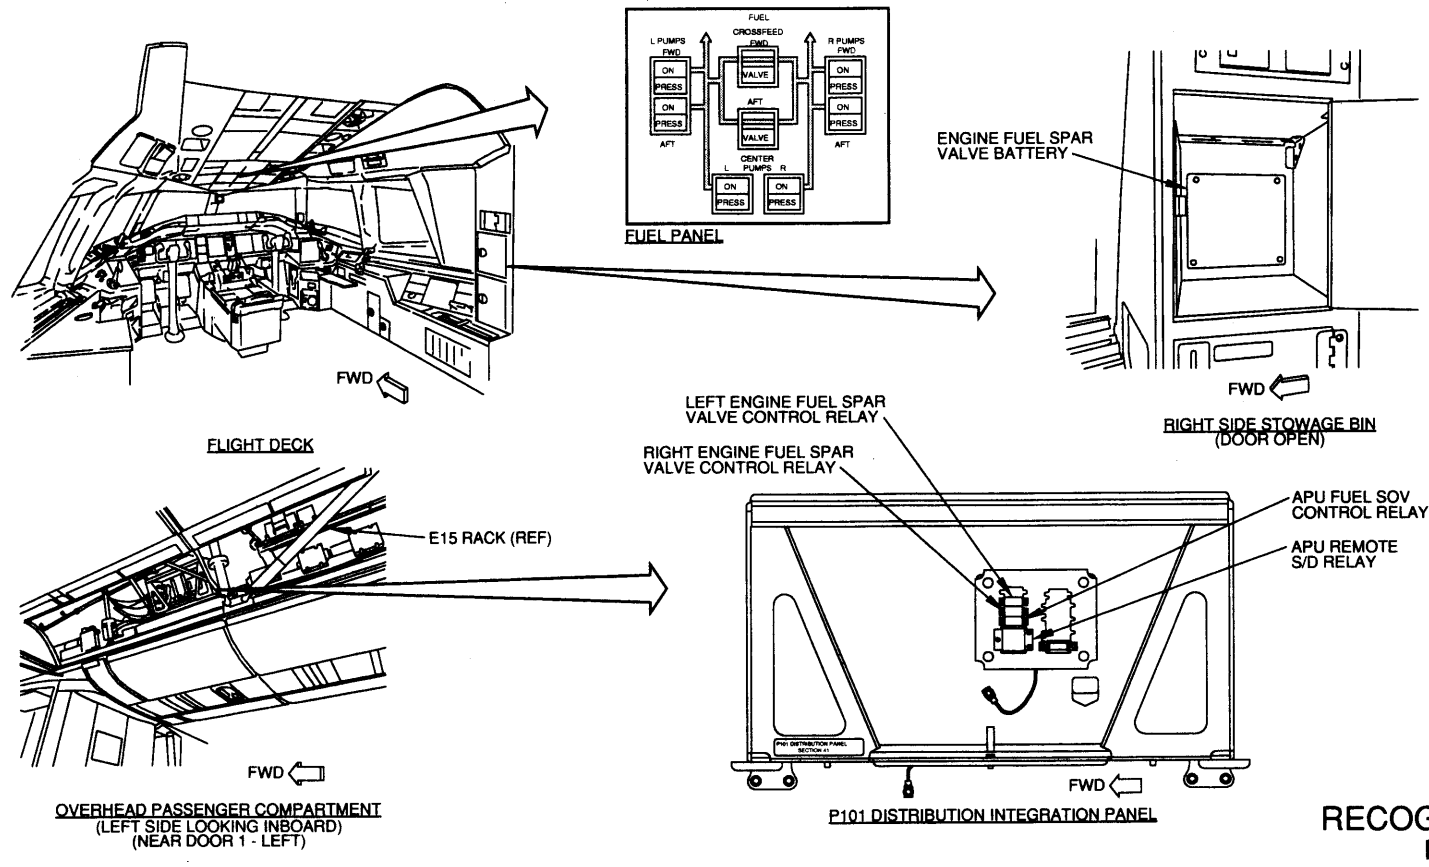


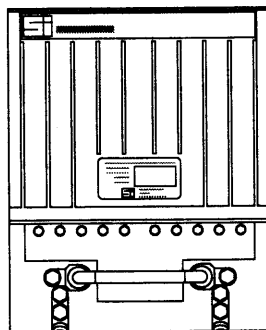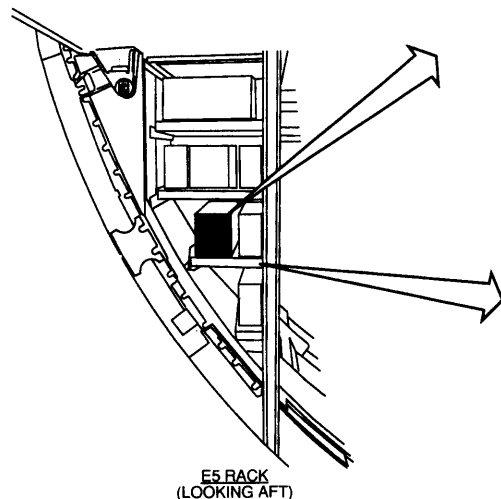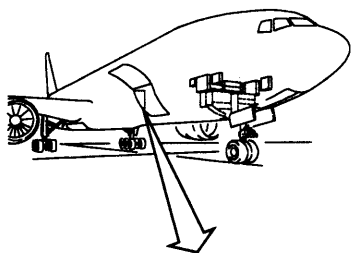


**FUEL QUANTITY PROCESSOR
UNIT (FQPU)**

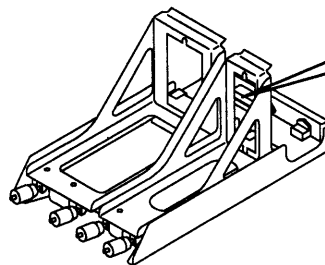


**PROGRAM
SELECTOR**

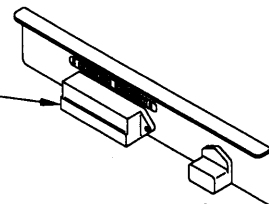


**PROGRAM SELECTOR
INSTALLATION**

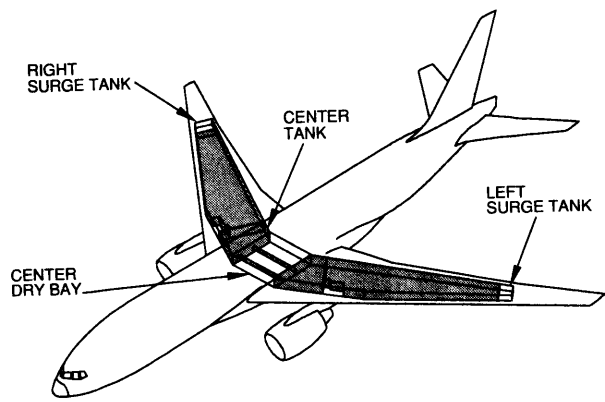


FUEL TANKS (-200)

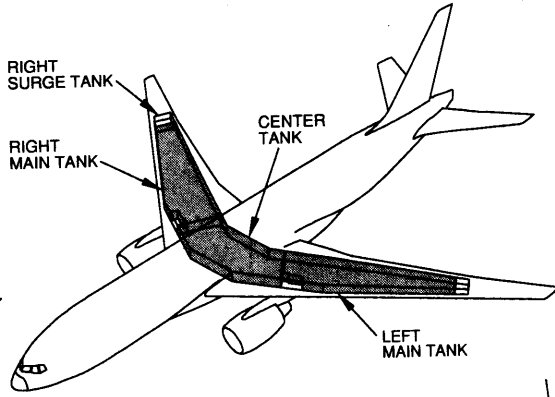



FUEL TANKS (-200IGW)

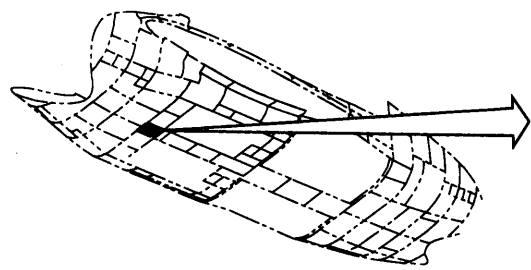




WING-BODY FAIRING AREA

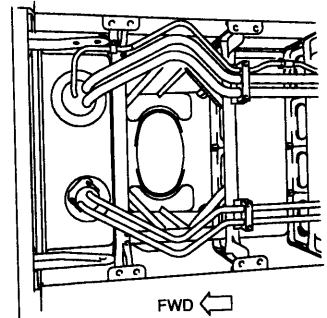



ACCESS DOOR FOR THE CENTER DRY BAY (-200)
OR THE CENTER FUEL TANK (-200IGW)
(VIEW LOOKING UP)

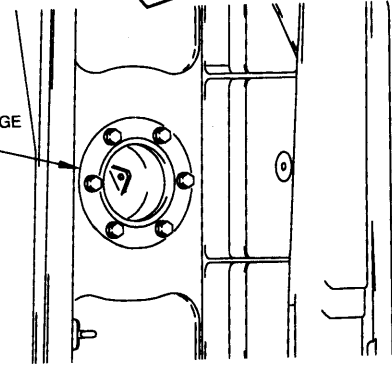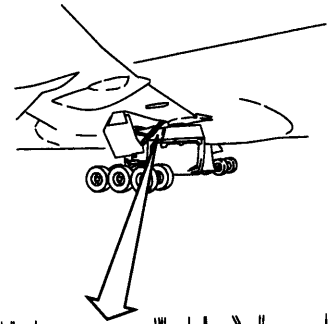





LH WHEEL WELL
(LOOKING FORWARD)

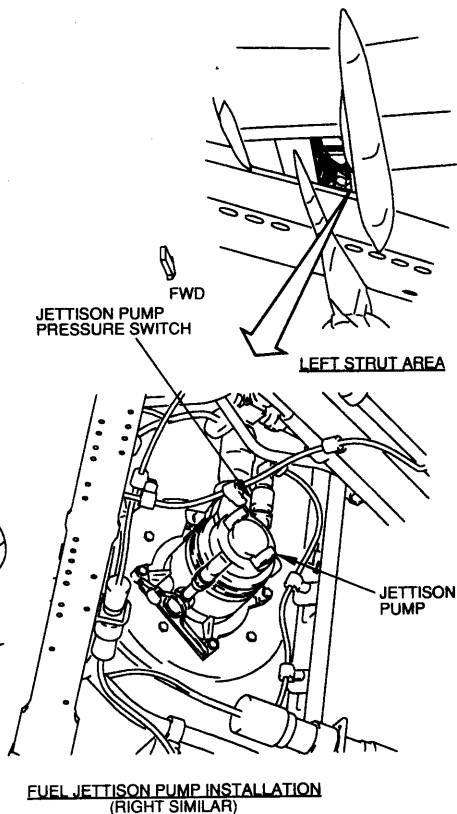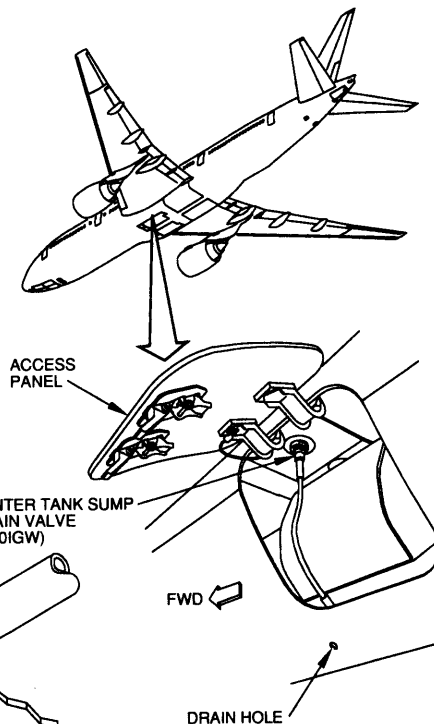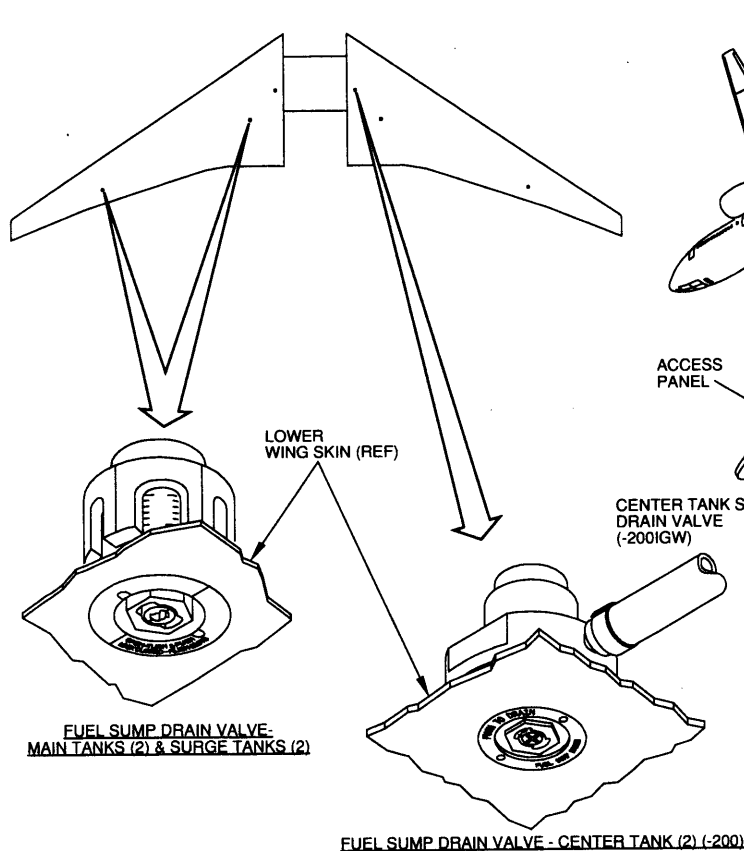


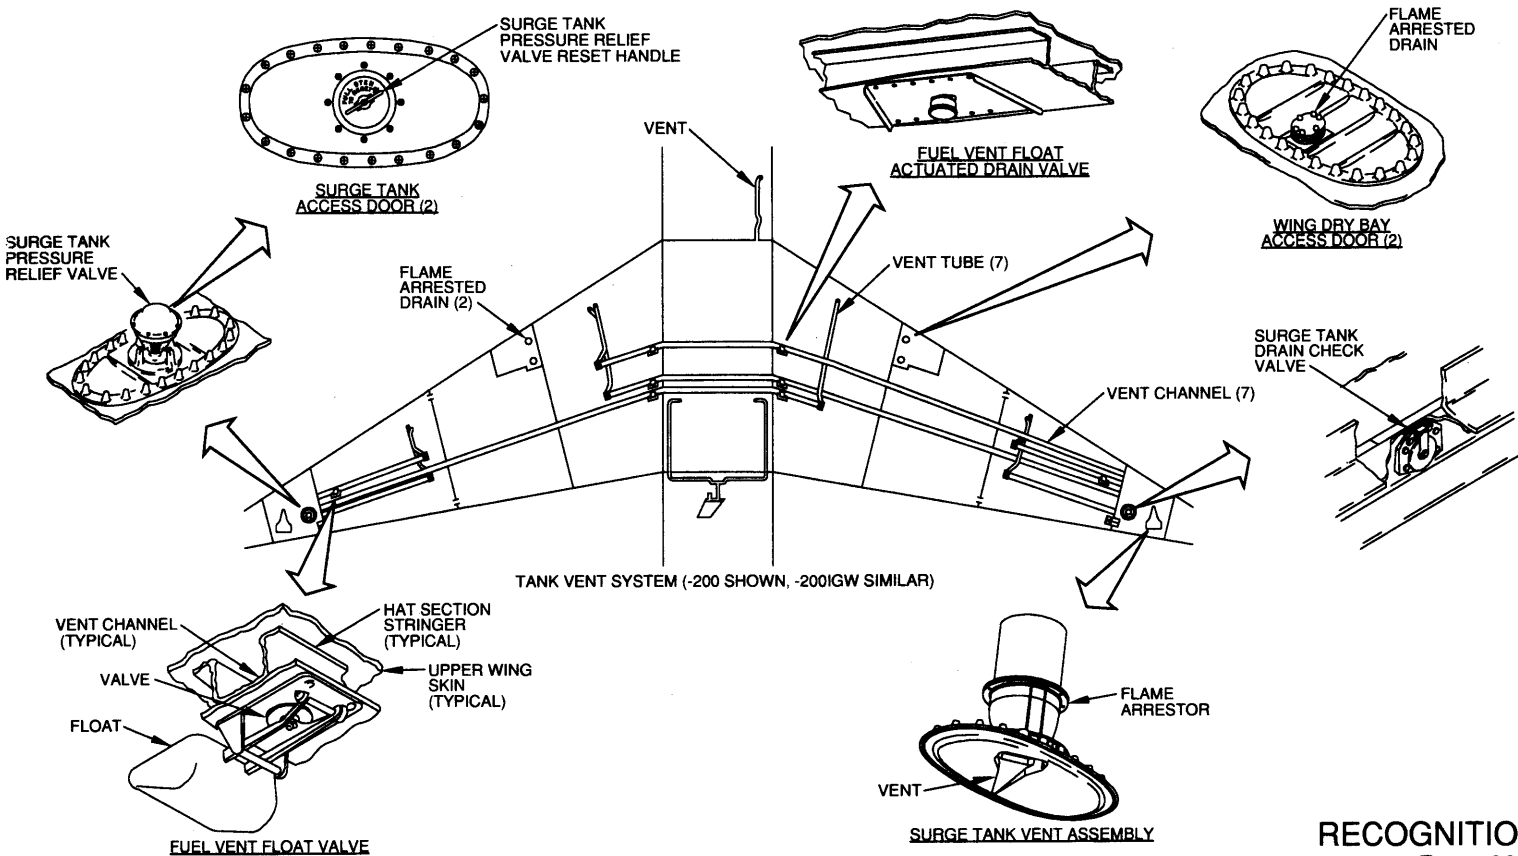






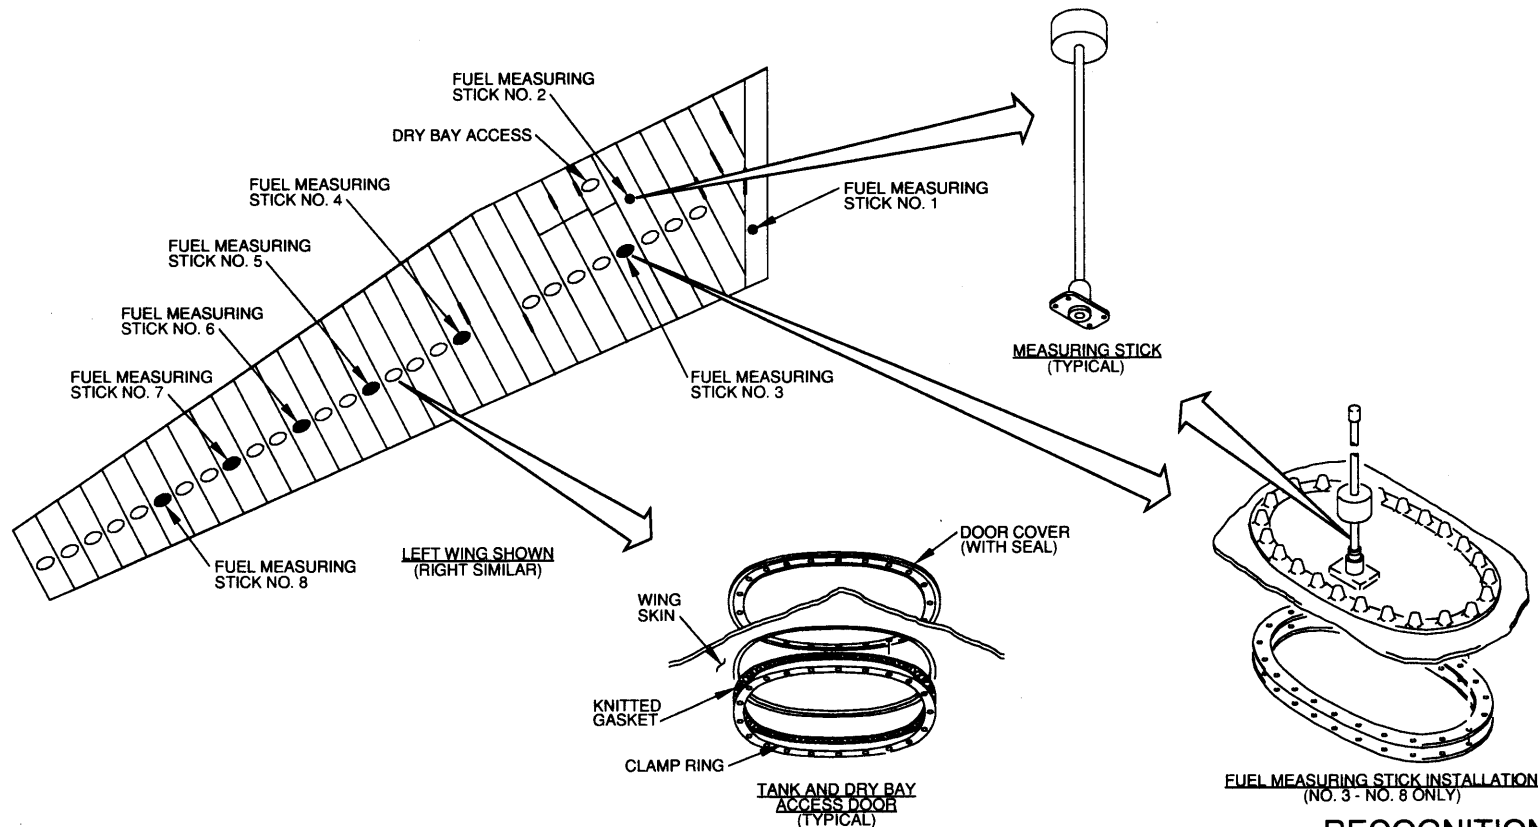








RECOGNITION

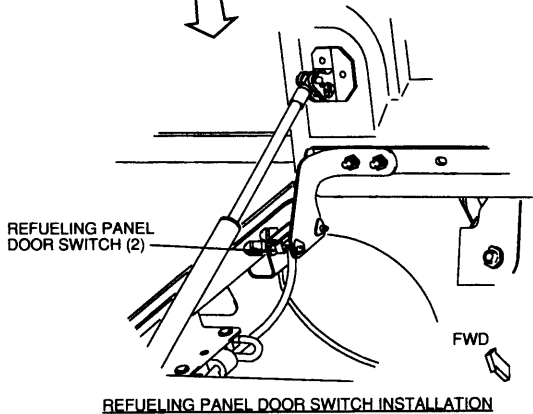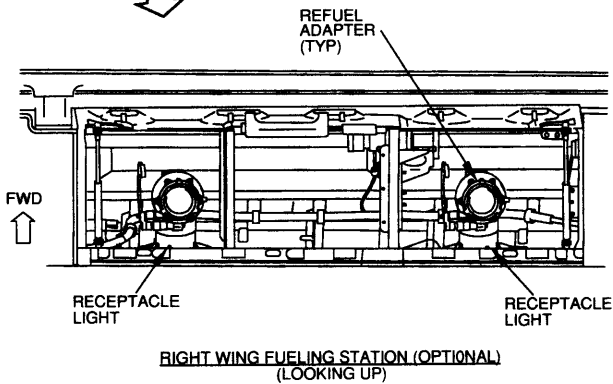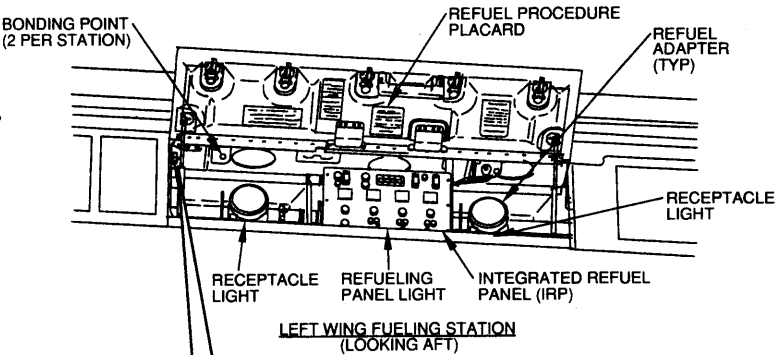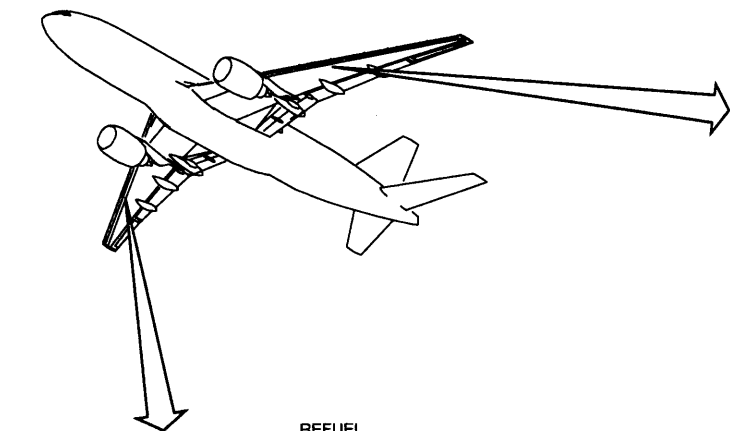


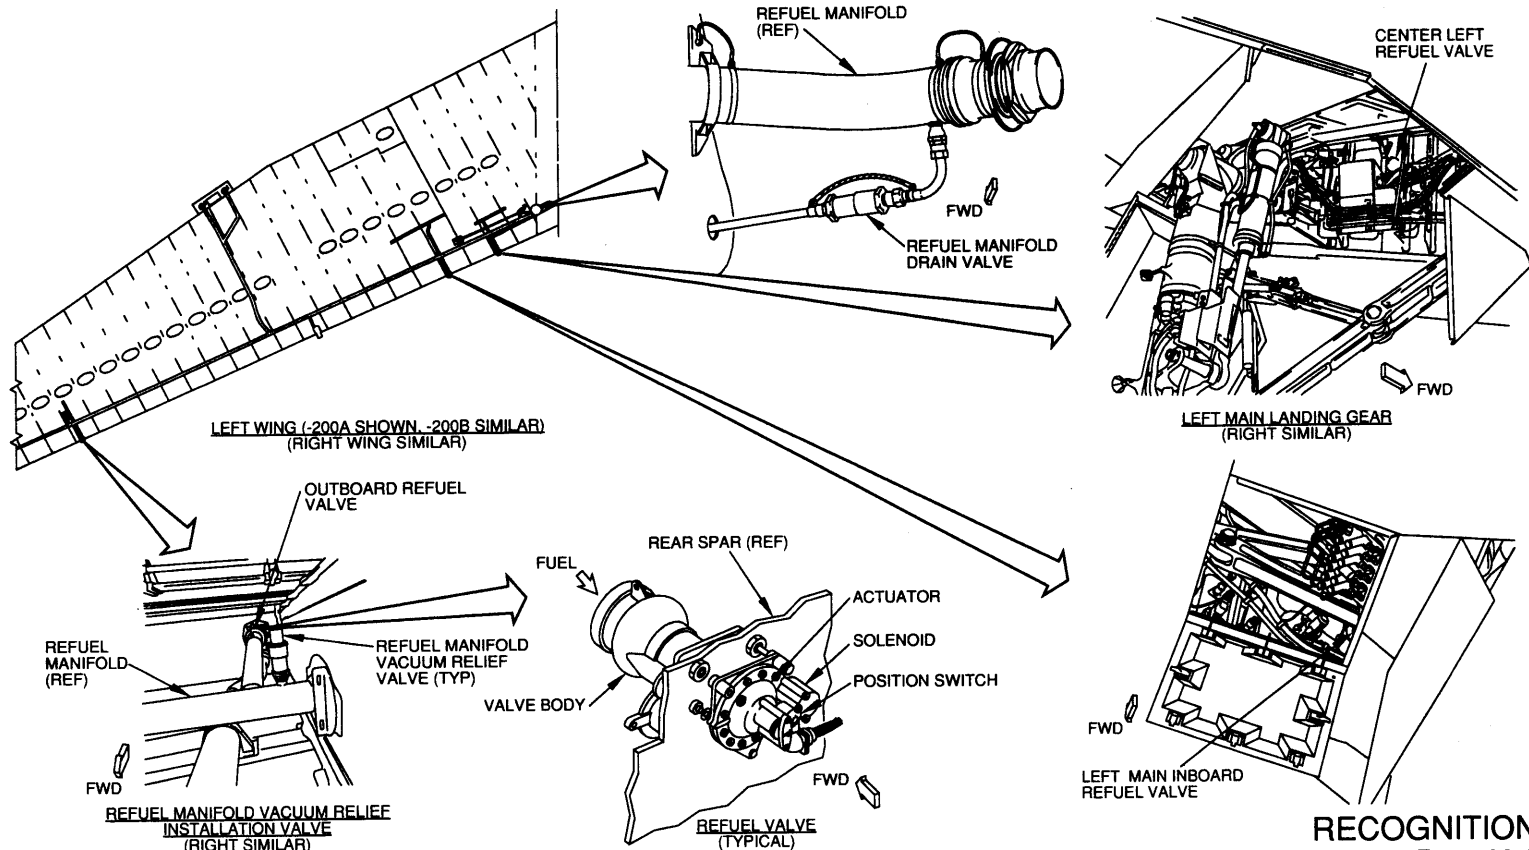


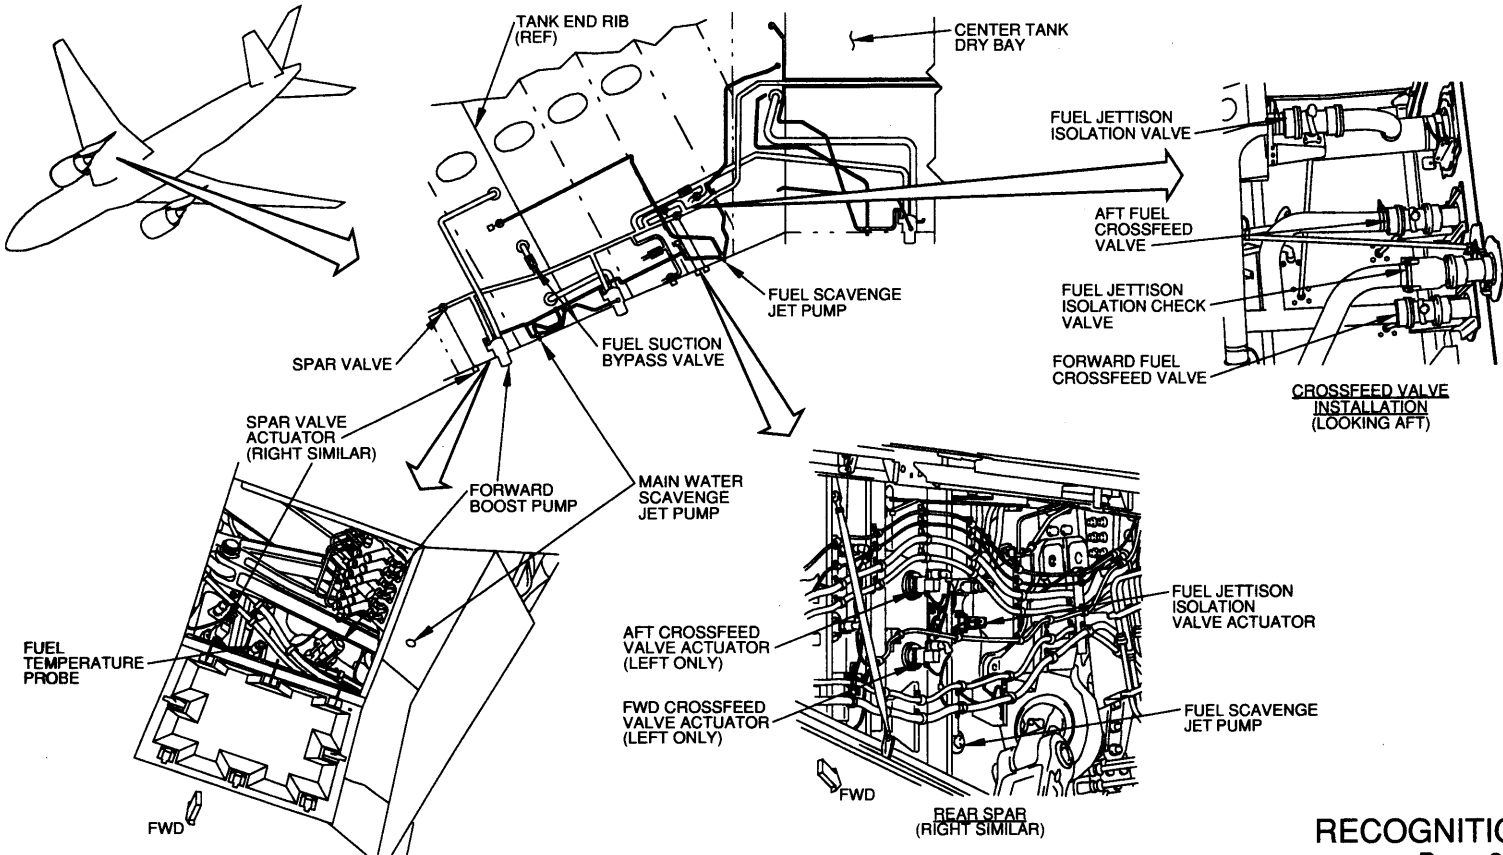


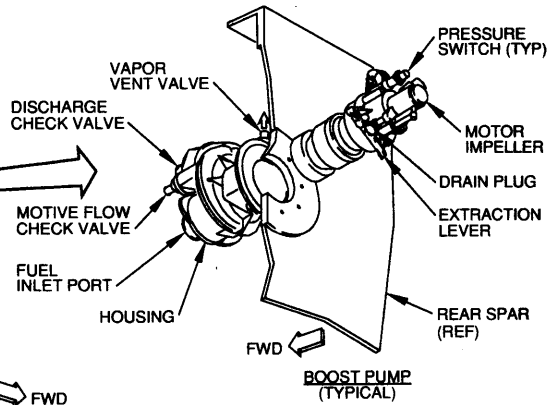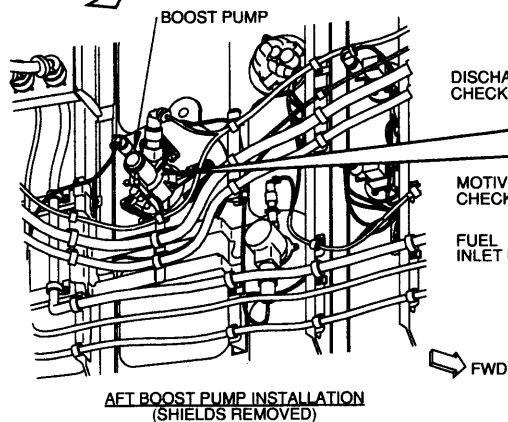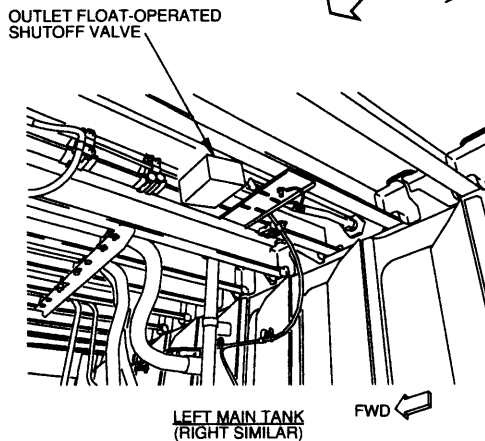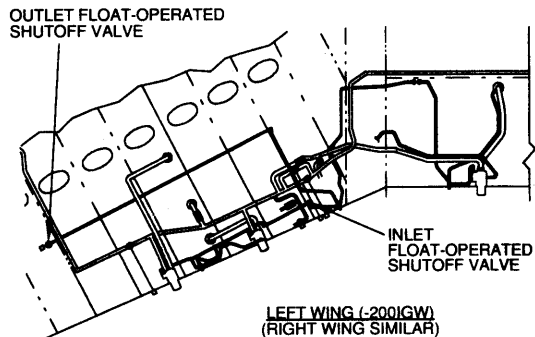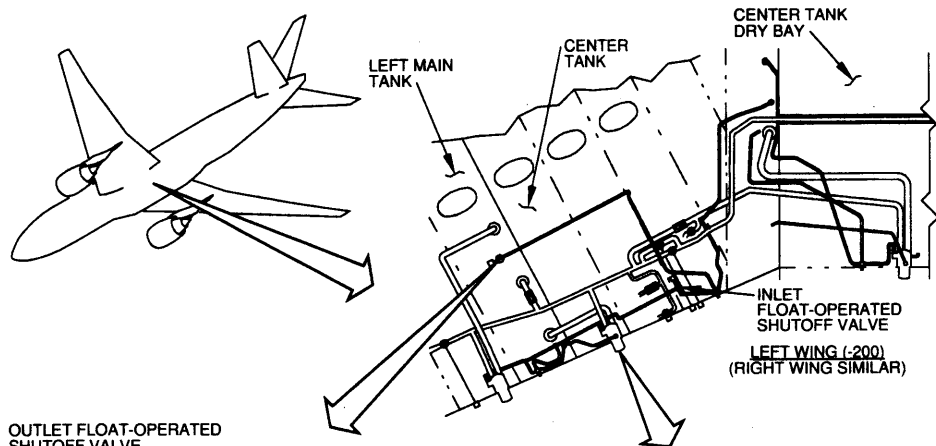


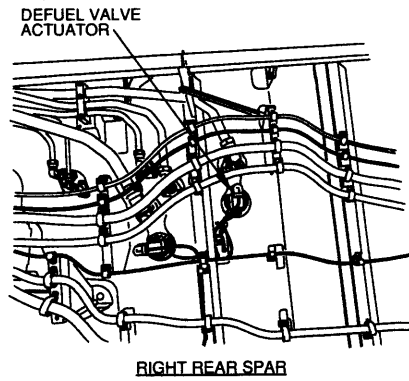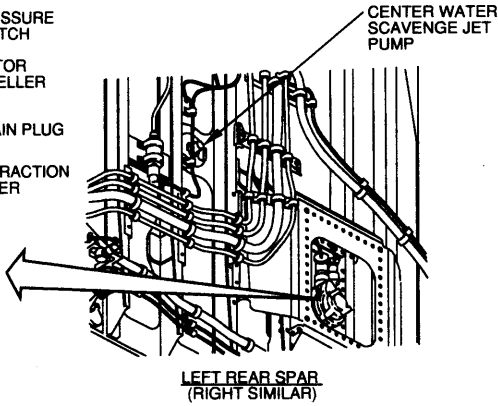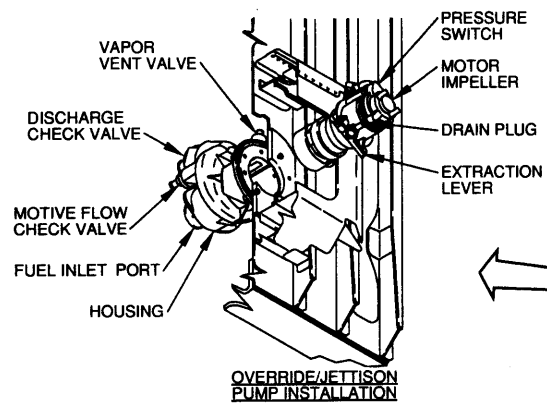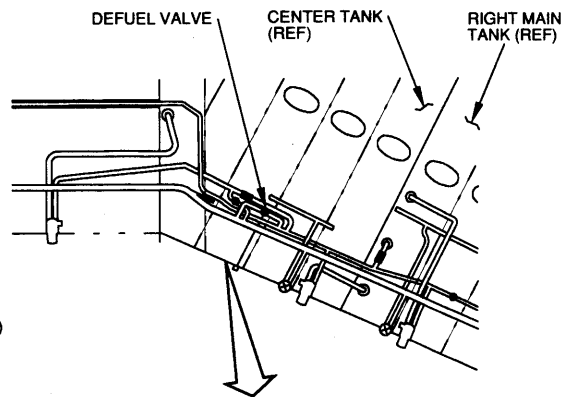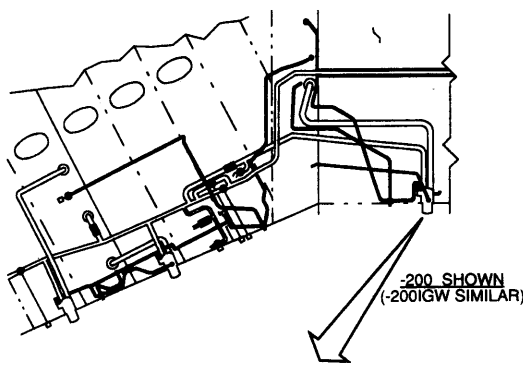
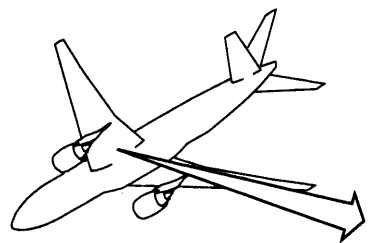



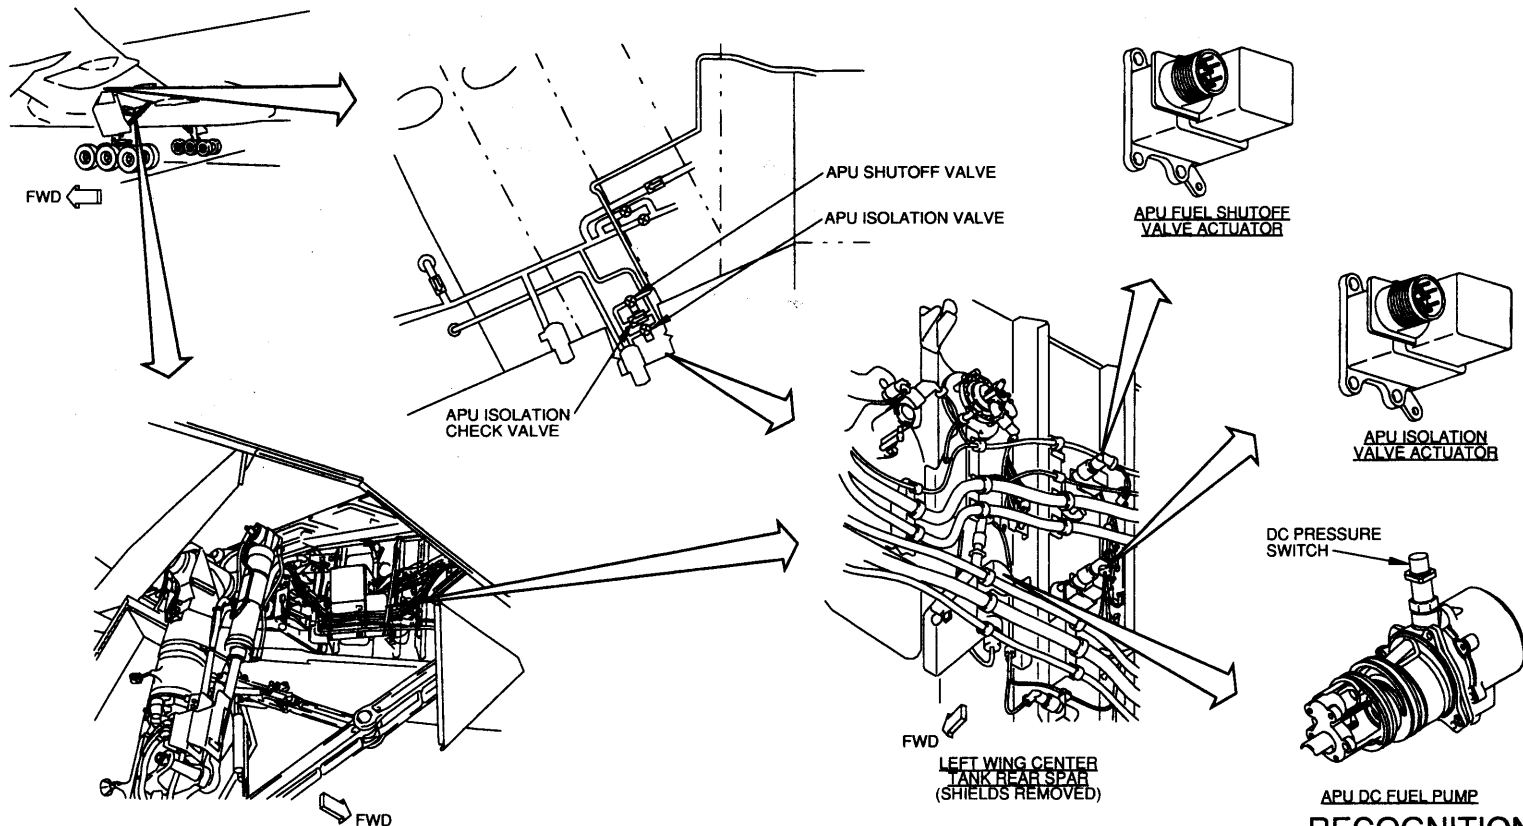



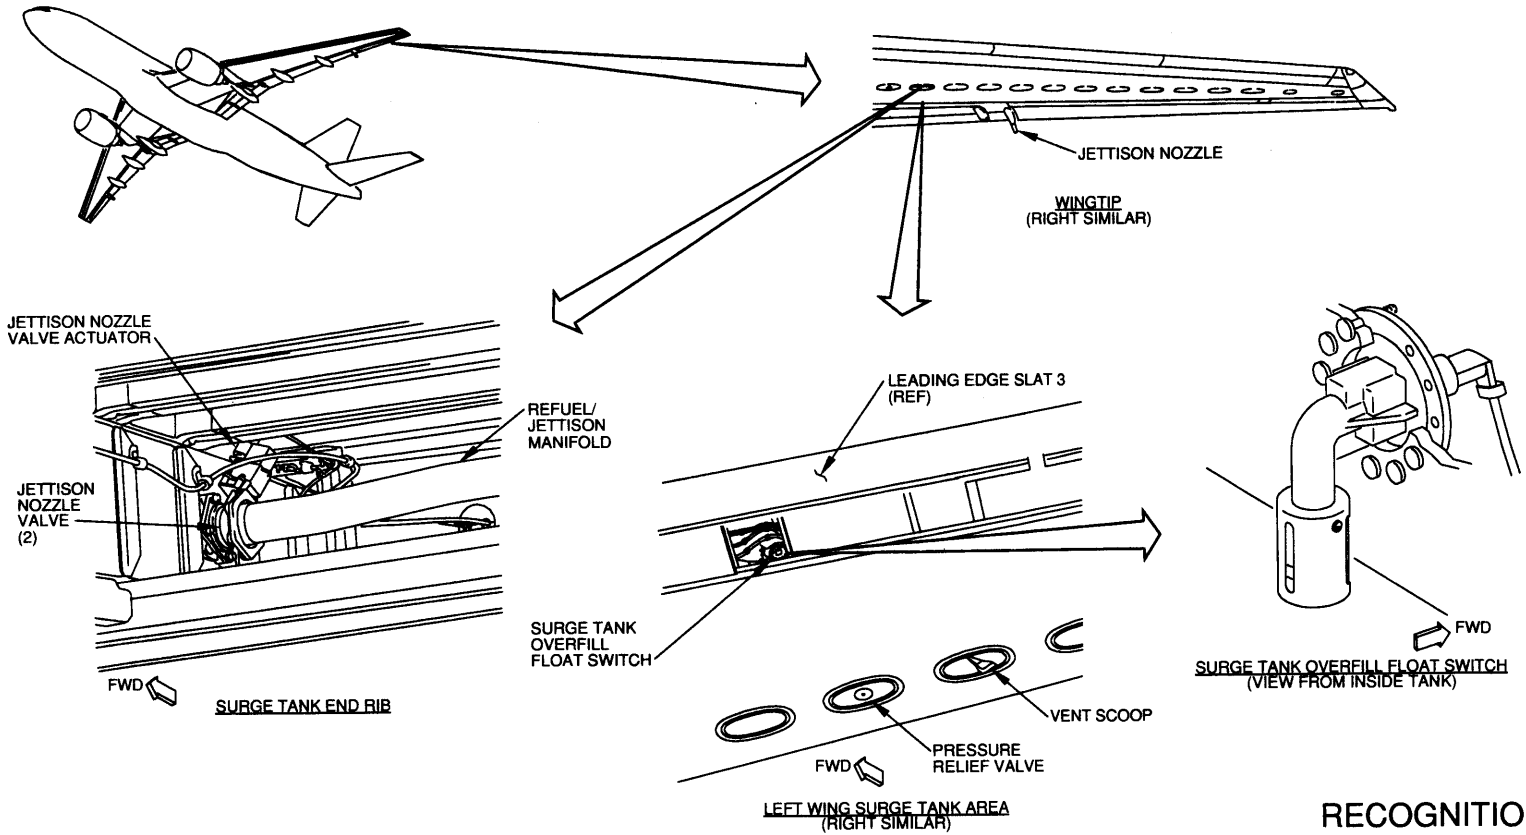


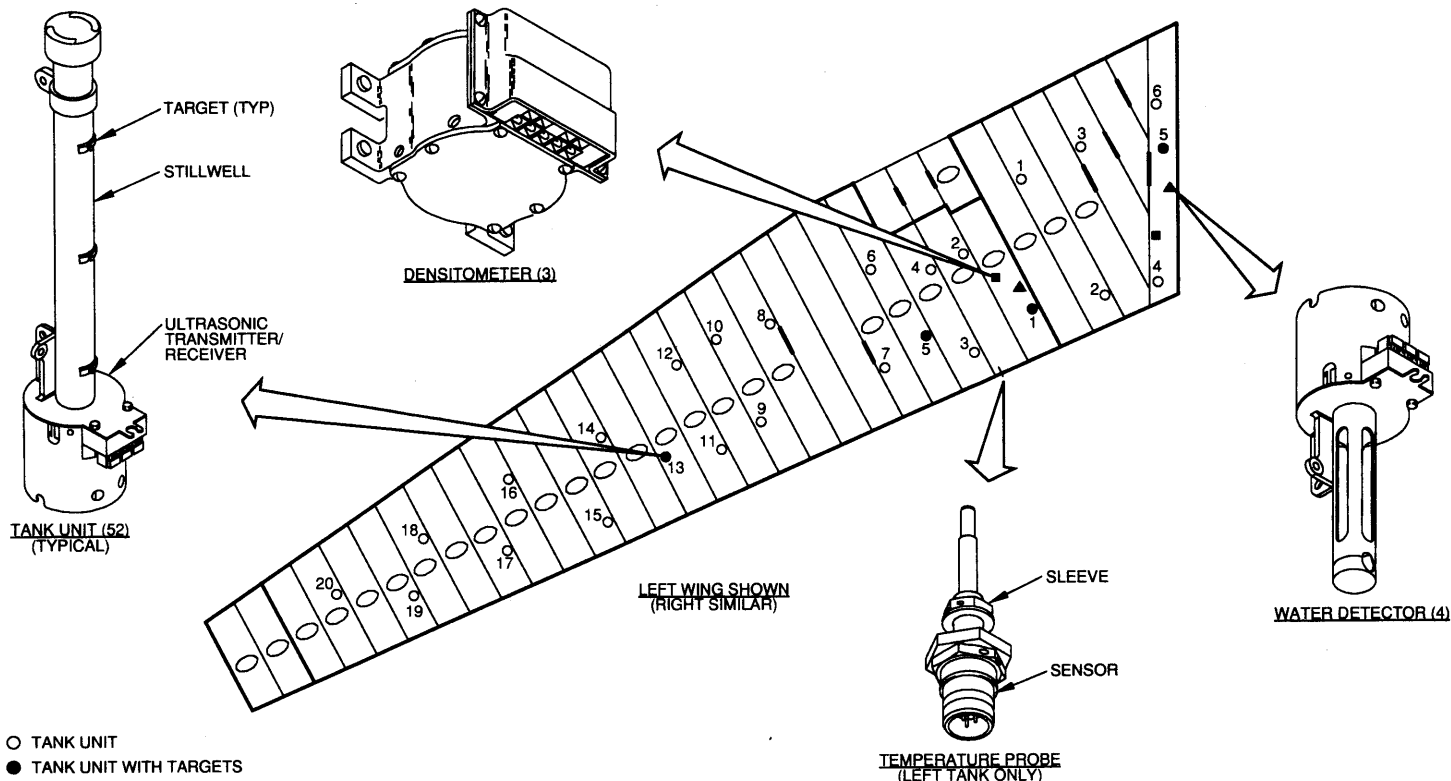

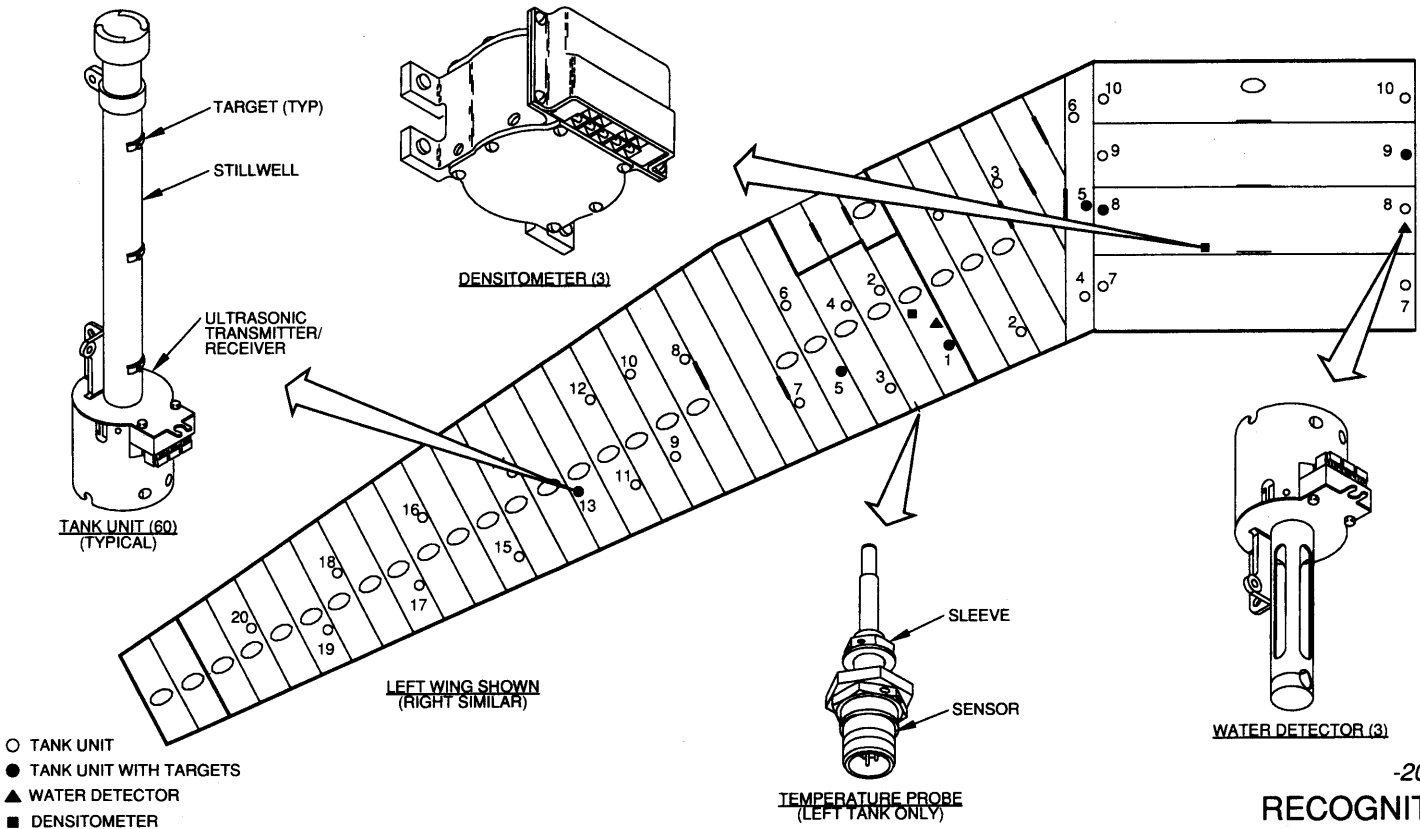

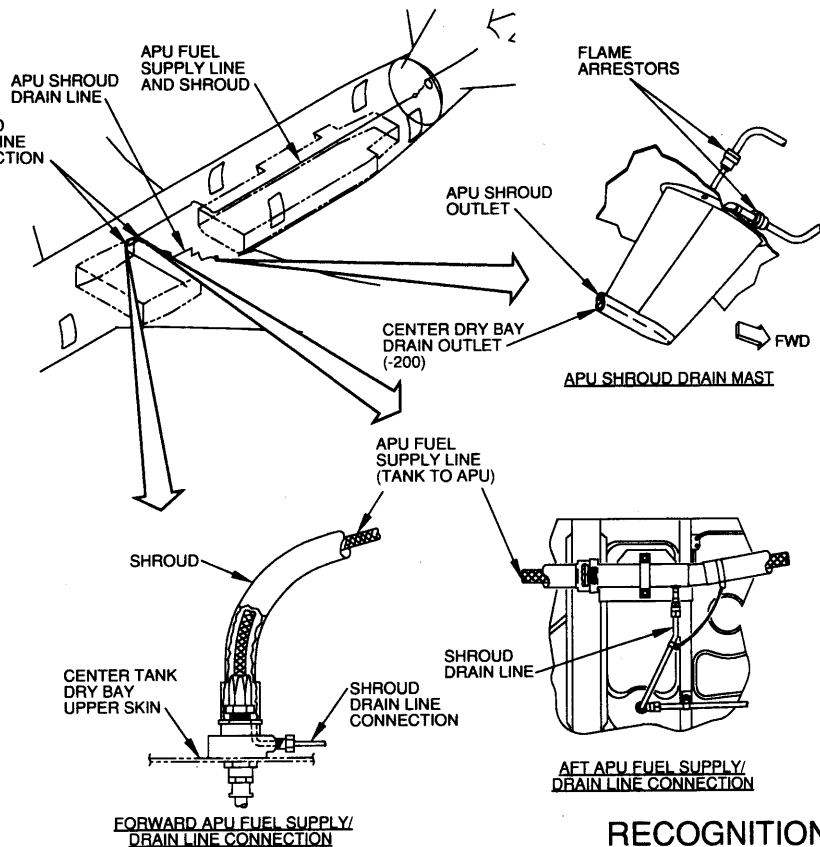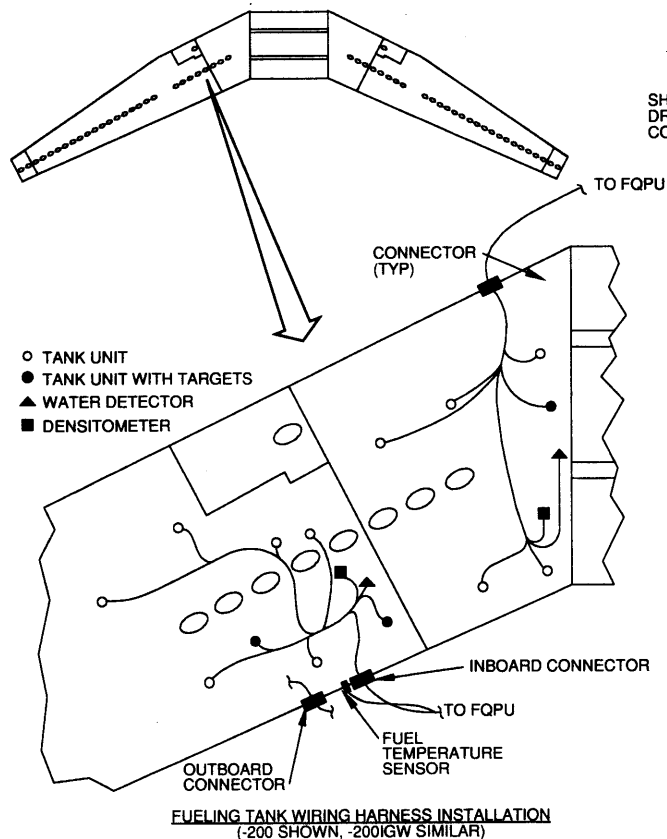


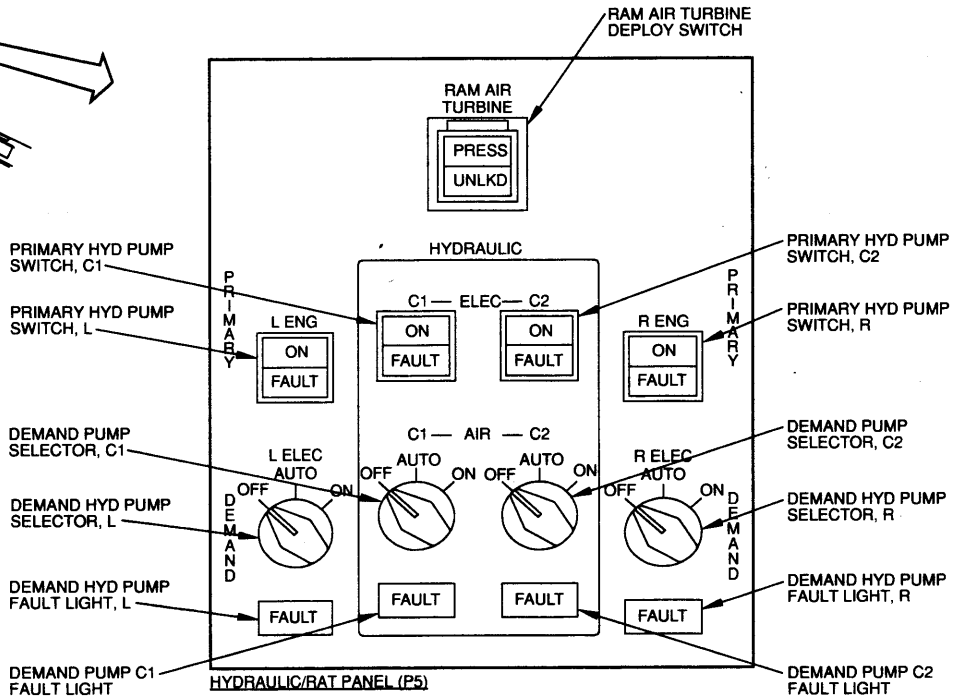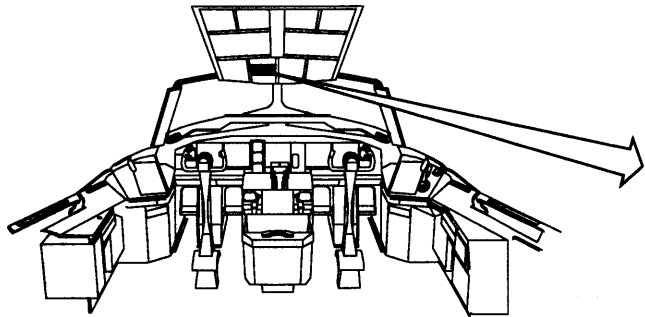

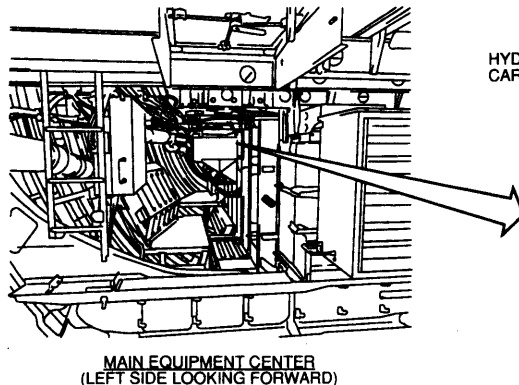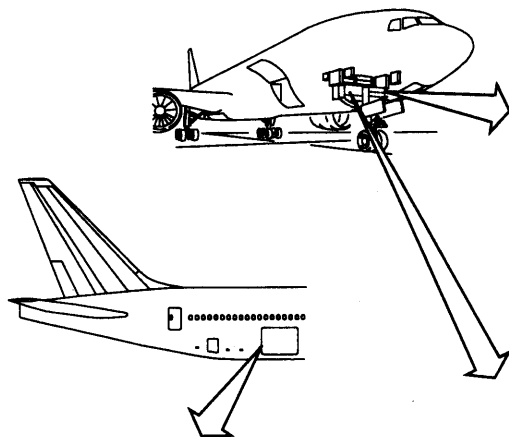


HYDRAULIC INTERFACE MODULE
CARD (HYDIM) - CENTER LEFT


HYDRAULIC INTERFACE
MODULE CARD (HYDIM) - LEFT

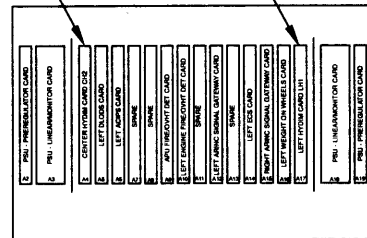

LEFT SYSTEMS CARD FILE (P85)

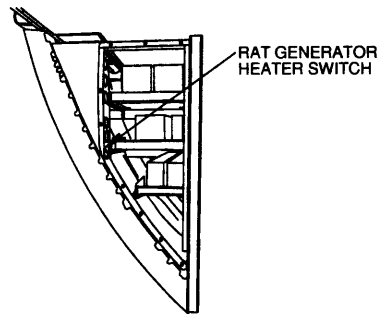


E6 RACK
(LOOKING AFT)

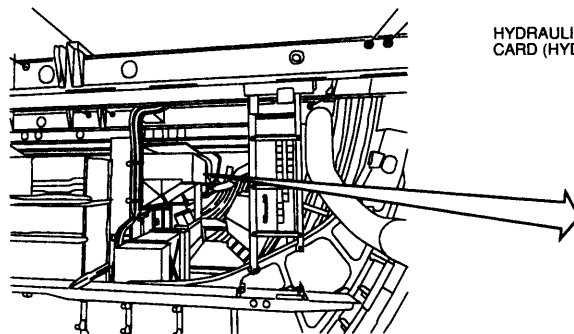


HYDRAULIC INTERFACE MODULE
CARD (HYDIM) - CENTER RIGHT

HYDRAULIC INTERFACE
MODULE CARD (HYDIM) - RIGHT

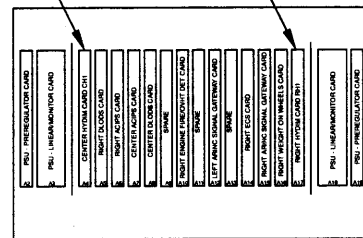


RIGHT SYSTEMS CARD FILE (P84)

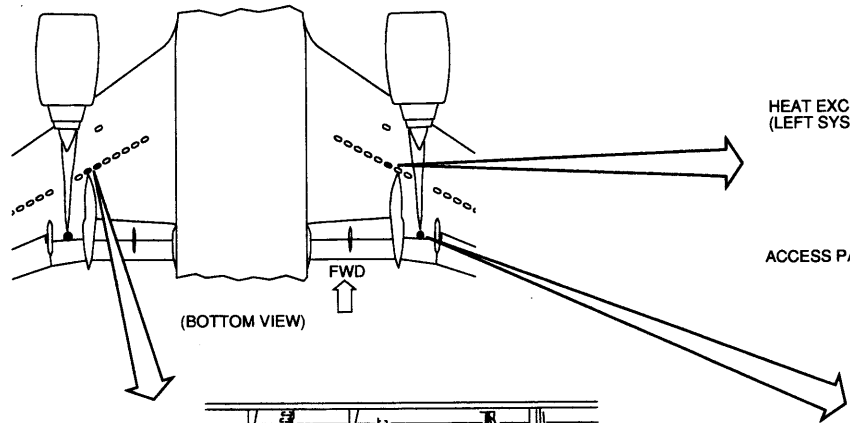

HEAT EXCHANGER
(LEFT SYSTEM)

ACCESS PANEL

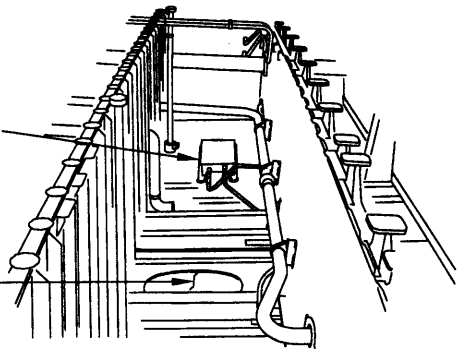


LEFT MAIN FUEL TANK
(LOOKING AFT)

HEAT EXCHANGER
(CENTER SYSTEM)


ACCESS PANELS

HEAT EXCHANGER
(RIGHT SYSTEM)

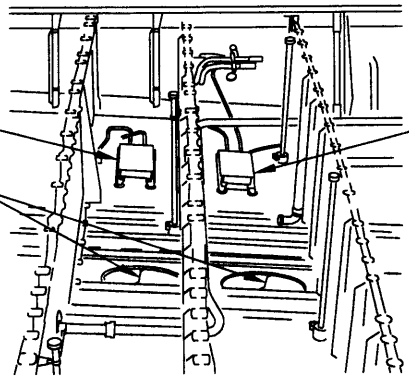




RIGHT MAIN FUEL TANK
(LOOKING AFT)


PRESSURE TRANSDUCER
LEFT SYSTEM (RIGHT SIMILAR)

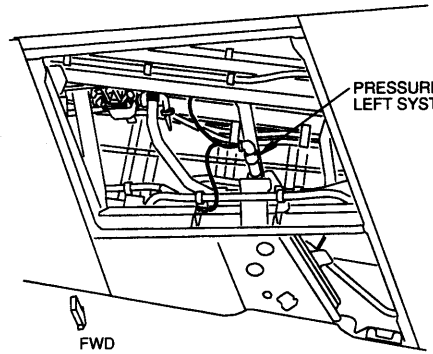




FWD

PRESSURE TRANSDUCER INSTALLATION

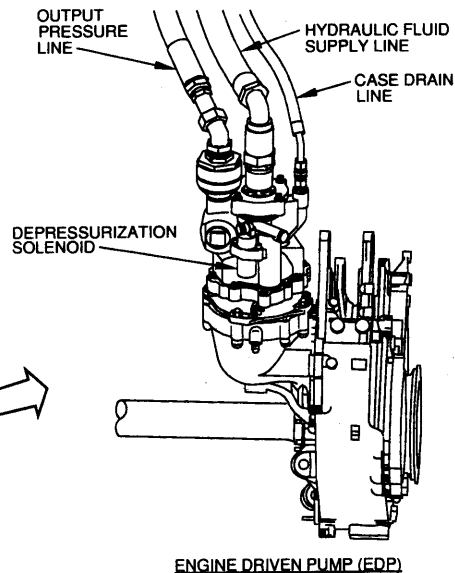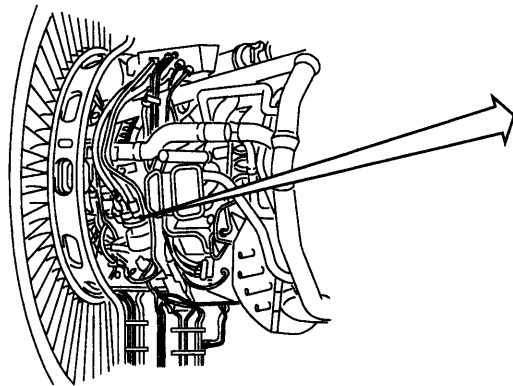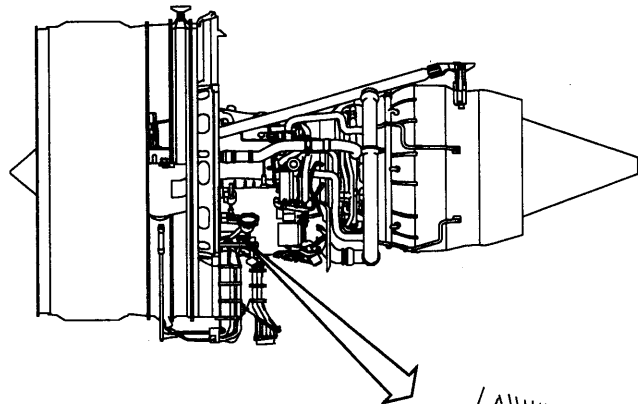


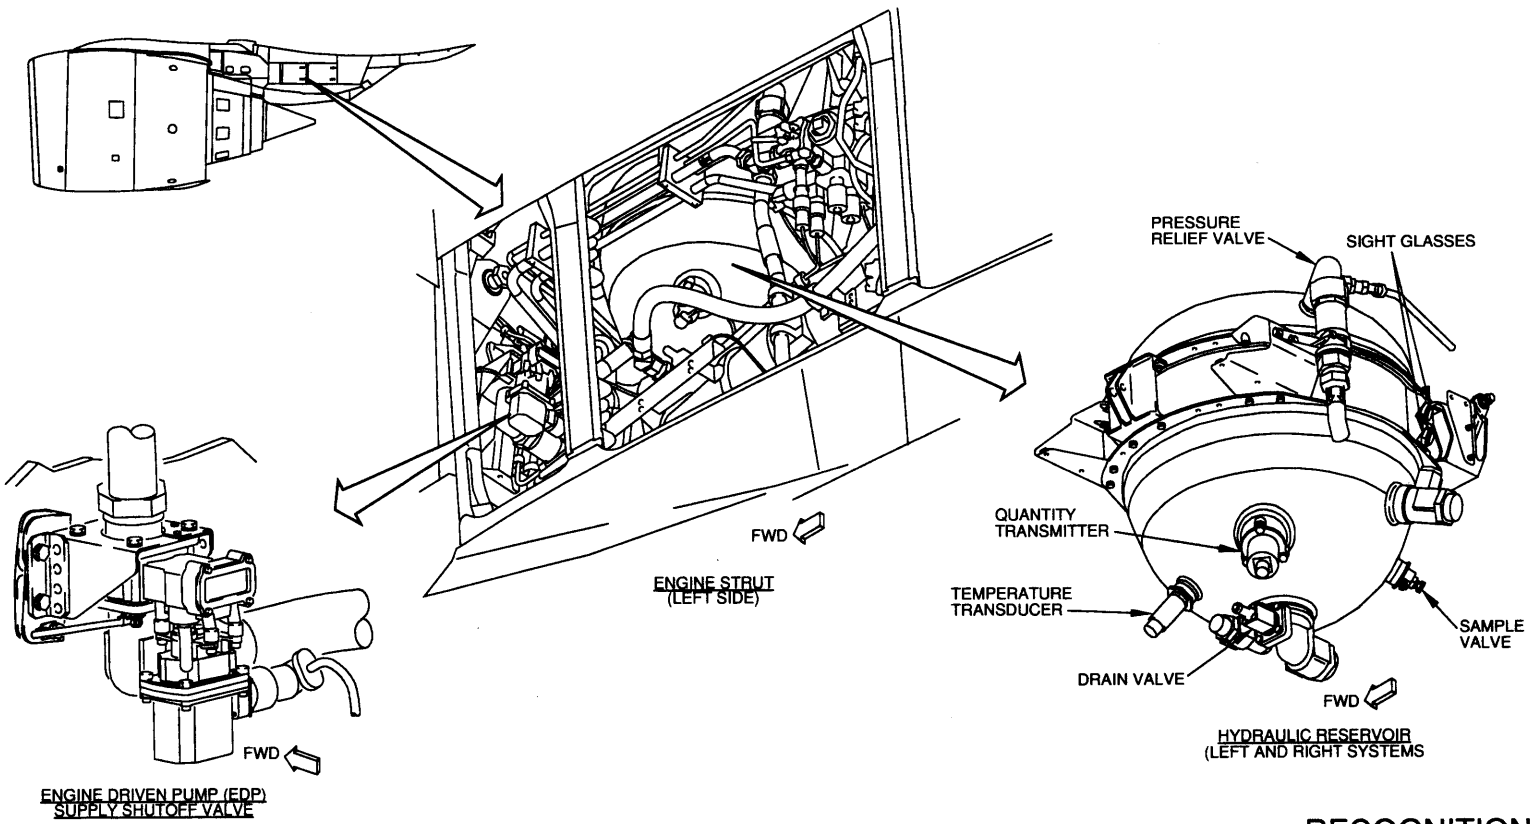

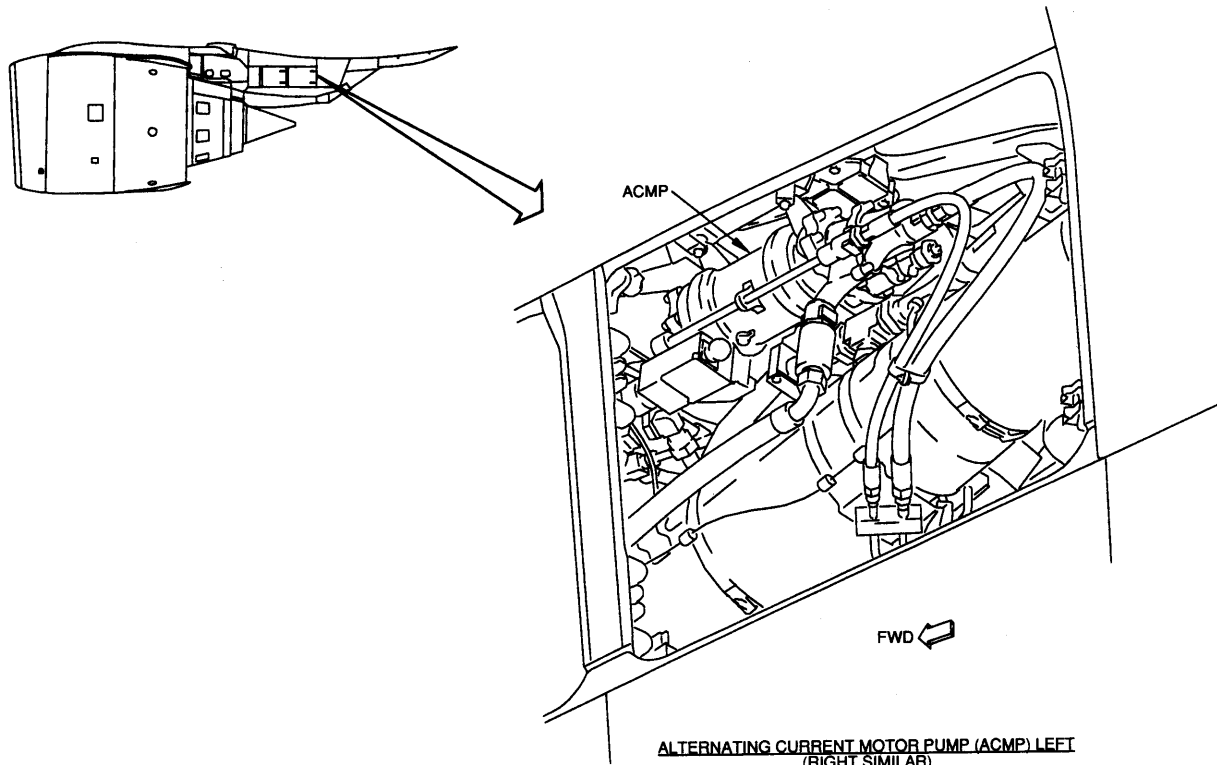

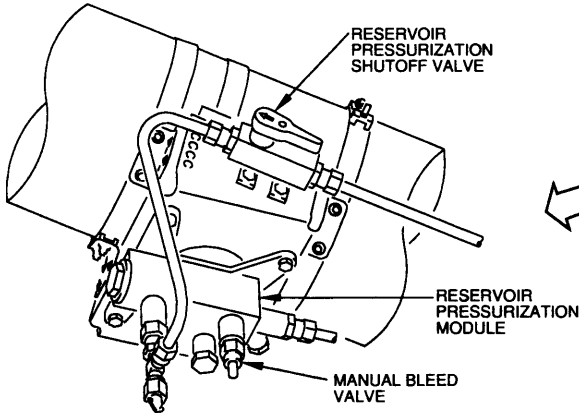
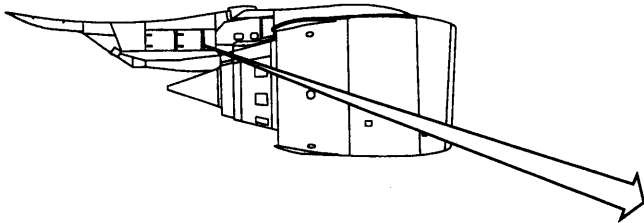


**RESERVOIR PRESSURIZATION
MODULE & SHUTOFF VALVE
(LEFT & RIGHT SYSTEMS)**

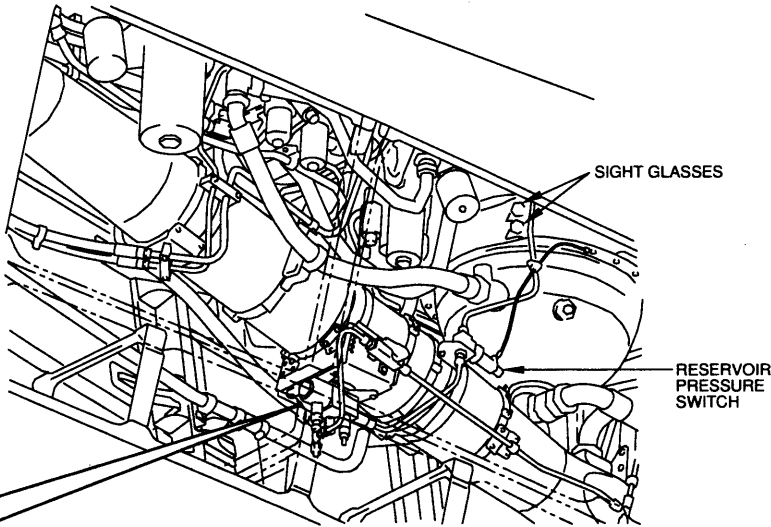

FWD

ENGINE STRUT

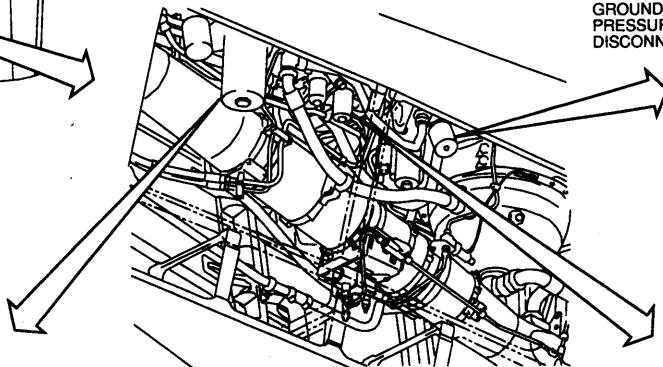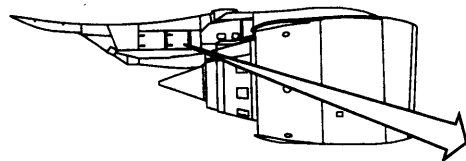

→ FWD
ENGINE STRUT FAIRING

GROUND SERVICE
PRESSURE
DISCONNECT


PRESSURE
TRANSDUCER

TEMPERATURE
TRANSDUCER

CASE DRAIN
FILTER

PRESSURE
FILTER

ENGINE DRIVEN PUMP (EDP)
PRESSURE AND CASE
DRAIN FILTER MODULE

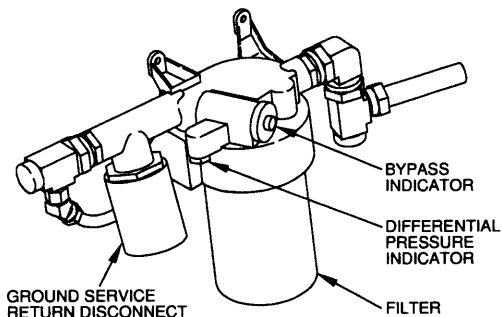


GROUND SERVICE
RETURN DISCONNECT

BYPASS
INDICATOR

DIFFERENTIAL
PRESSURE
INDICATOR

FILTER

RETURN FILTER MODULE
(LEFT OR RIGHT SYSTEM)

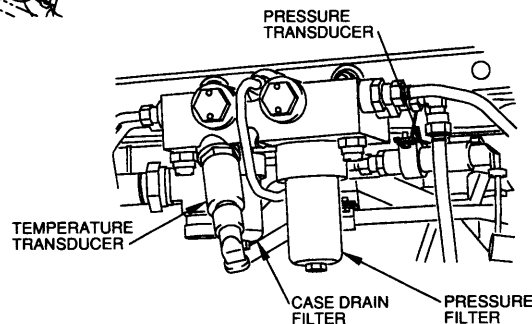




PRESSURE
TRANSDUCER


TEMPERATURE
TRANSDUCER


CASE DRAIN
FILTER



PRESSURE
FILTER

ALTERNATING CURRENT MOTOR PUMP (ACMP)
PRESSURE AND CASE DRAIN FILTER MODULE
(LEFT OR RIGHT SYSTEM)

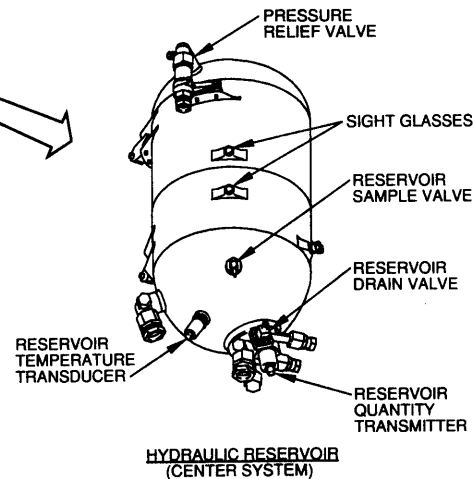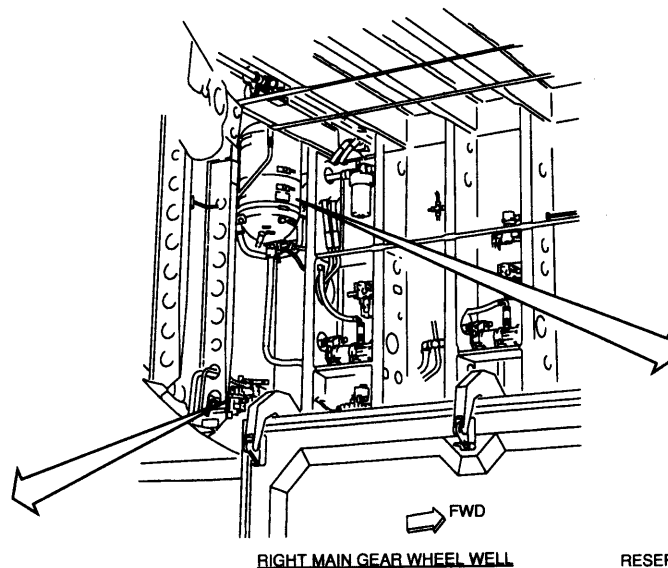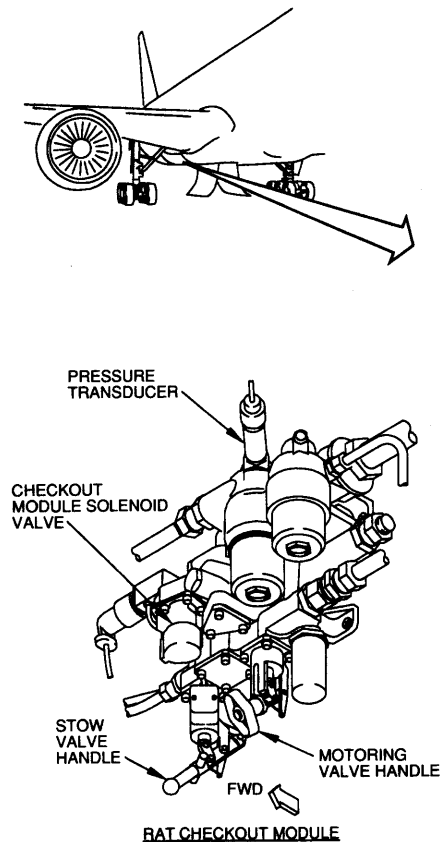


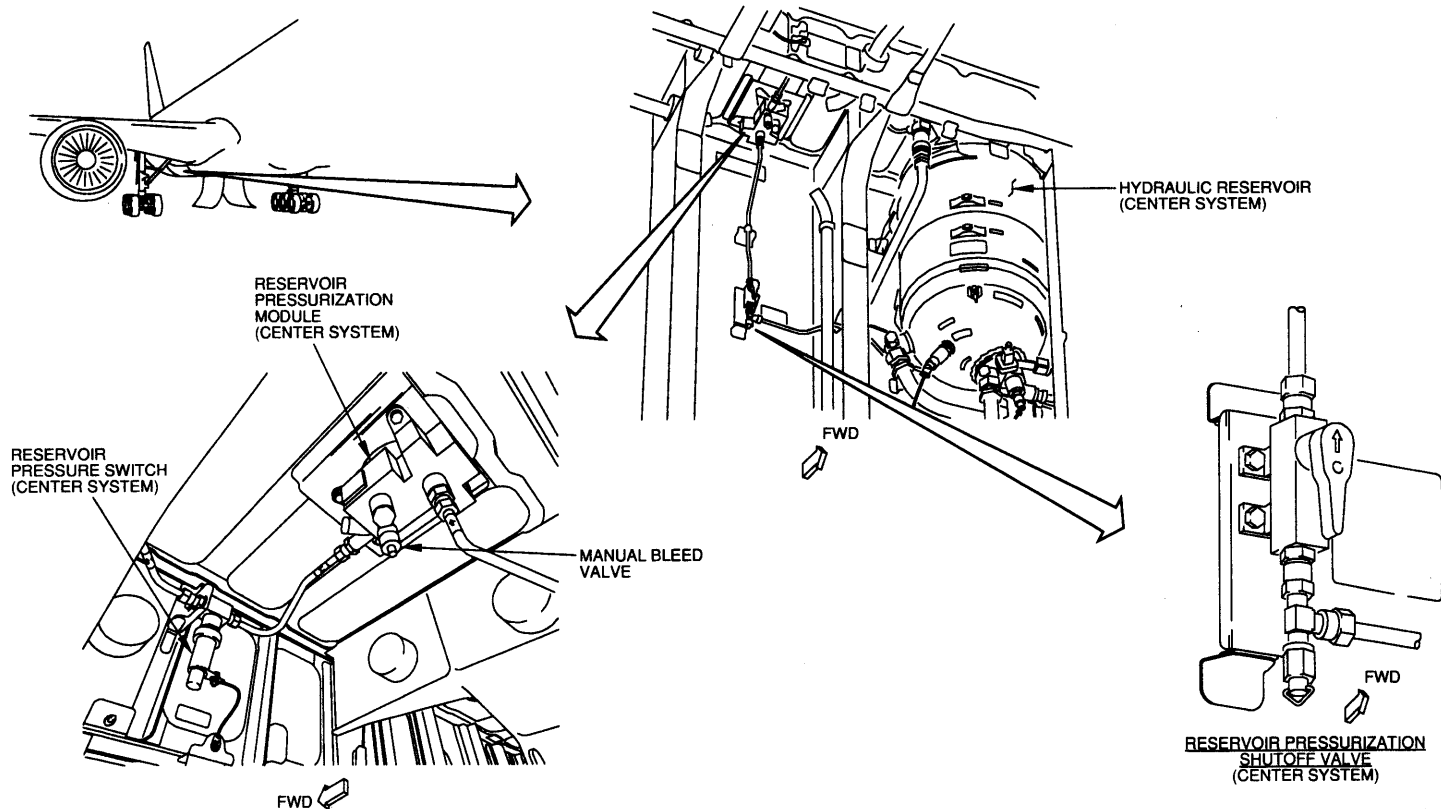

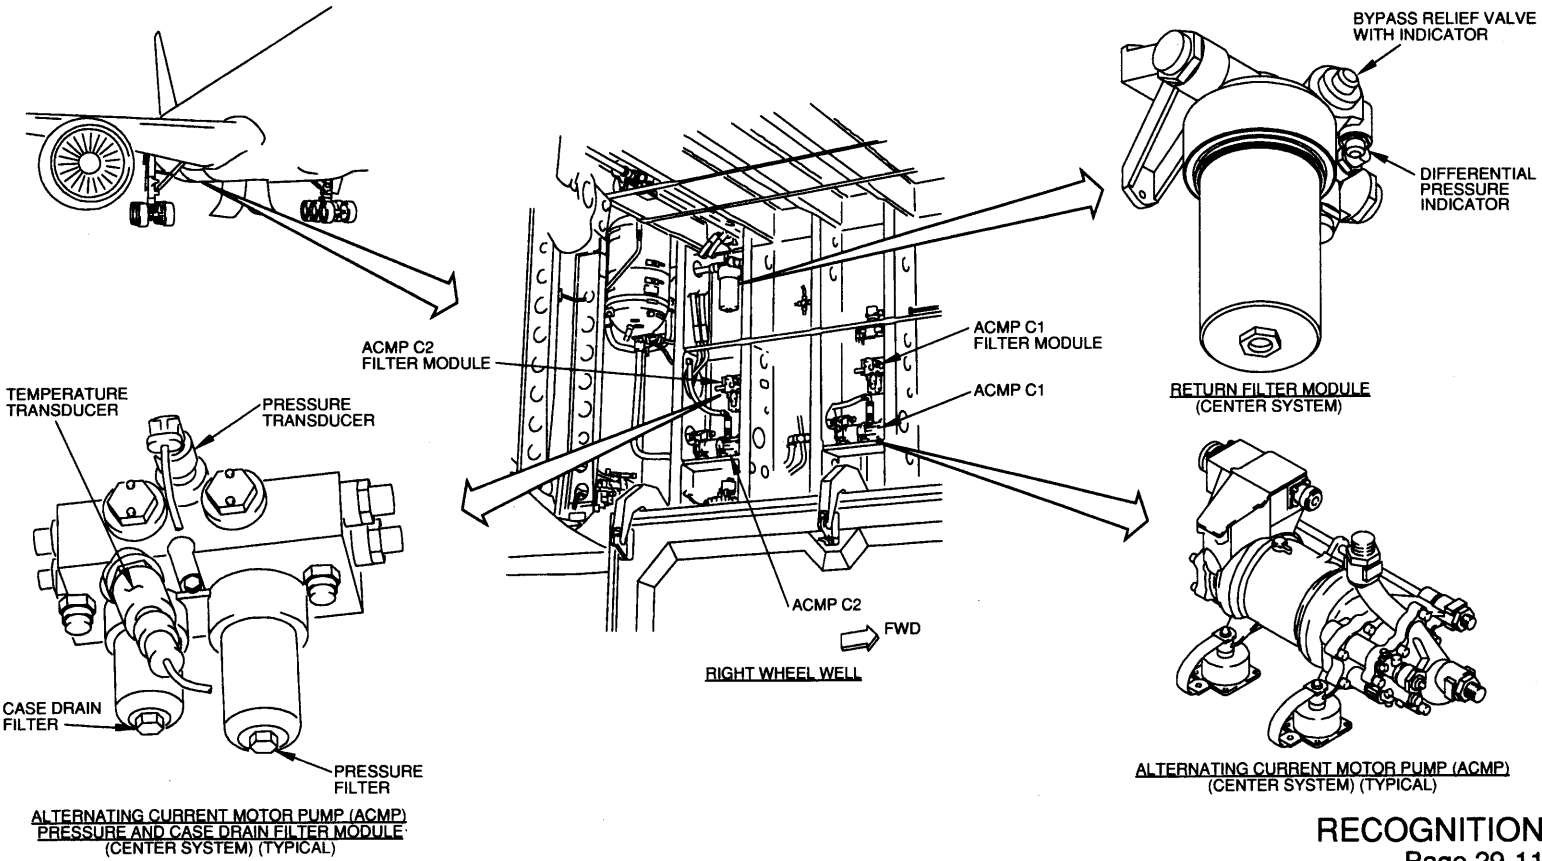


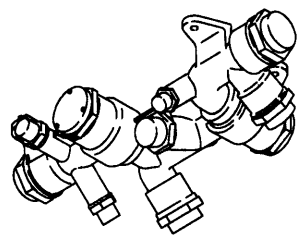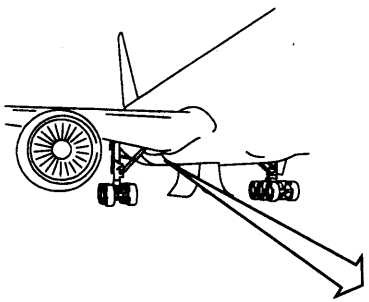


**RETURN MANIFOLD
(CENTER SYSTEM)**

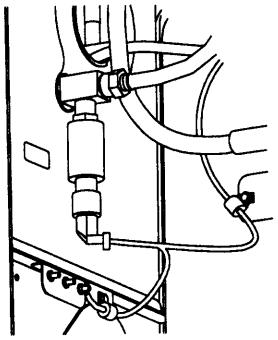

**PRESSURE TRANSDUCER
(CENTER SYSTEM)**

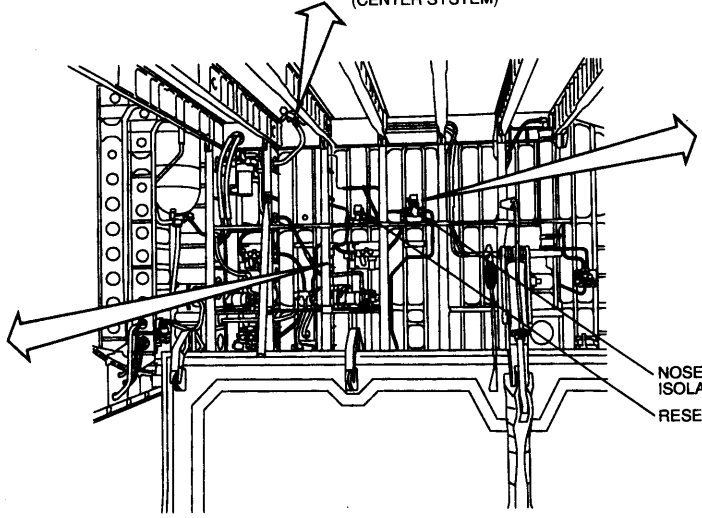



RIGHT MAIN GEAR WHEEL WELL

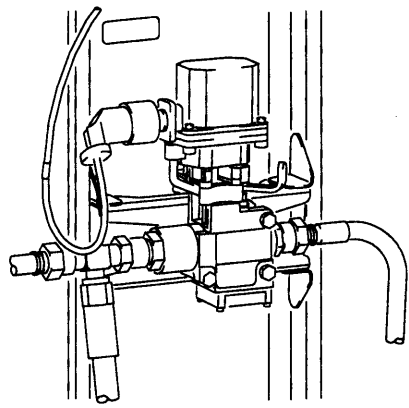



**ISOLATION VALVE
(TYPICAL)**


**NOSE GEAR
ISOLATION VALVE
RESERVE ISOLATION VALVE**

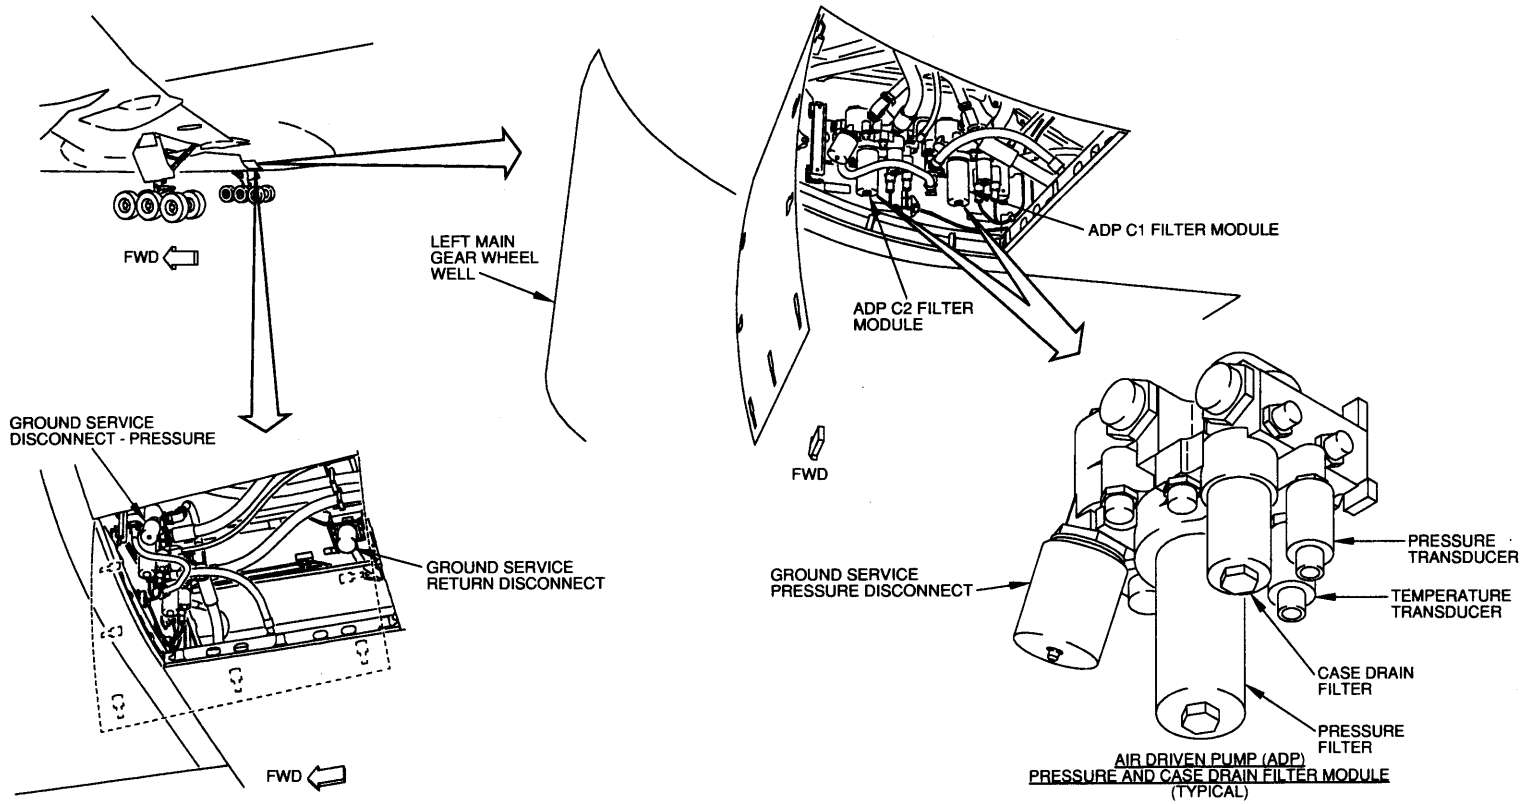

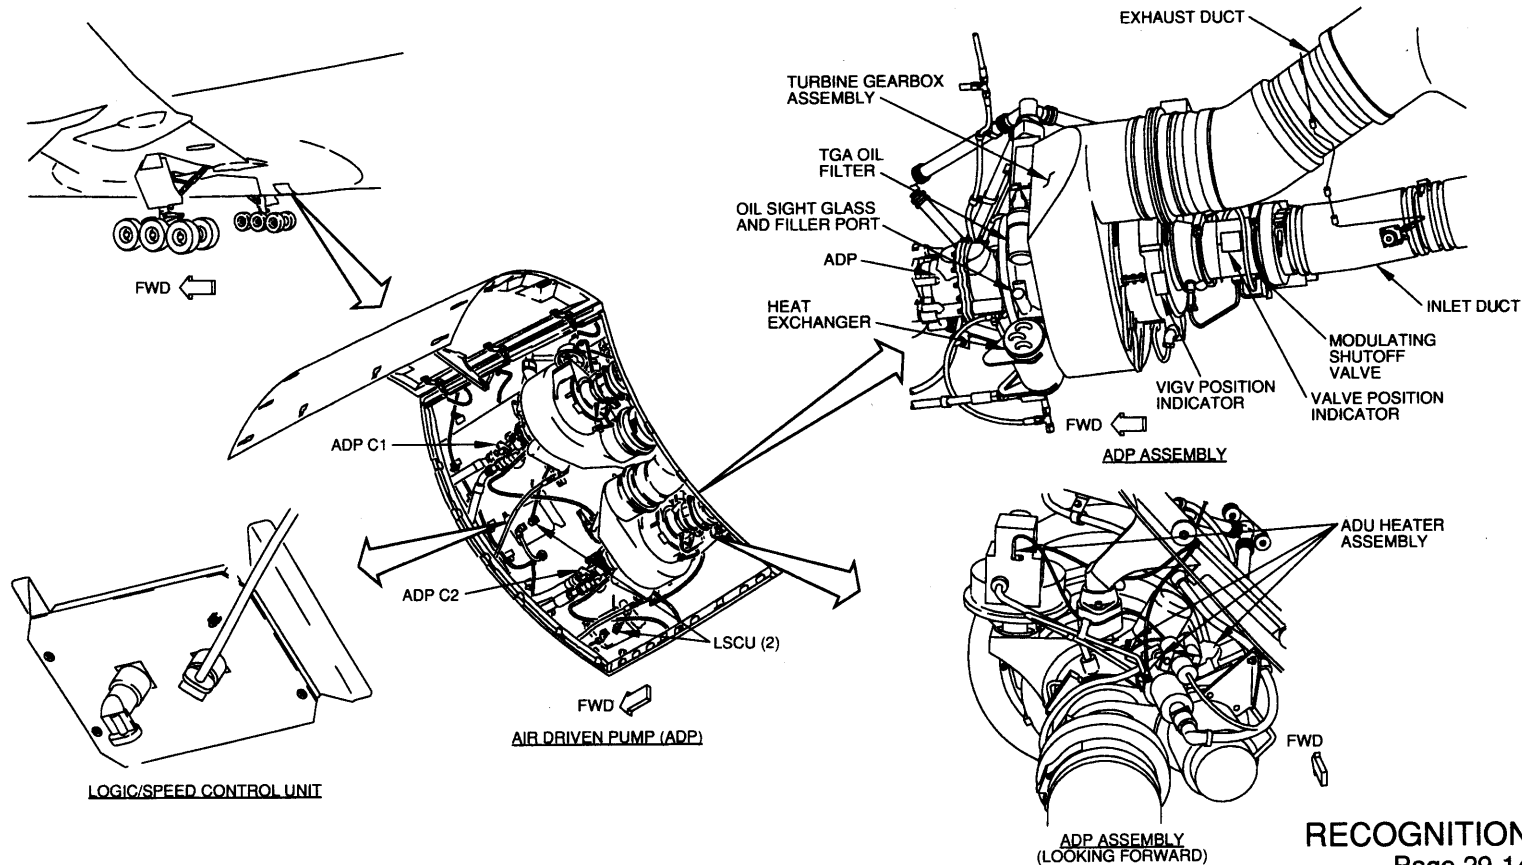


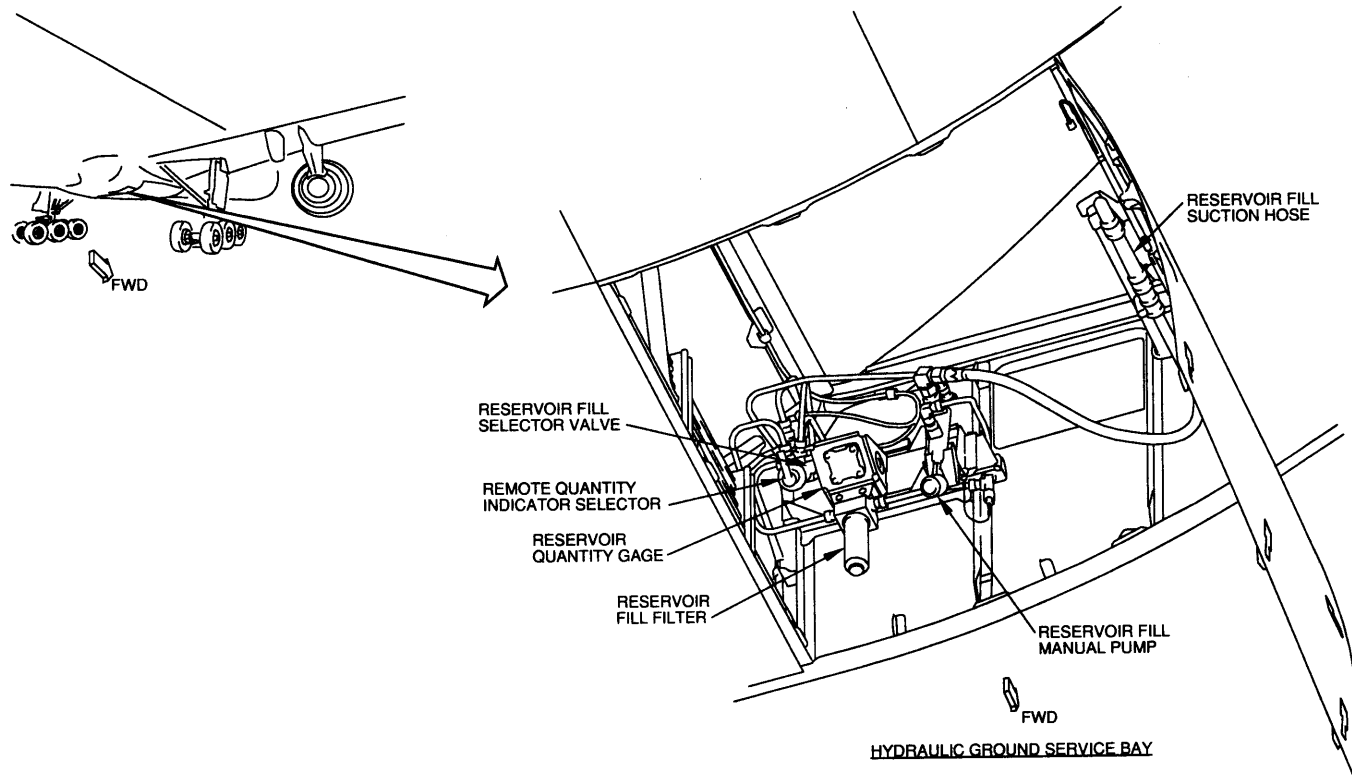

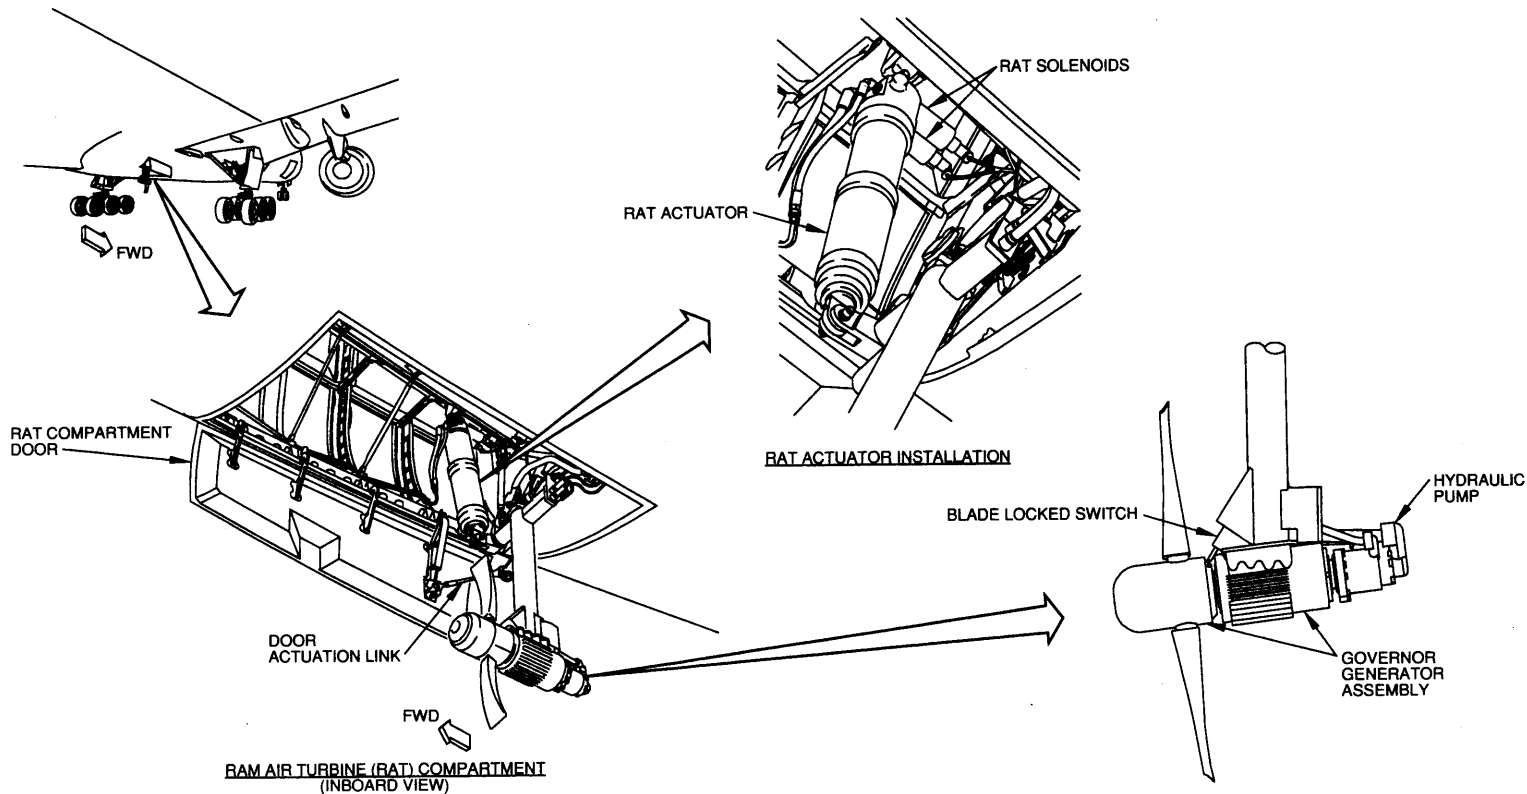

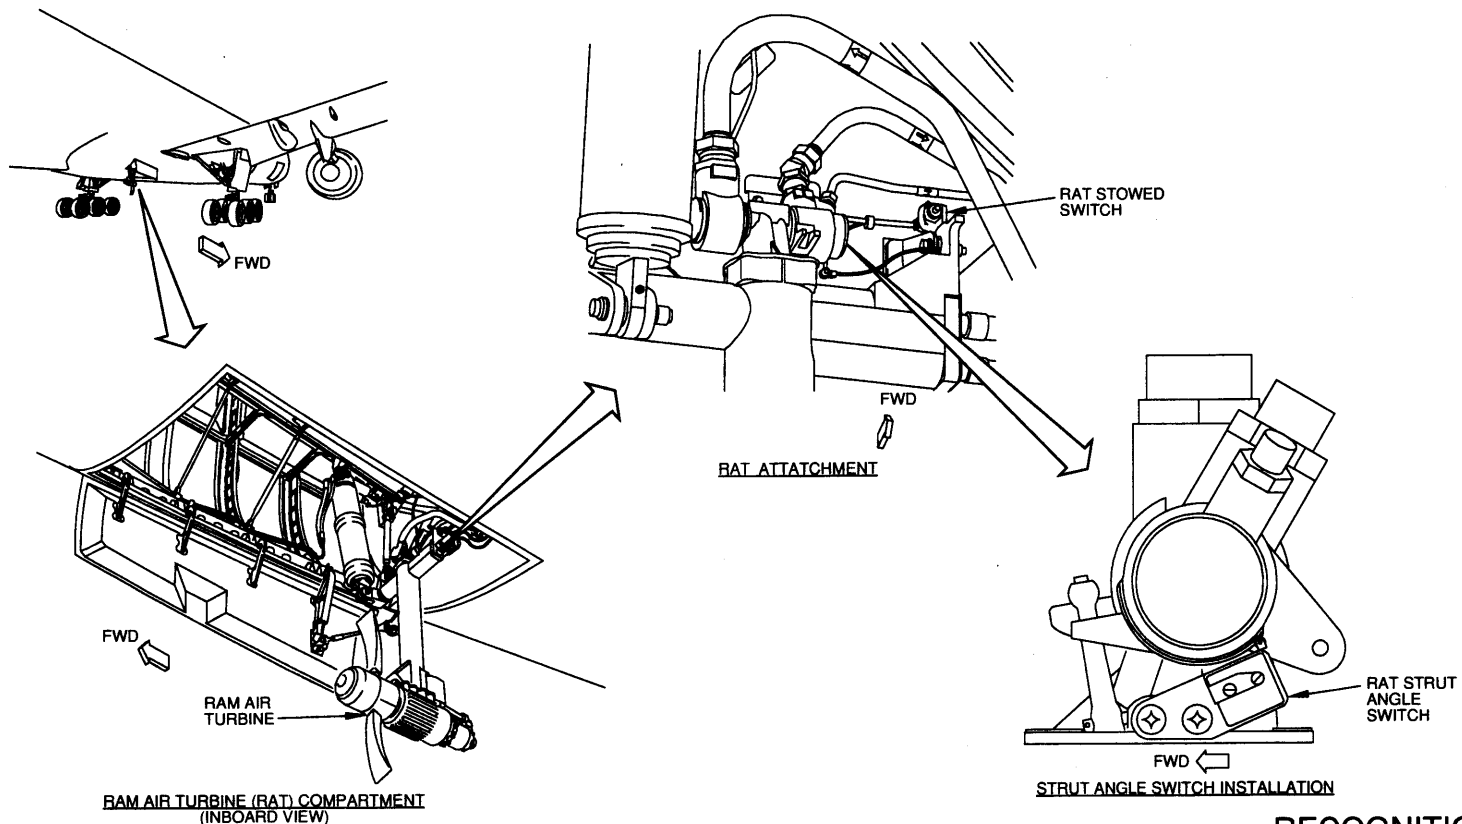

COMPONENT LOCATOR GUIDE

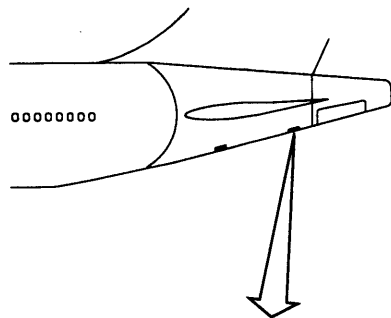

CENTER SYSTEM
ACCUMULATOR

LEFT SYSTEM
ACCUMULATORS

HYDRAULIC ACCUMULATOR
INSTALLATION

RIGHT SYSTEM HYDRAULIC
ACCUMULATOR



LEFT ACCUMULATOR
GAUGE

CENTER ACCUMULATOR
GAUGE


RIGHT ACCUMULATOR
GAUGE

FILL PORTS


HYDRAULIC ACCUMULATOR
SERVICE PANEL
(LOOKING FORWARD)

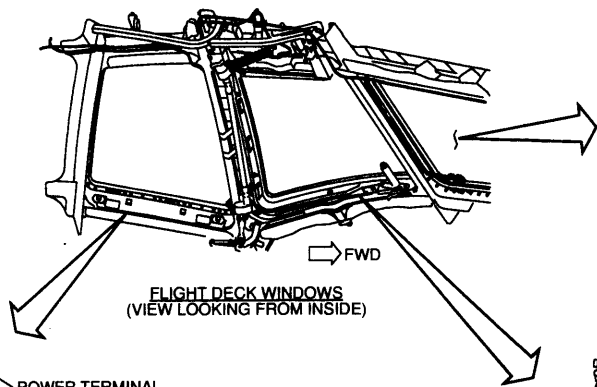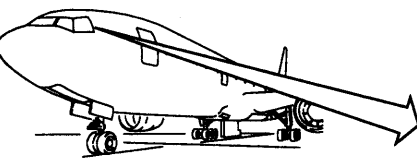


FLIGHT DECK WINDOWS
(VIEW LOOKING FROM INSIDE)

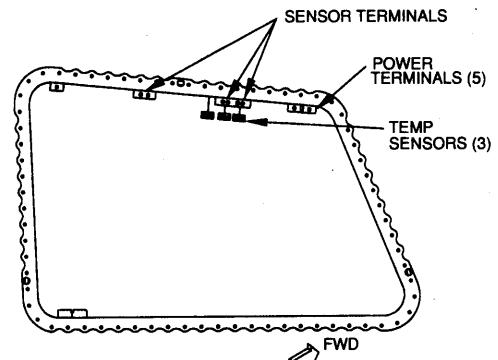

WINDOW NO. 1 - LEFT

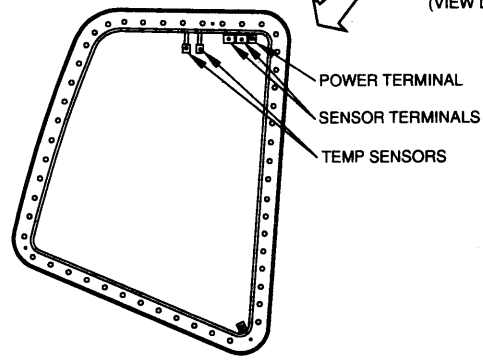


WINDOW NO. 3 - LEFT

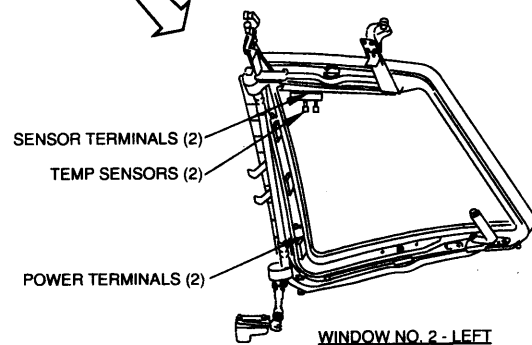



WINDOW NO. 2 - LEFT



NOTE: RIGHT WINDOWS SIMILAR

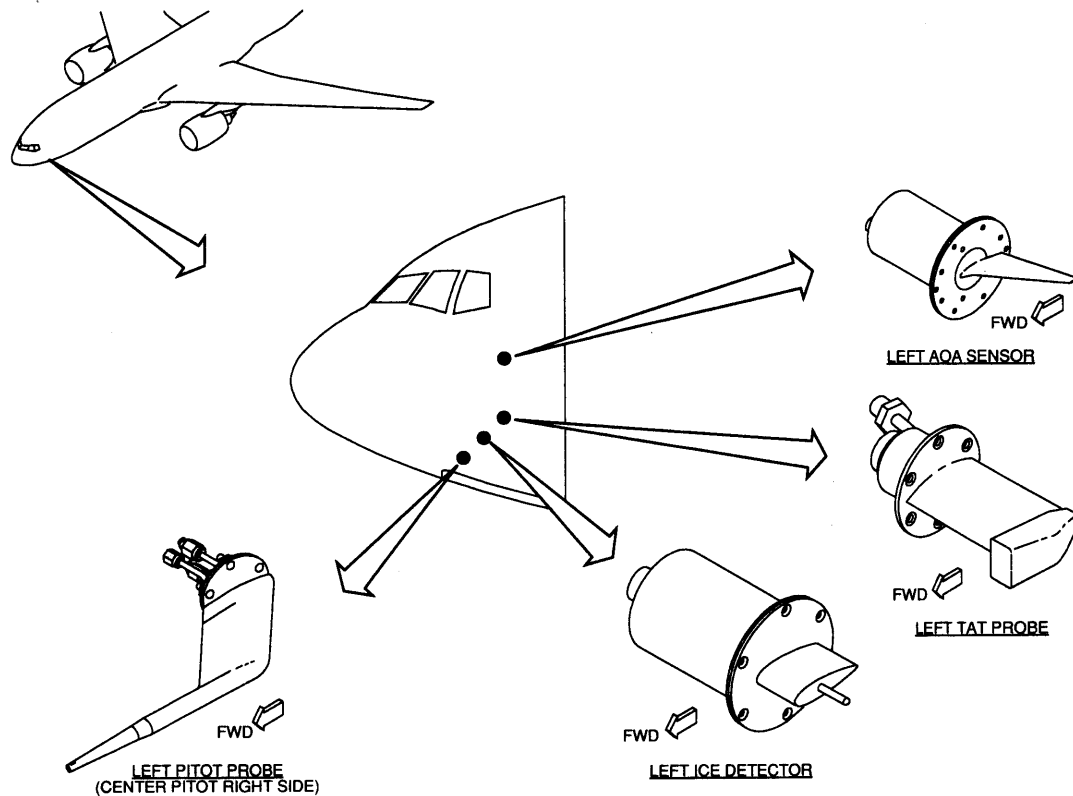


NOTE: RIGHT SIDE SIMILAR

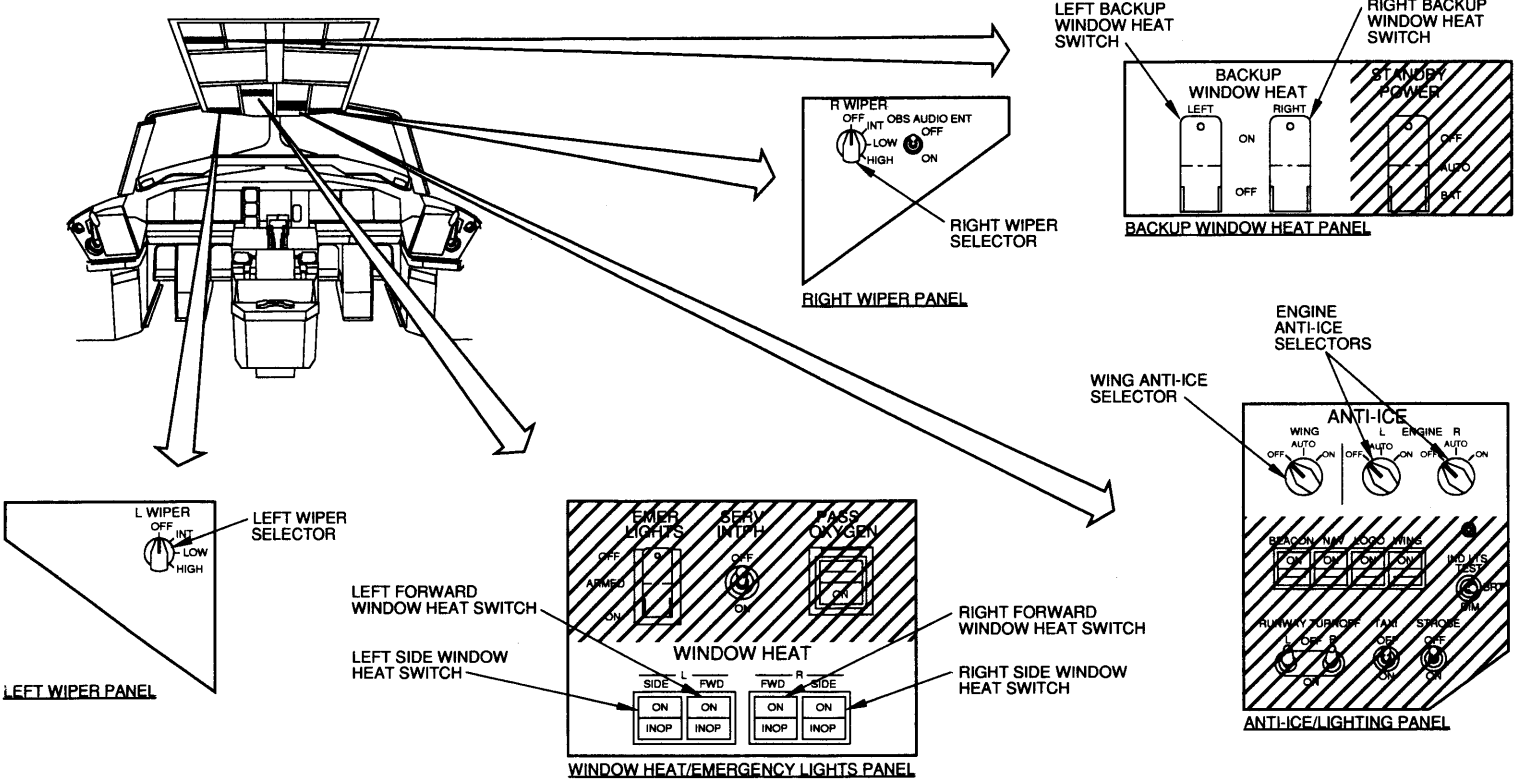

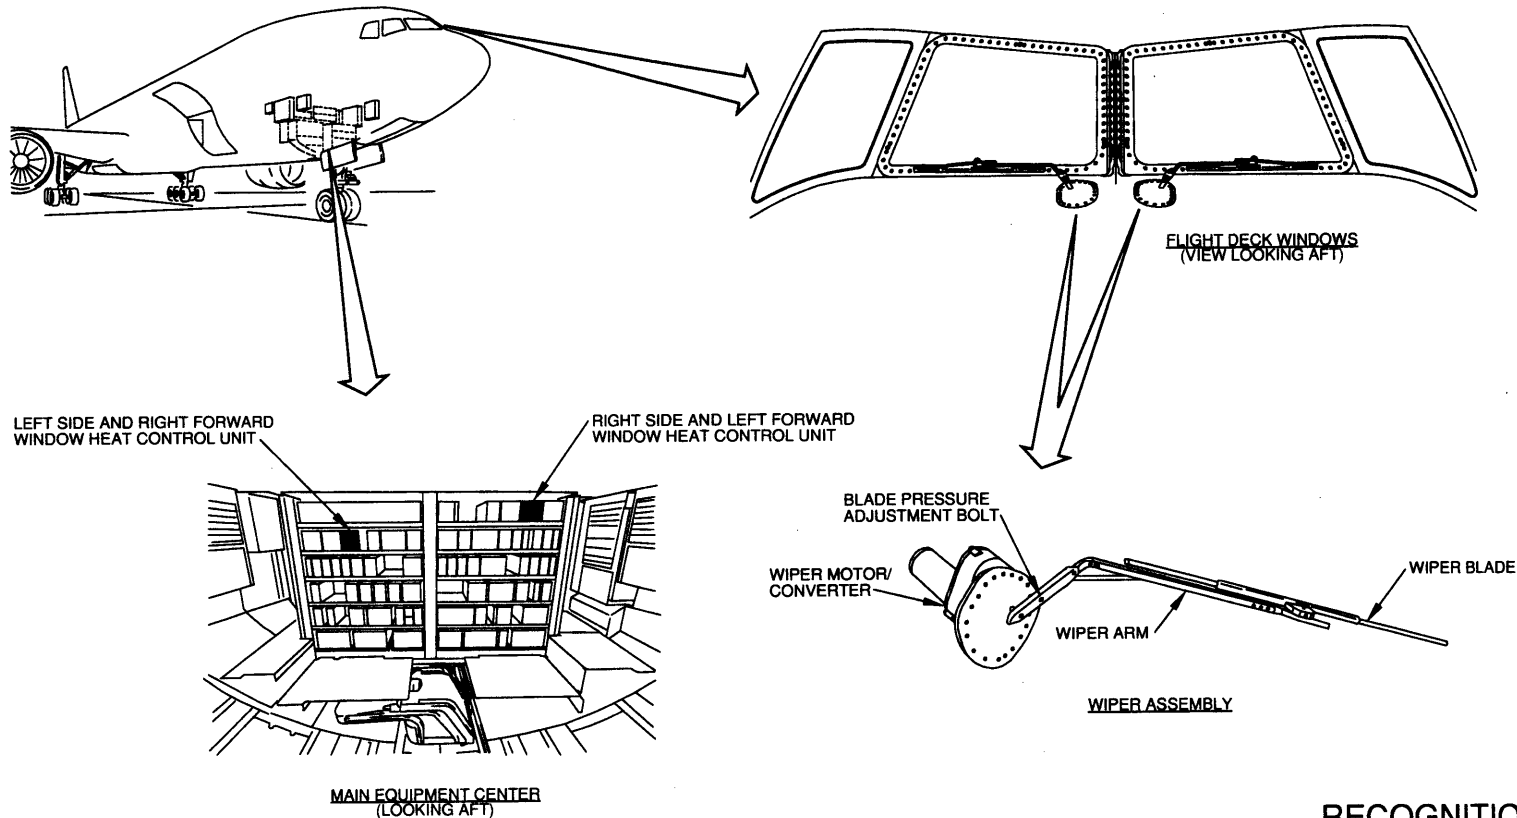

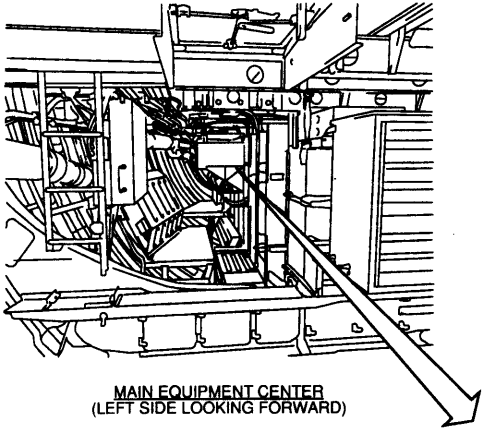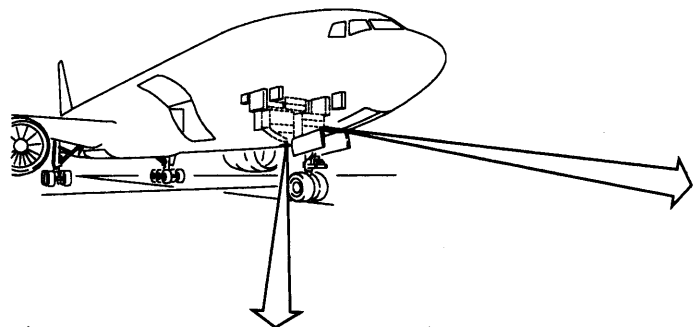

**MAIN EQUIPMENT CENTER
(LEFT SIDE LOOKING FORWARD)**

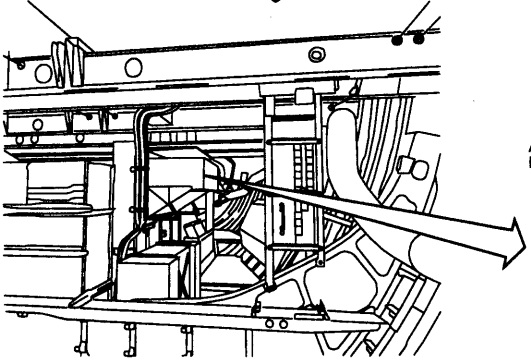

**MAIN EQUIPMENT CENTER
(RIGHT SIDE LOOKING FORWARD)**

**ACIPS CONTROL CARD -
EAI (RIGHT ACIPS CARD)**

**ACIPS CONTROL CARD
WAI (CENTER ACIPS CARD)**


**ACIPS CONTROL CARD -
EAI (LEFT ACIPS CARD)**


1	PSU - PRE-REGULATOR CARD
2	PSU - LINE/AMMONITOR CARD
3	CENTER HYDRA CARD CH1
4	RIGHT FLOOD CARD
5	RIGHT ACIPS CARD
6	CENTER ACIPS CARD
7	CENTER FLOOD CARD
8	SPARE
9	RIGHT ENGINE PRESENT SET CARD
10	SPARE
11	LEFT ANAC SIGNAL GATEWAY CARD
12	RIGHT EIS CARD
13	RIGHT ANAC SIGNAL GATEWAY CARD
14	RIGHT WEIGHT ON WHEELS CARD
15	RIGHT HYDRA CARD CH1
16	PSU - LINE/AMMONITOR CARD
17	PSU - PRE-REGULATOR CARD


RIGHT SYSTEMS CARD FILE (P84)




1	PSU - PRE-REGULATOR CARD
2	PSU - LINE/AMMONITOR CARD
3	CENTER HYDRA CARD CH2
4	LEFT FLOOD CARD
5	LEFT ACIPS CARD
6	SPARE
7	LEFT ENGINE PRESENT SET CARD
8	SPARE
9	LEFT ANAC SIGNAL GATEWAY CARD
10	LEFT EIS CARD
11	LEFT ANAC SIGNAL GATEWAY CARD
12	LEFT WEIGHT ON WHEELS CARD
13	LEFT HYDRA CARD CH1
14	PSU - LINE/AMMONITOR CARD
15	PSU - PRE-REGULATOR CARD

LEFT SYSTEMS CARD FILE (P85)


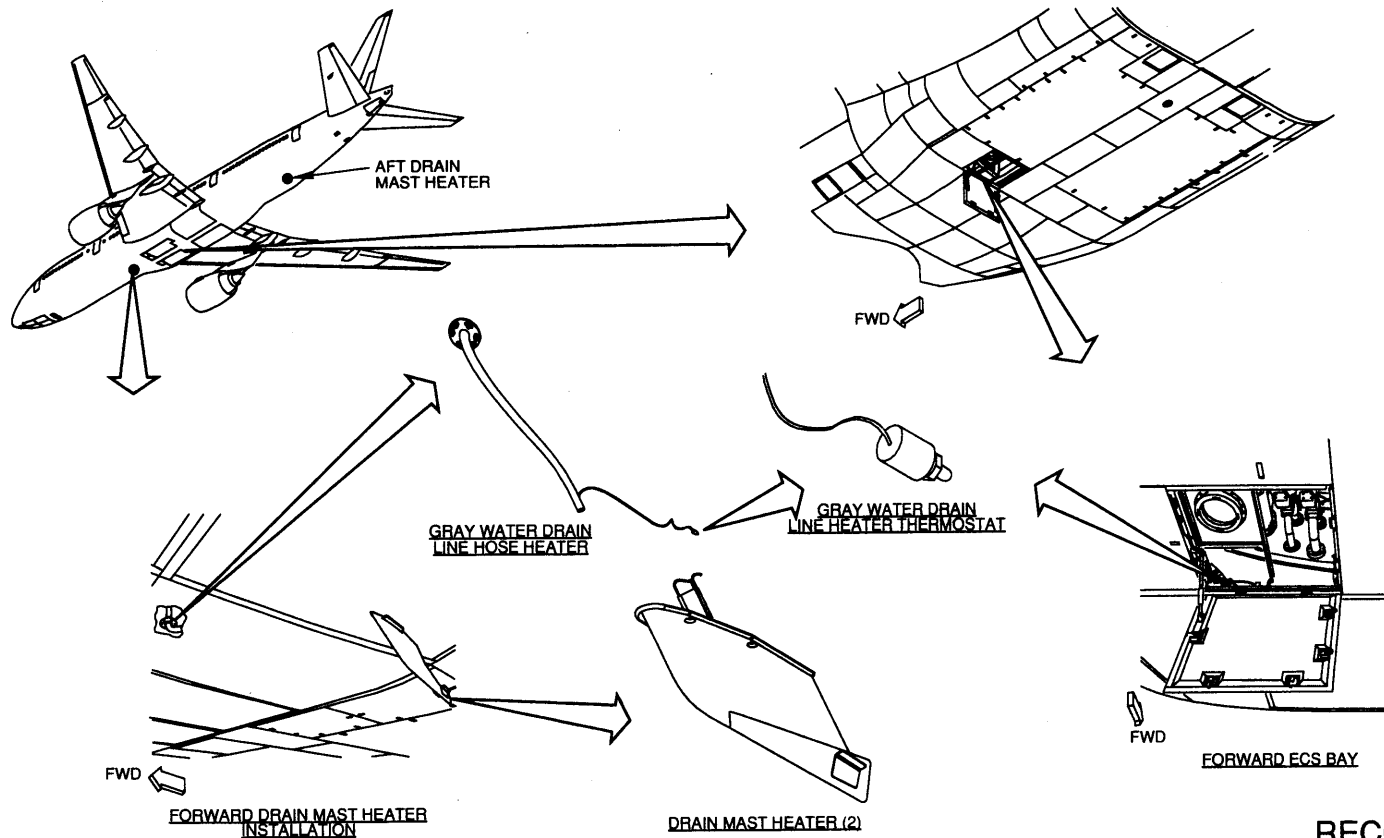


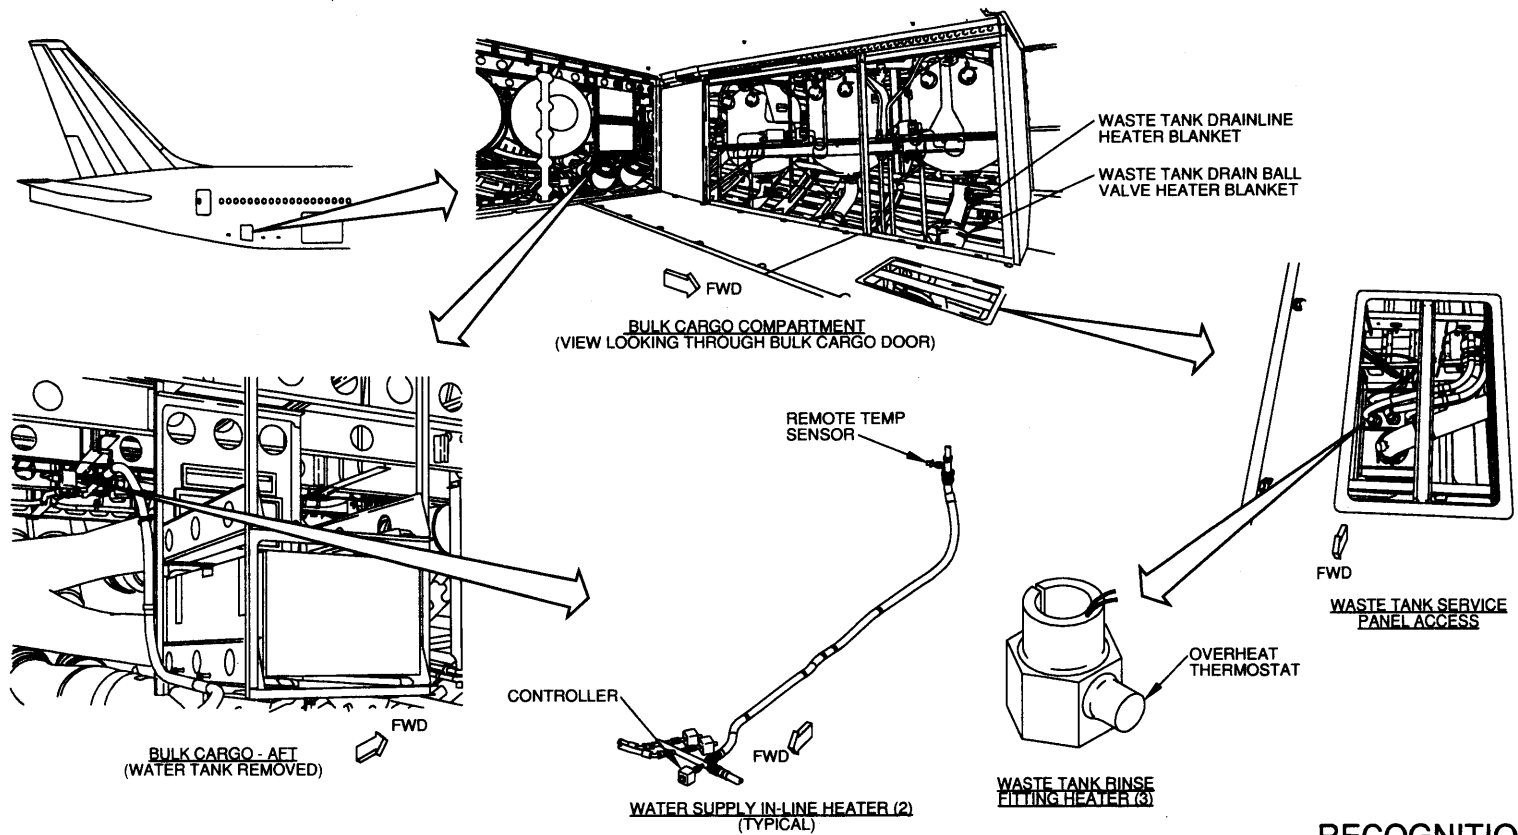

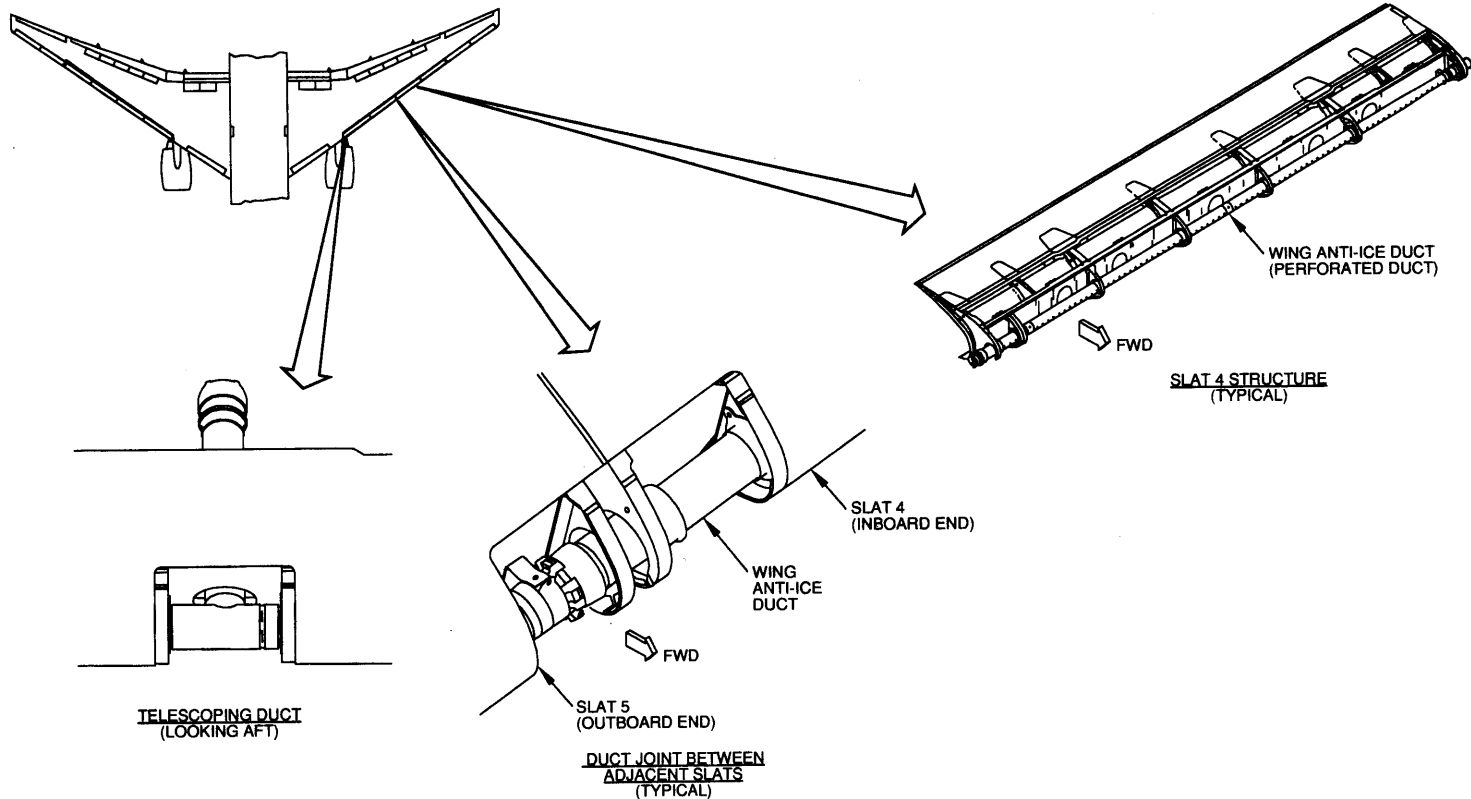


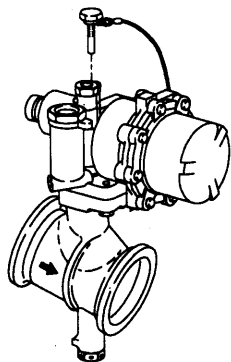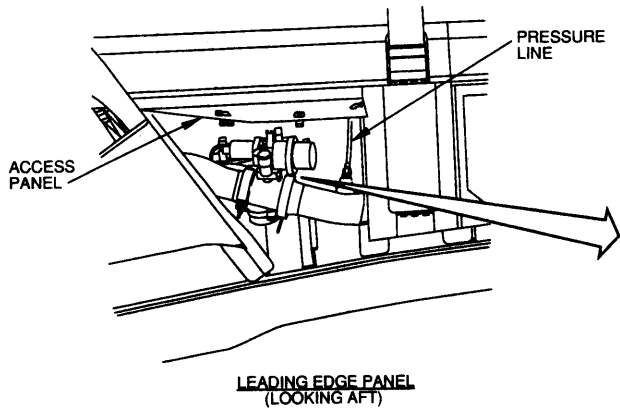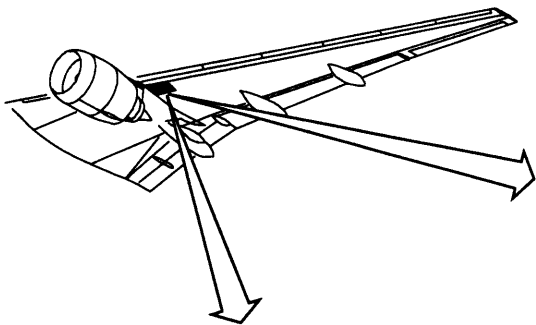



WING ANTI-ICE VALVE

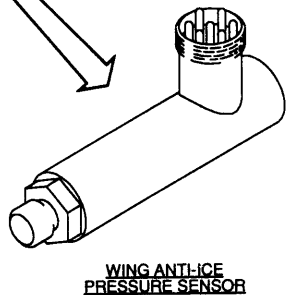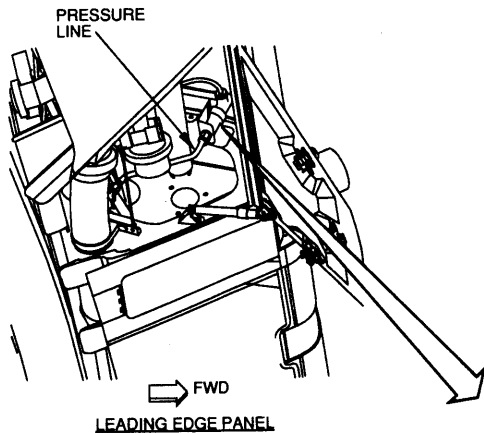

WING ANTI-ICE
PRESSURE SENSOR

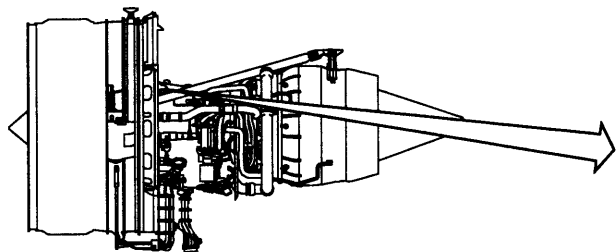


ENGINE ANTI-ICE
PRESSURE SENSOR (2)

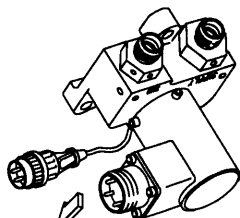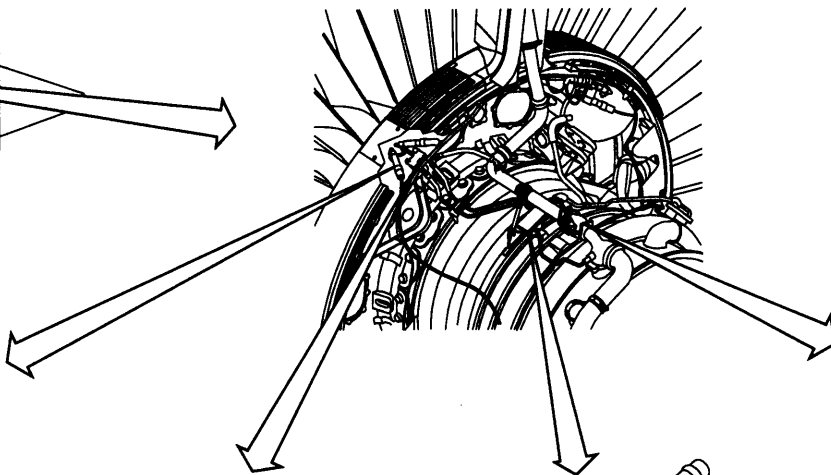


FWD

ENGINE ANTI-ICE
VALVE CONTROLLER

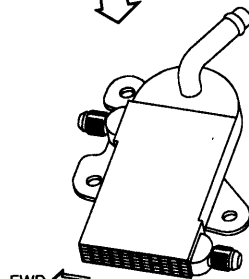


FWD

CONTROLLER AIR COOLER


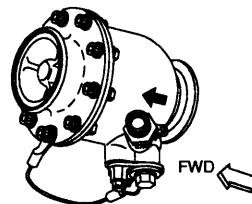


FWD


ENGINE ANTI-ICE VALVE

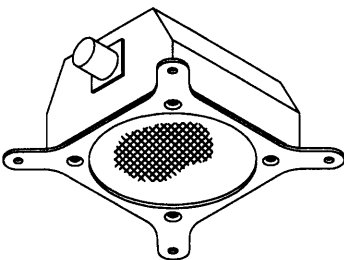


AURAL WARNING SPEAKER (2)

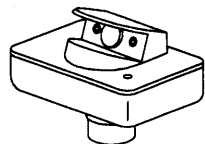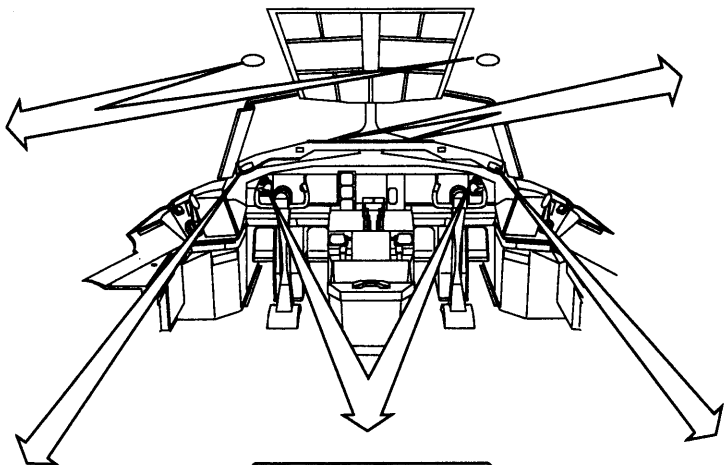


REMOTE LIGHT SENSOR (2)

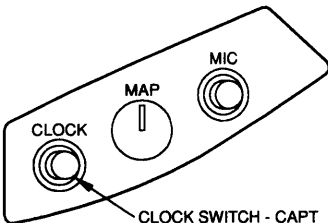





CLOCK SWITCH - CAPT

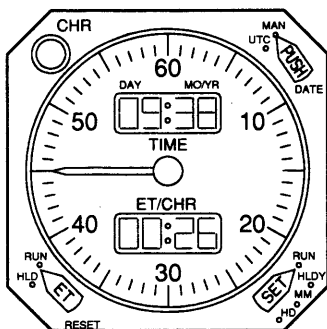


CLOCK (2)

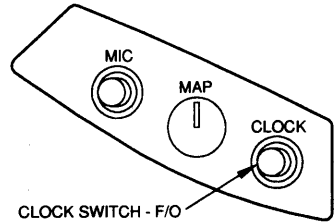





CLOCK SWITCH - F/O

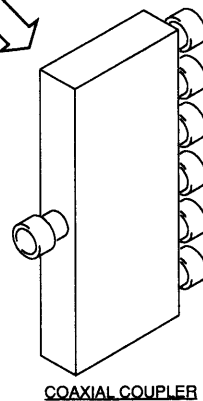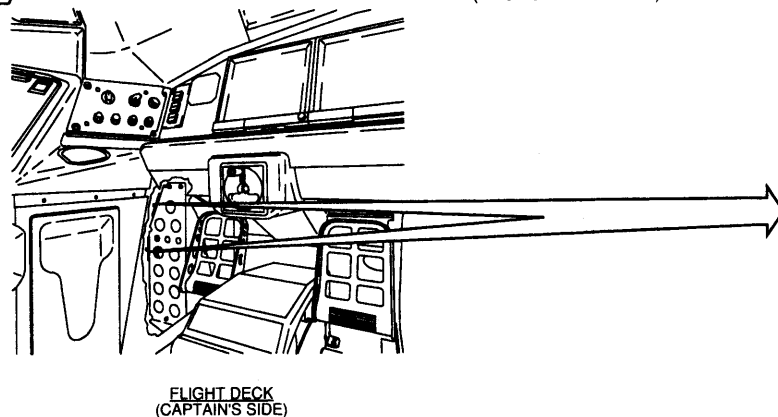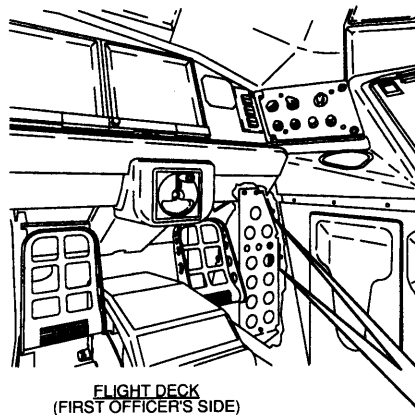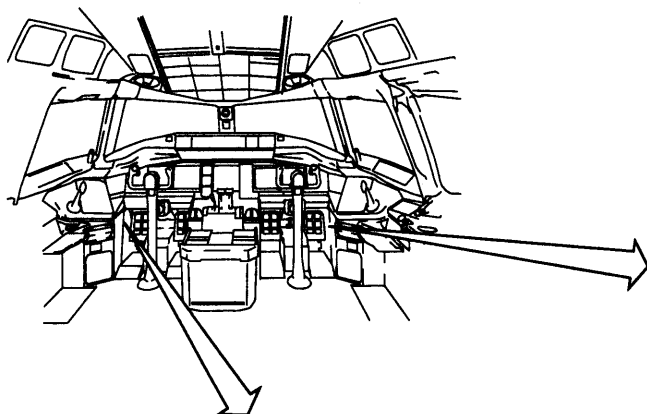

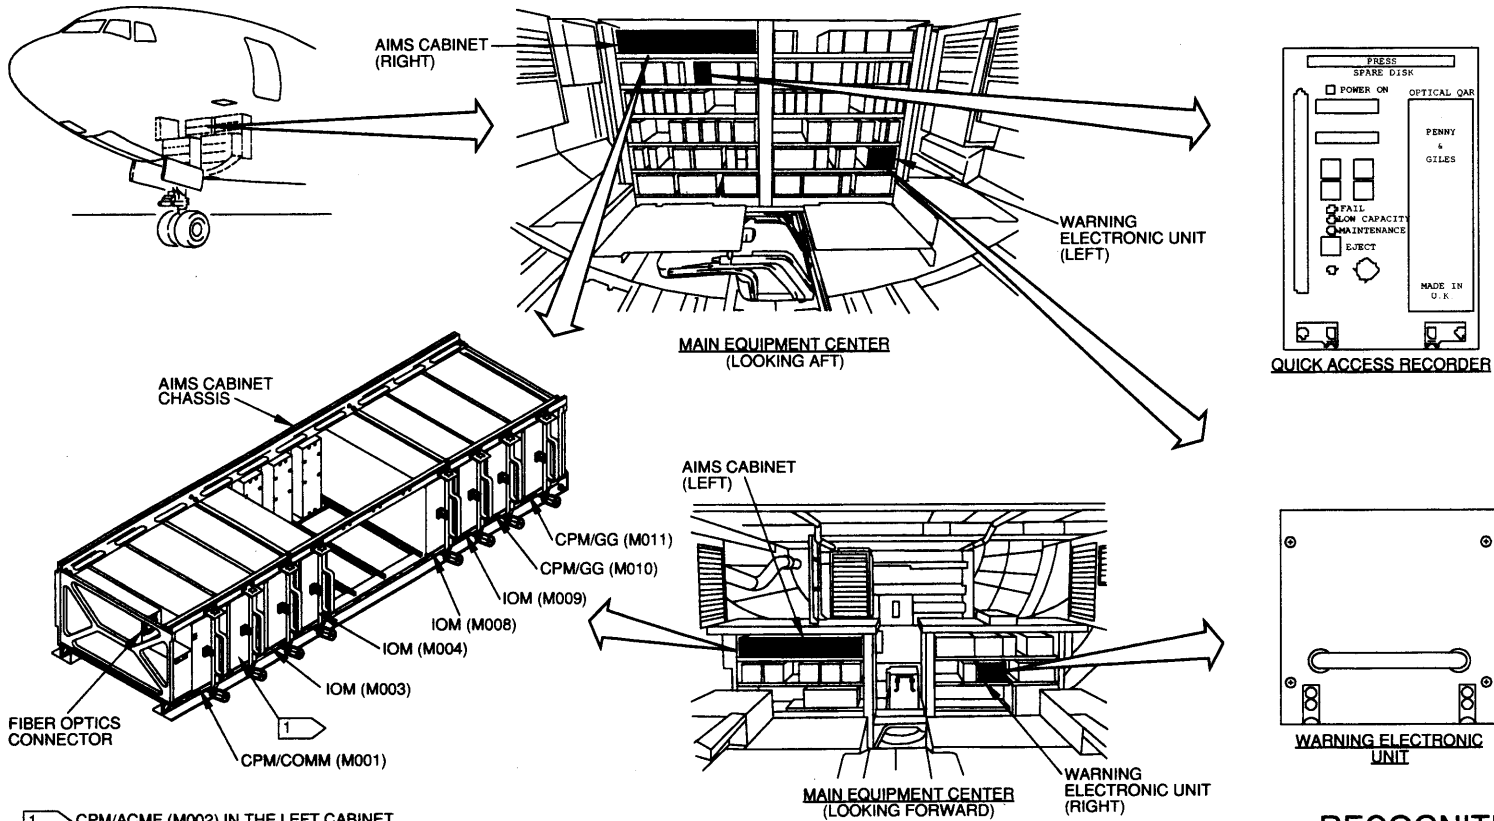

1 CPM/ACMF (M002) IN THE LEFT CABINET
CPM/BASIC (M002) IN THE RIGHT CABINET

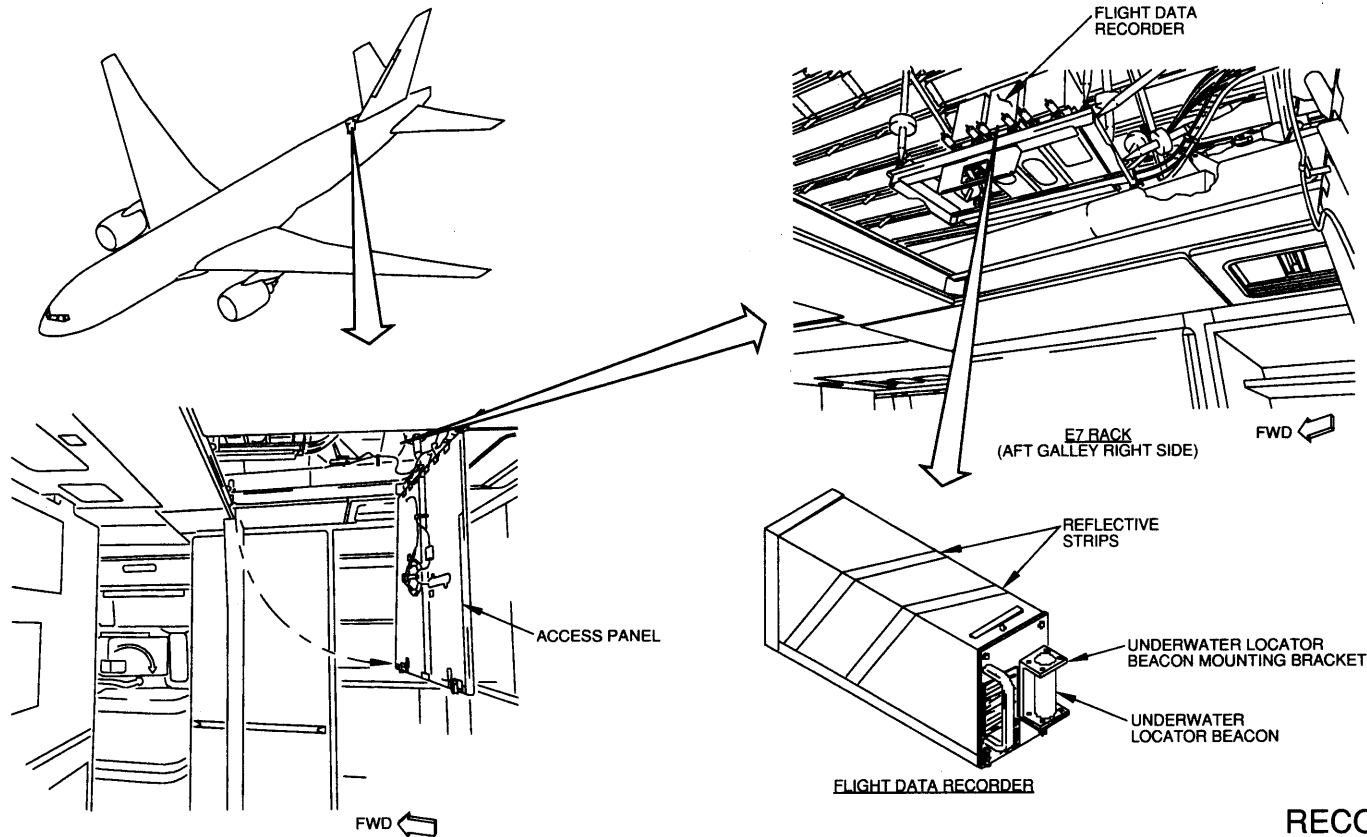

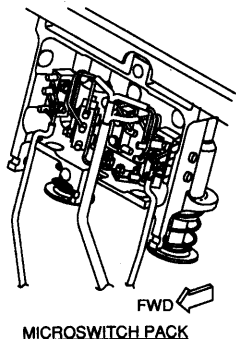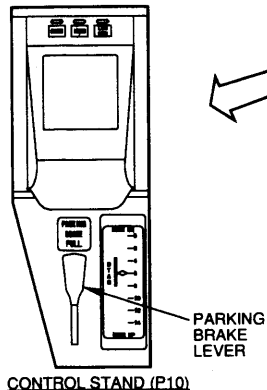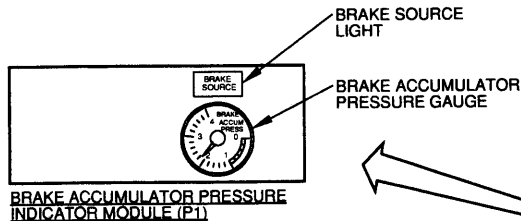

FWD


FWD

THROTTLE ASSEMBLY

NLG STEERING
TILLER AND
GEARBOX (2)



LANDING GEAR
LEVER

AUTOBRAKE
SELECTOR

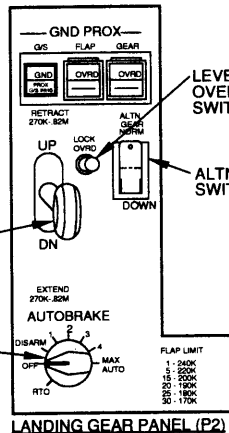


LEVER LOCK
OVERRIDE
SWITCH


ALTN GEAR
SWITCH

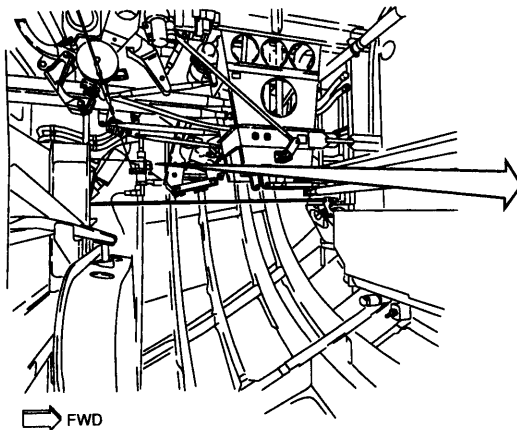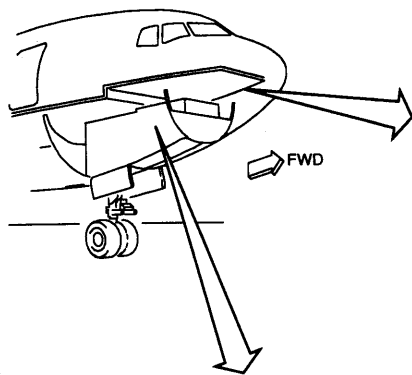


FORWARD EQUIPMENT CENTER

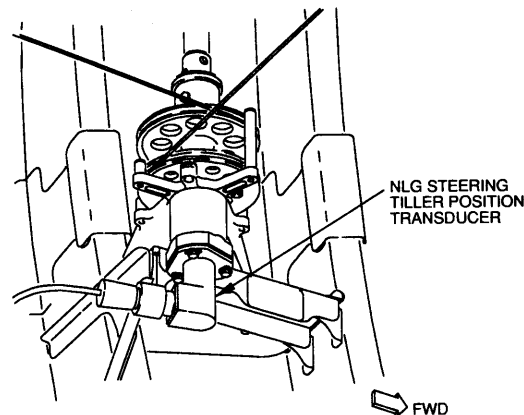


NLG STEERING DRUM MECHANISM
(CAPTAIN SHOWN - FIRST OFFICER SIMILAR)

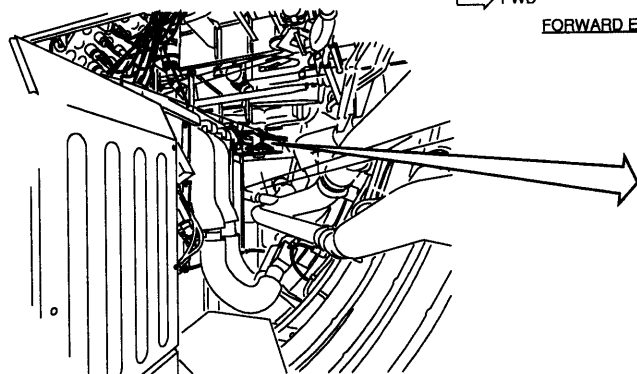


FORWARD EQUIPMENT CENTER
(RIGHT SIDE LOOKING FORWARD)




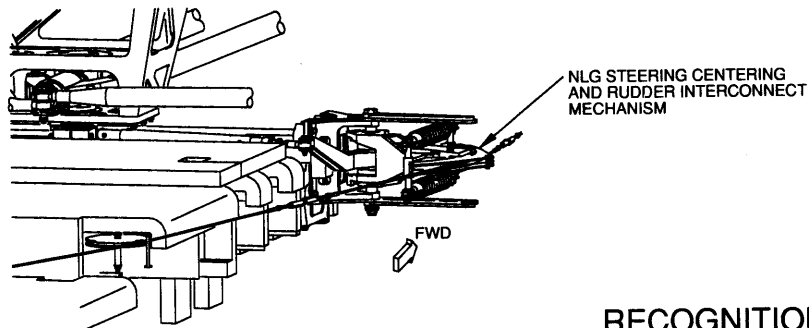


NLG STEERING CENTERING
AND RUDDER INTERCONNECT
MECHANISM

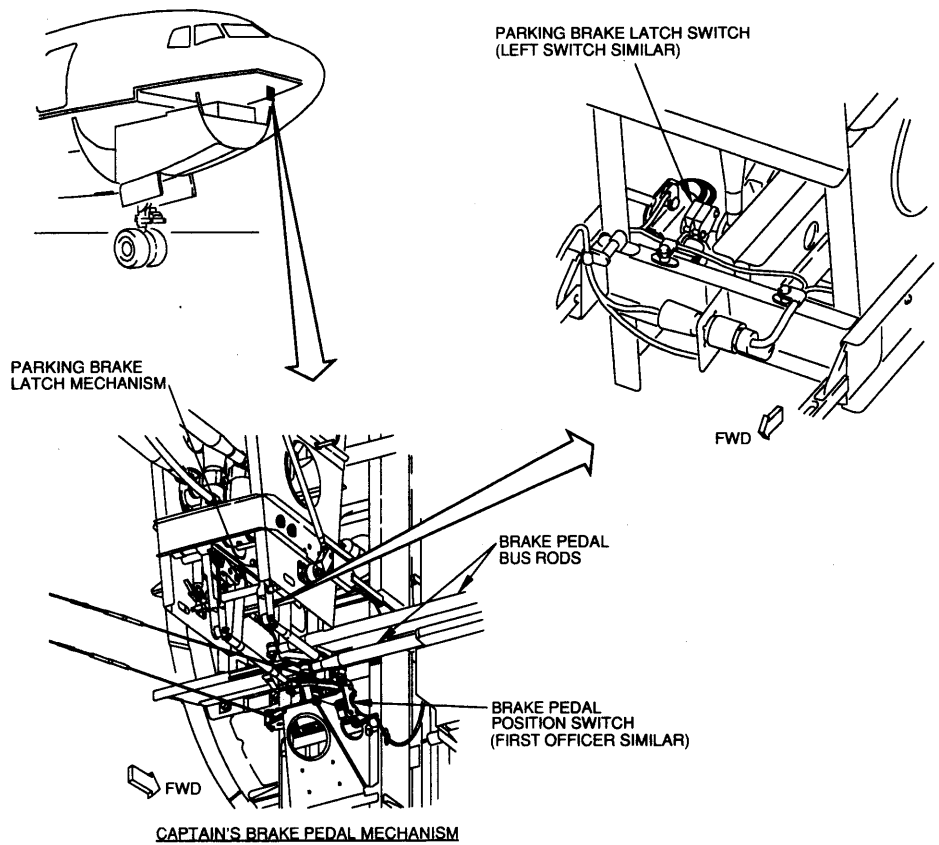


COMPONENT LOCATOR GUIDE





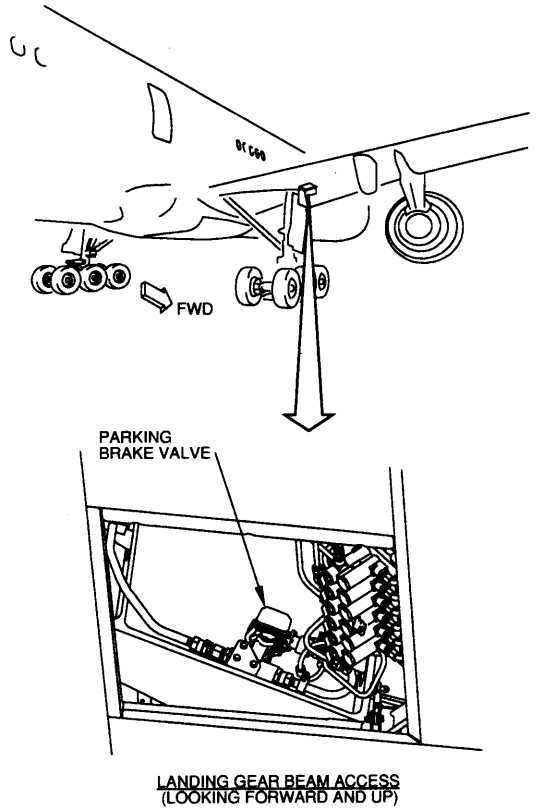


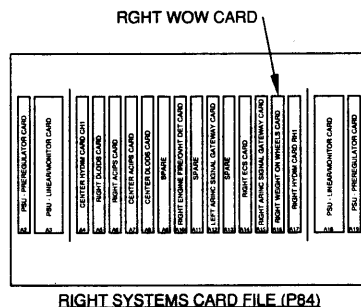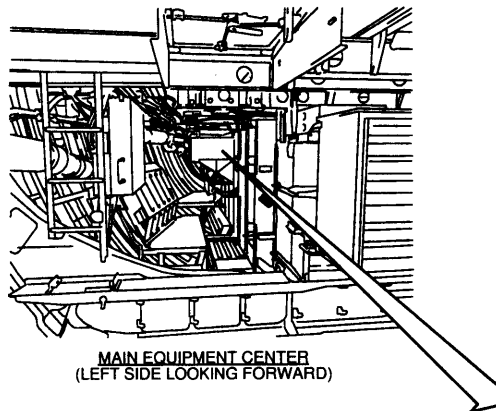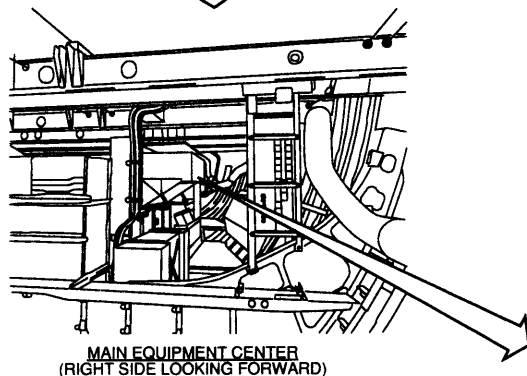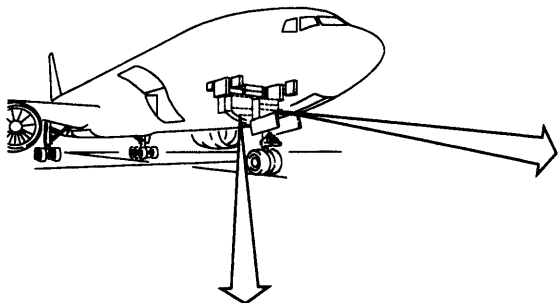


RIGHT SYSTEMS CARD FILE (P84)

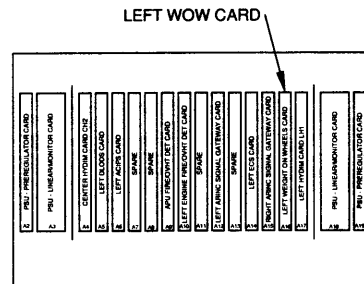


LEFT SYSTEMS CARD FILE (P85)

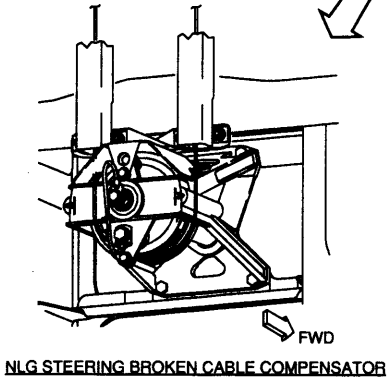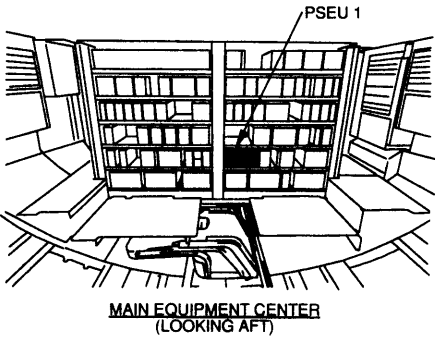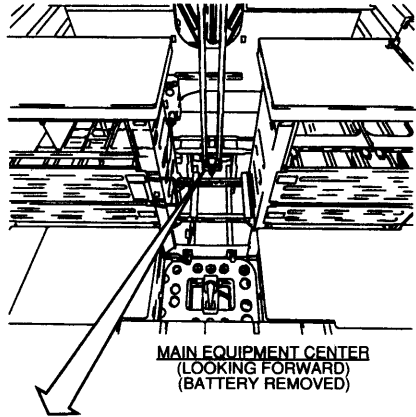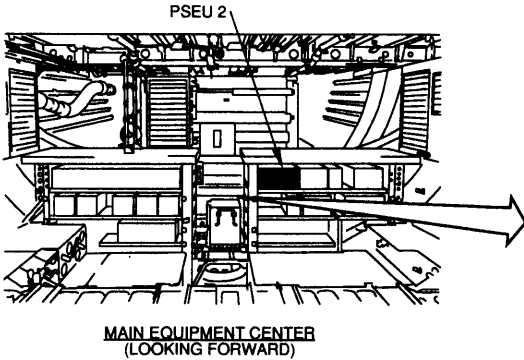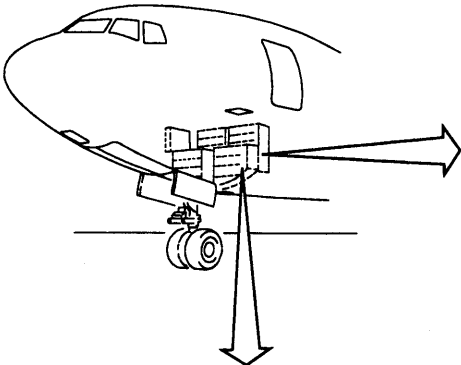

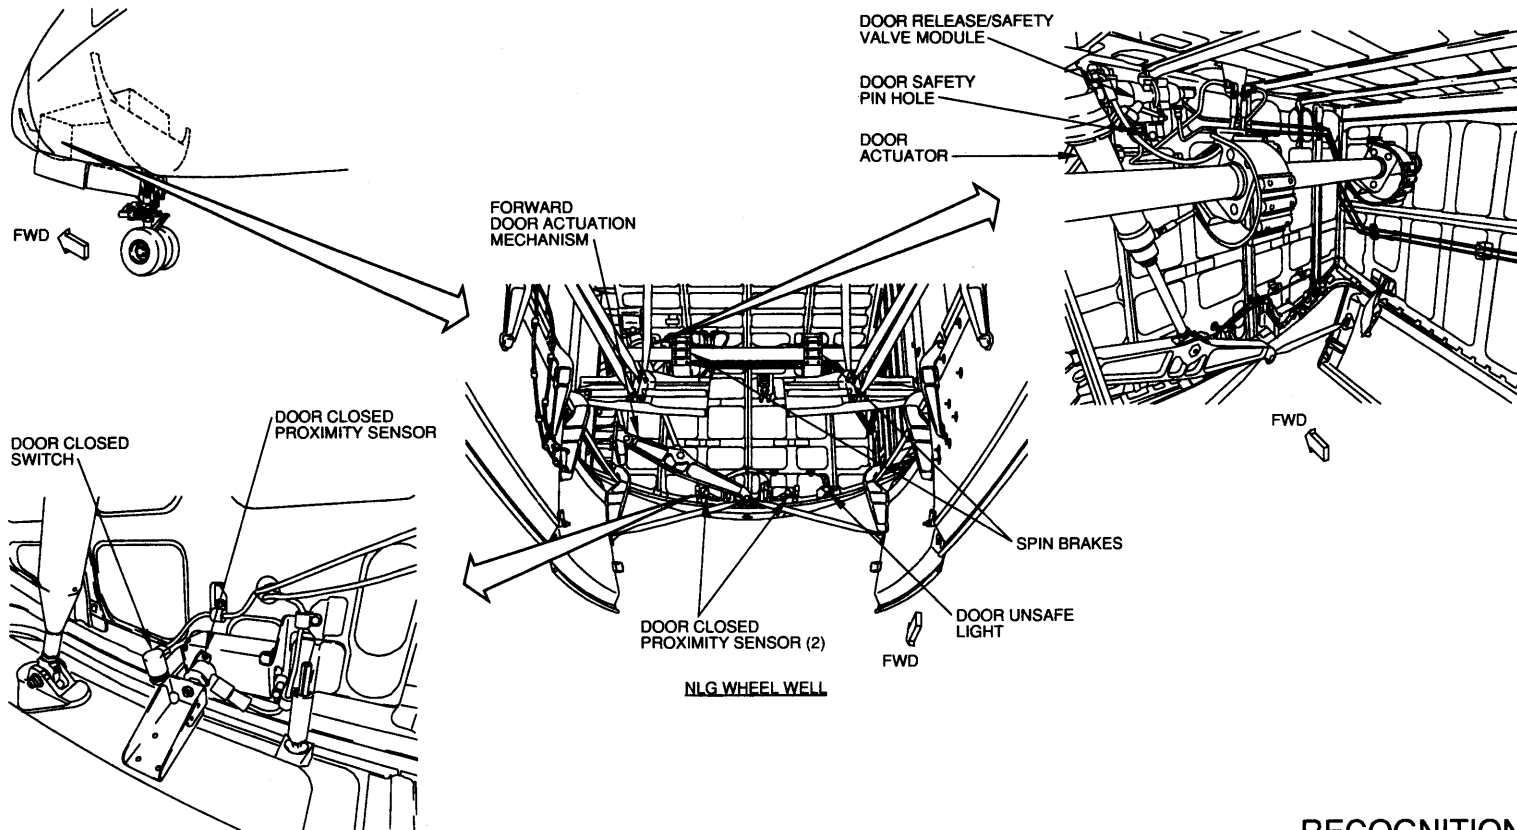


ALTERNATE EXTEND
HYDRAULIC PRESSURE SWITCH

ALTERNATE UPLOCK
RELEASE ACTUATOR

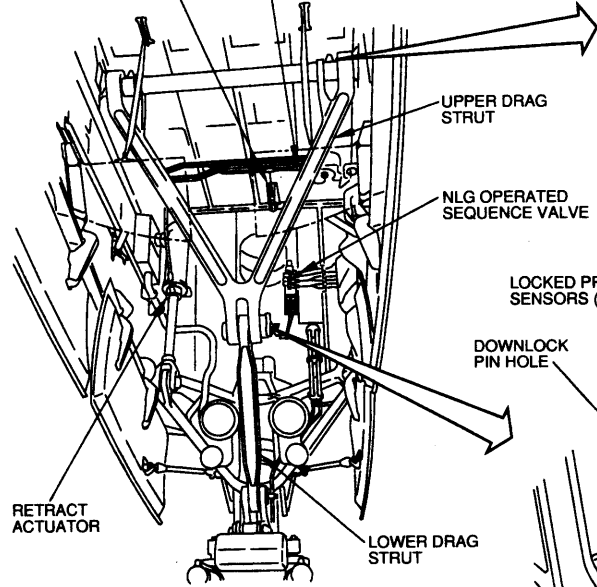


NOSE LANDING GEAR
(LOOKING FORWARD)


UP SENSOR (2)
(RIGHT SIDE
SIMILAR)

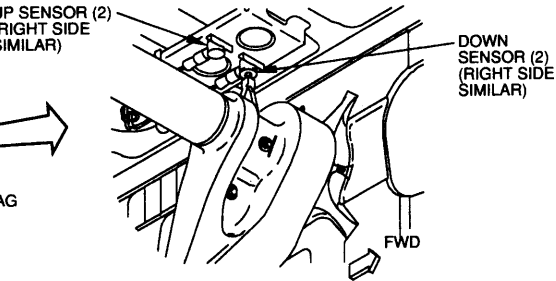


LOCK SPRINGS
LOCKED PROXIMITY
SENSORS (2)

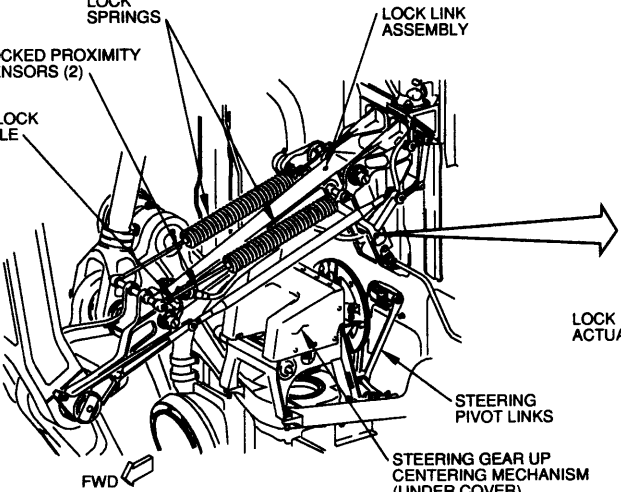



NLG DOWN LOCK ASSEMBLY

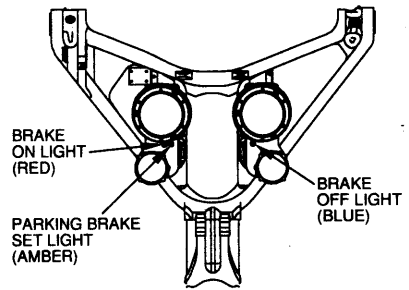



BRAKE SYSTEM STATUS LIGHTS

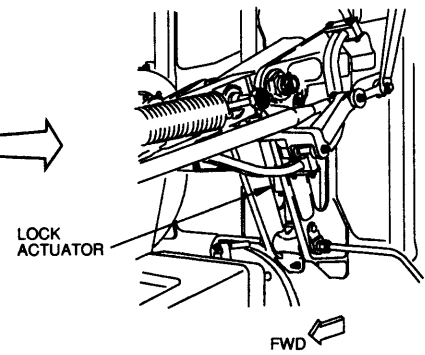



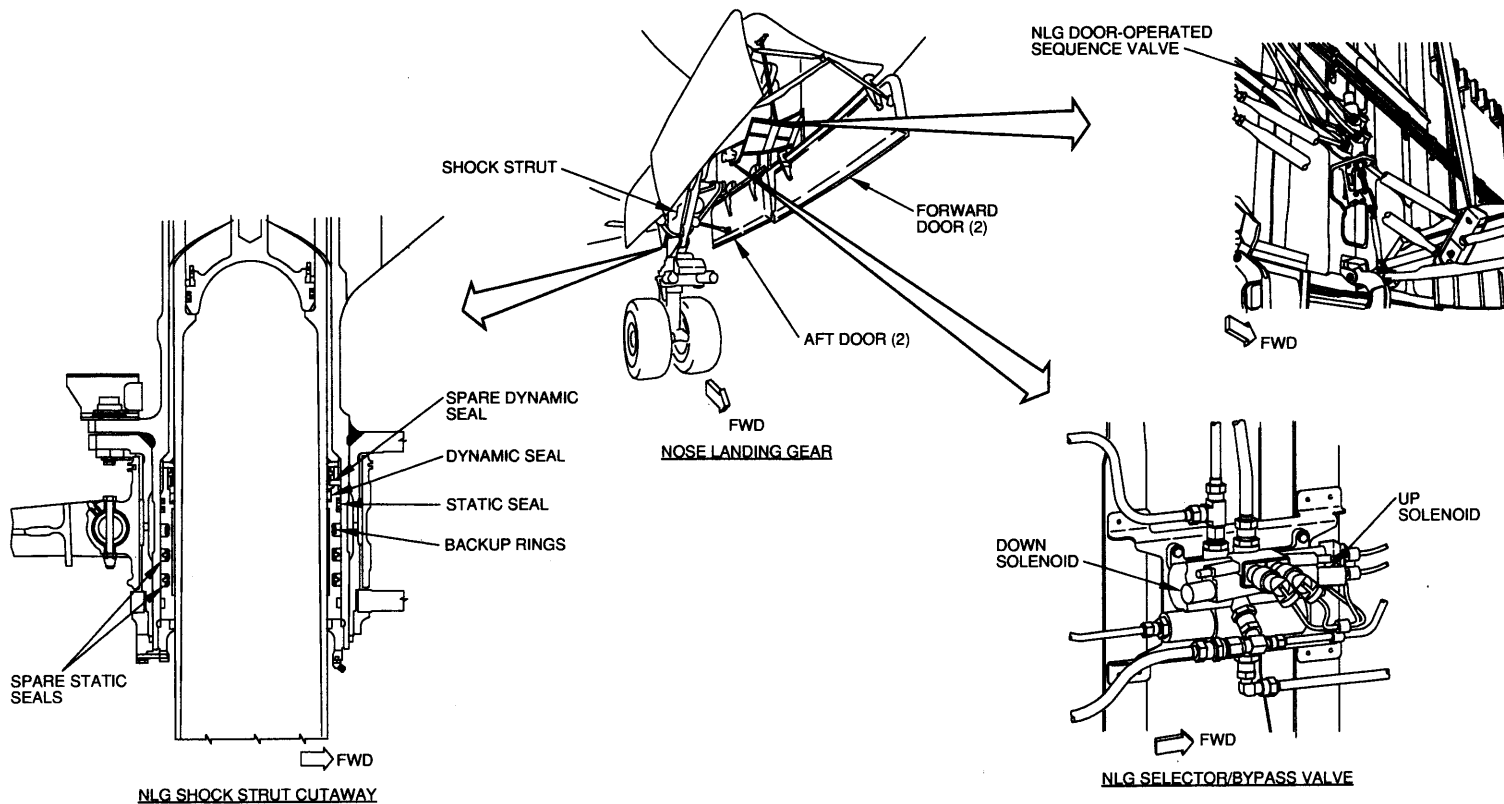


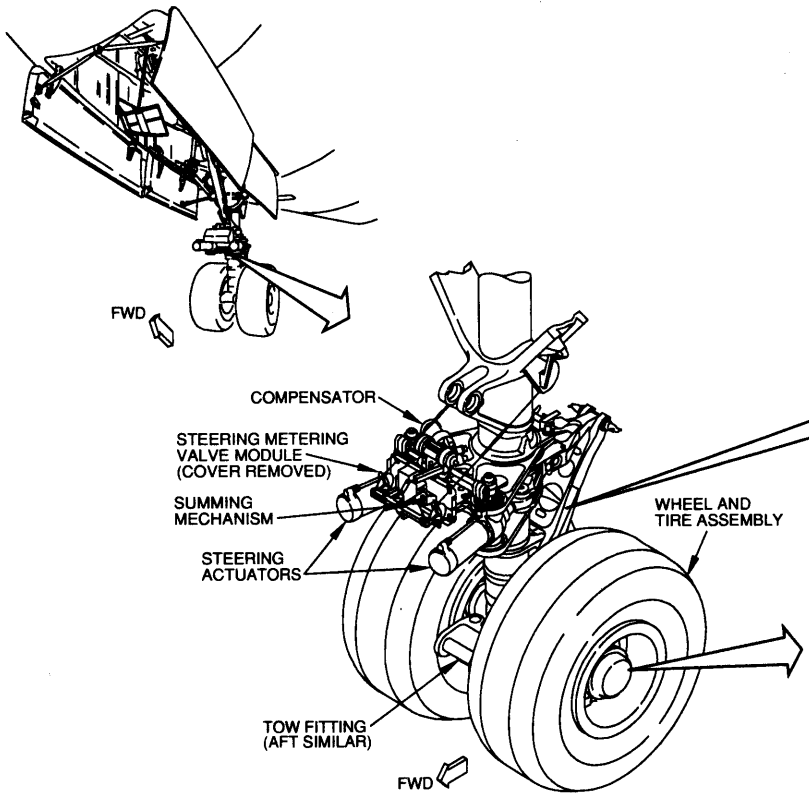

NOSE LANDING GEAR

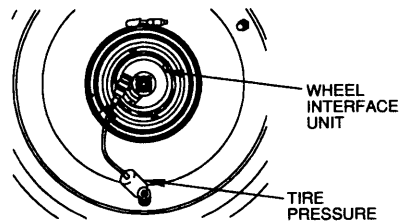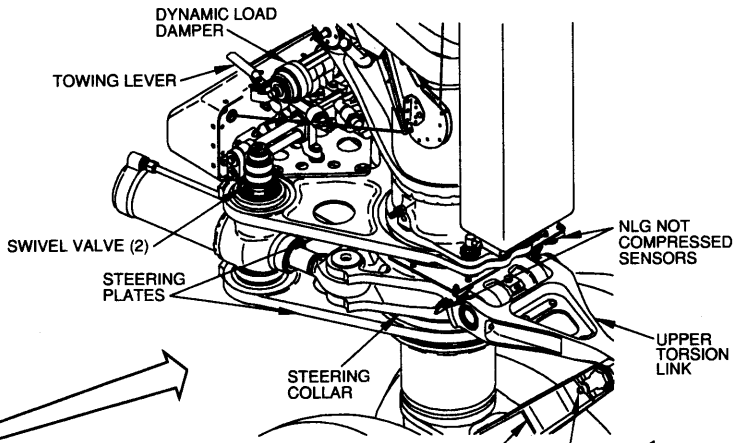

NOSE GEAR WHEEL (2)
(HUBCAP REMOVED)

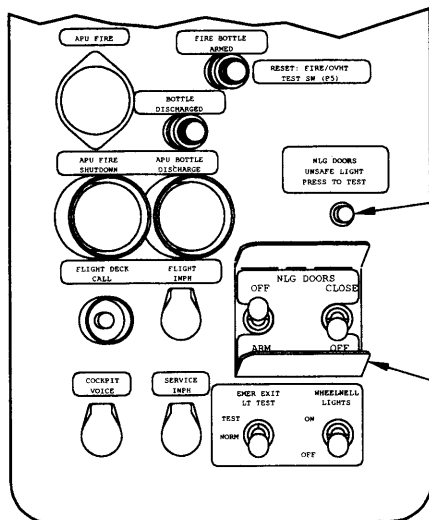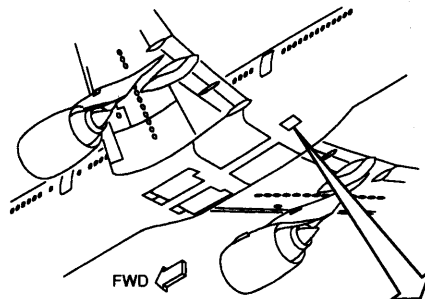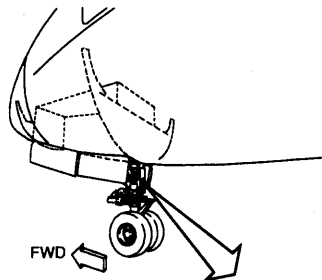

P40 PANEL


NLG DOORS UNSAFE LIGHT SWITCH (PTT)

NLG DOORS ARM AND DOORS CLOSE SWITCH






ARM DOORS SWITCH


MLG DOORS UNSAFE LIGHT SWITCH (PTT)

ALL DOORS OPEN/MLG DOORS CLOSE SWITCH

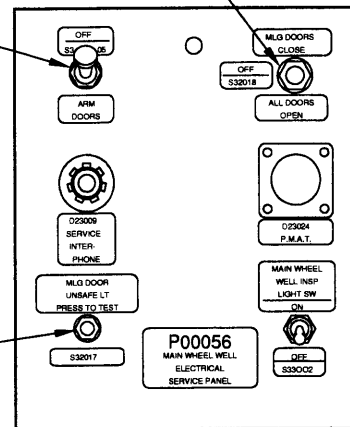


P56 PANEL

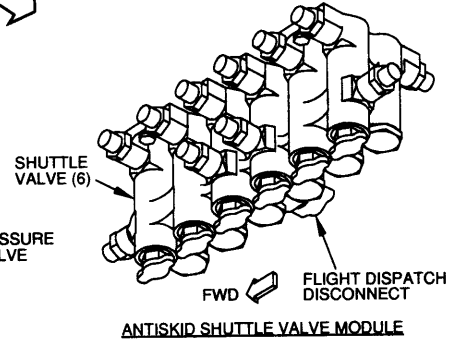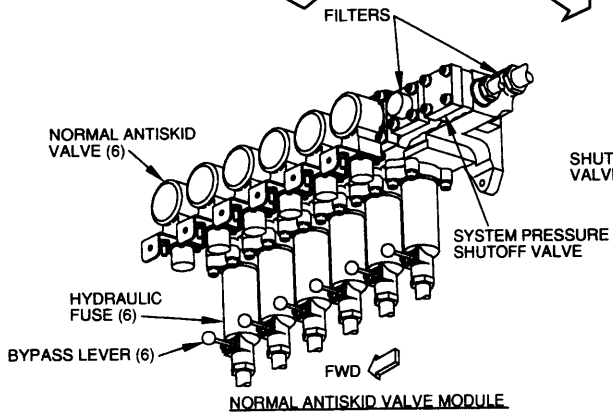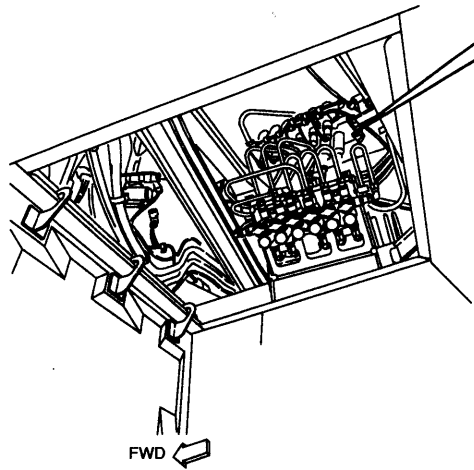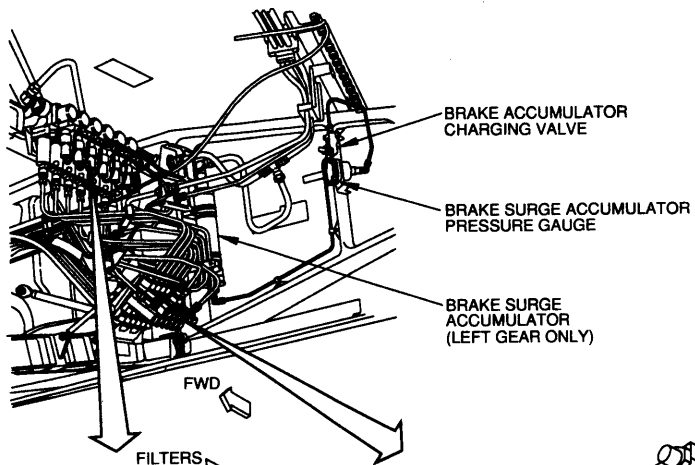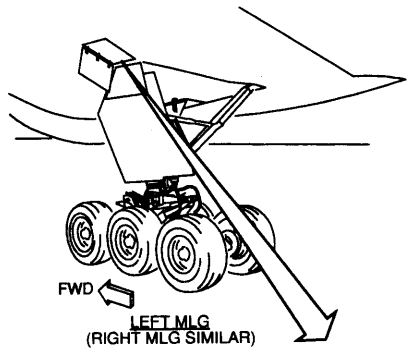

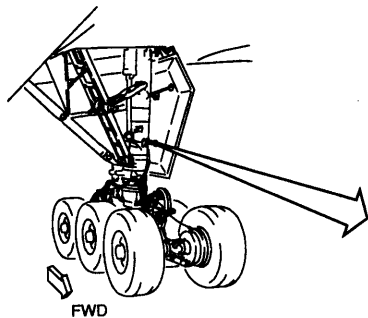

FWD

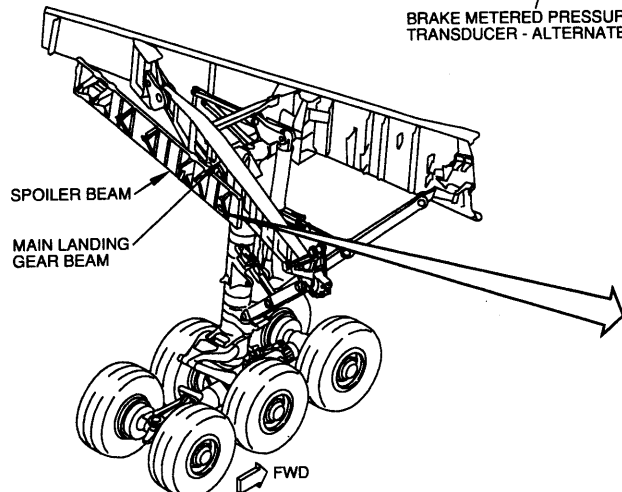


SPOILER BEAM

MAIN LANDING GEAR BEAM

FWD


LEFT MAIN LANDING GEAR
(RIGHT MLG SIMILAR)

BRAKE METERED PRESSURE
TRANSDUCER - ALTERNATE

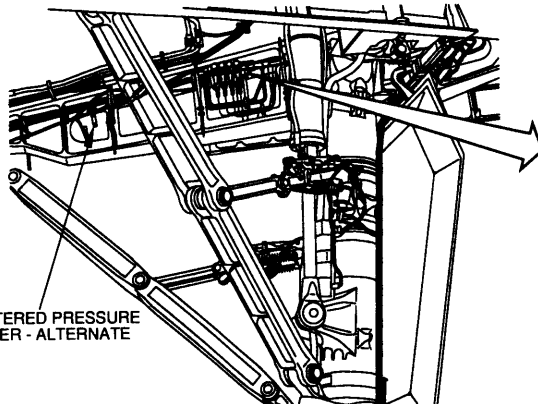


FWD

LEFT MLG
(RIGHT MLG SIMILAR)

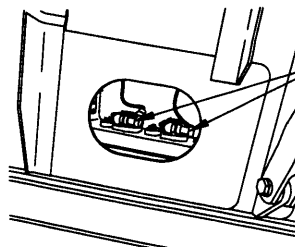

WEIGHT ON WHEELS
LOAD SENSORS (2)

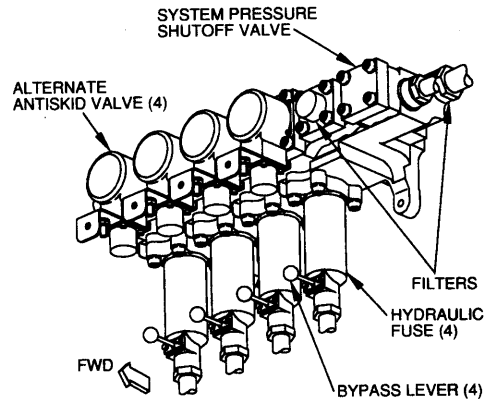

SYSTEM PRESSURE
SHUTOFF VALVE



ALTERNATE
ANTISKID VALVE (4)

FILTERS


HYDRAULIC
FUSE (4)





BYPASS LEVER (4)


ALTERNATE ANTISKID VALVE MODULE




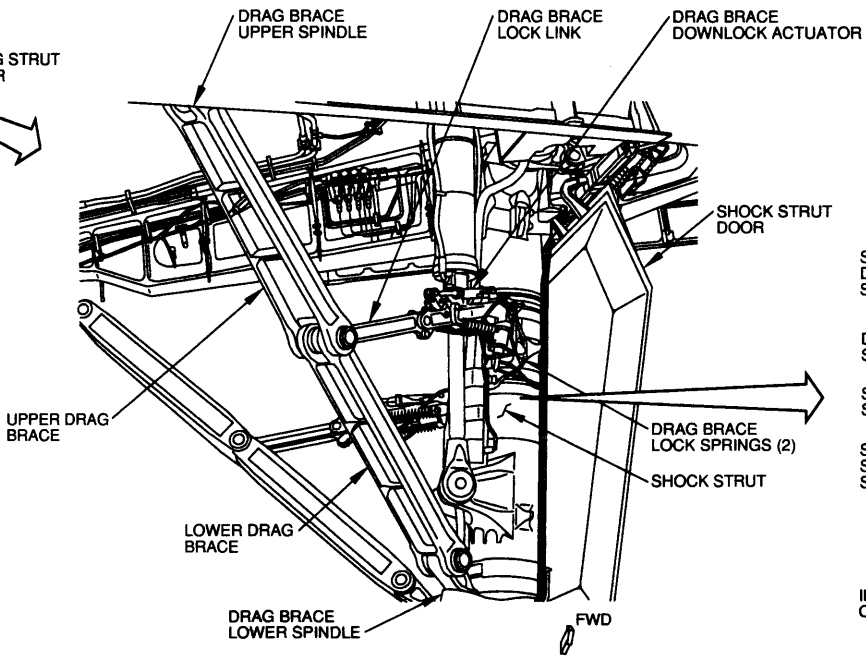
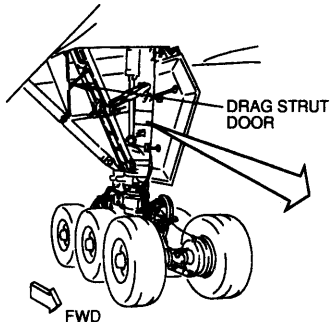




LEFT MLG STRUT INSTALLATION
(RIGHT MLG SIMILAR)



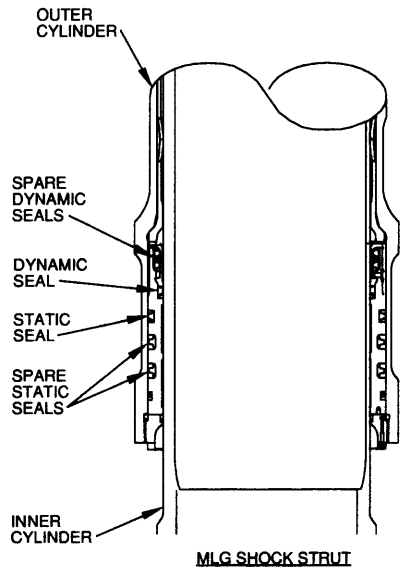


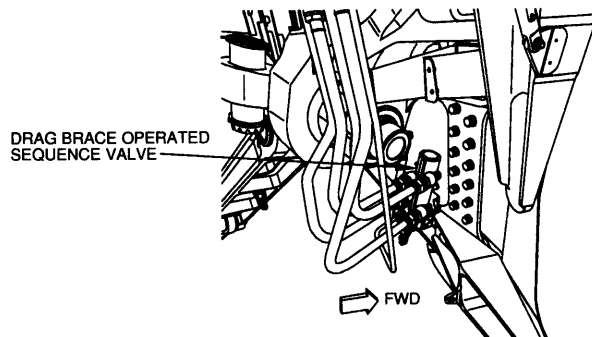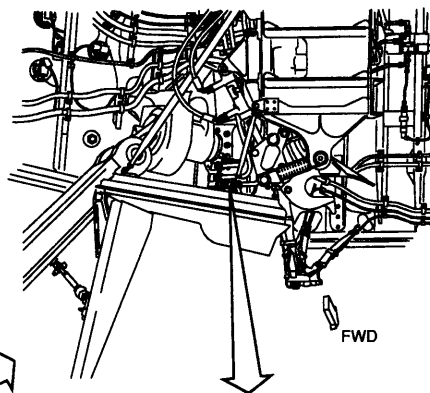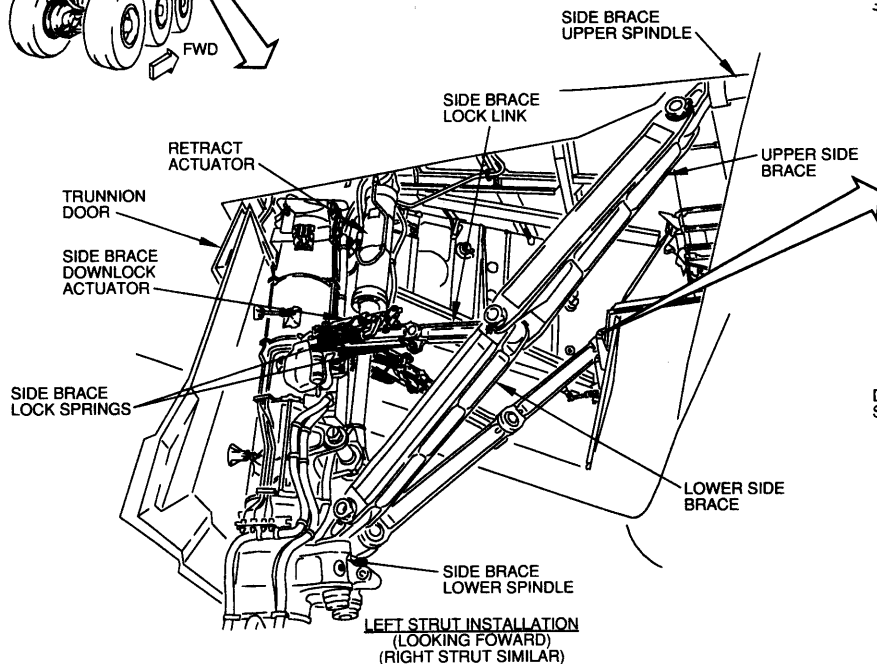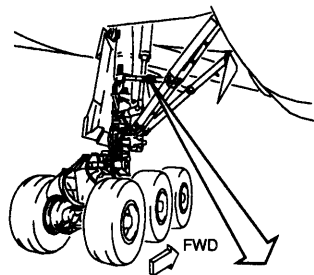

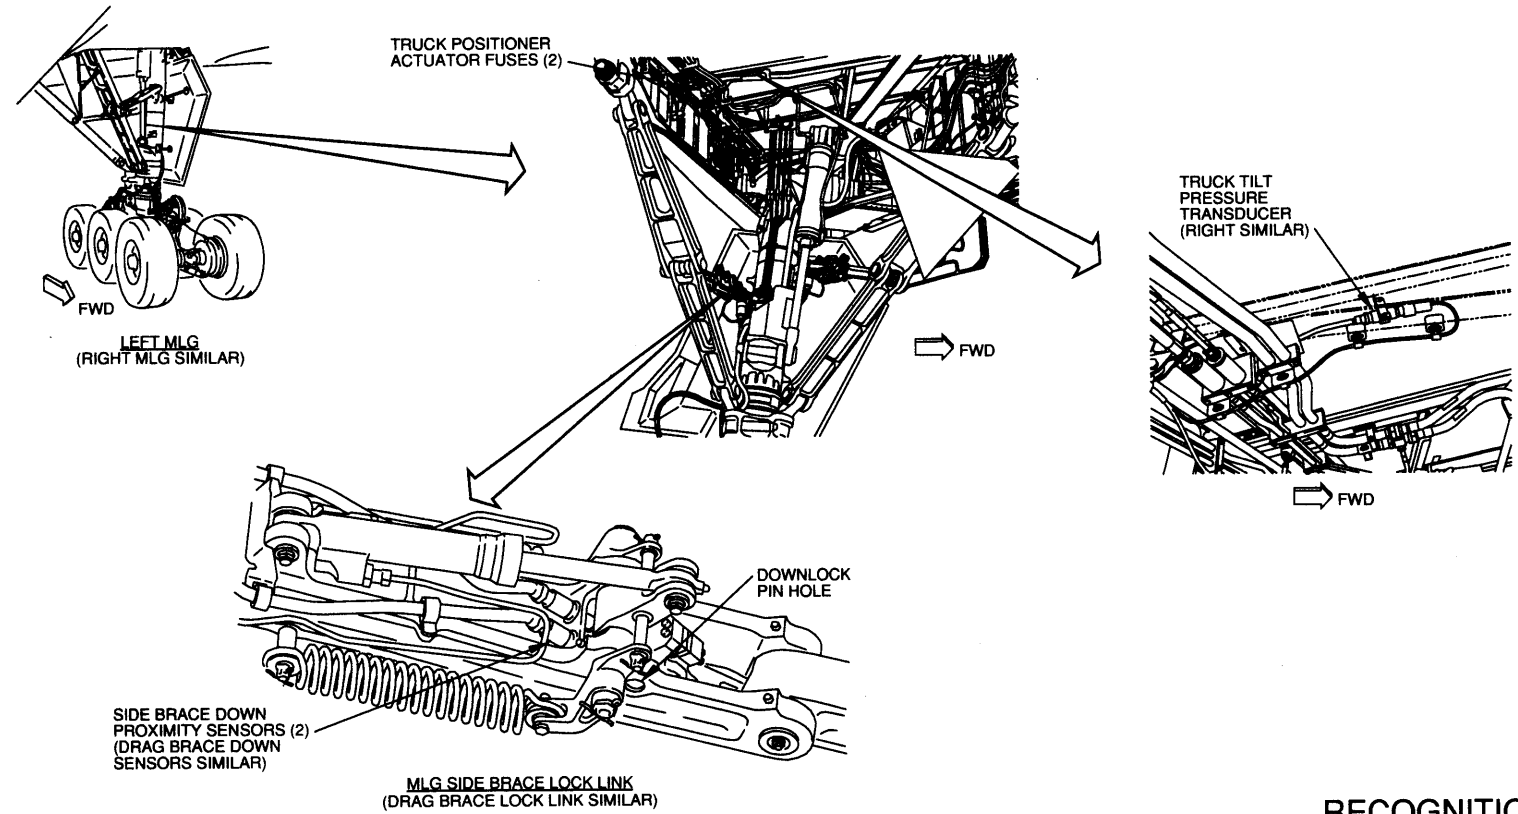


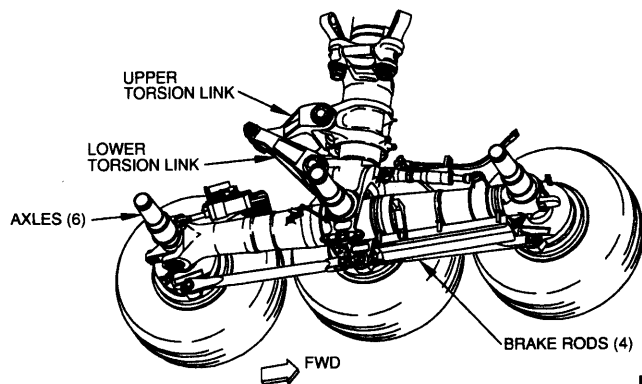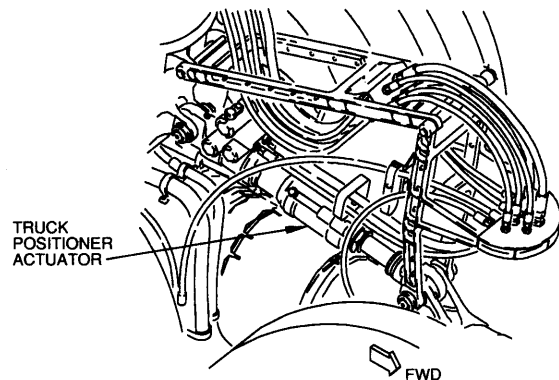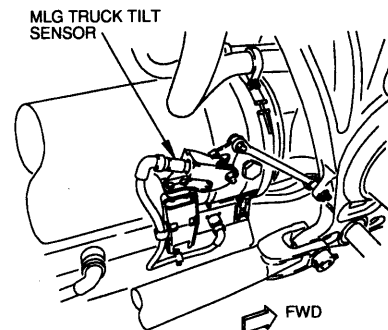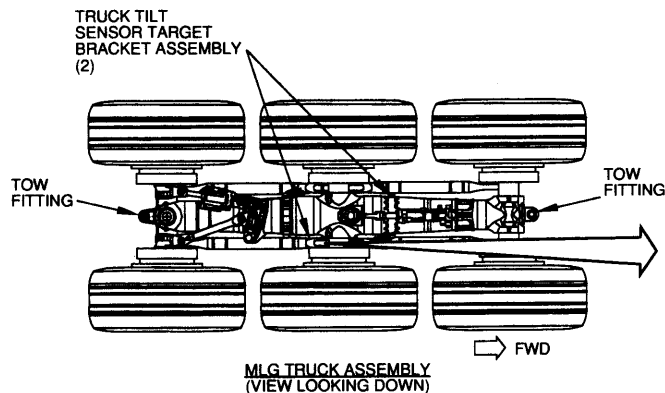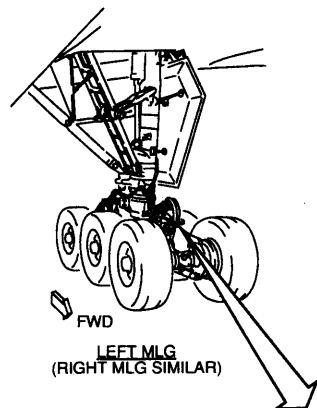

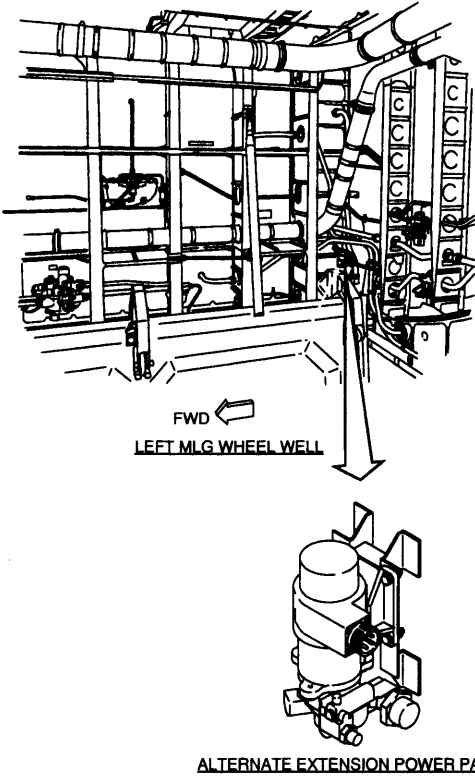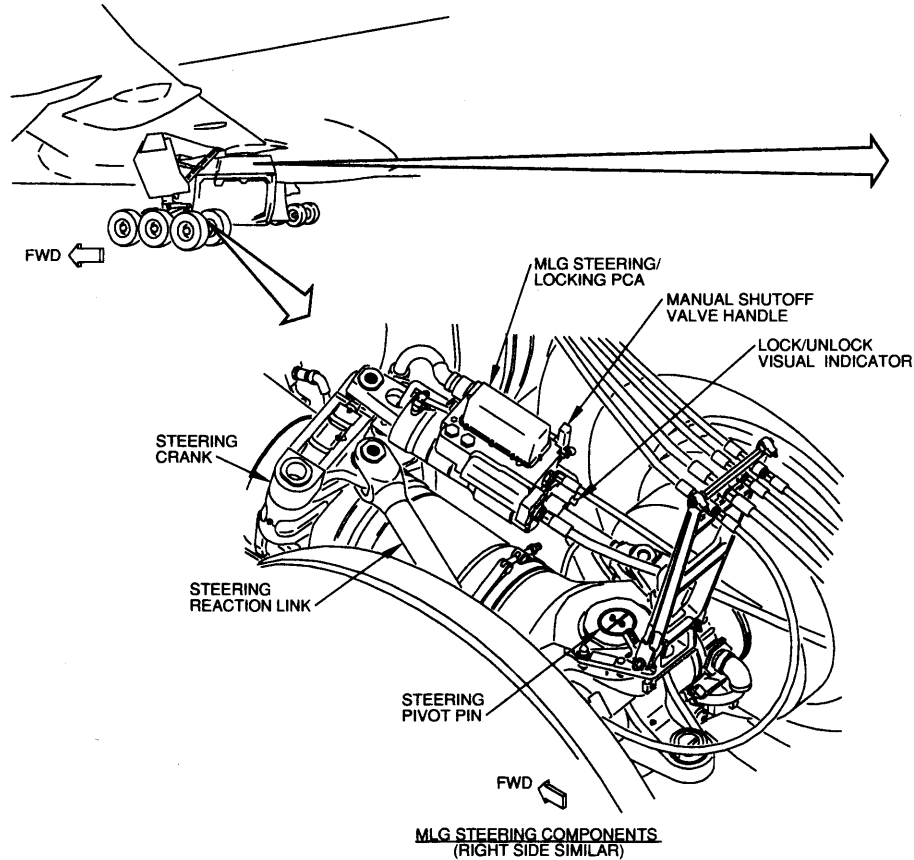


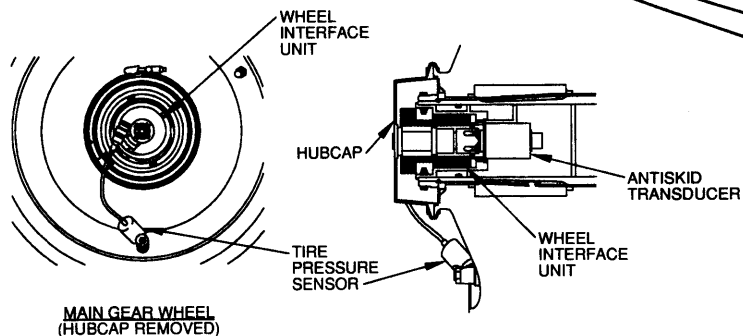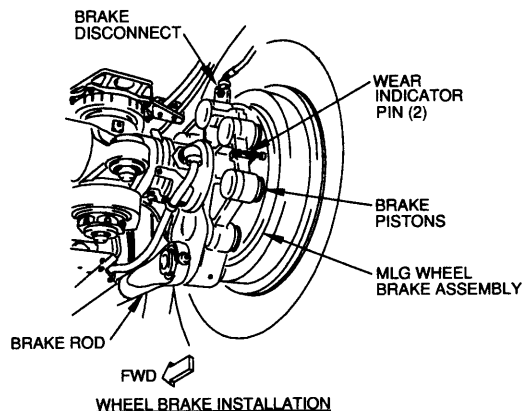
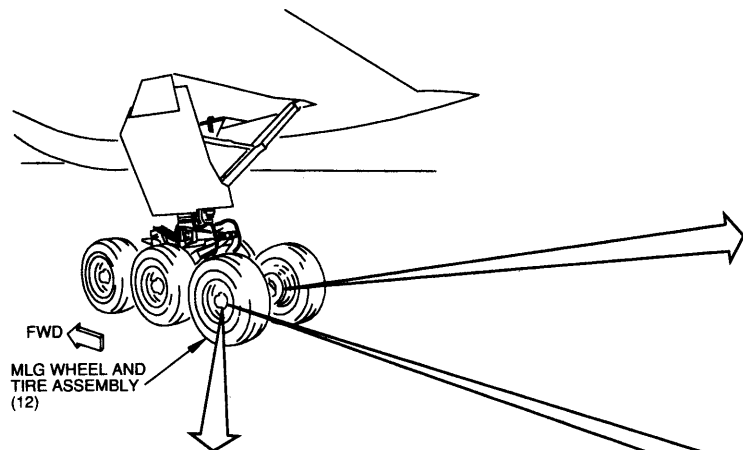


MAIN GEAR WHEEL INSTALLATION

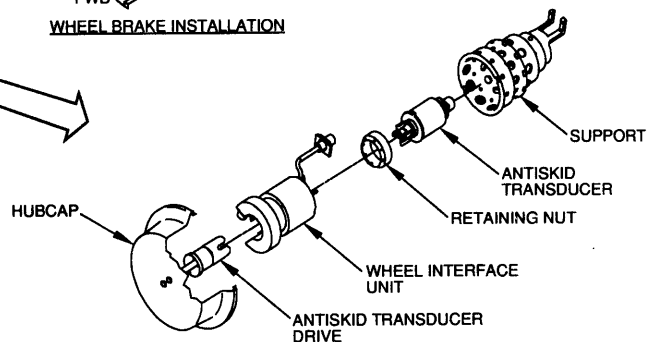


HUBCAP AND IN-AXLE ASSEMBLY

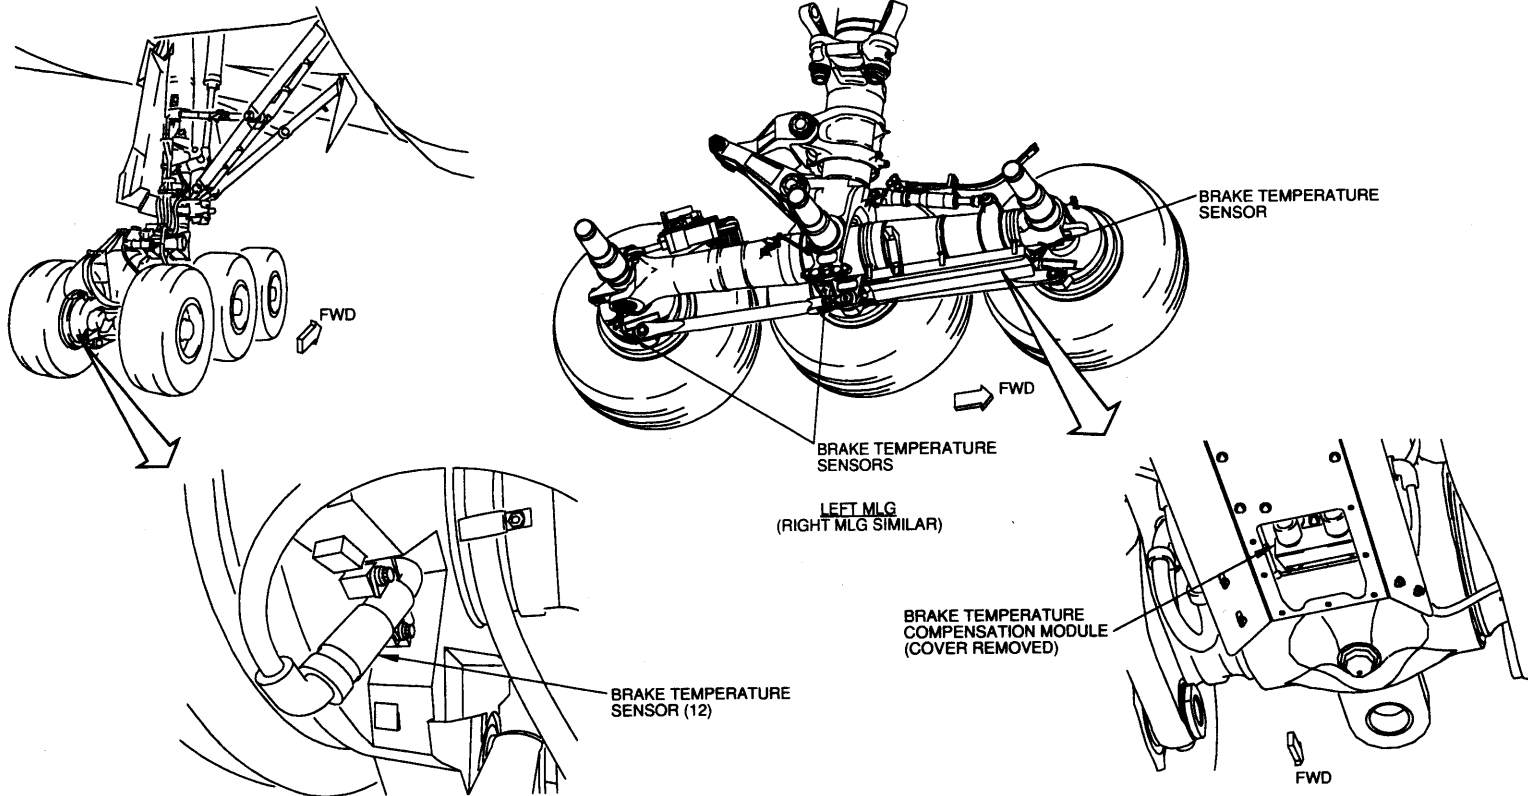

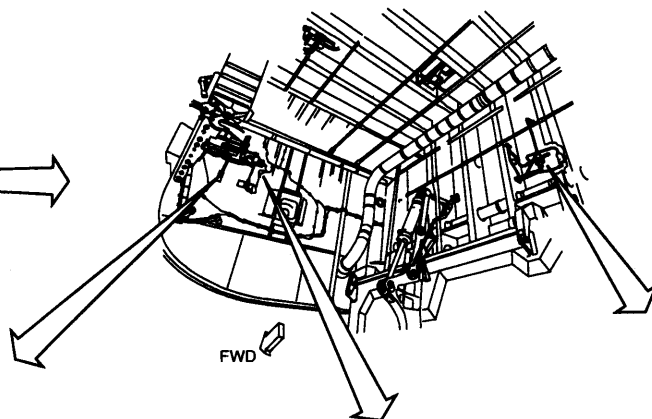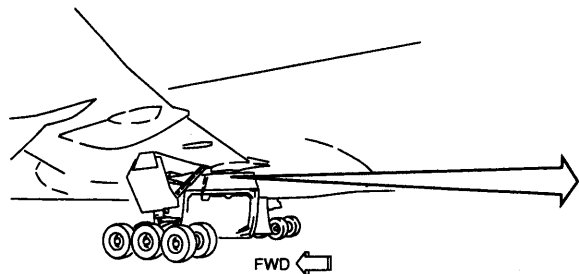

SUPPORT
ASSEMBLY

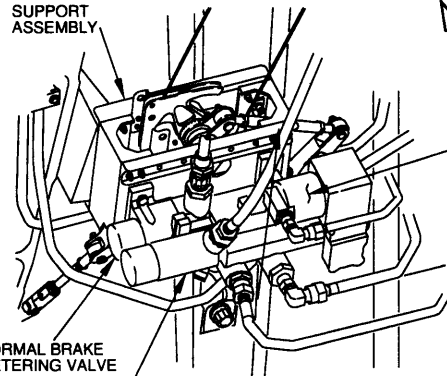

NORMAL BRAKE
METERING VALVE


ALTERNATE BRAKE
METERING VALVE



GEAR RETRACT
BRAKING ACTUATOR

AUTOBRAKE
SHUTTLE VALVE
(RIGHT SIMILAR)


BRAKE METERED
PRESSURE SWITCH
(RIGHT SIMILAR)

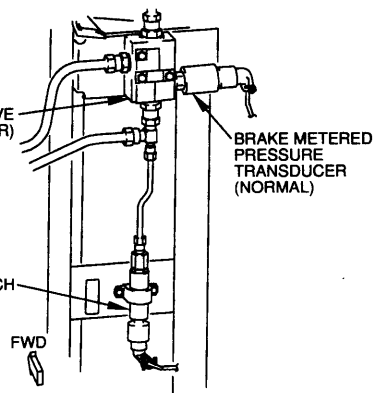

BRAKE METERED
PRESSURE
TRANSDUCER
(NORMAL)





BRAKE SOURCE
PRESSURE SWITCH
(ALTERNATE)

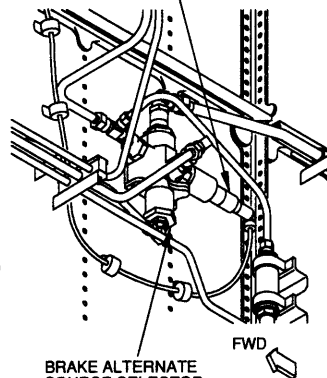


BRAKE ALTERNATE
SOURCE SELECTOR
VALVE








BRAKE METERING VALVE ACTUATION/SUPPORT ASSEMBLY
(RIGHT SIMILAR)

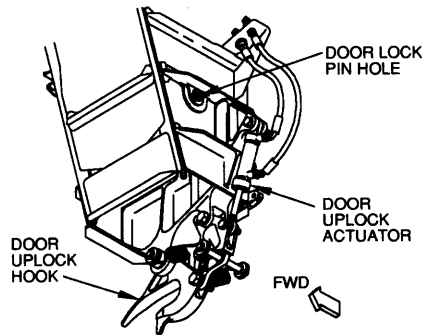
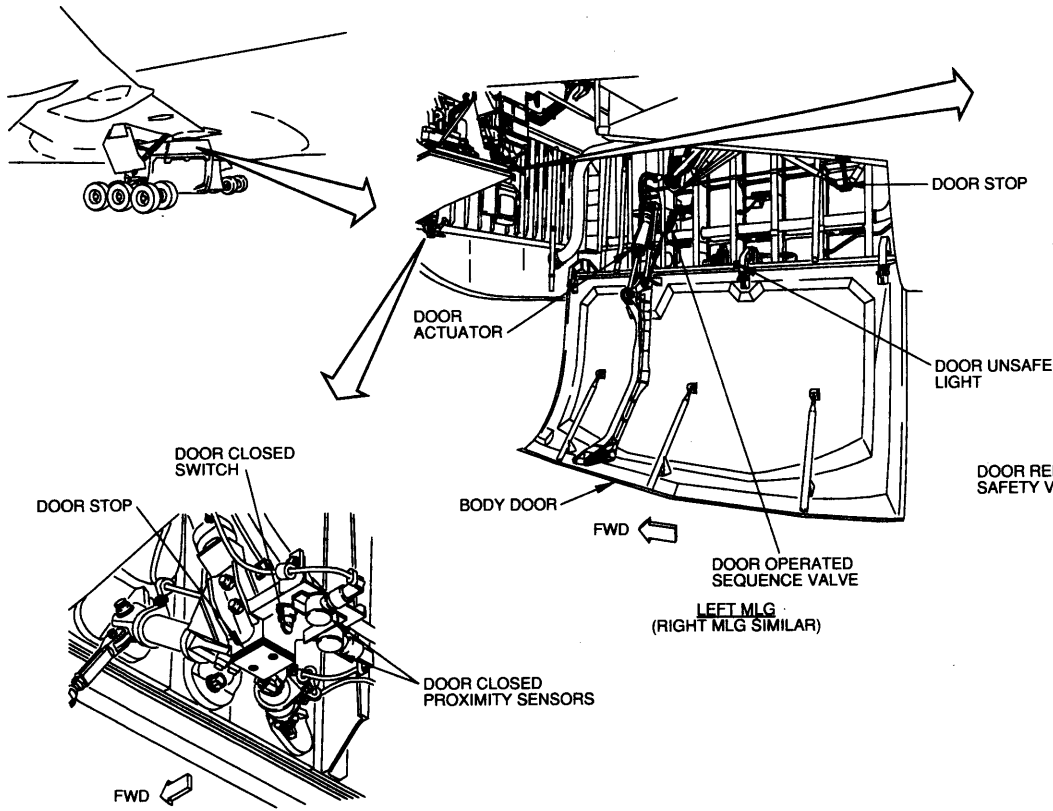


**LEFT MLG DOOR UPLOCK HOOK
SUPPORT STRUCTURE**

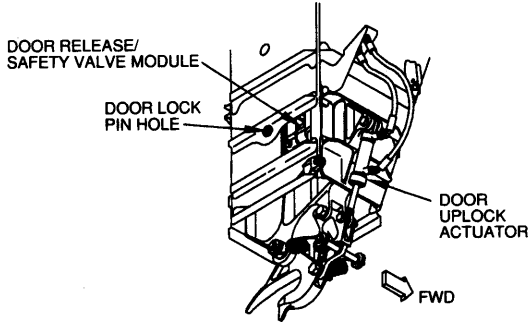

**RIGHT MLG DOOR UPLOCK HOOK
SUPPORT STRUCTURE**

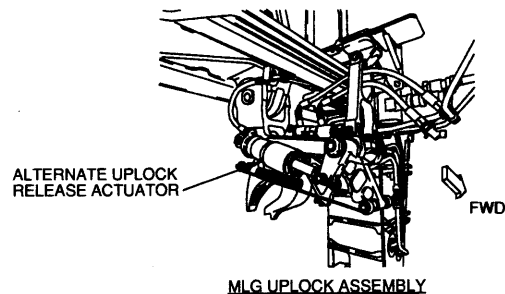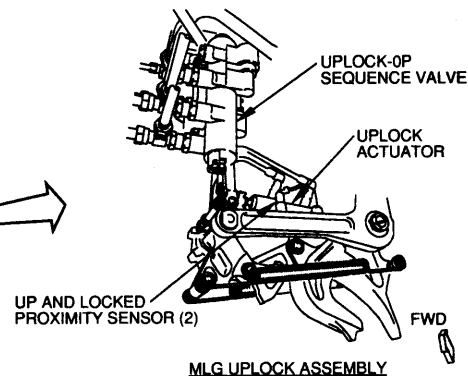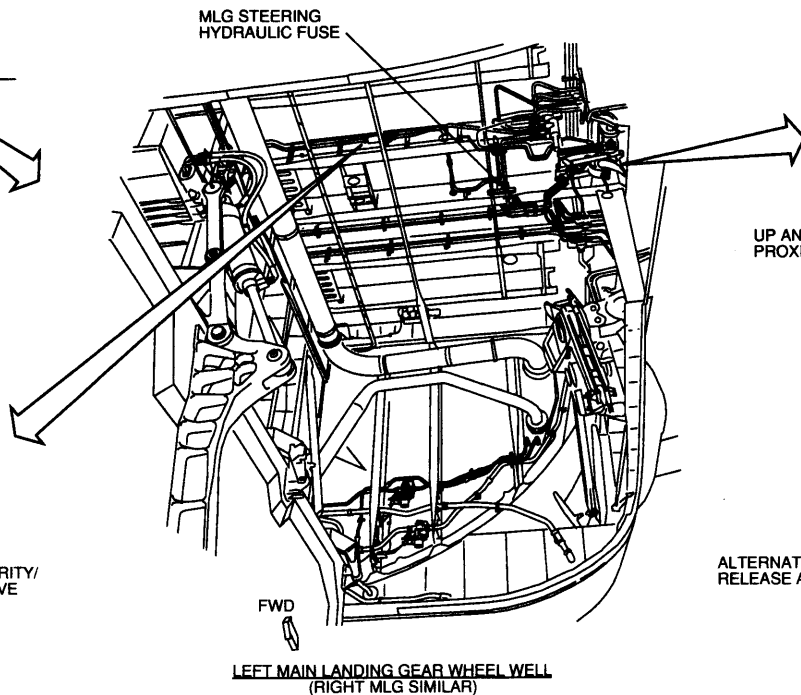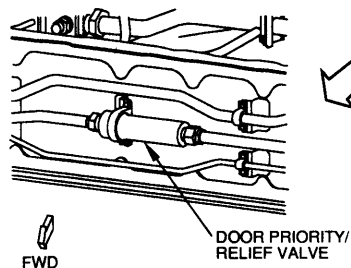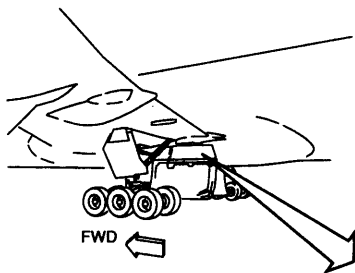


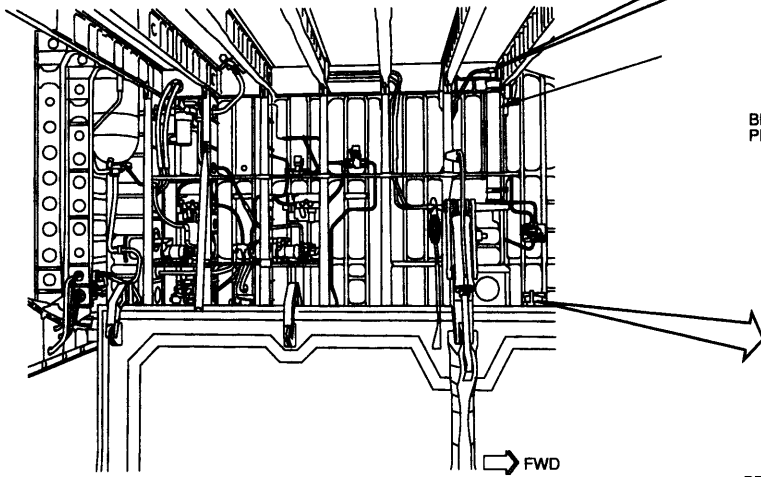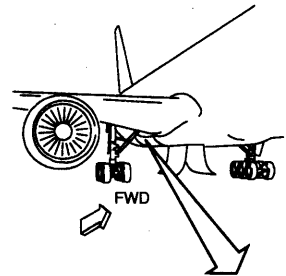

RIGHT MAIN LANDING GEAR WHEEL WELL

NORMAL BRAKE SOURCE
PRESSURE SWITCH


BRAKE
ACCUMULATOR

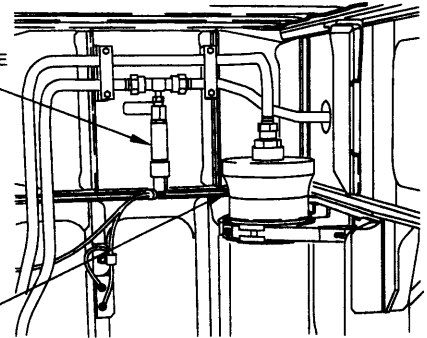


BRAKE ACCUMULATOR
PRESSURE TRANSDUCER



BRAKE ACCUMULATOR
PRESSURE GAUGE

BRAKE ACCUMULATOR
CHARGING VALVE

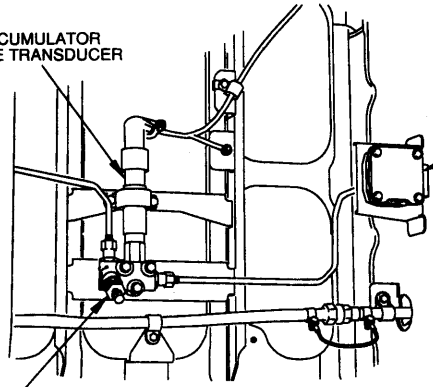

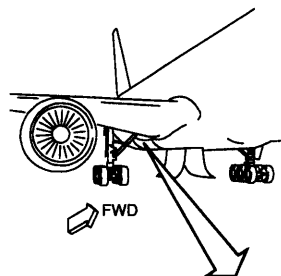

BRAKE ACCUMULATOR
ISOLATION VALVE

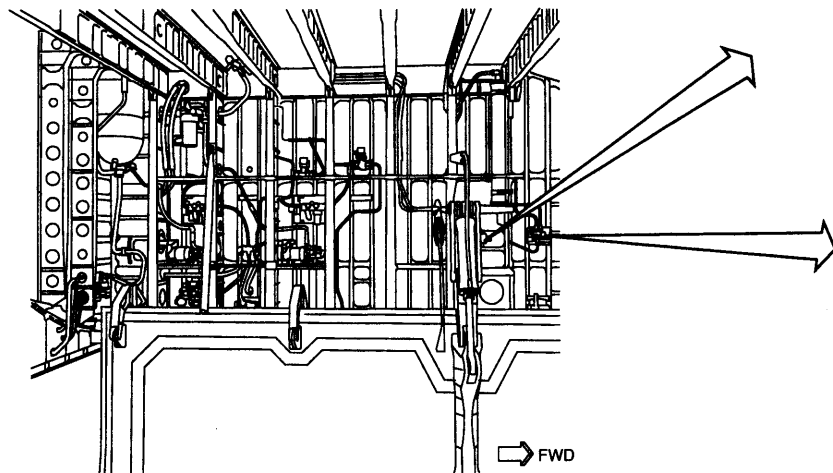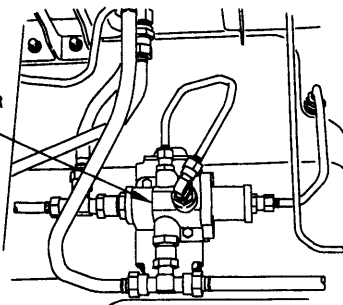


RIGHT MAIN LANDING GEAR WHEEL WELL

SOLENOID VALVE


CONTROL VALVE

SOLENOID VALVE
PRESSURE SWITCH


AUTOBRAKE METERED
PRESSURE TRANSDUCER

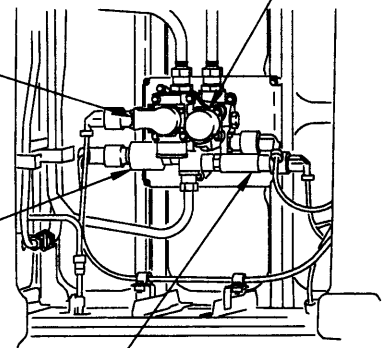


AUTOBRAKE VALVE MODULE

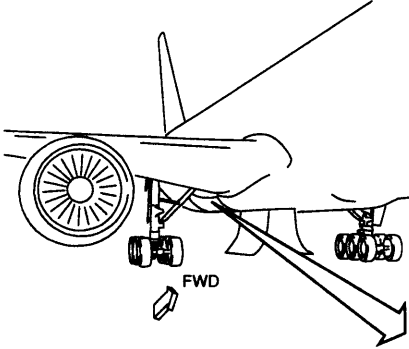


MAIN LANDING GEAR
SELECTOR / BYPASS VALVE

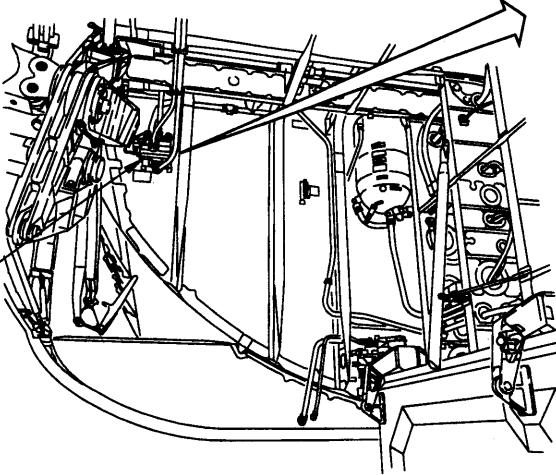


RIGHT MAIN LANDING GEAR WHEEL WELL

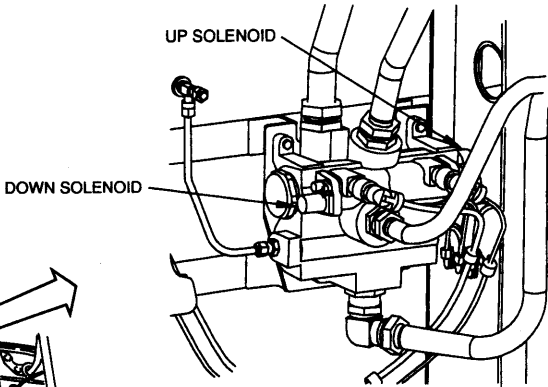



MLG SELECTOR/BYPASS VALVE

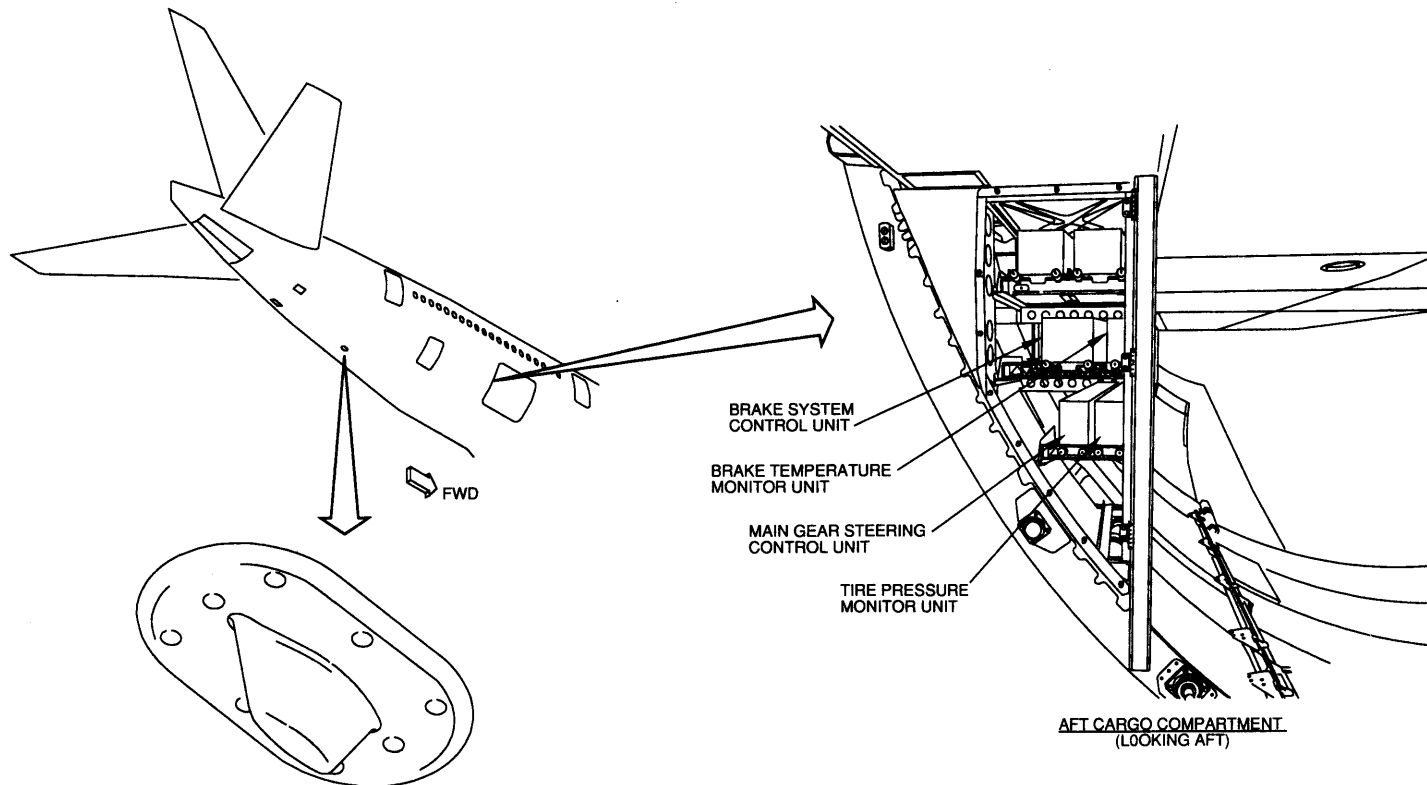



TAIL STRIKE ASSEMBLY

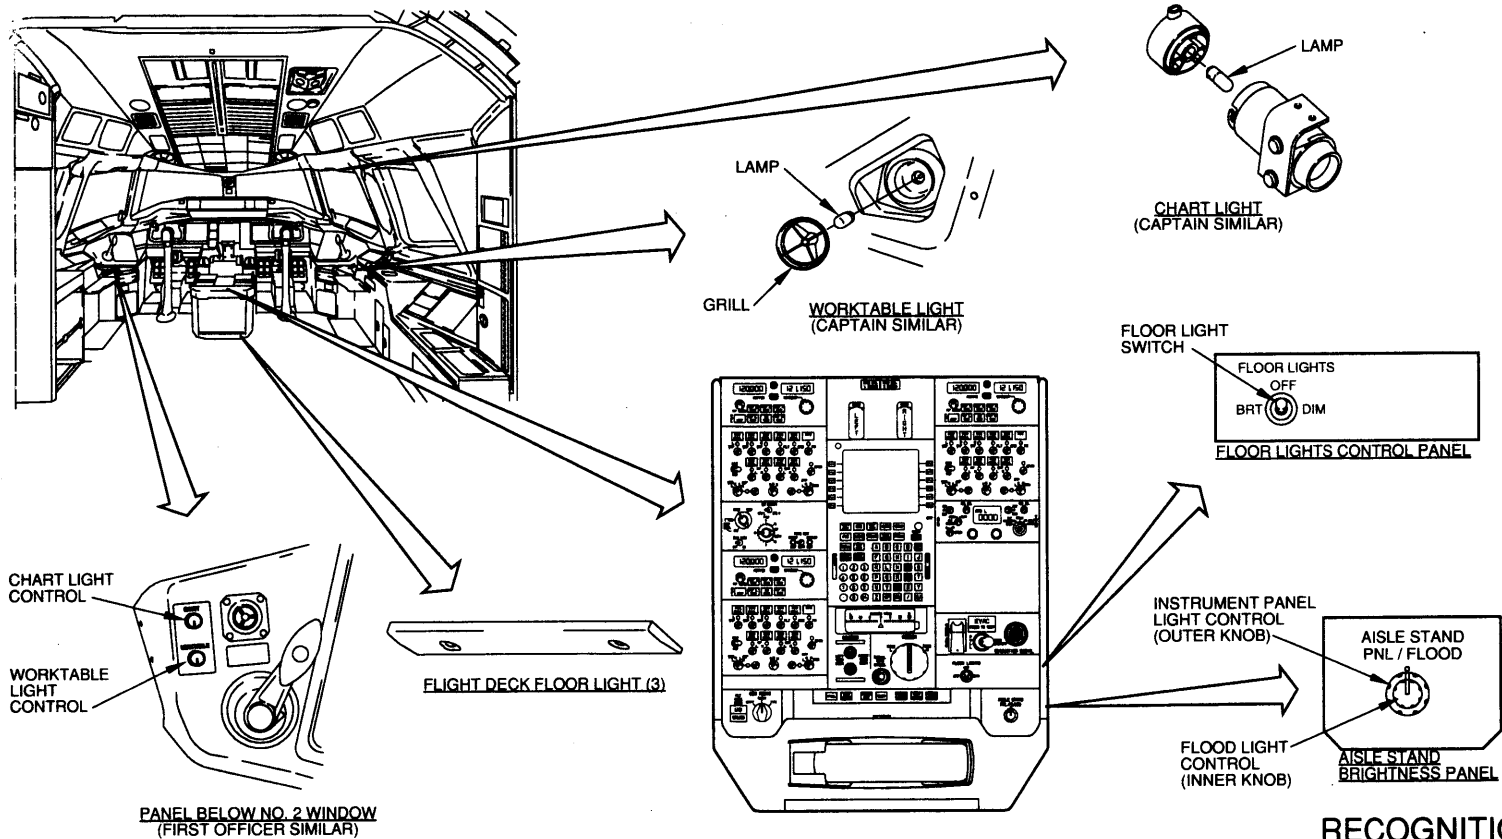

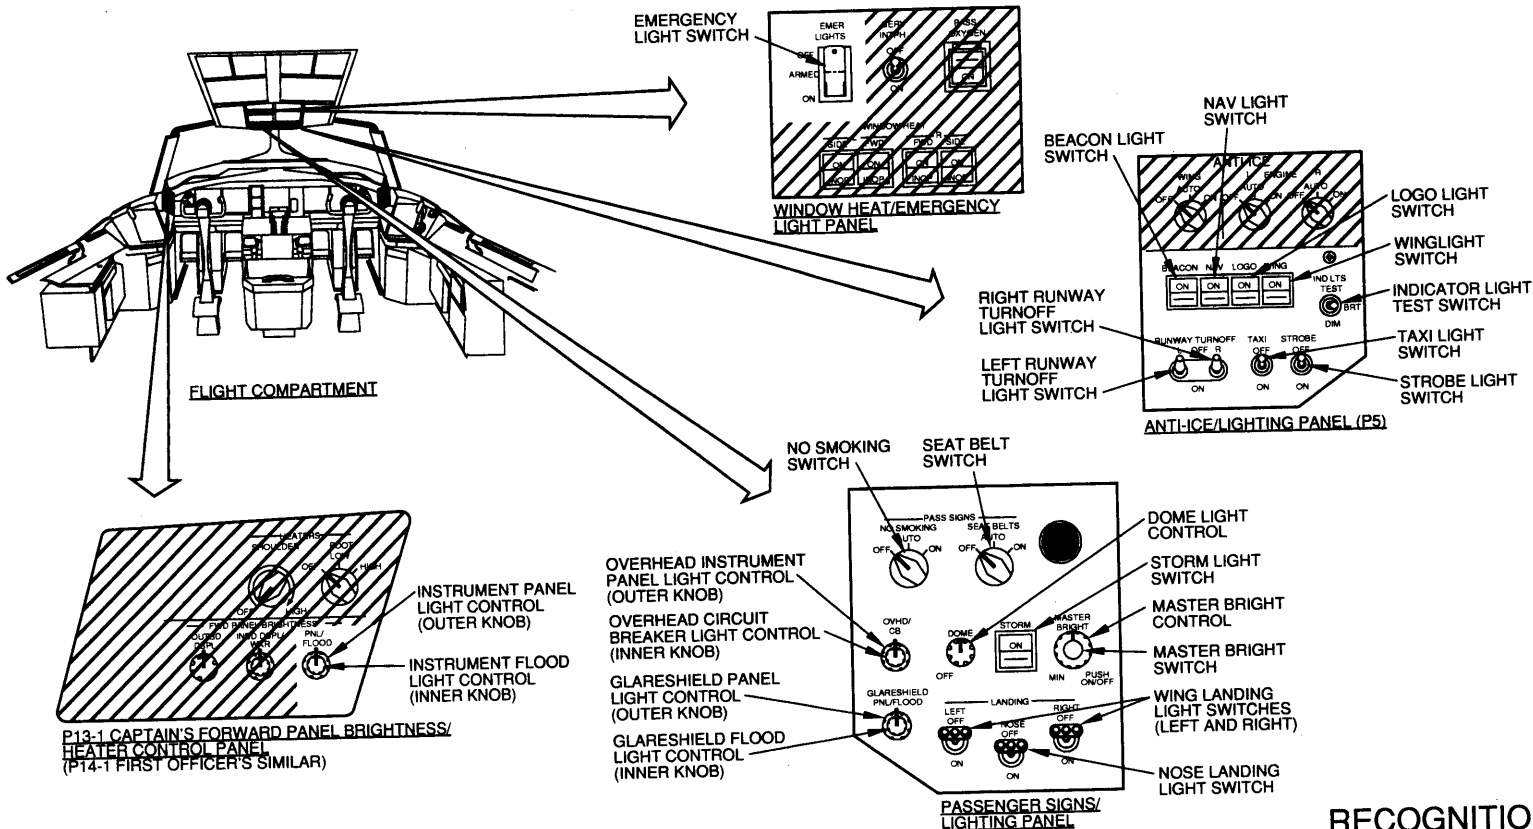


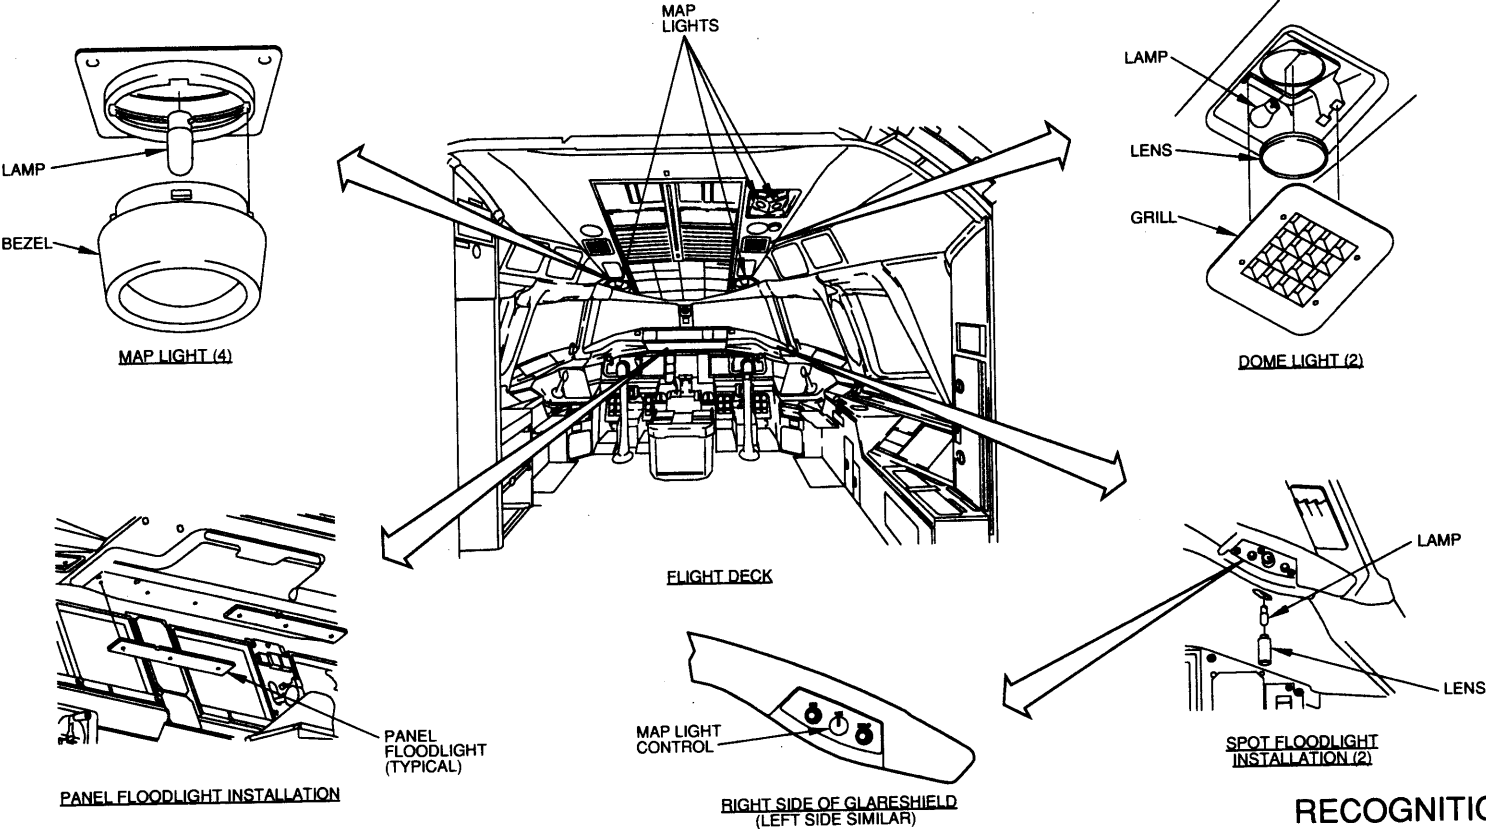


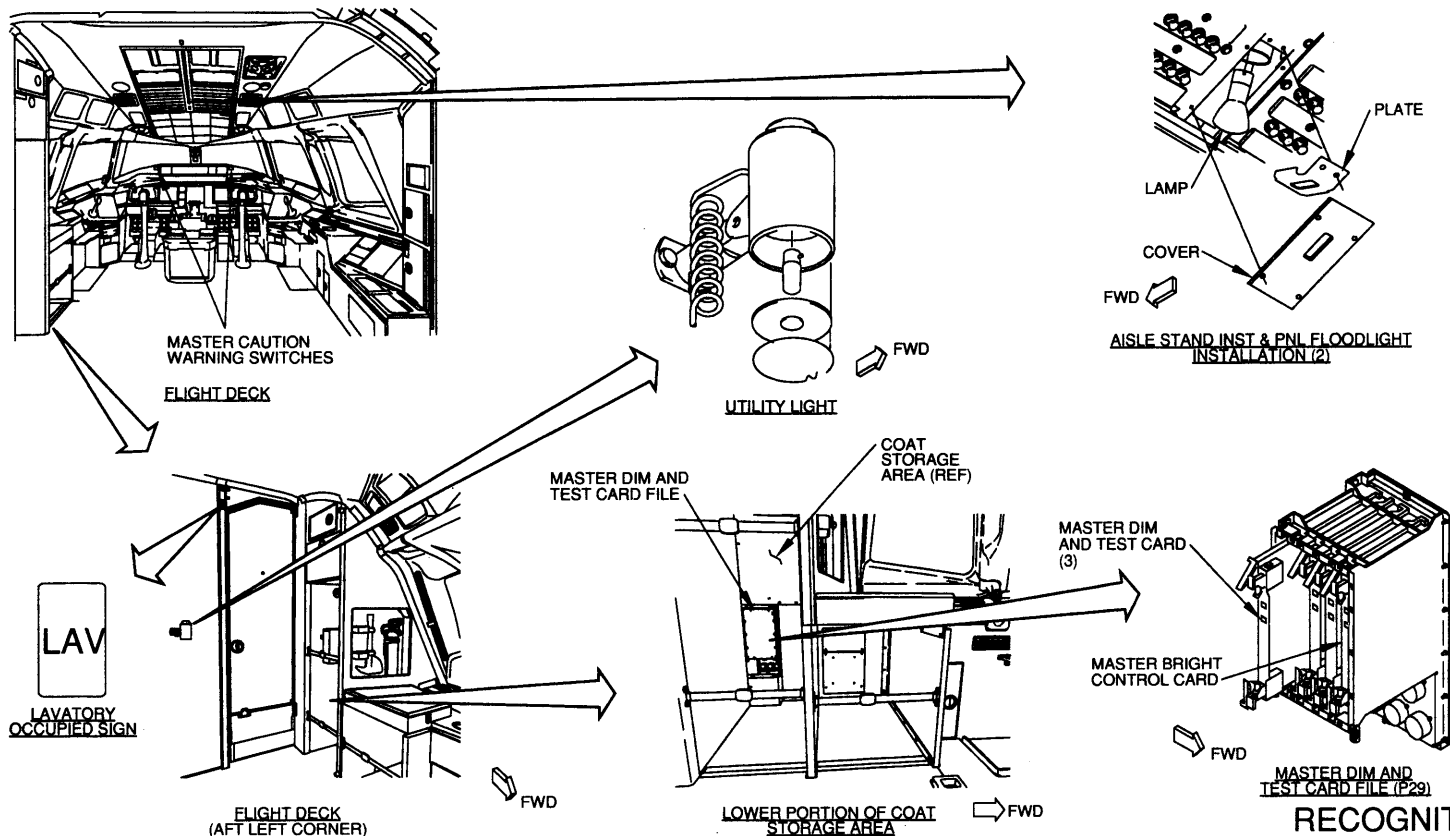


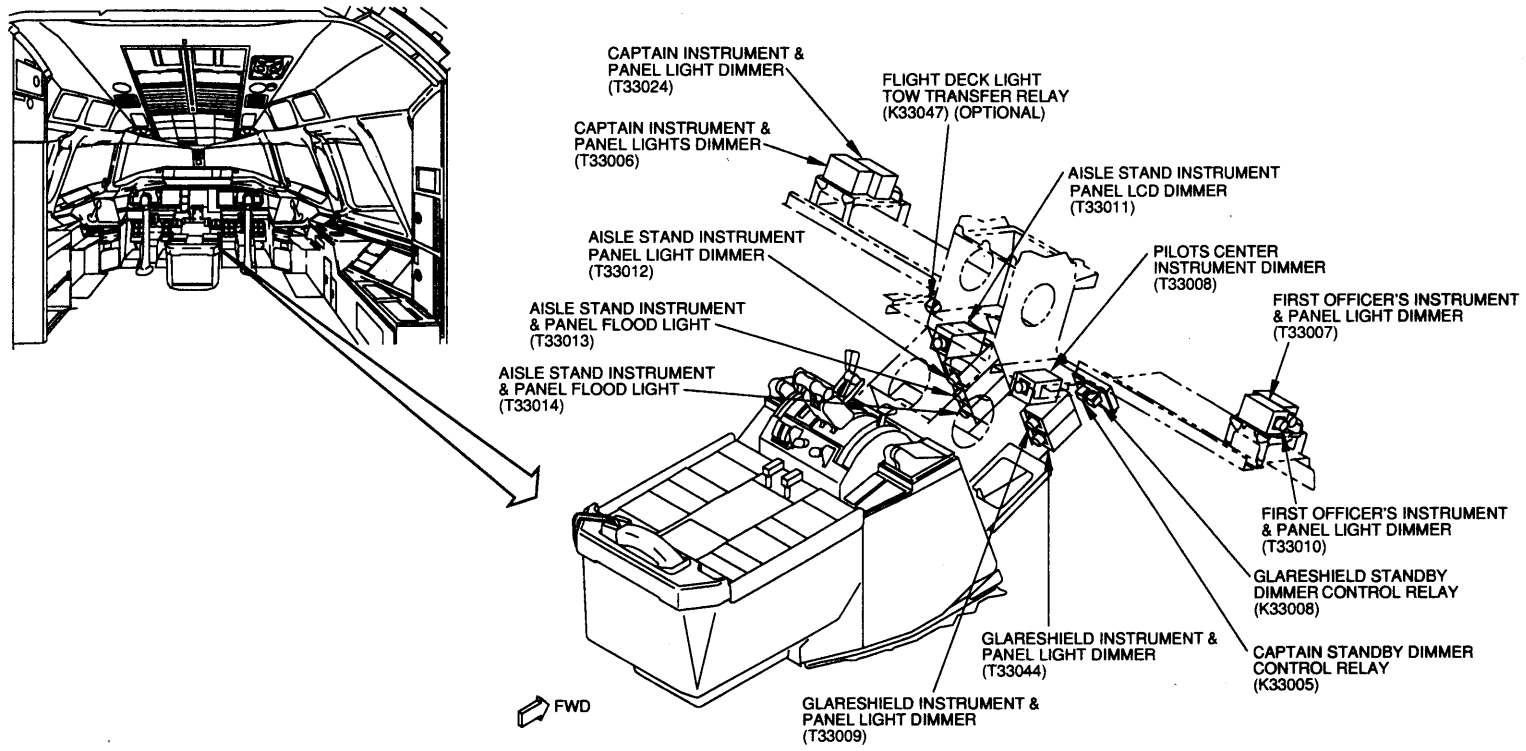





AISE STAND AND FORWARD CONSOLE INSTALLATION

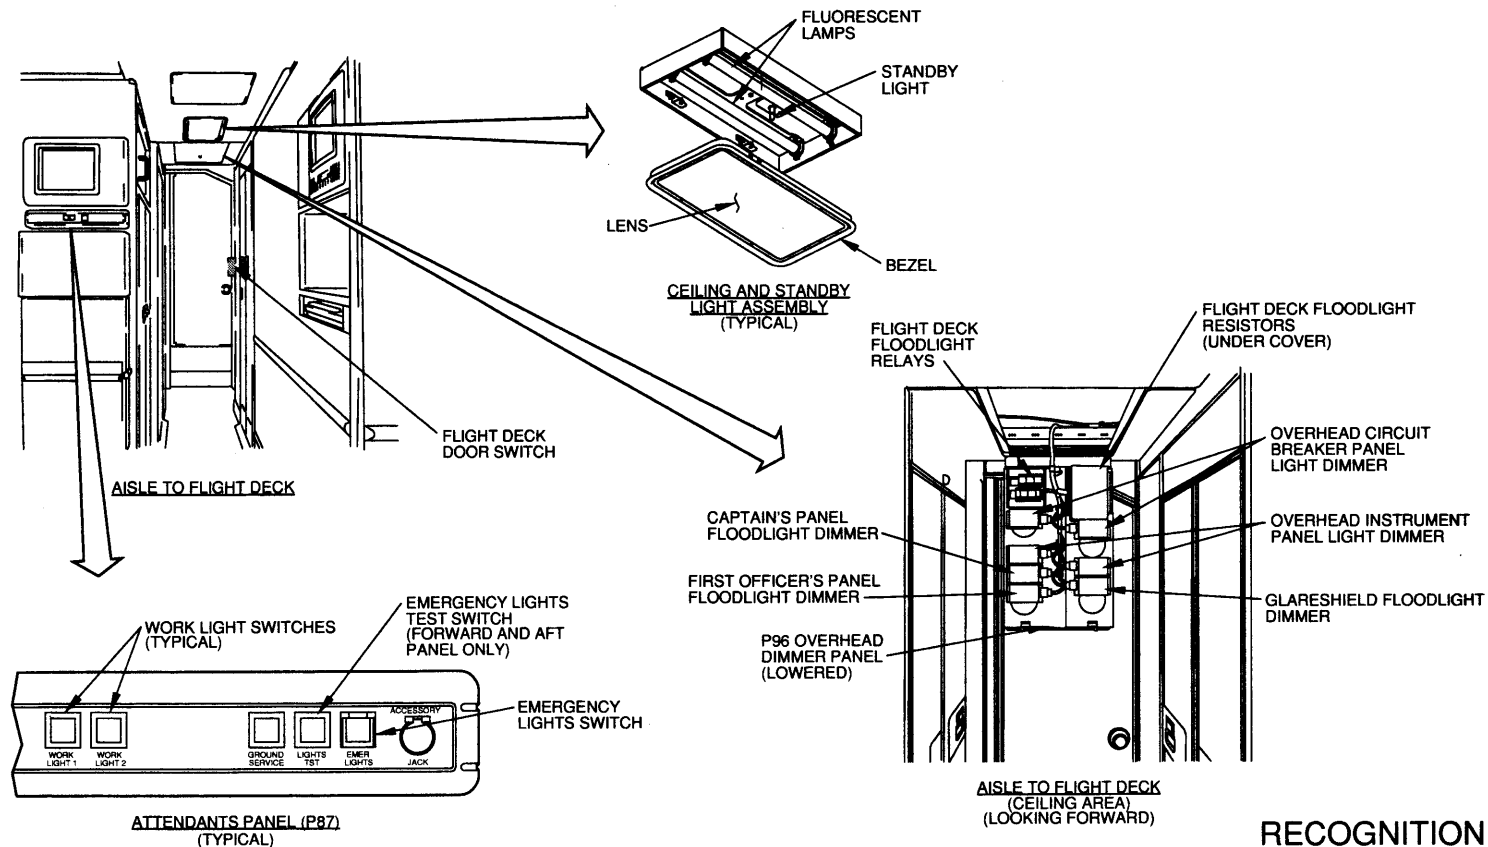

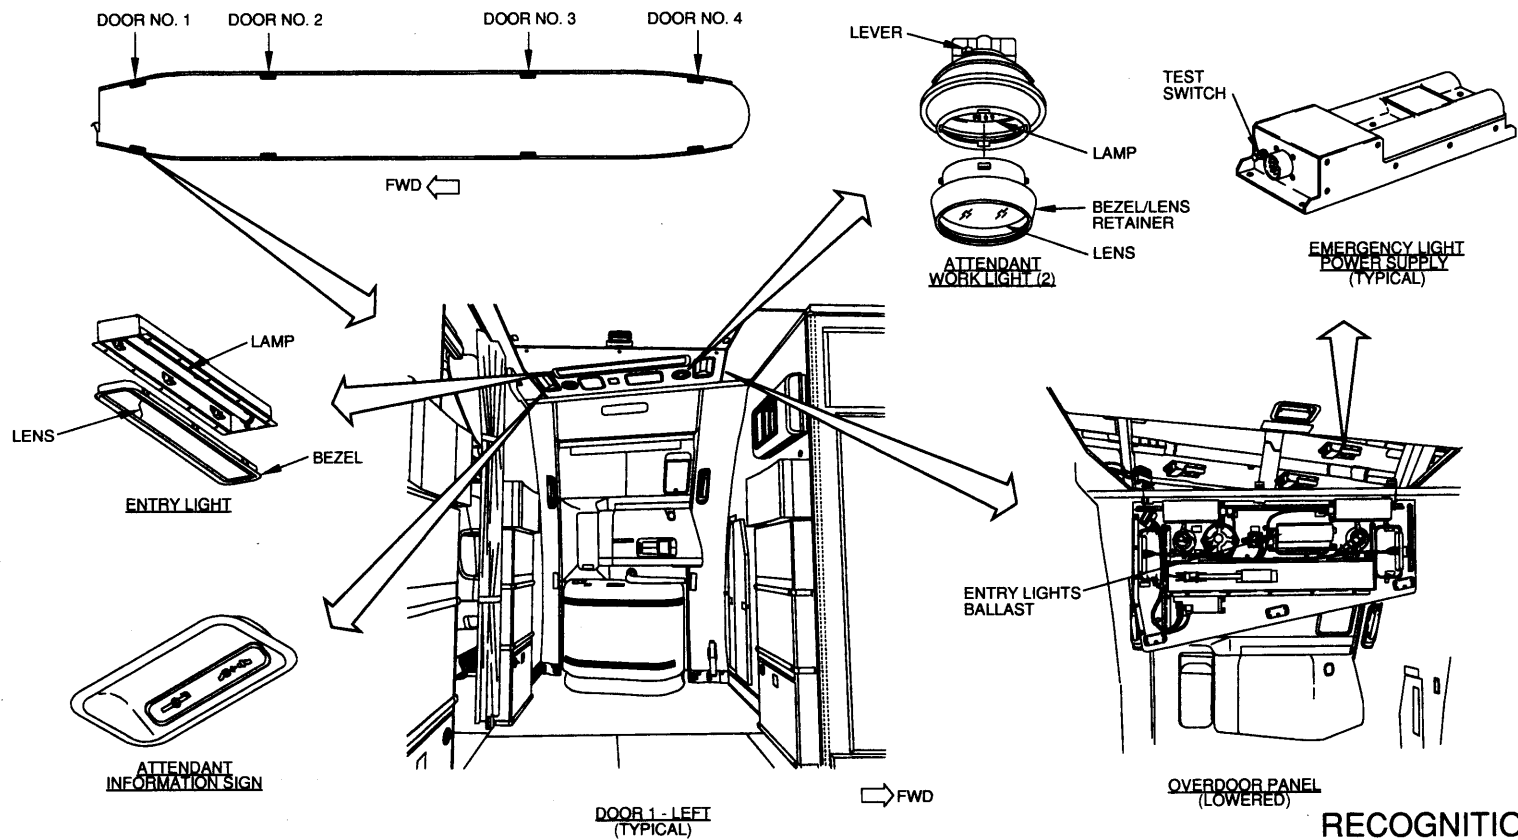


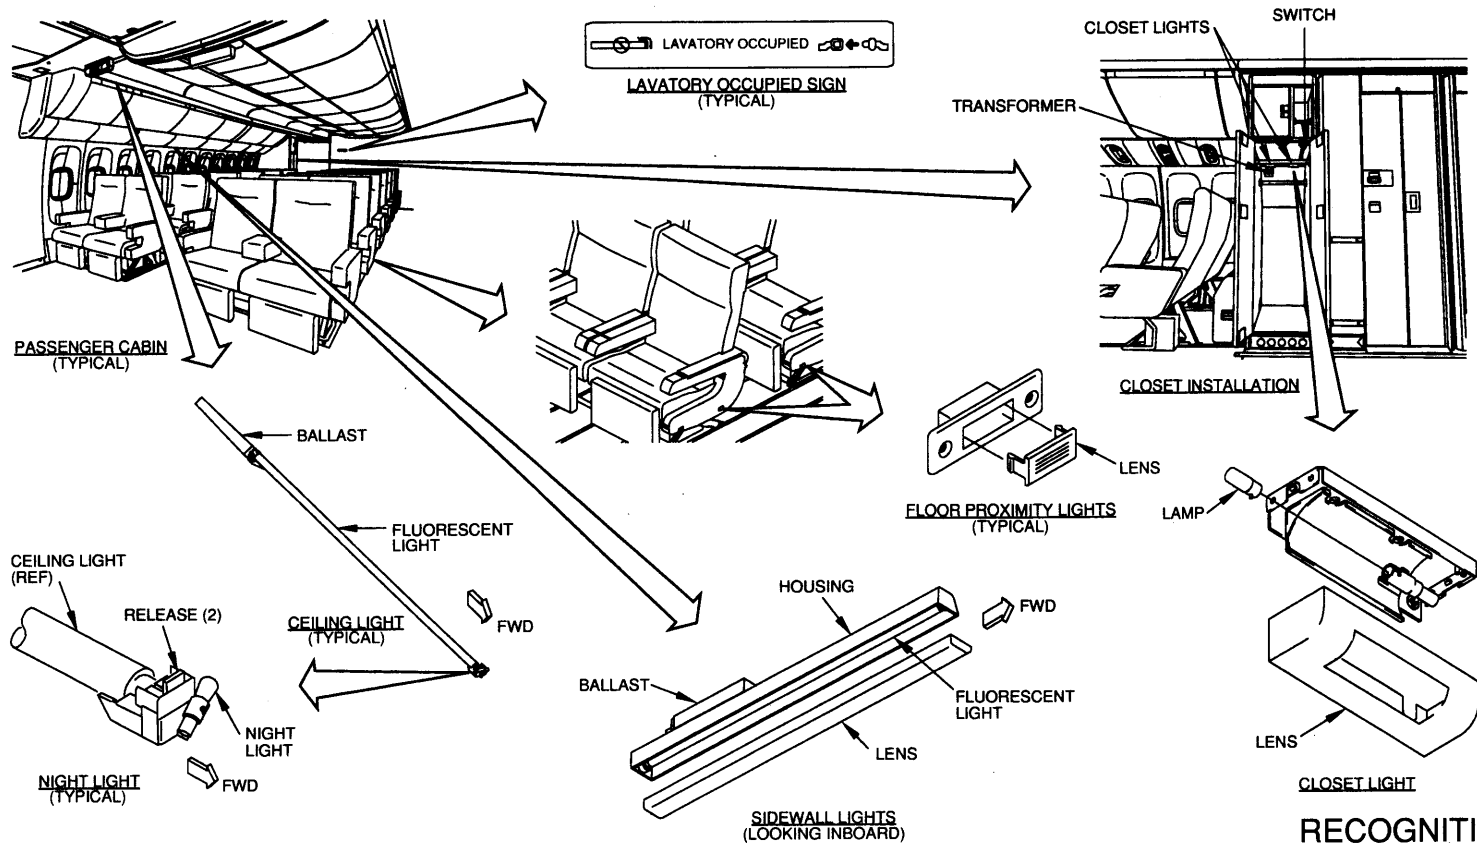

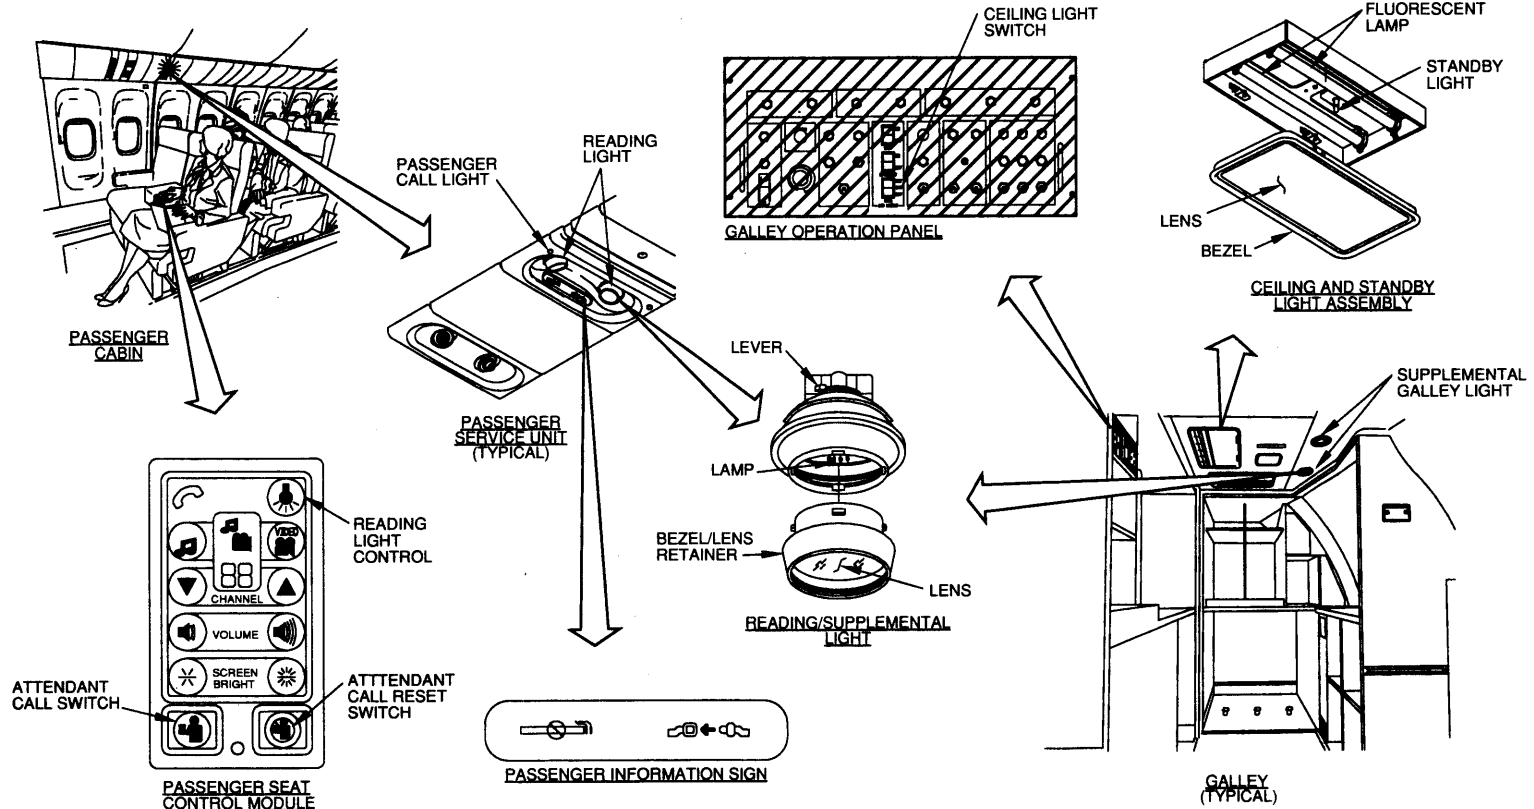


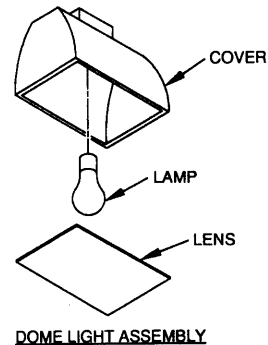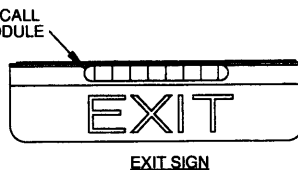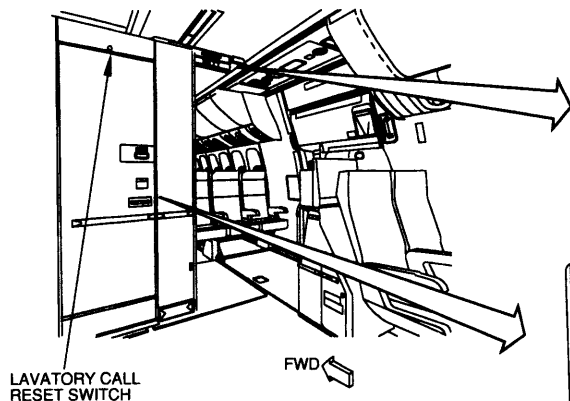


RETURN TO SEAT SIGN

 


LOCK DOOR SIGN

 




LAVATORY CALL SWITCH

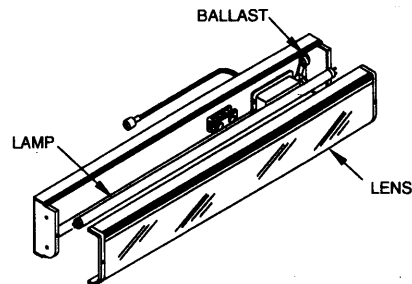


MIRROR LIGHT ASSEMBLY

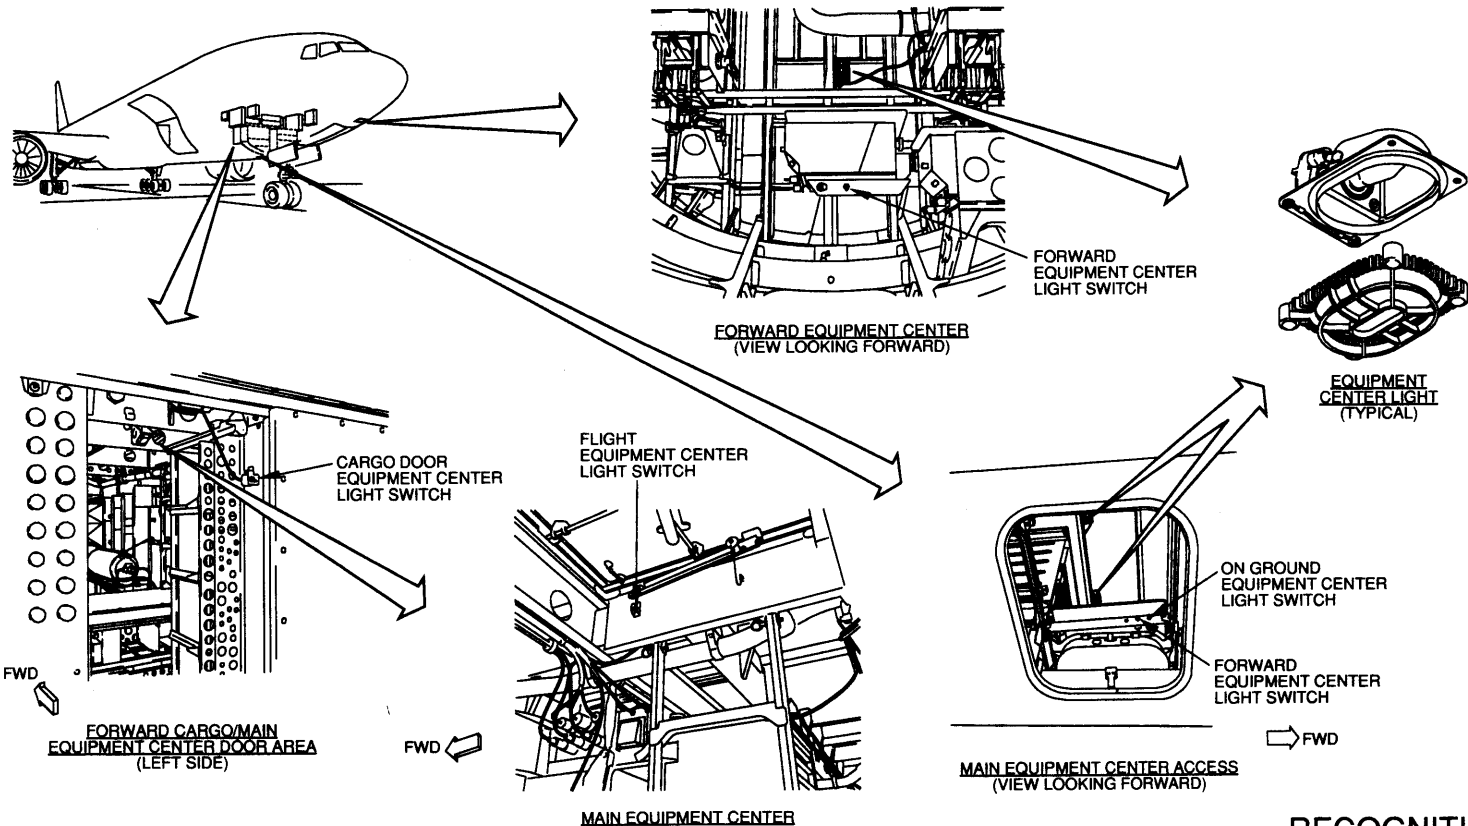

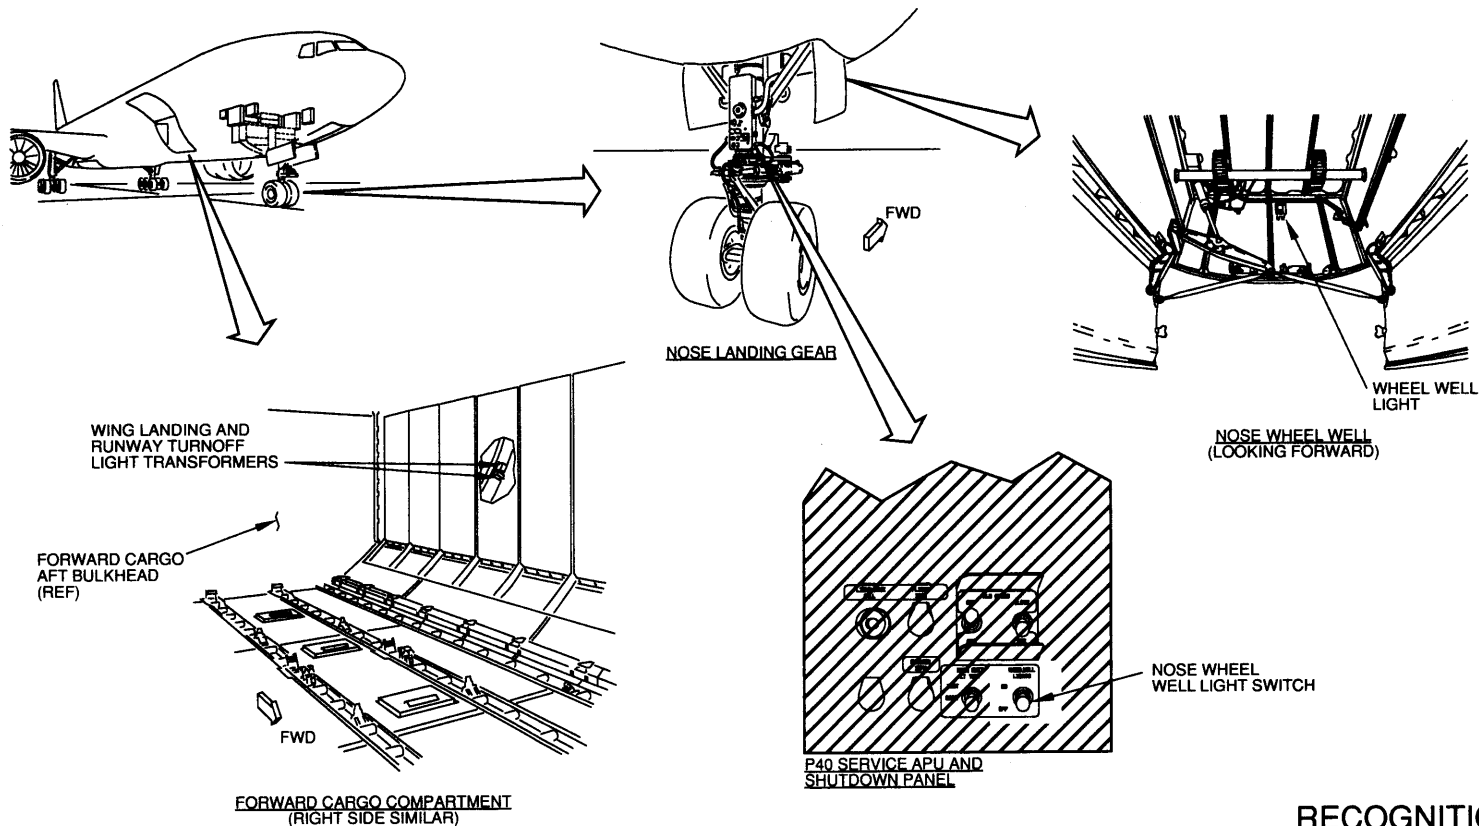


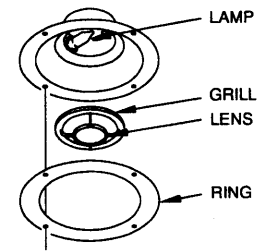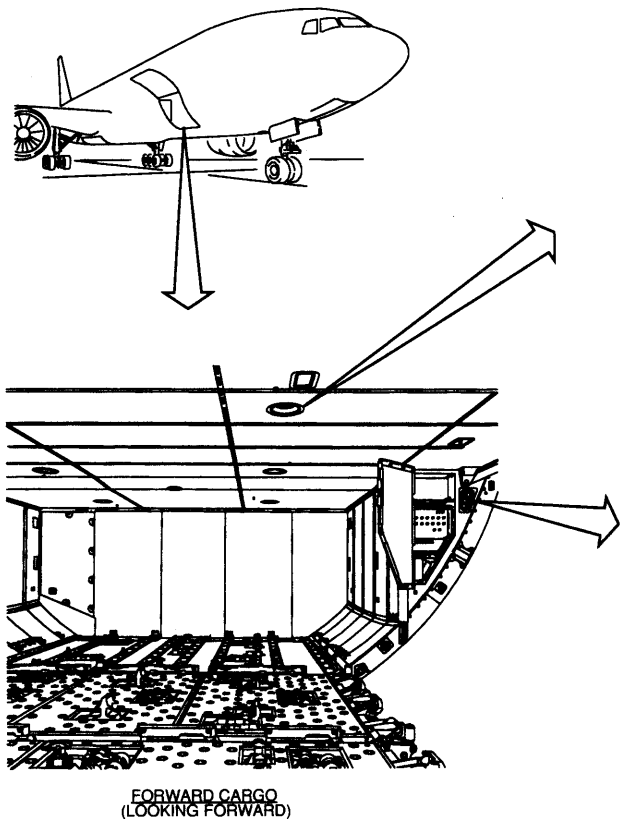

CEILING LIGHT (TYPICAL)
(AFT CARGO SIMILAR)

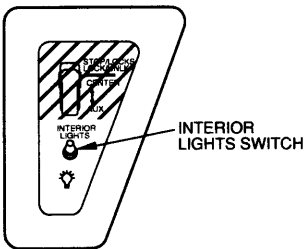


**P35 FORWARD CARGO HANDLING
ACCESSORY PANEL**
(AFT P39 PANEL SIMILAR)

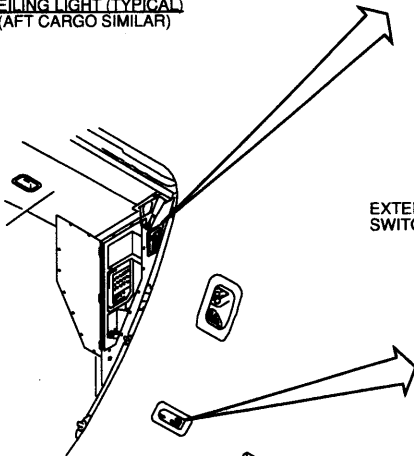



FORWARD CARGO DOOR






FWD

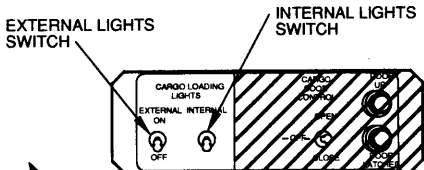


P43 FWD CARGO DOOR CONTROL PNL
(P44 AFT CARGO DOOR CONTROL
PNL SIMILAR)

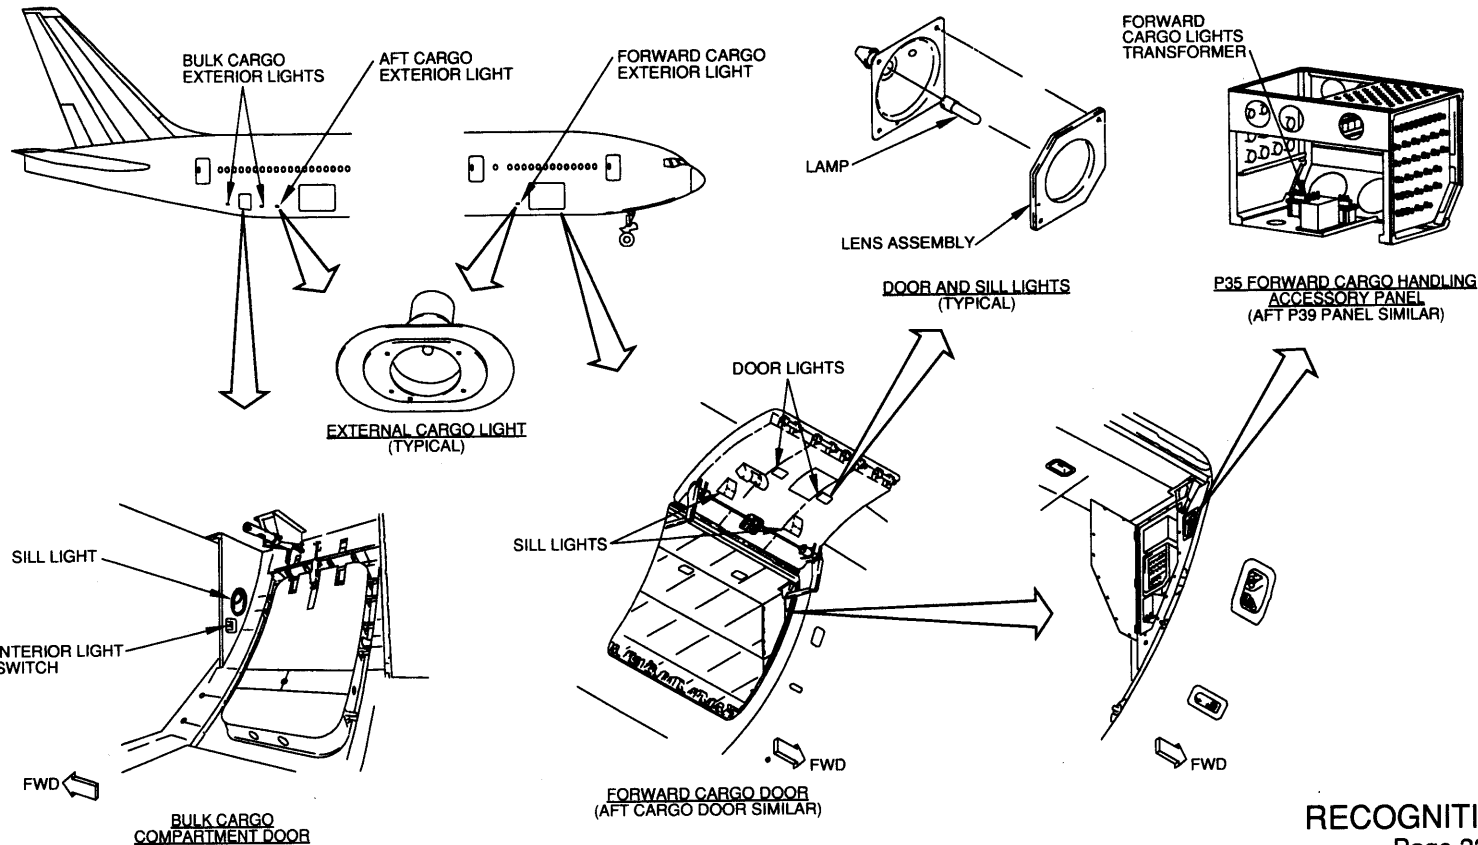


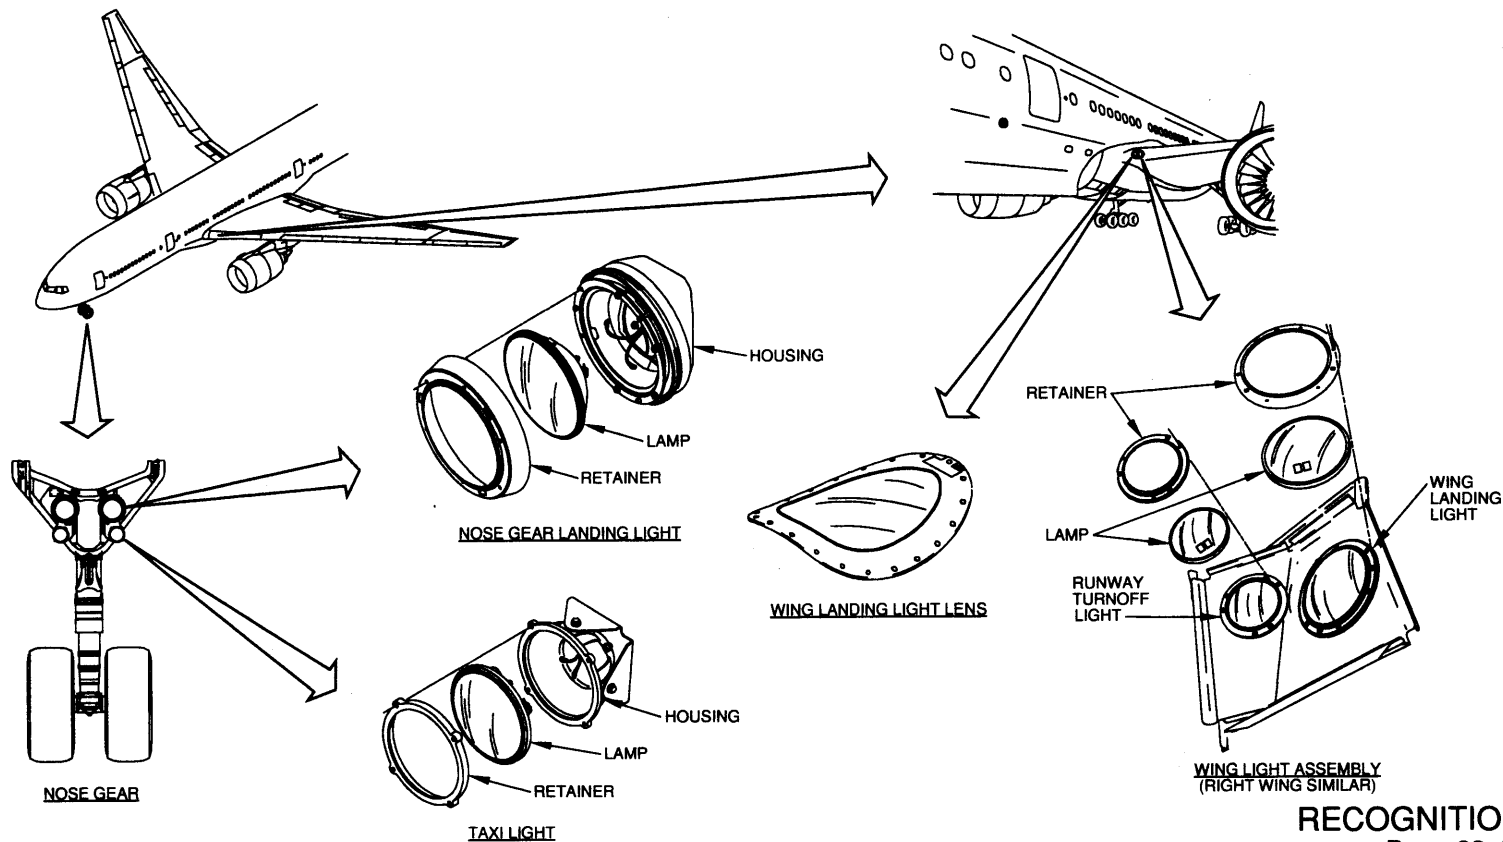

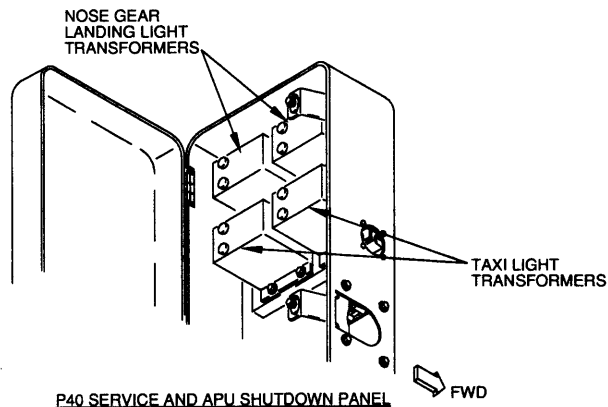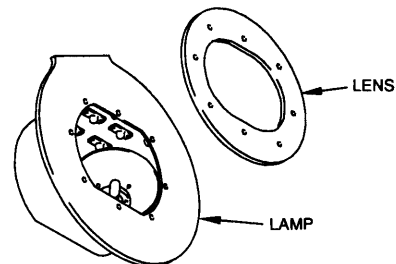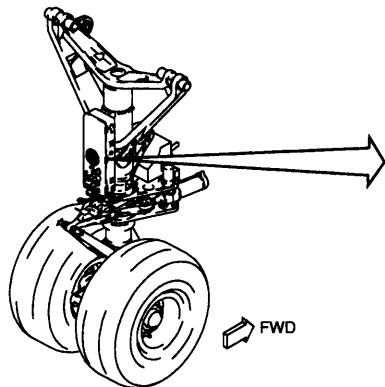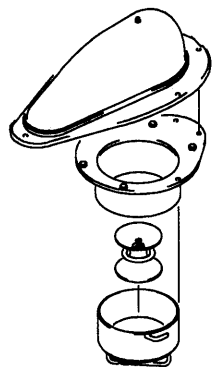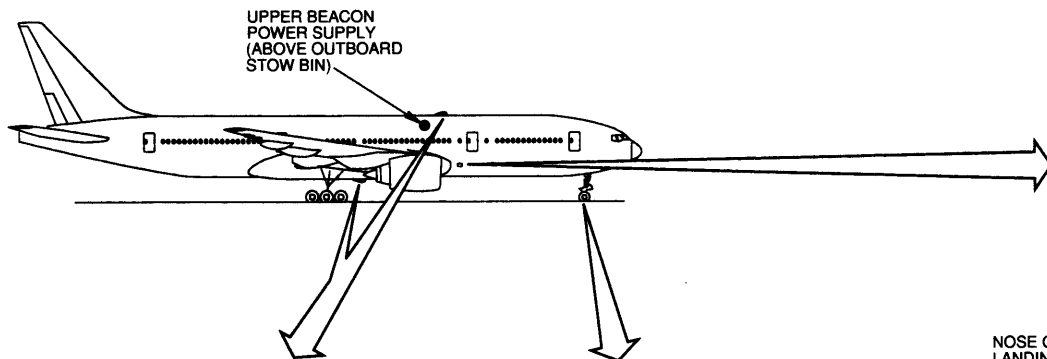


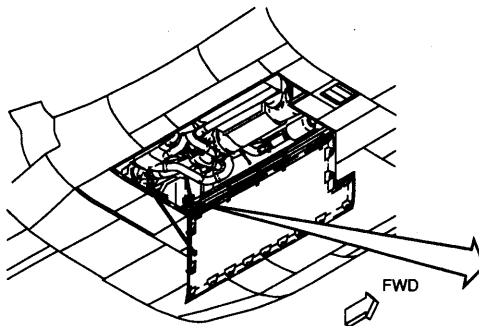


RIGHT AIR CONDITIONING BAY
(LEFT BAY SIMILAR)

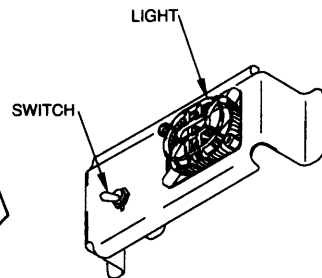


ECS BAY LIGHT/SWITCH ASSEMBLY

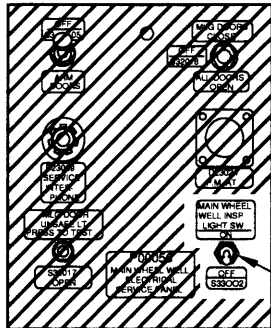


P56 WHEEL WELL ELECTRICAL
SERVICE PANEL

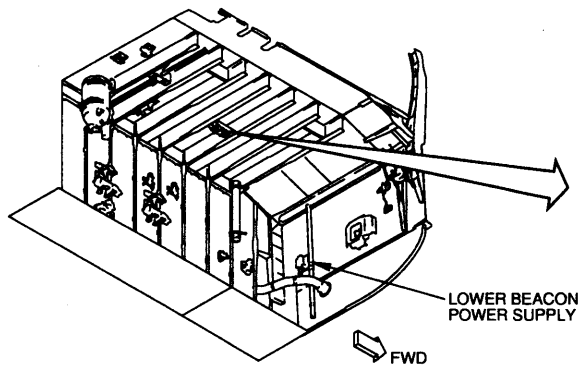


RIGHT WHEEL WELL
(LEFT WHEEL WELL SIMILAR)

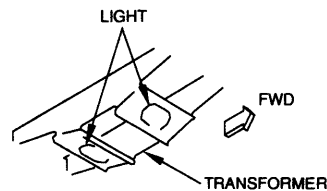




WHEEL WELL LIGHT ASSEMBLY

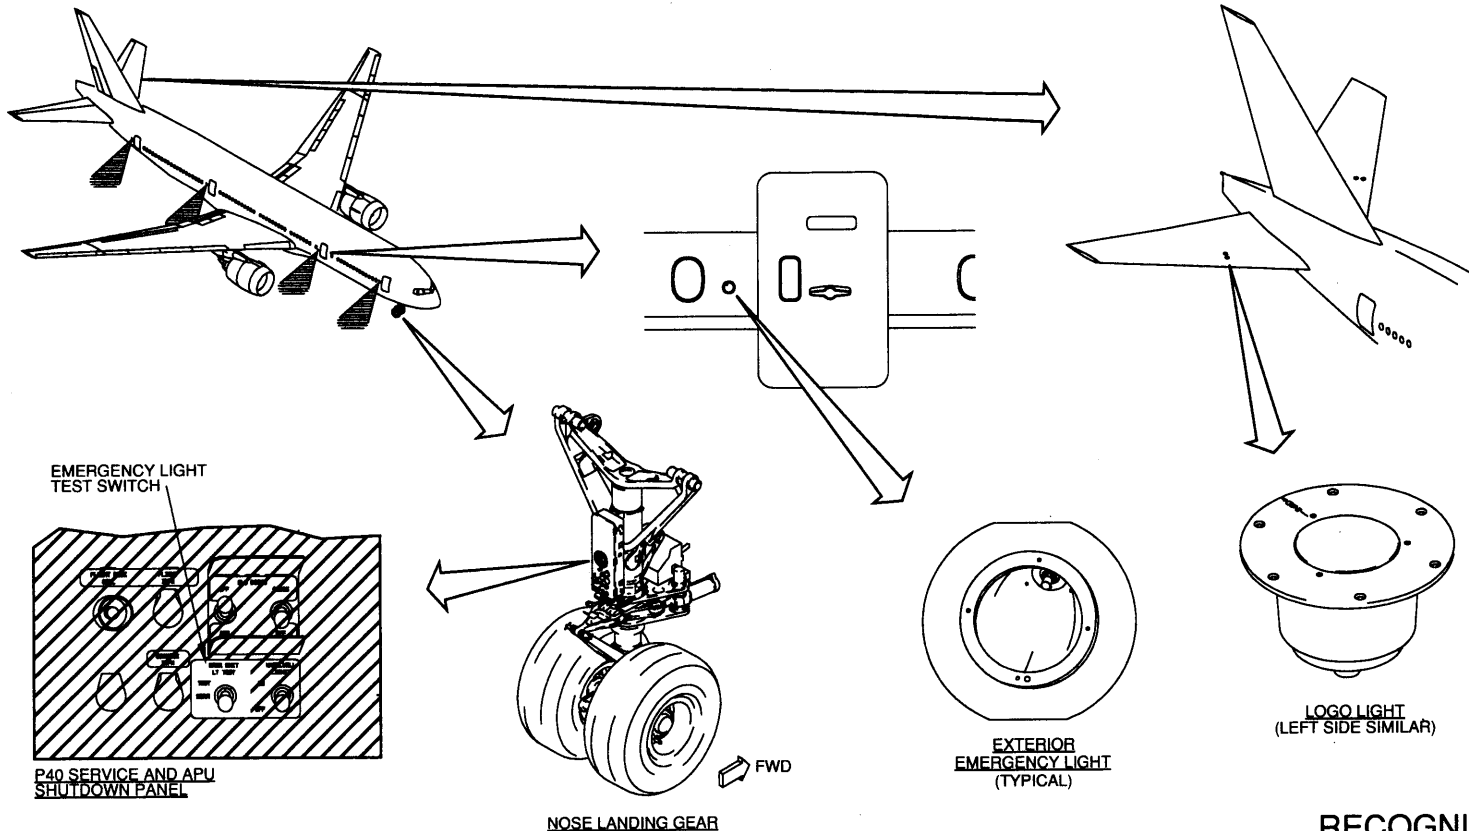

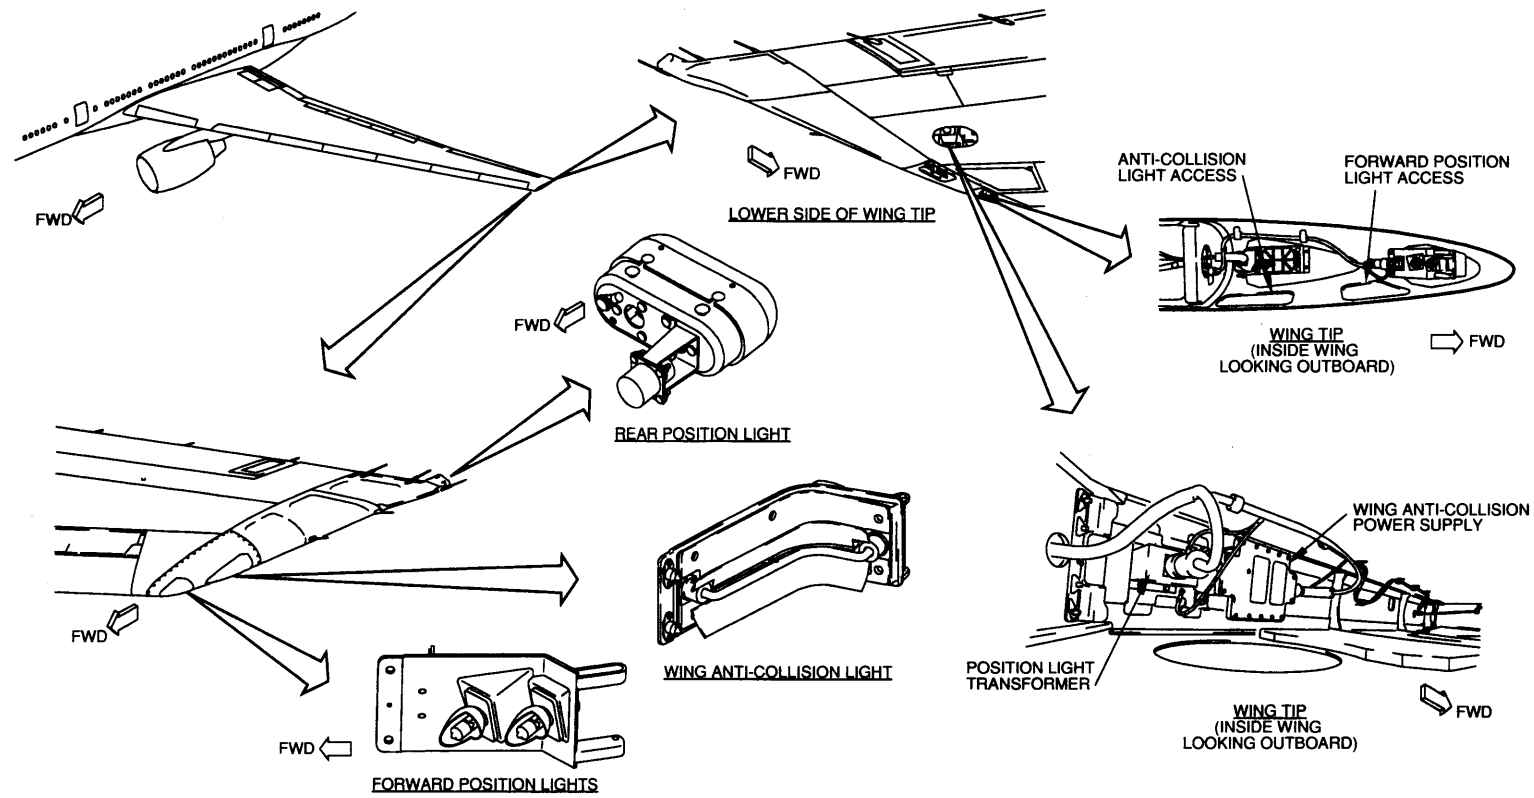


NOTE: LEFT SIDE SHOWN, RIGHT SIMILAR

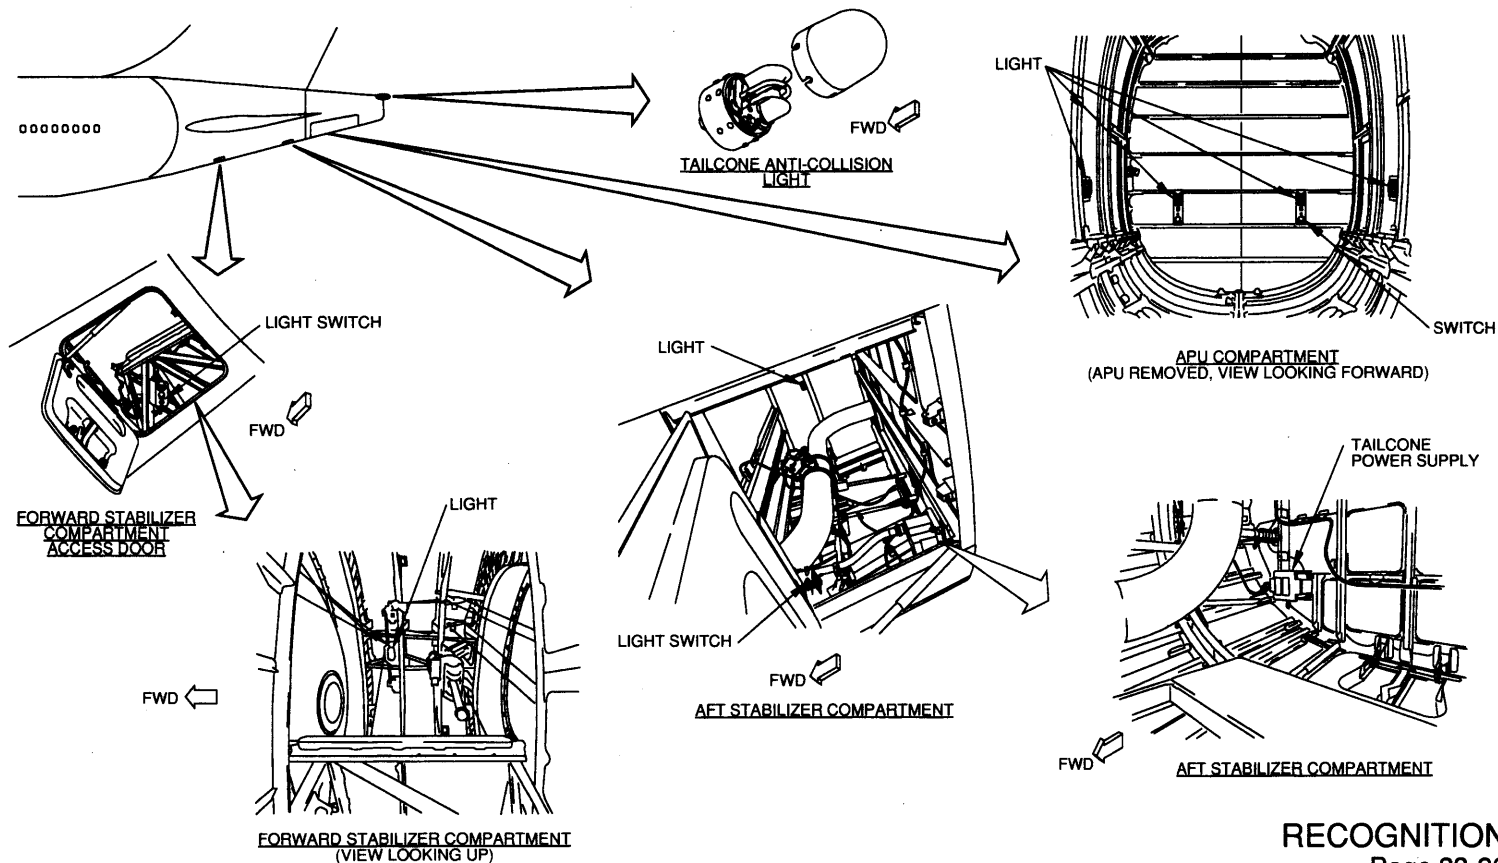


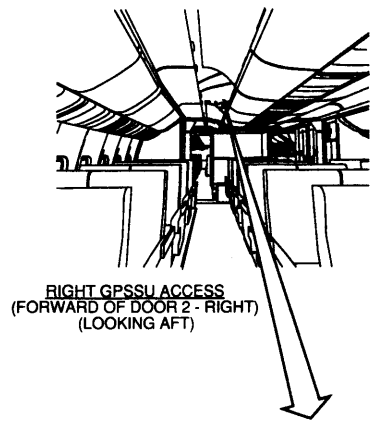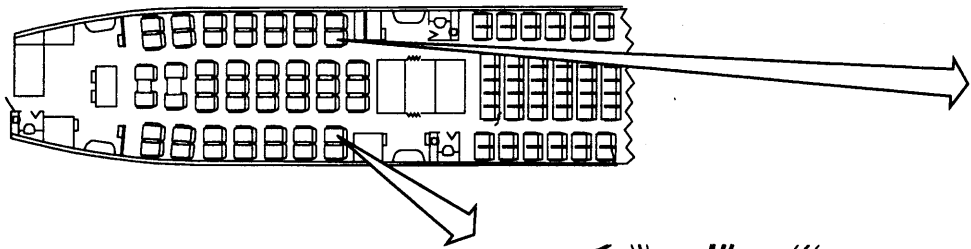


RIGHT GPSSU ACCESS
(FORWARD OF DOOR 2 - RIGHT)
(LOOKING AFT)

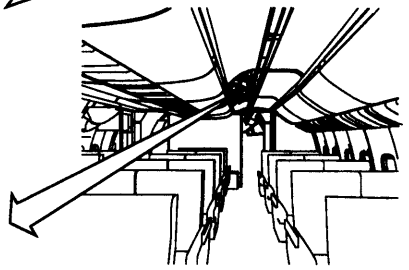


LEFT GPSSU ACCESS
(FORWARD OF DOOR 2 - LEFT)
(LOOKING AFT)

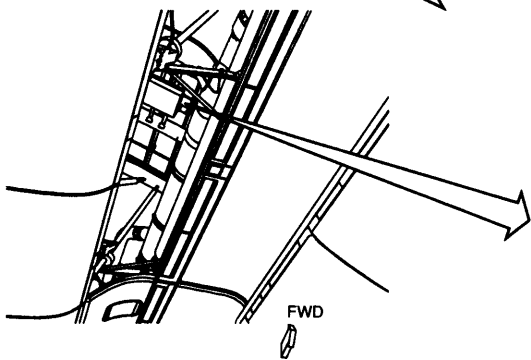



FWD
↗

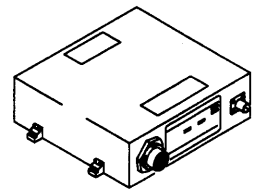



GLOBAL POSITIONING SYSTEM
SENSOR UNIT (GPSSU)

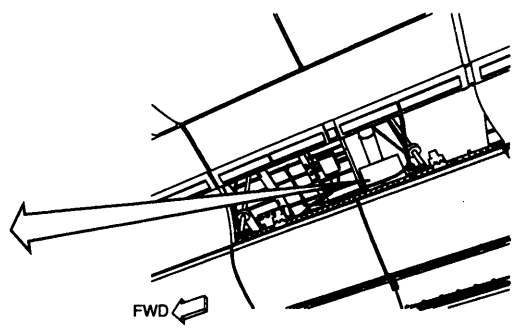


FWD
↖

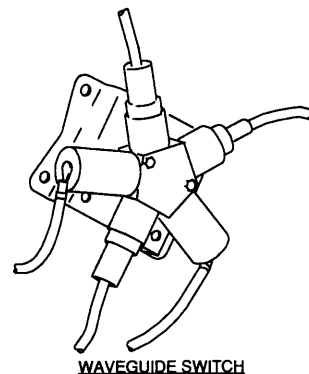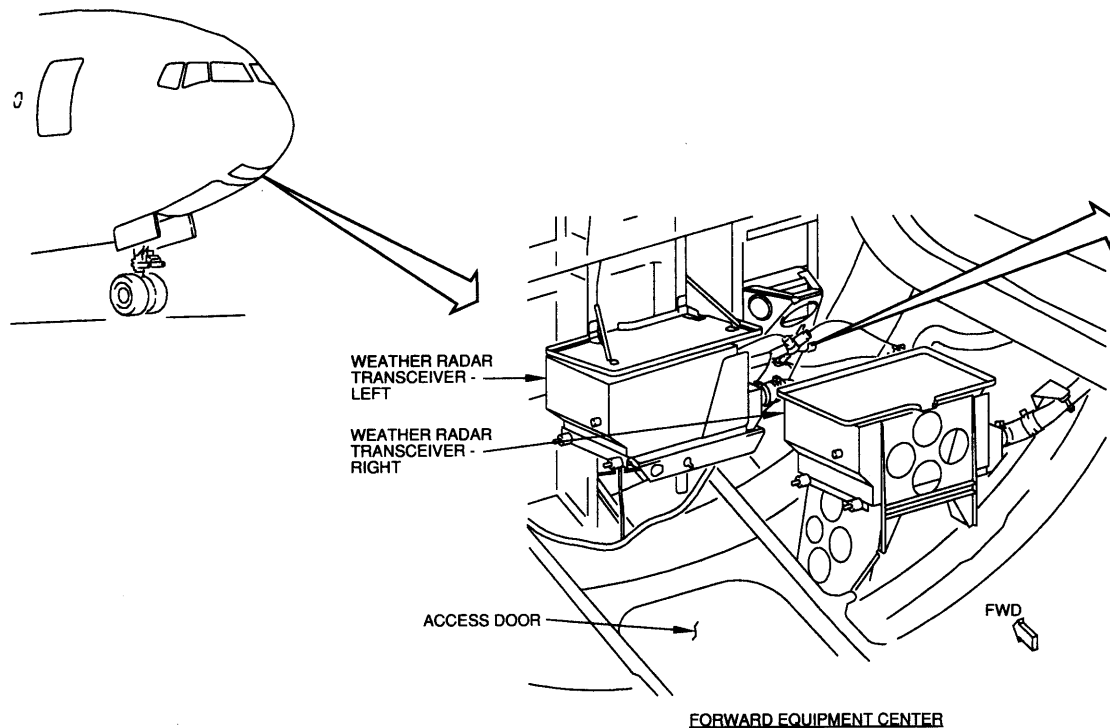

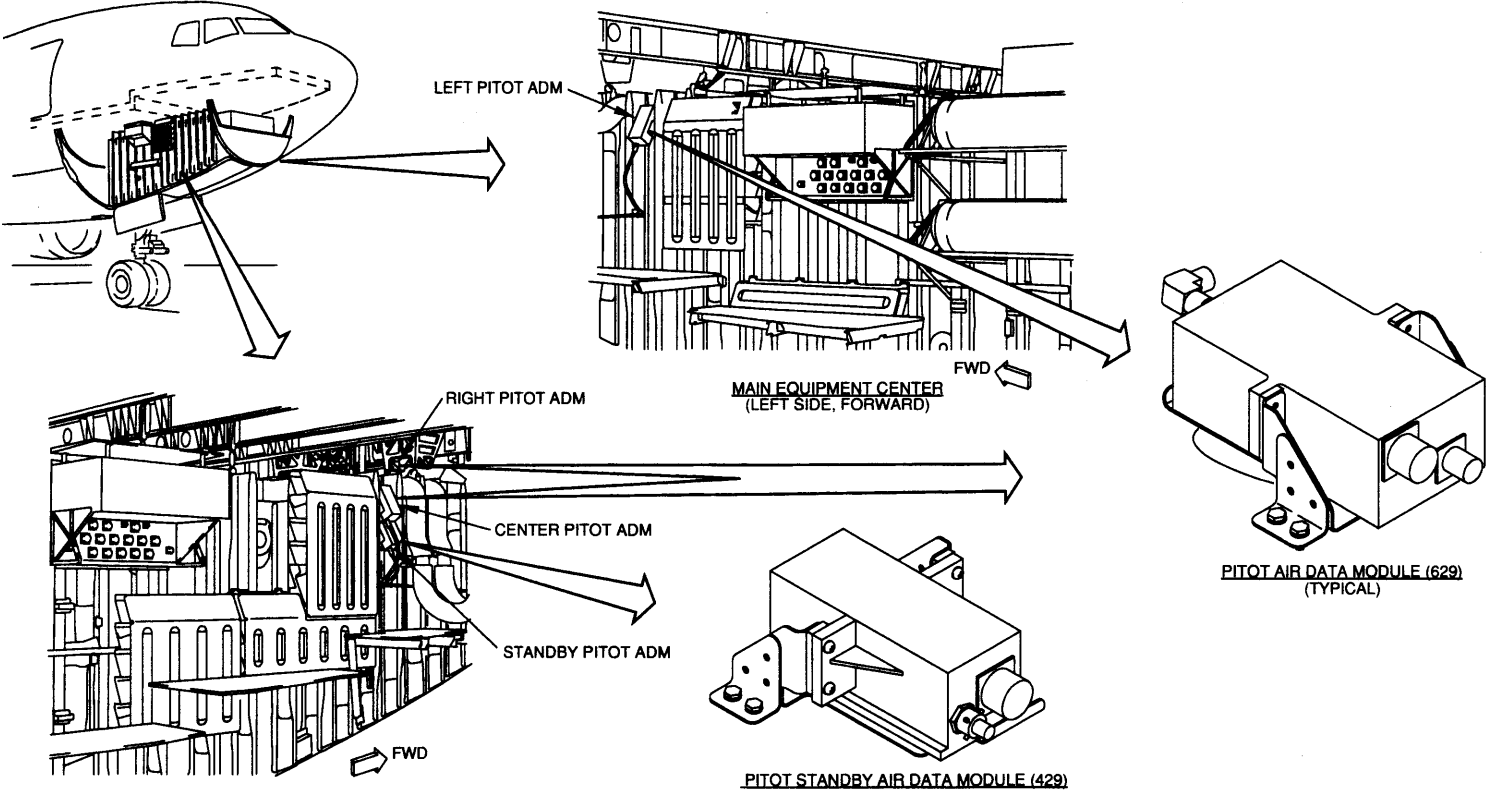


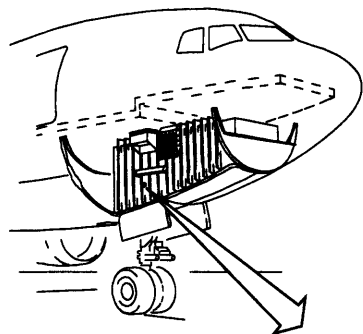


MAIN EQUIPMENT CENTER
(RIGHT CRAWL SPACE)

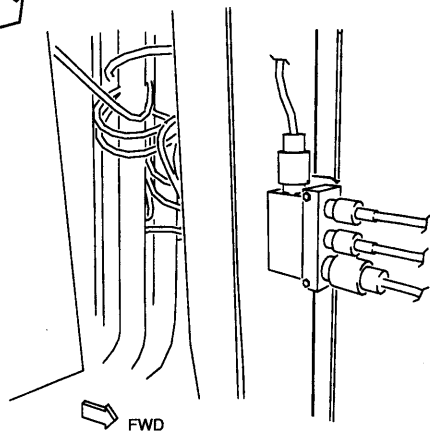


ILS RIGHT G/S ANTENNA SWITCH

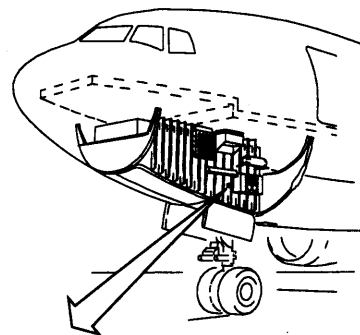


MAIN EQUIPMENT CENTER
(LEFT CRAWL SPACE)

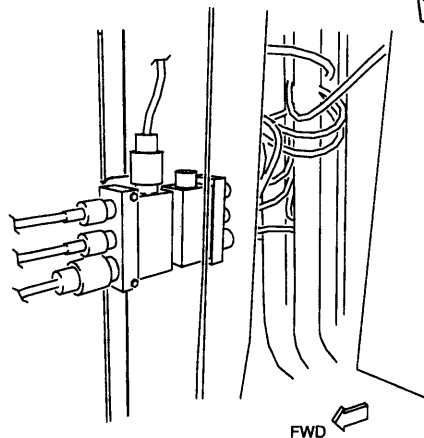


ILS LEFT AND CENTER G/S ANTENNA SWITCH

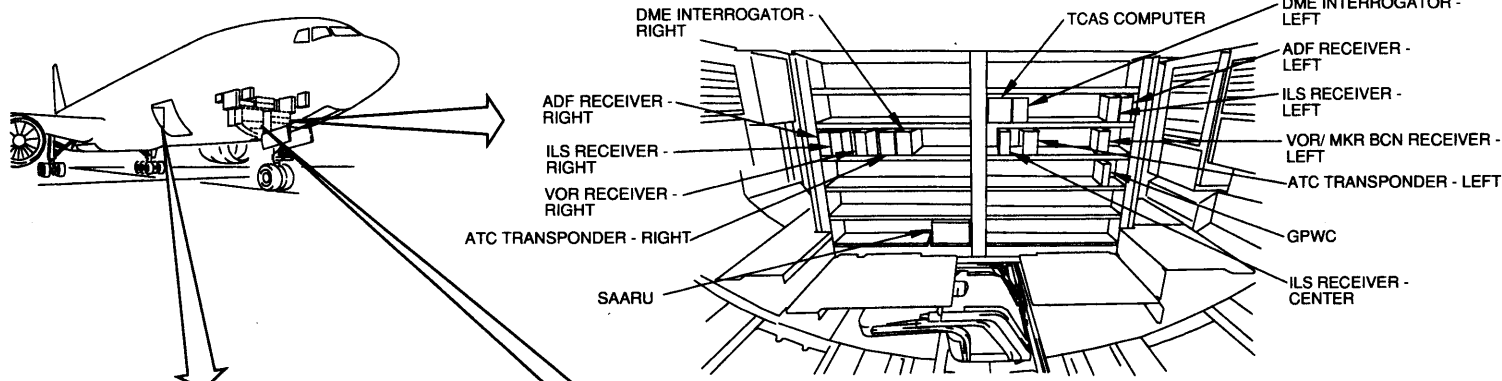


**MAIN EQUIPMENT CENTER
(LOOKING AFT)**

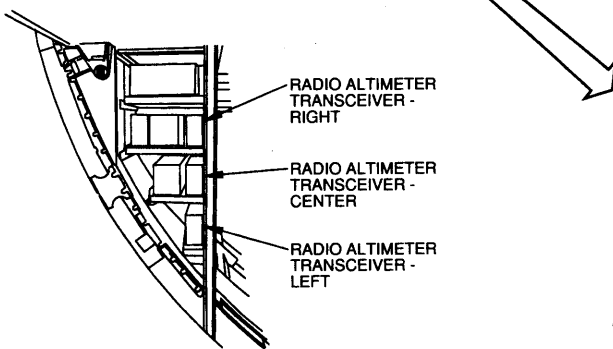



E5 RACK

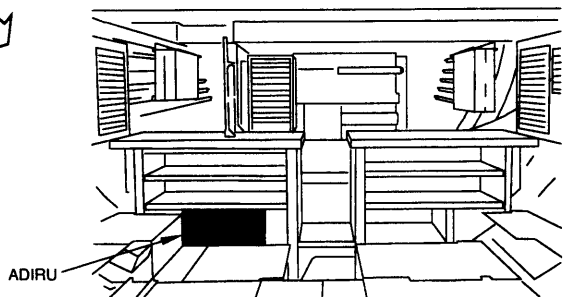


**MAIN EQUIPMENT CENTER
(LOOKING FORWARD)**

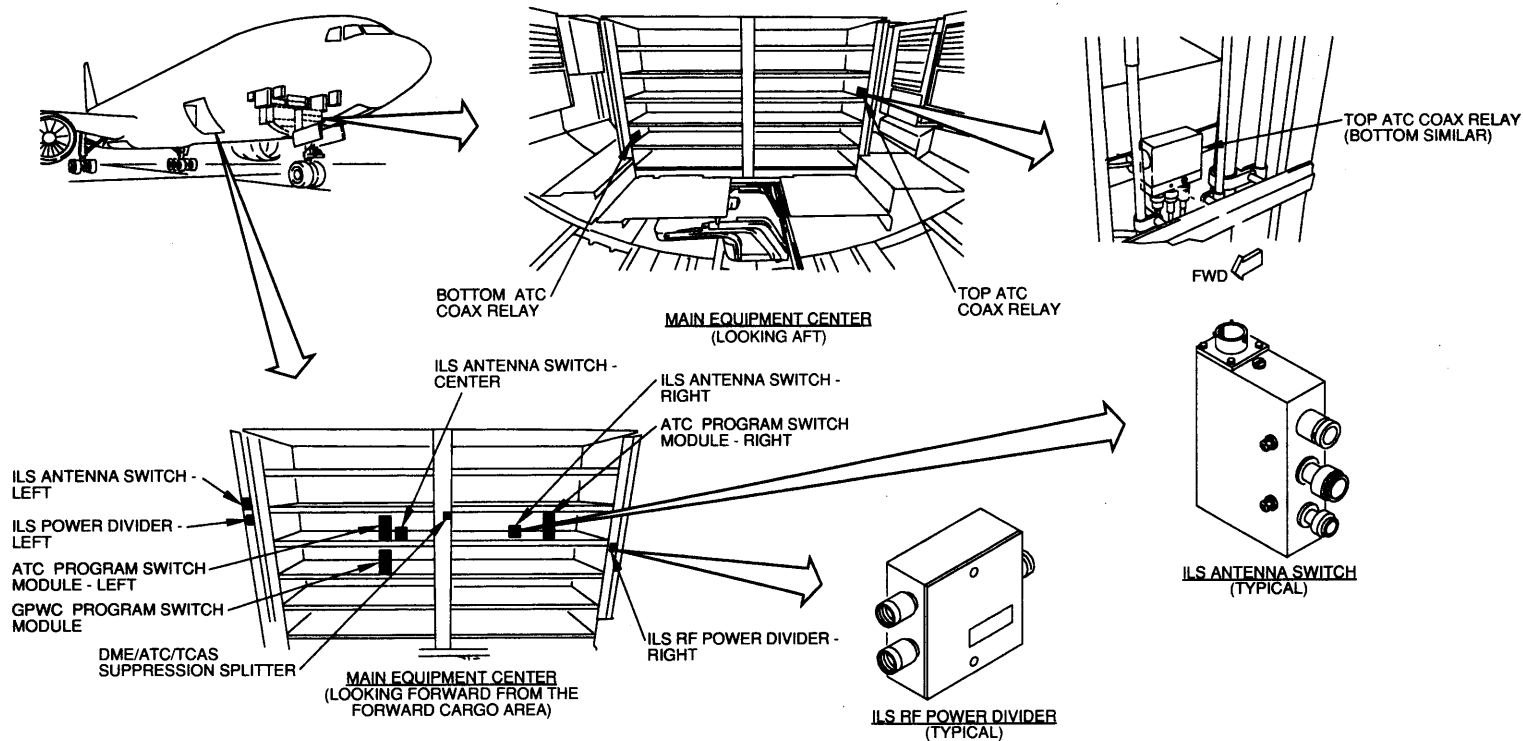

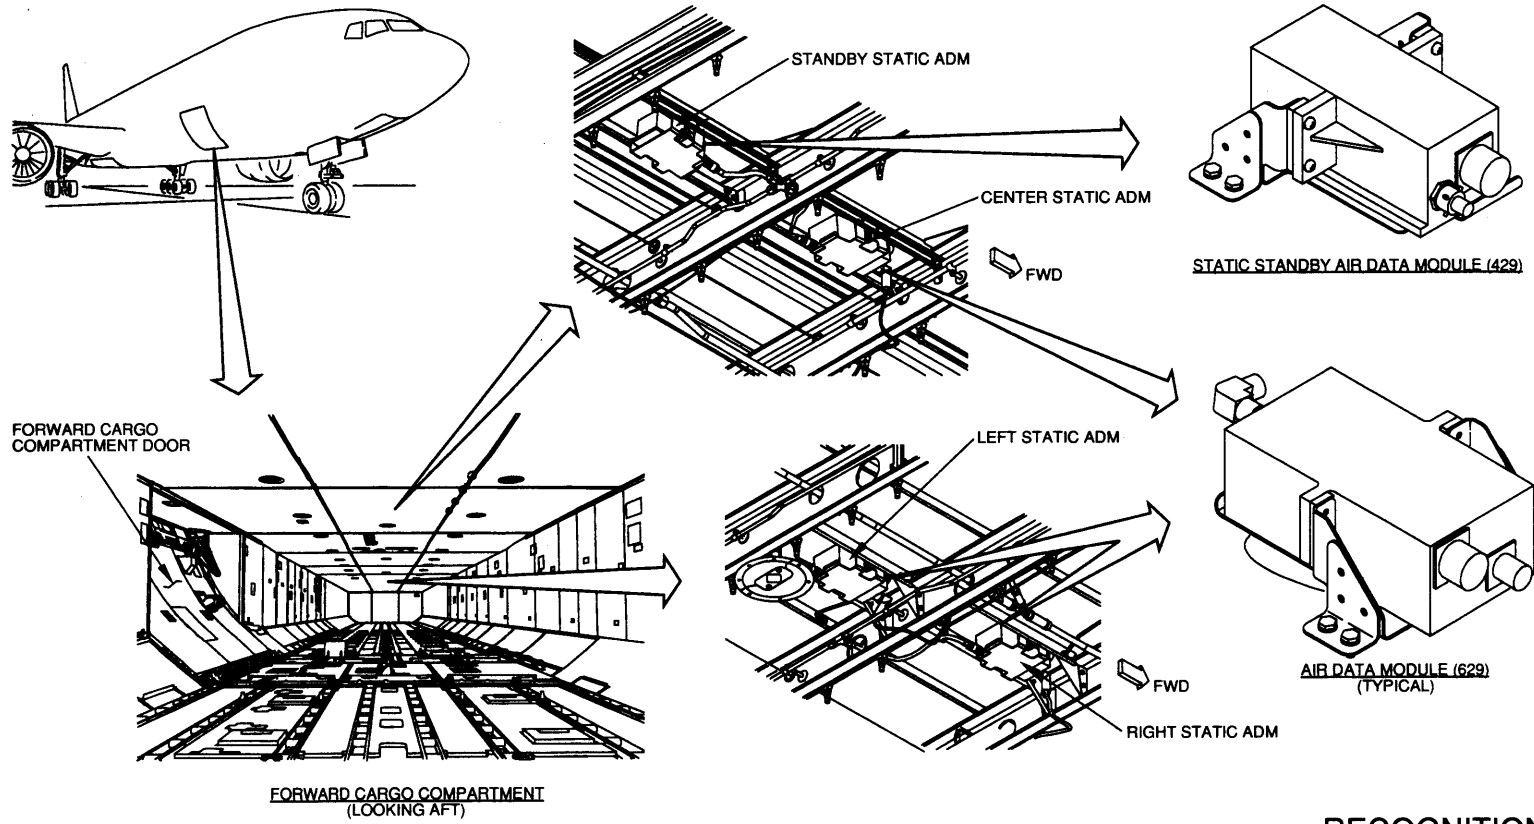


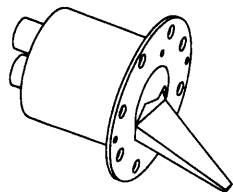


ANGLE OF ATTACK
SENSOR

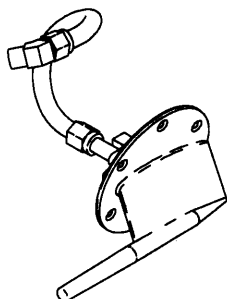




PITOT PROBE (3)

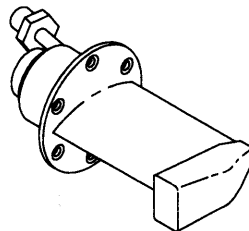


TOTAL AIR TEMPERATURE
PROBE




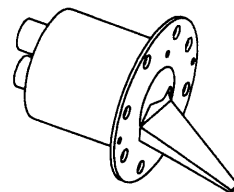




ANGLE OF ATTACK
SENSOR

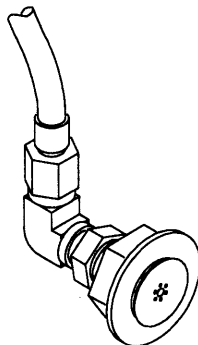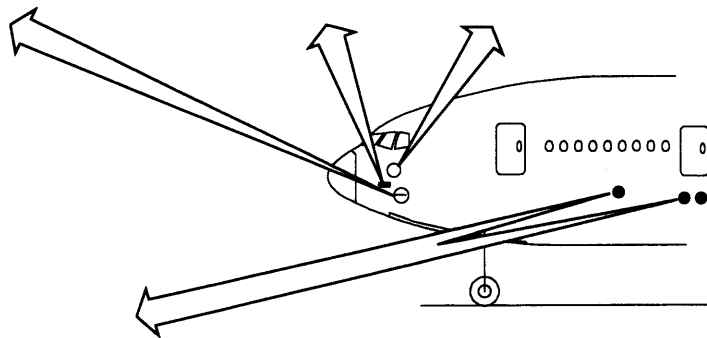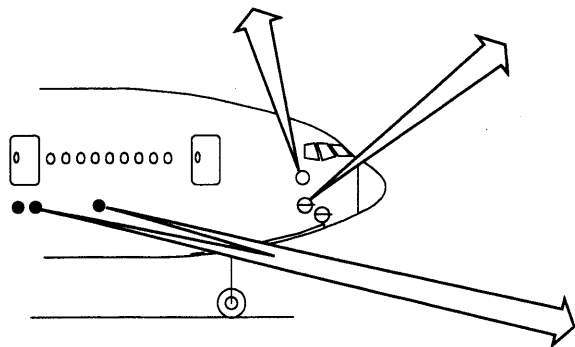


STATIC PORT (6)

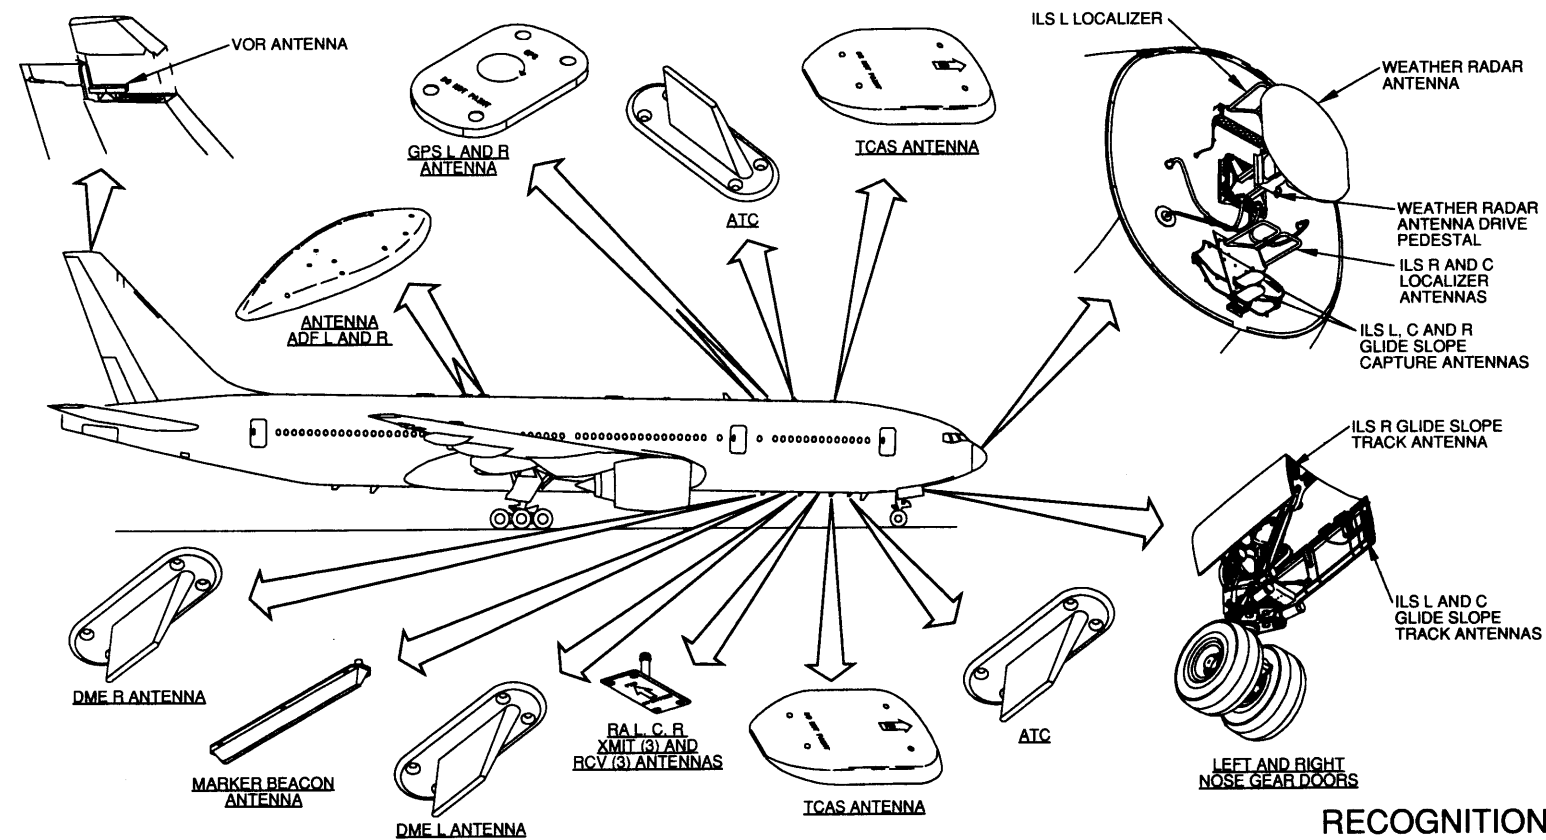


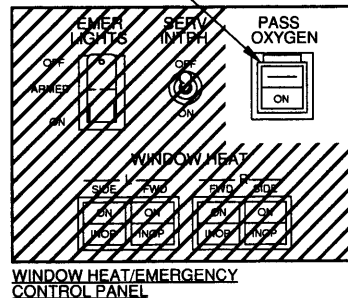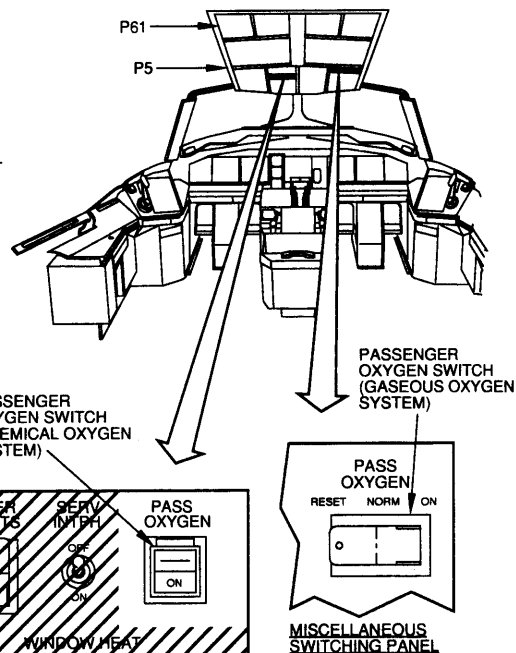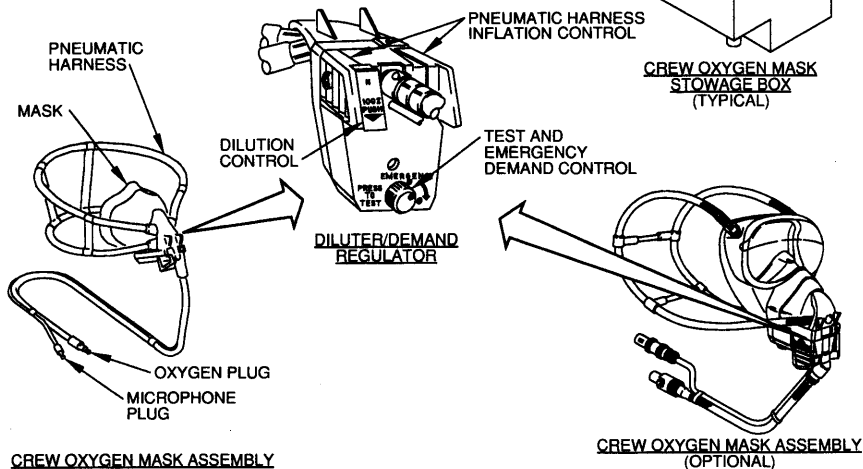
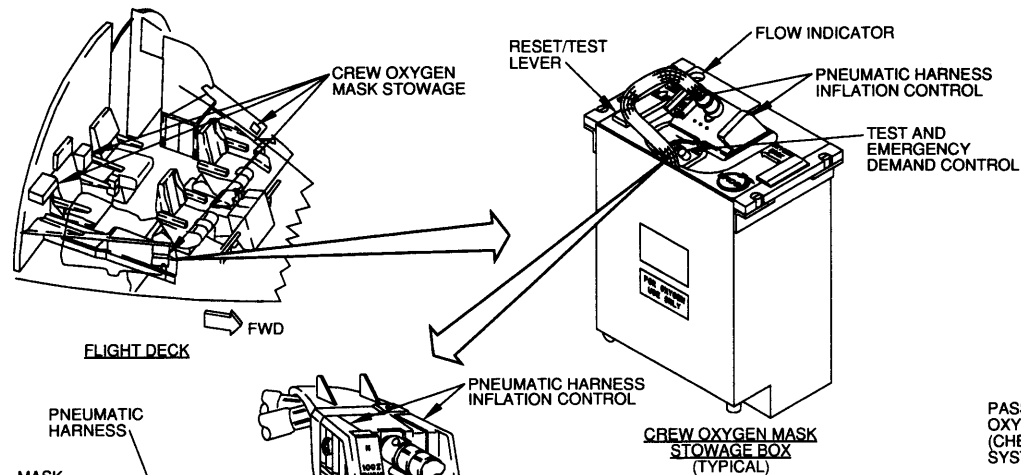


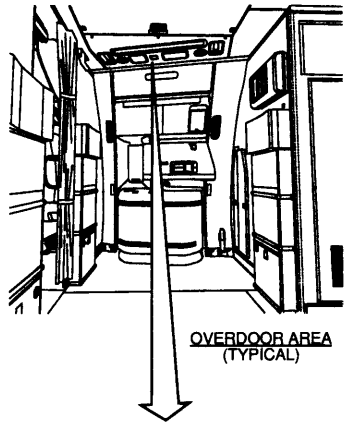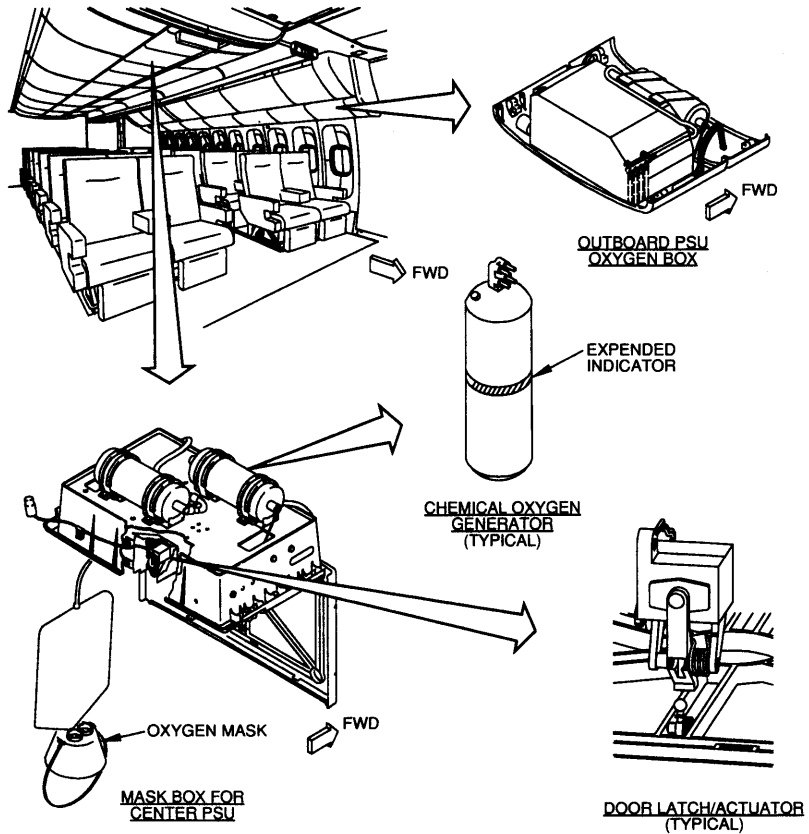

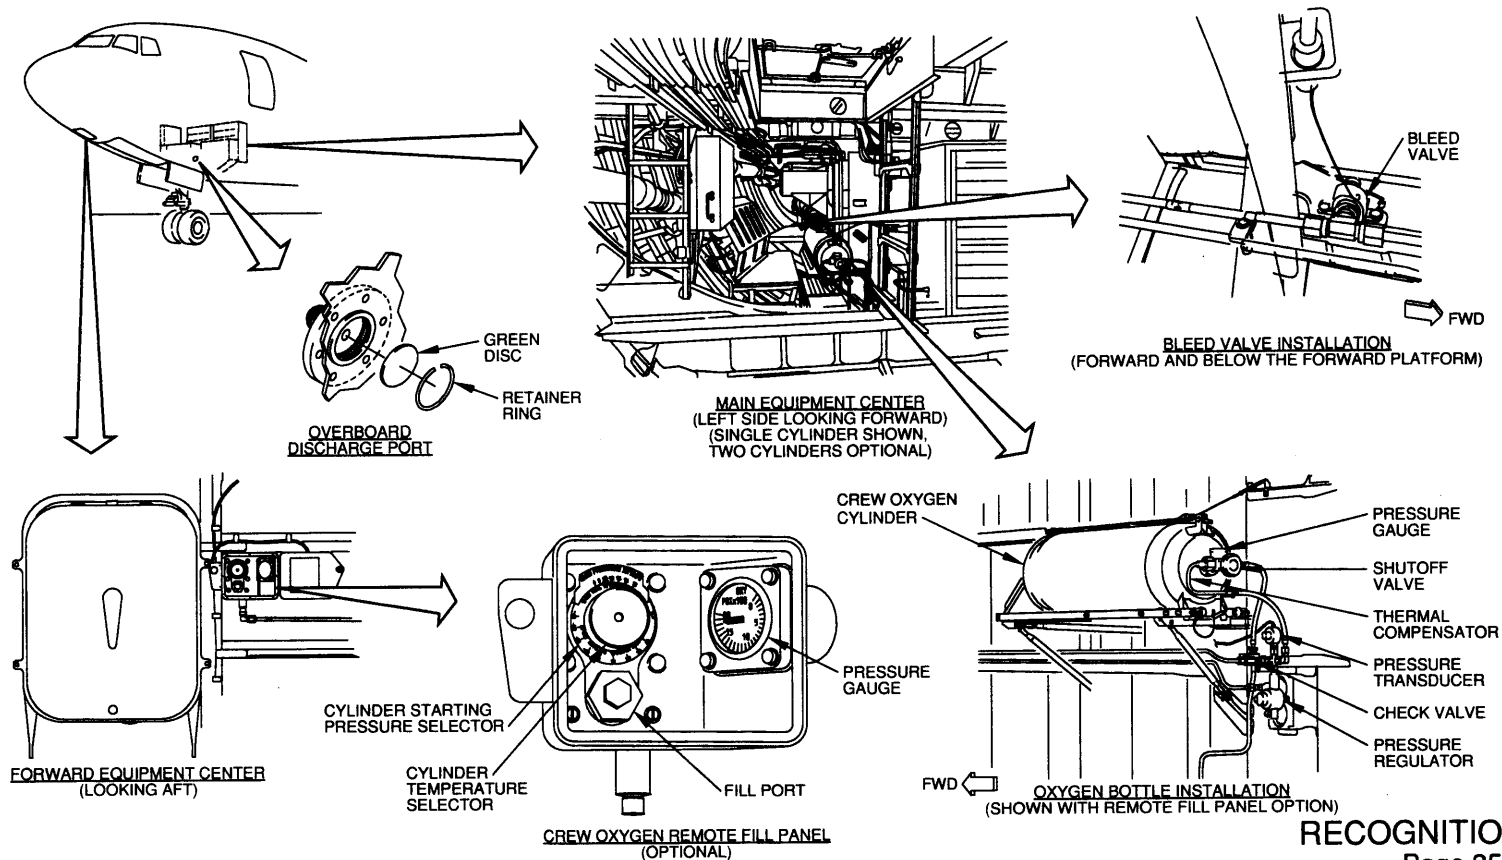



RECOGNITION



 


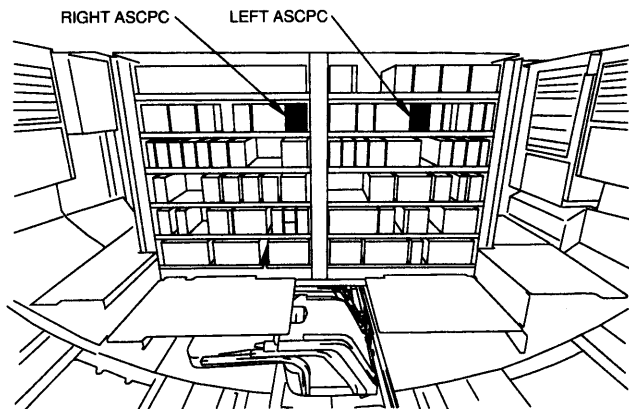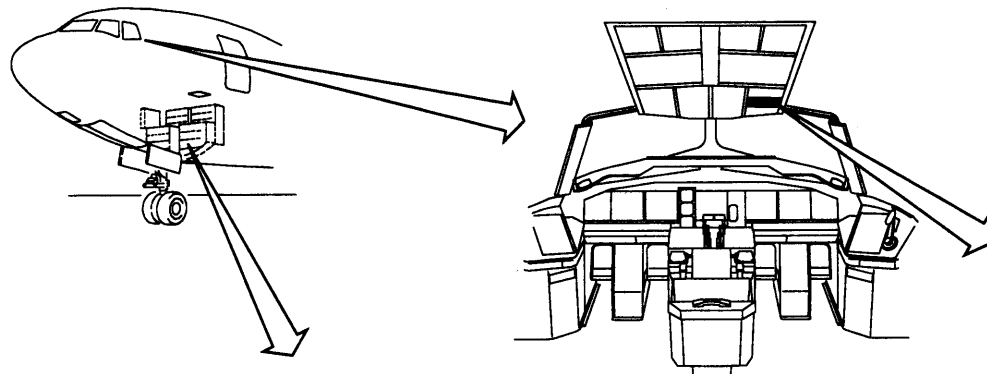


MAIN EQUIPMENT CENTER
(LOOKING AFT)

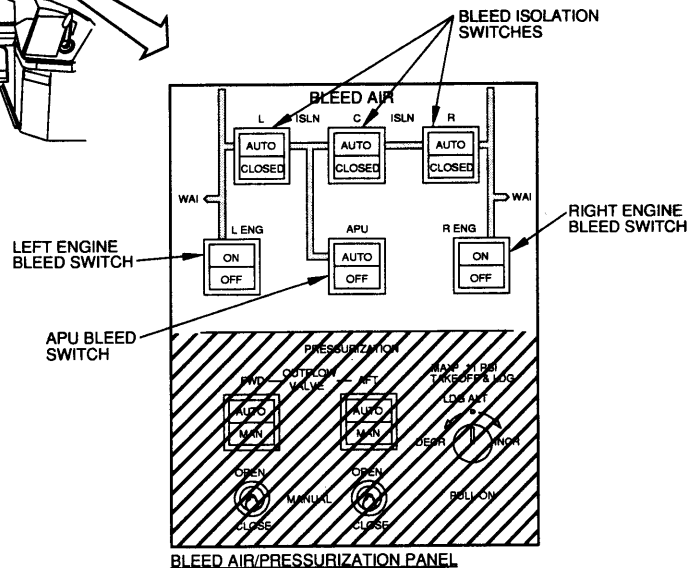

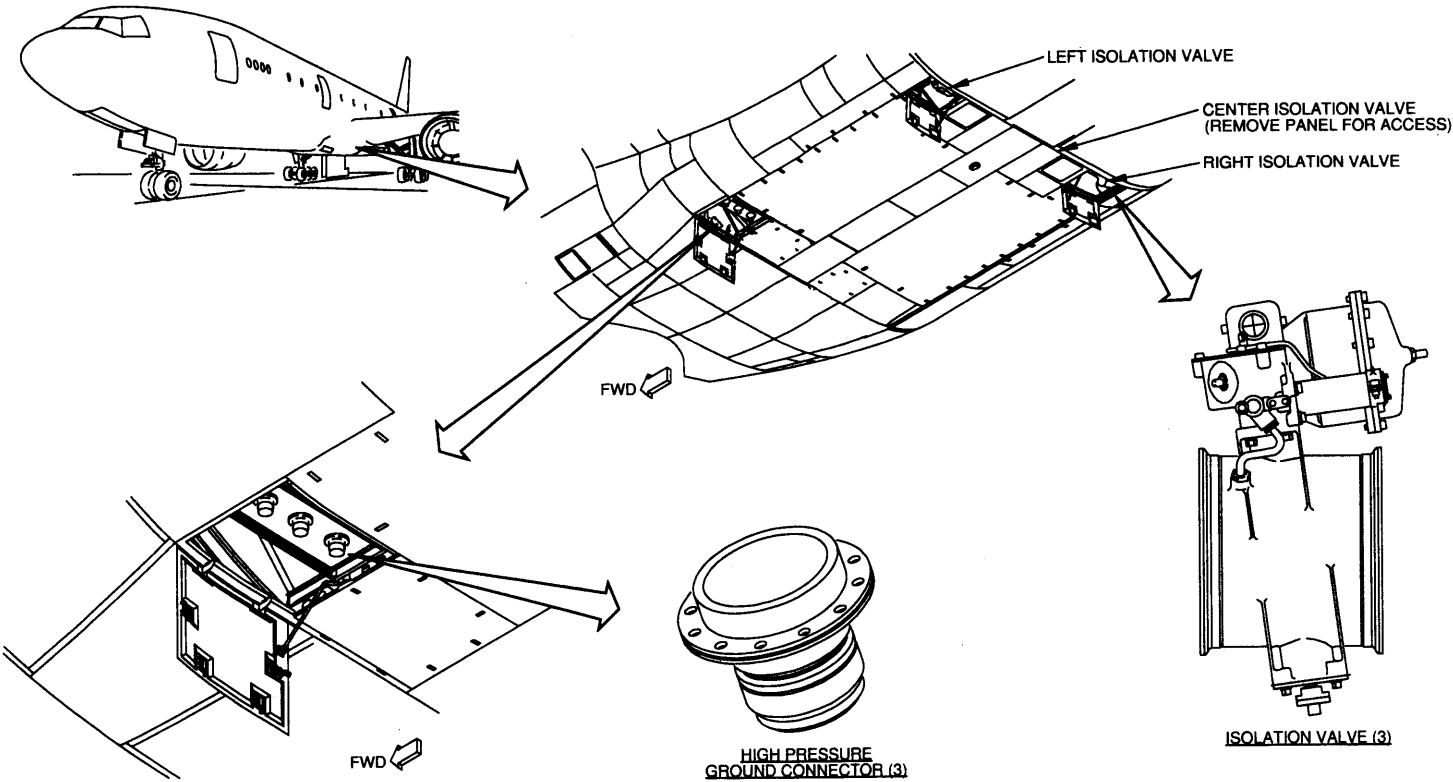


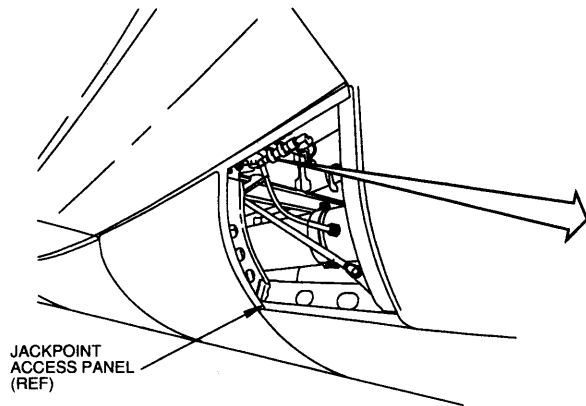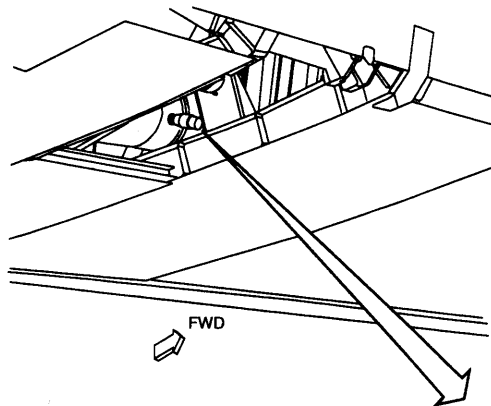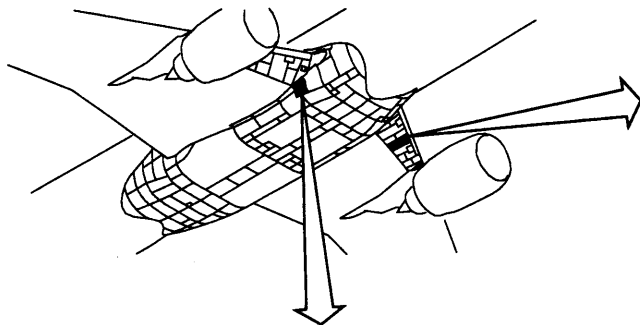


WING-TO-BODY FAIRING

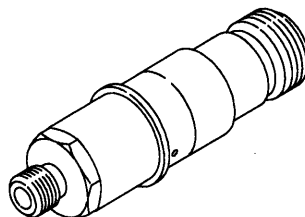





MANIFOLD PRESSURE SENSOR
(LEFT SIDE SIMILAR)

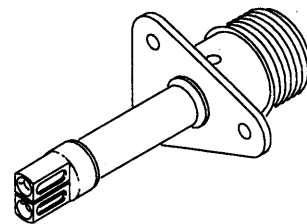



MANIFOLD FLOW SENSOR
(RIGHT SIDE SIMILAR)

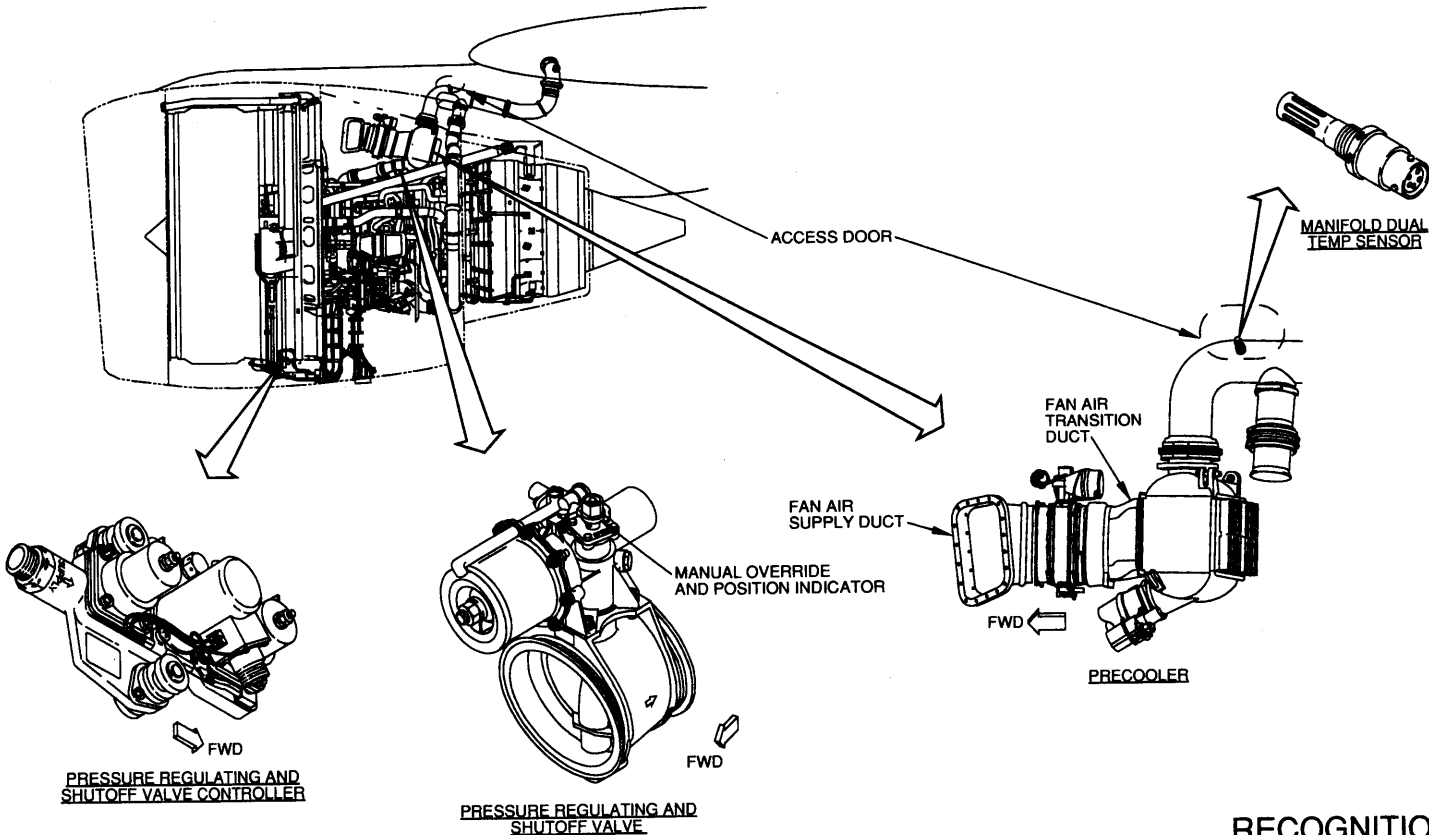


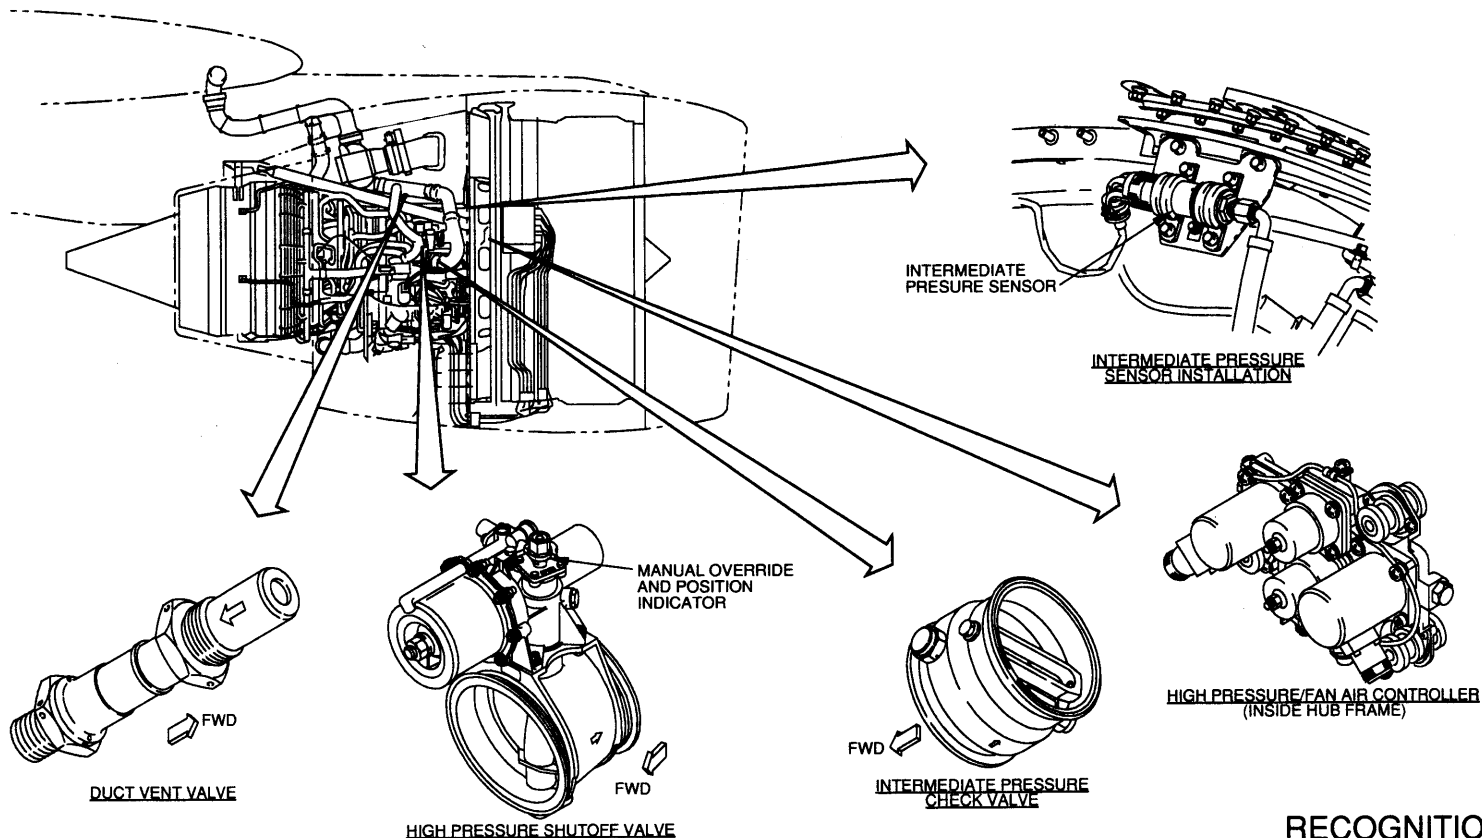


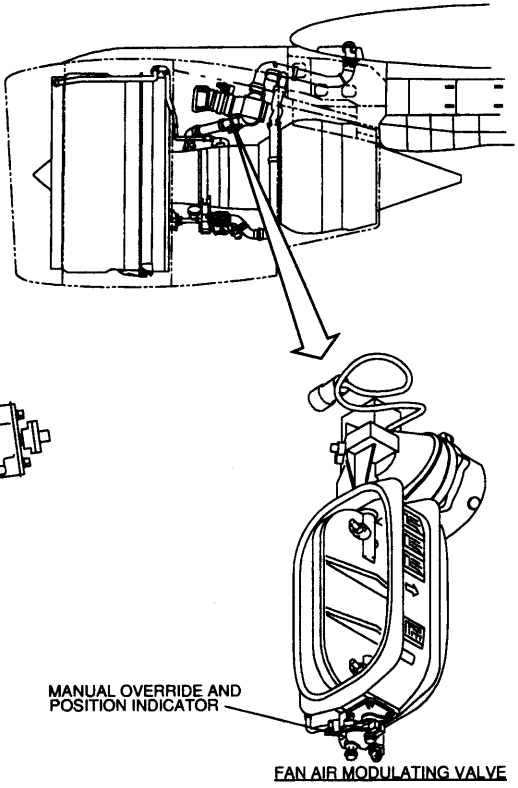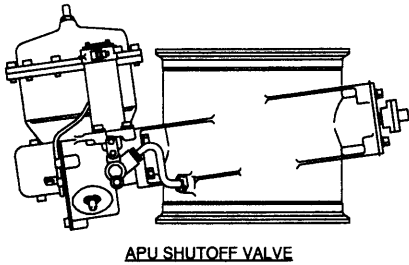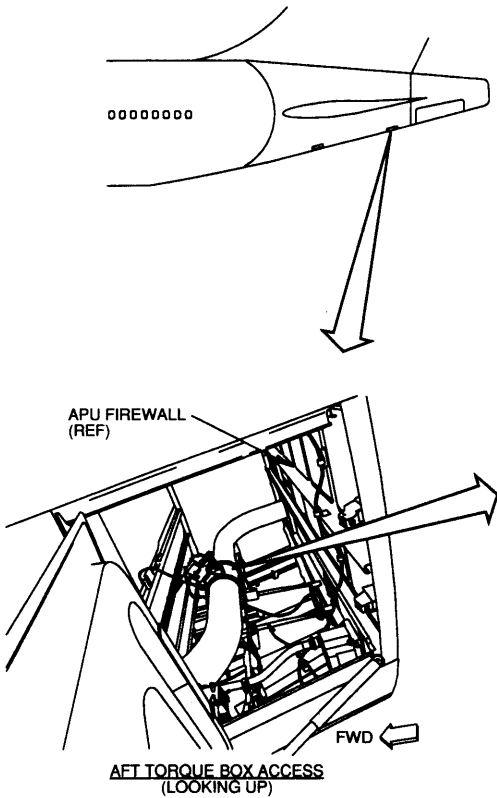


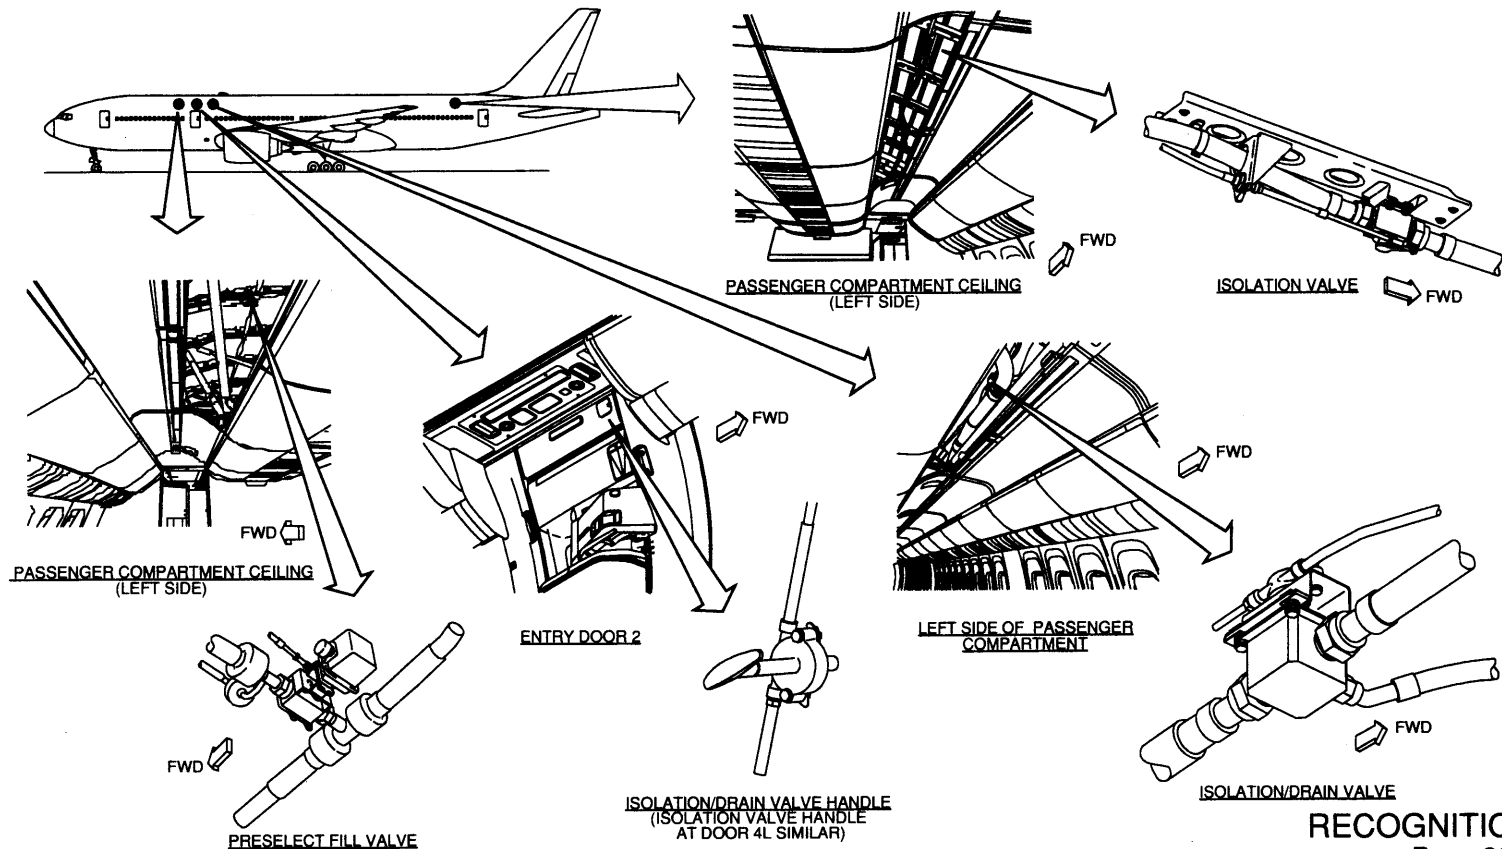




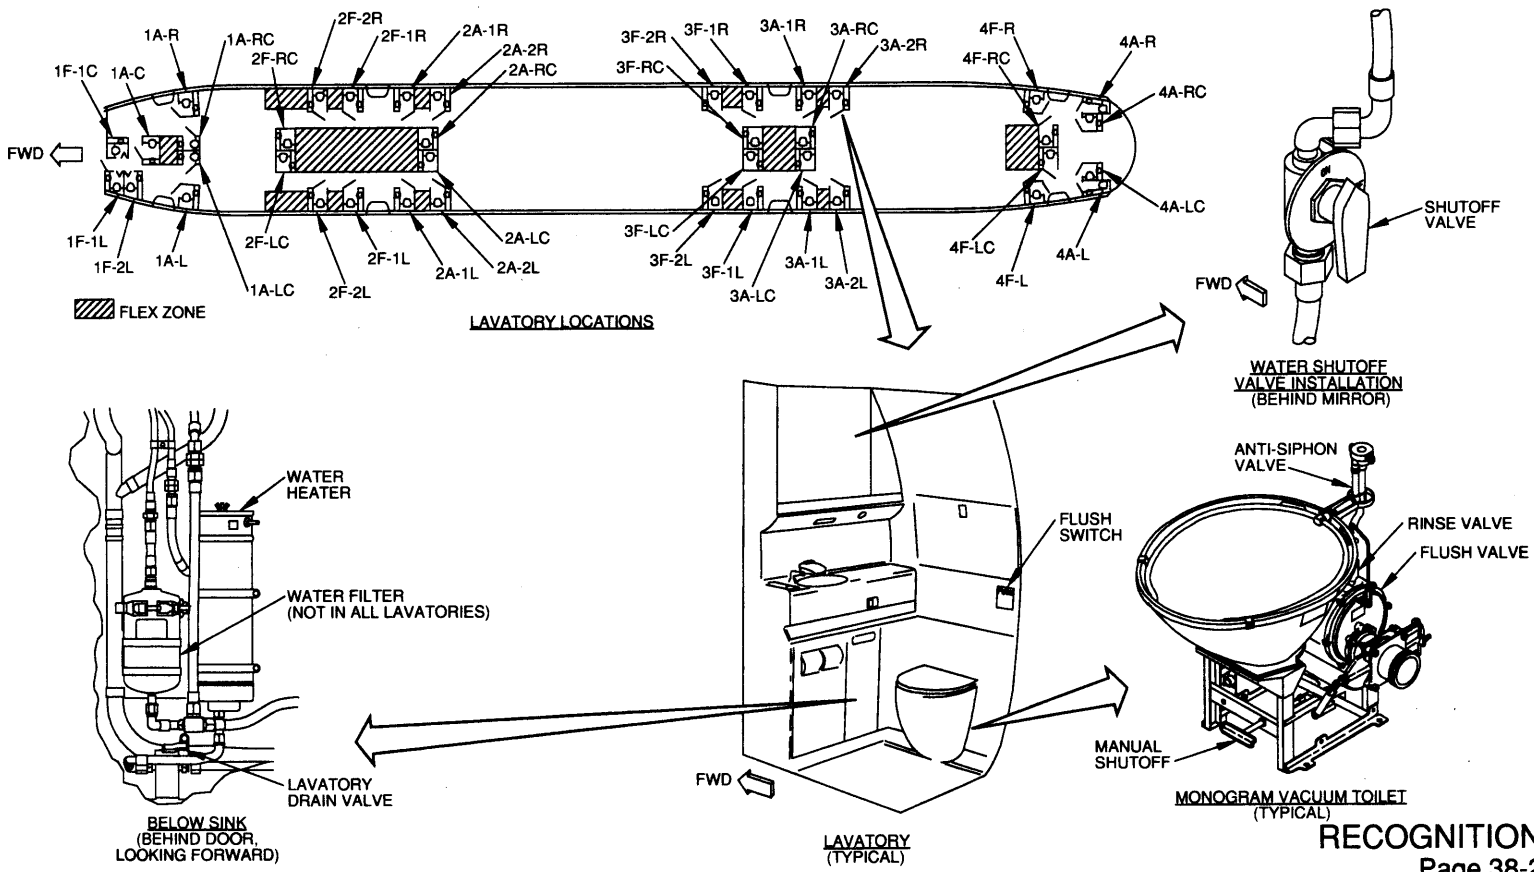


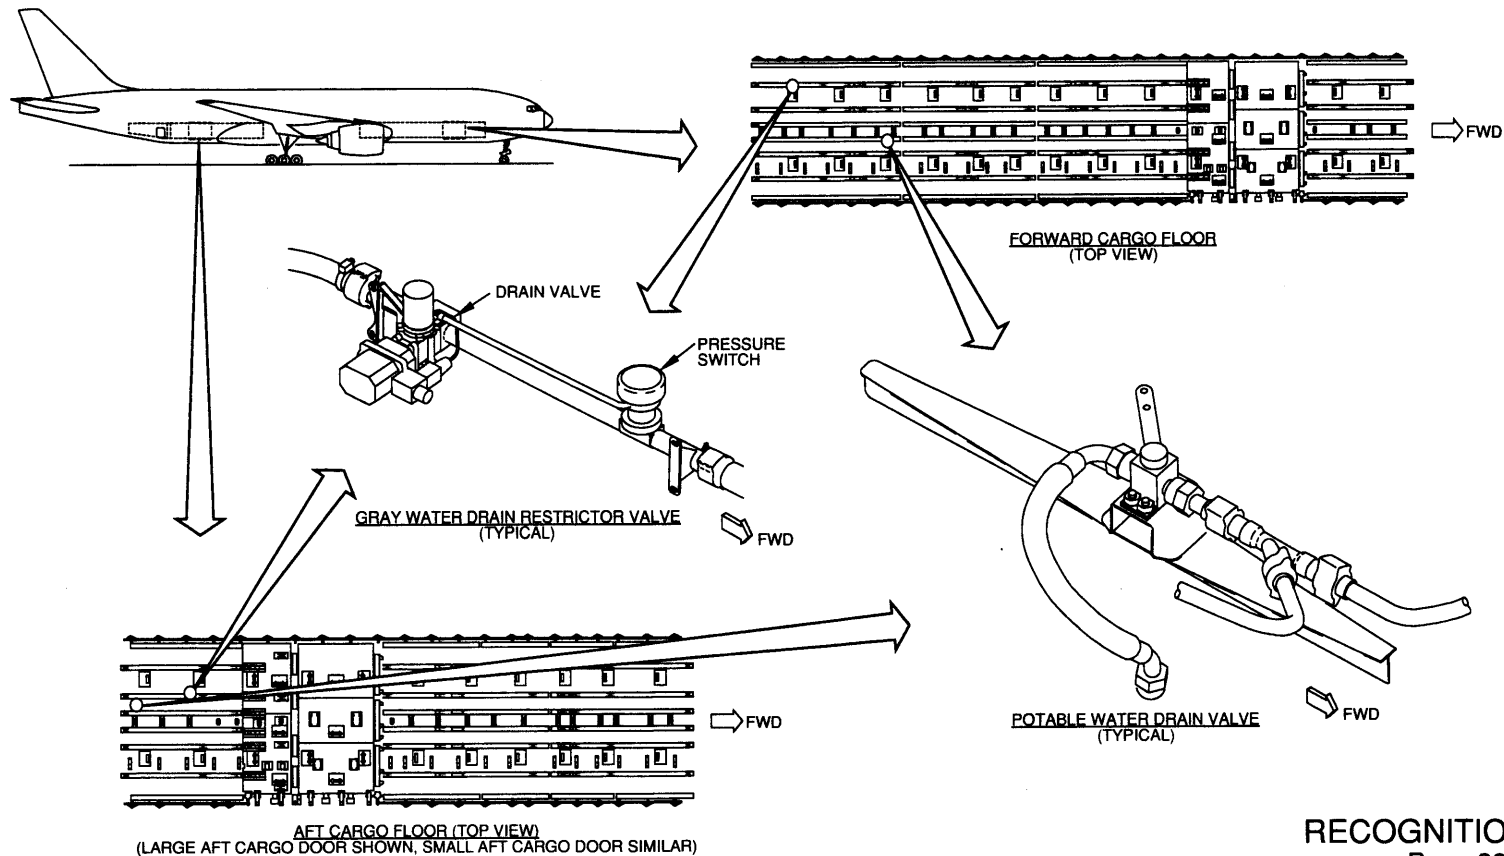

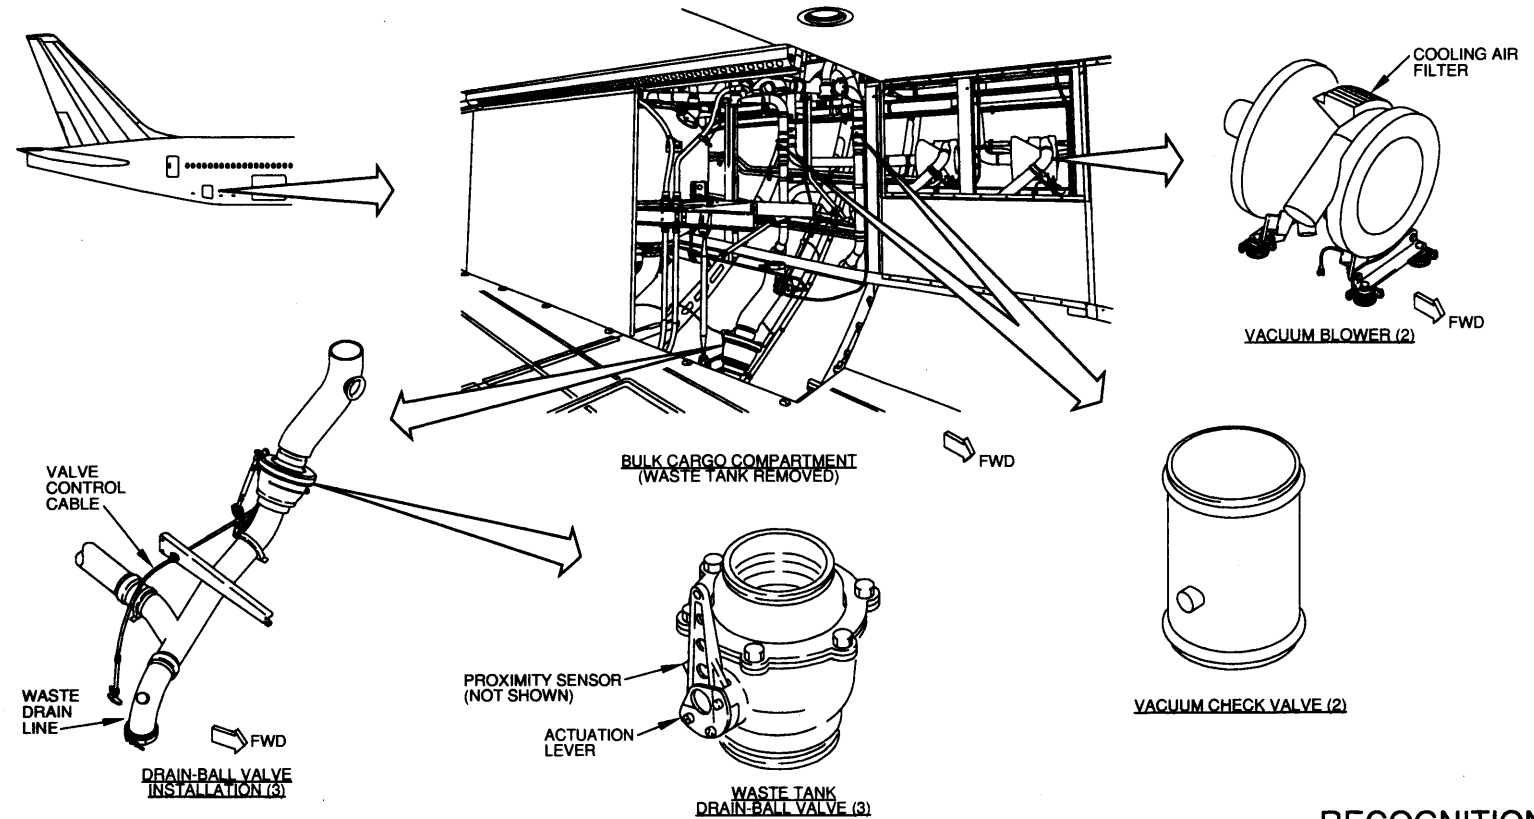


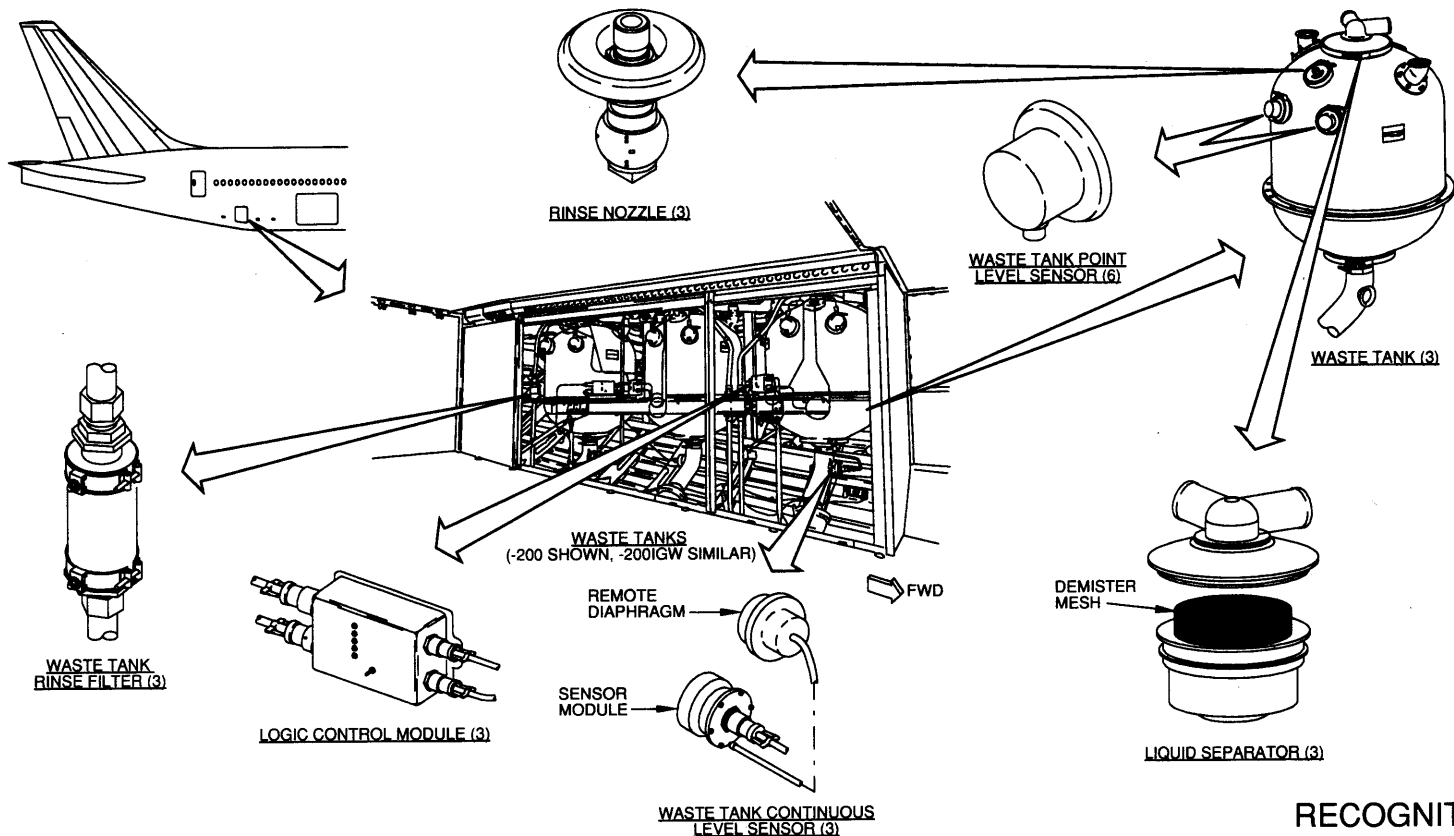





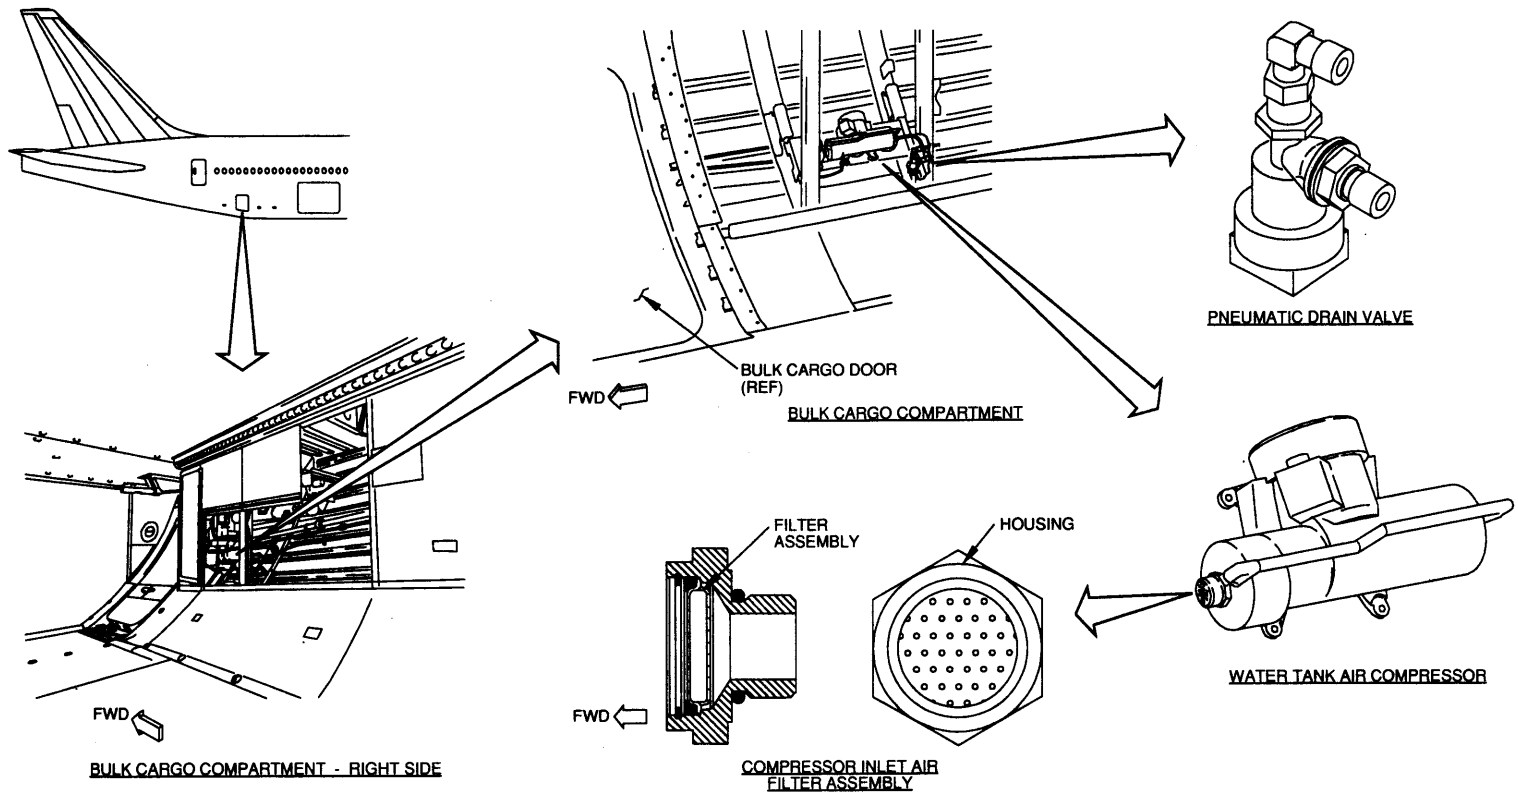


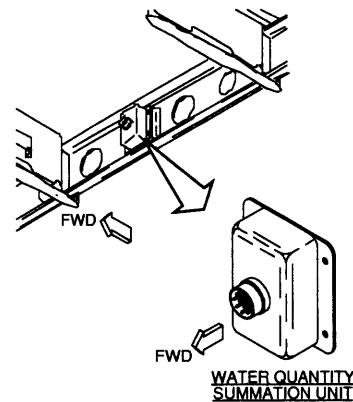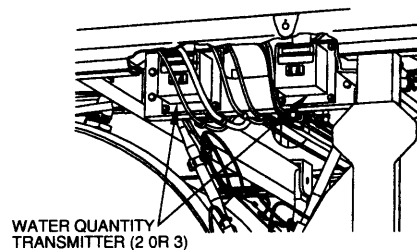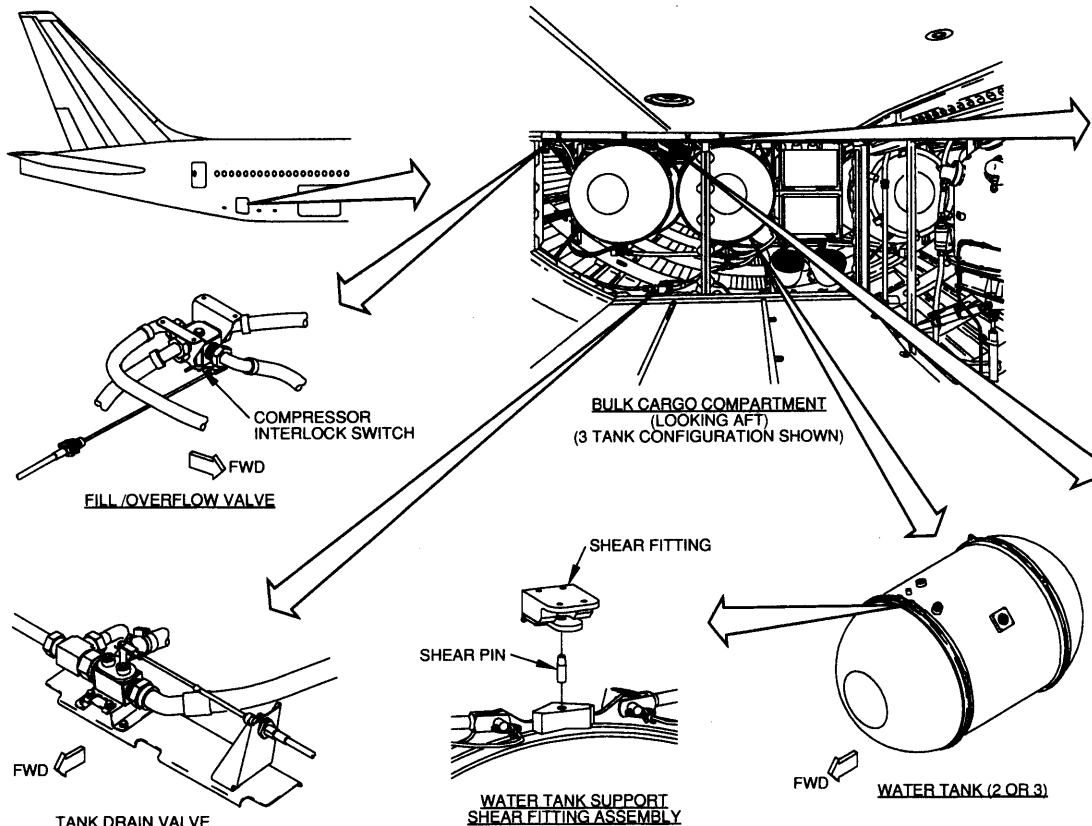






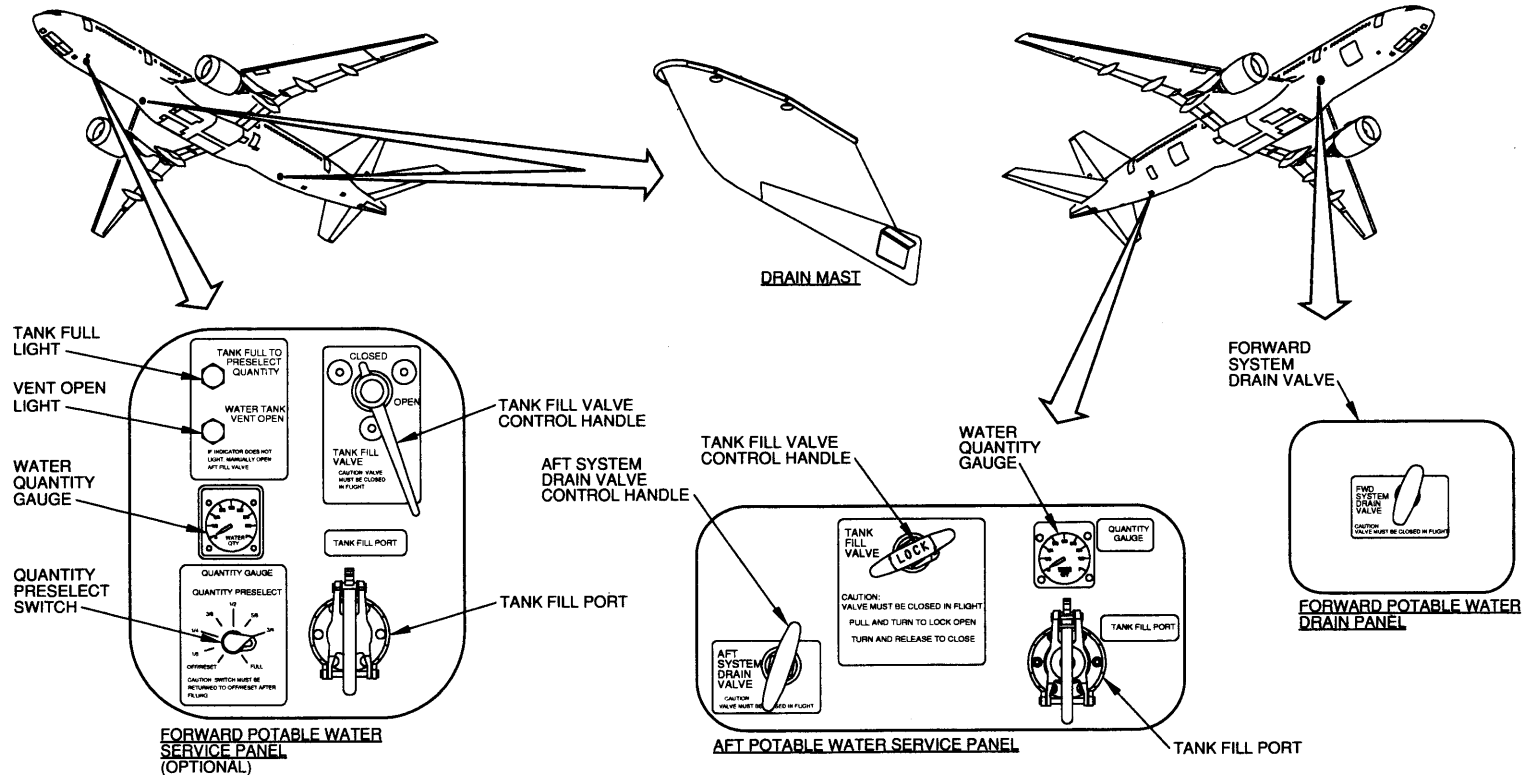

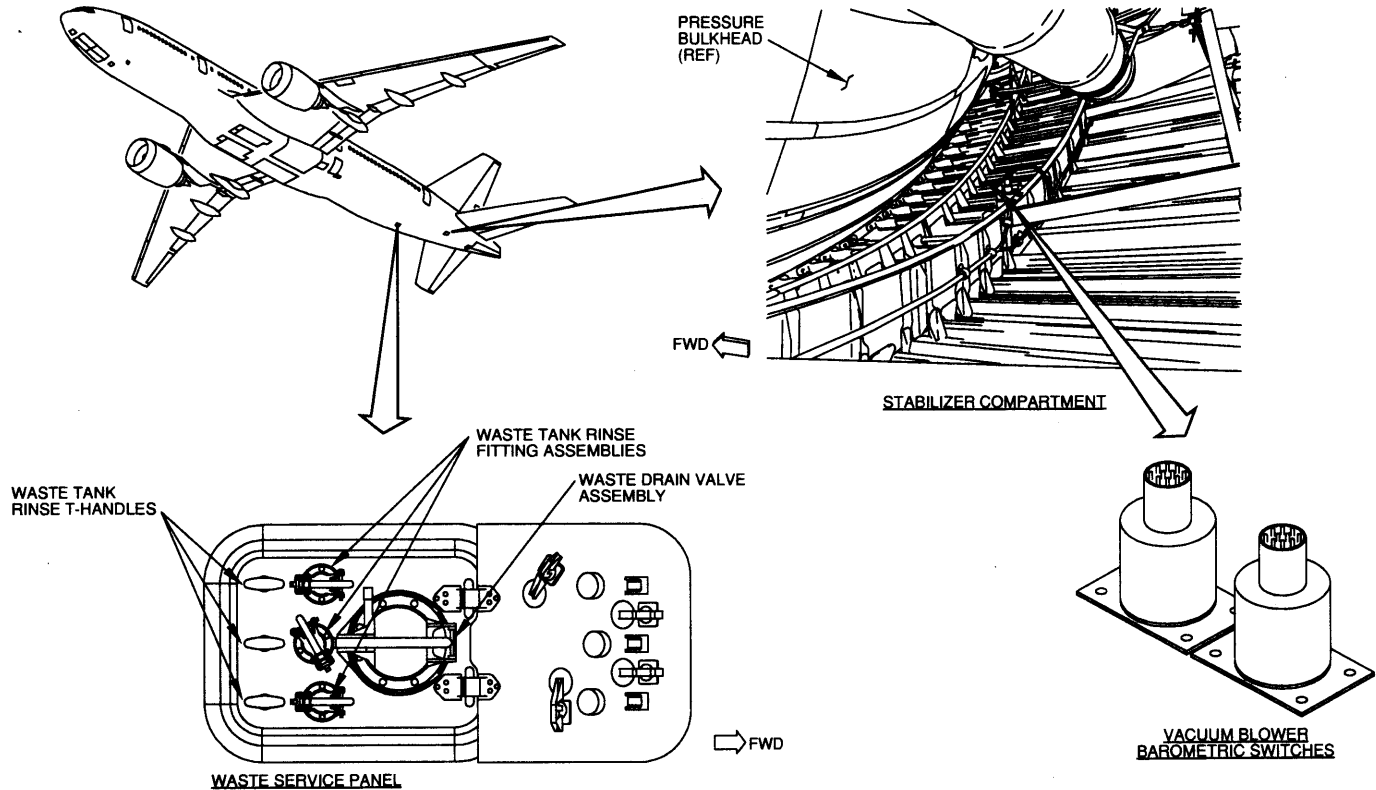


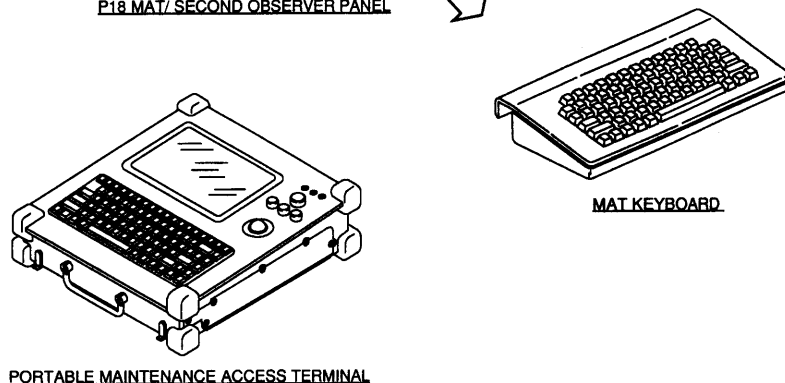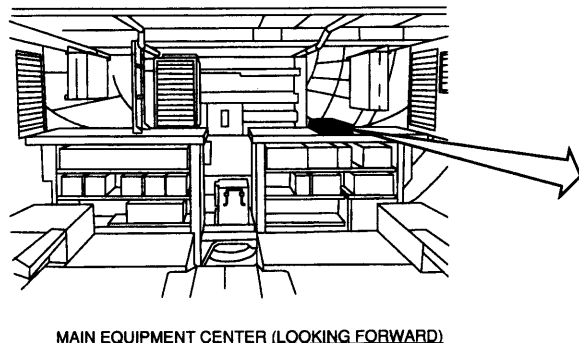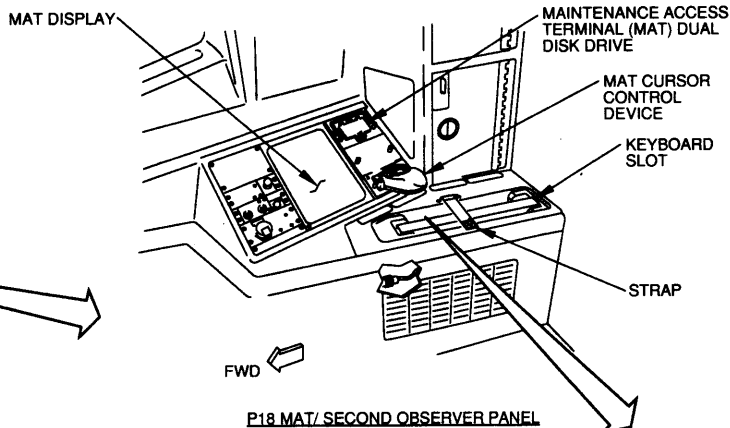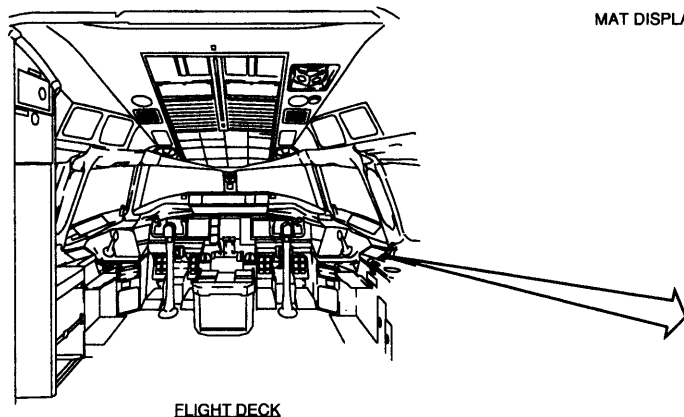

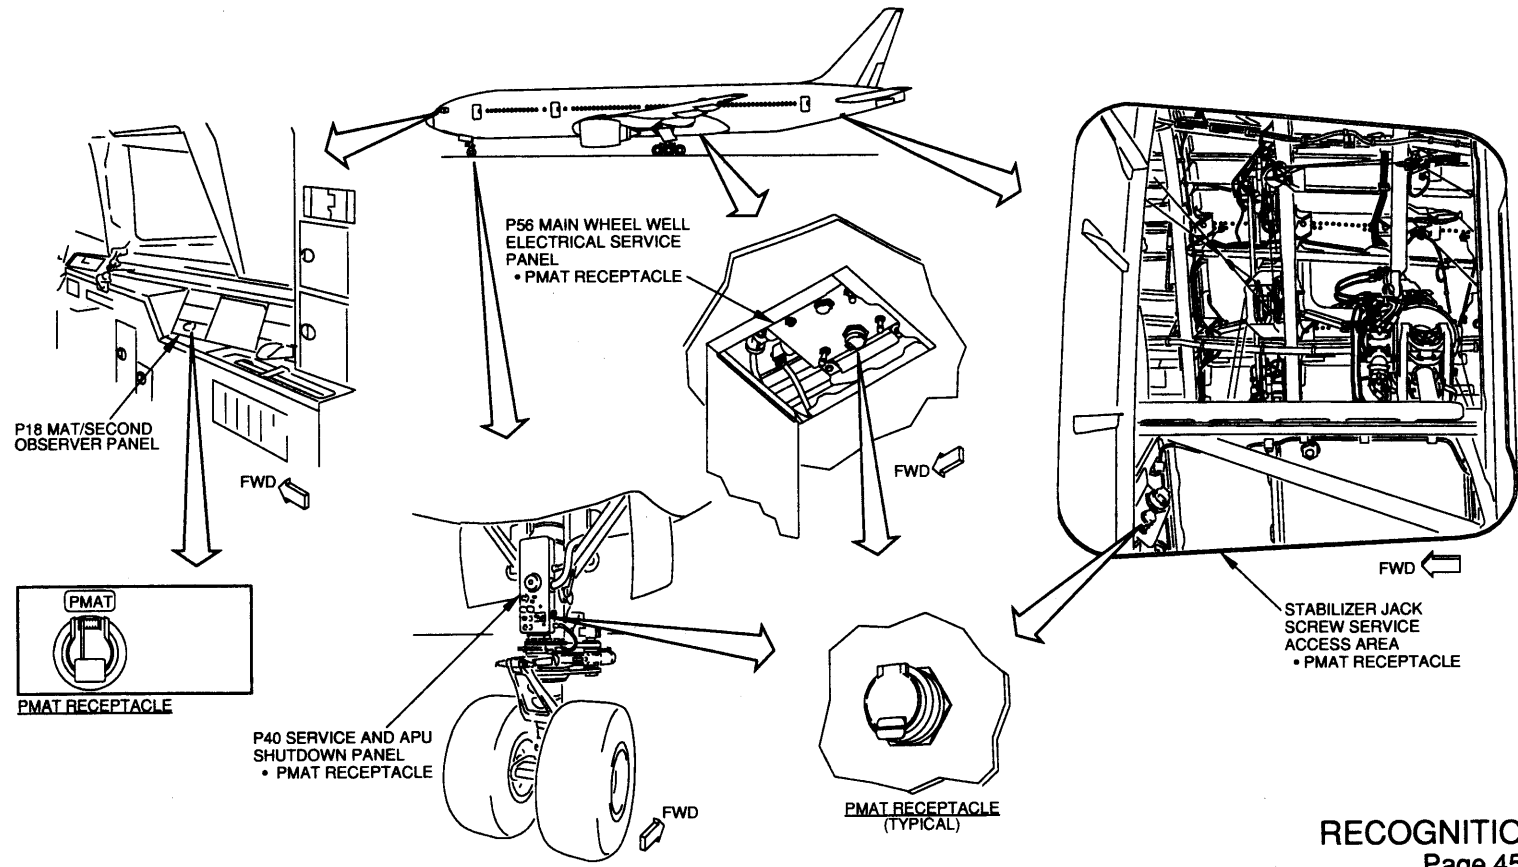


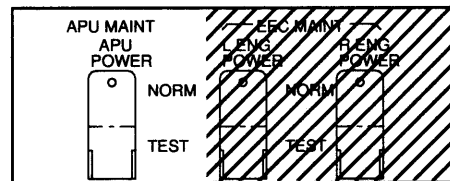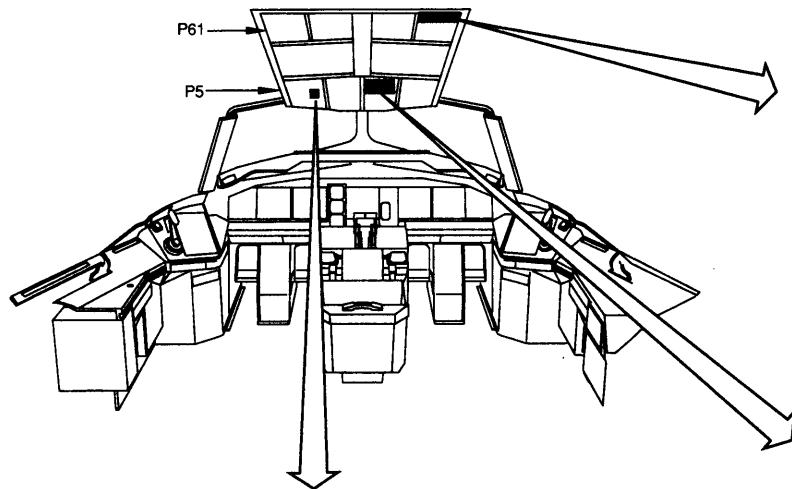


APU/EEC MAINTENANCE PANEL (P61)


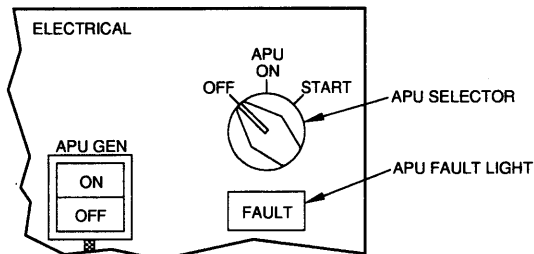


ELECTRICAL PANEL (P5)
(UPPER RIGHT CORNER)

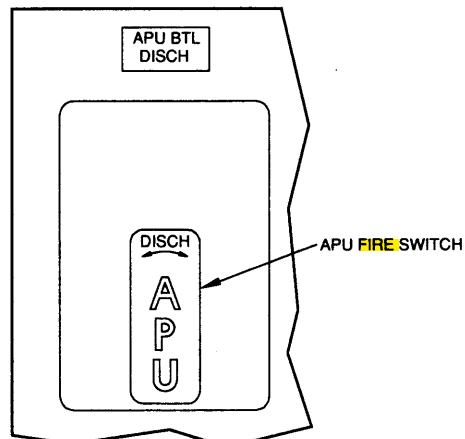


APU FIRE SWITCH (P5)
(UPPER LEFT CORNER)

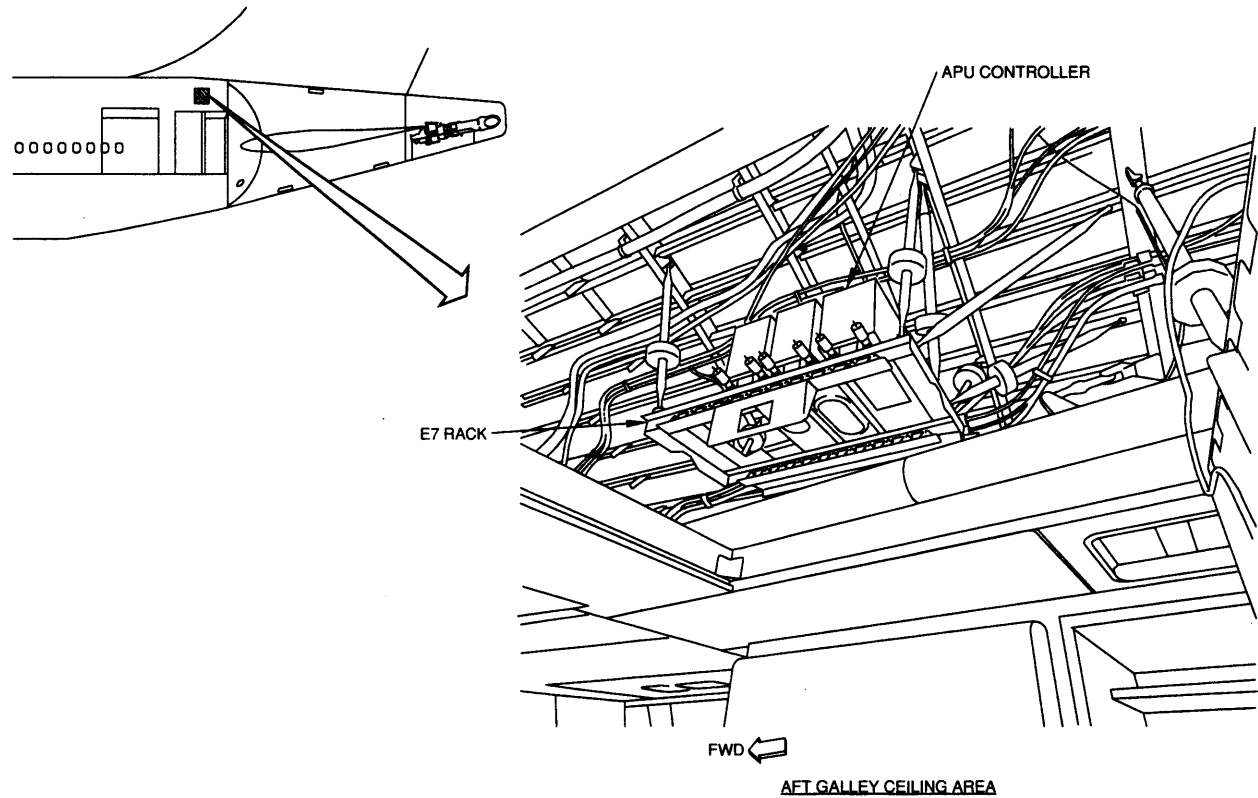

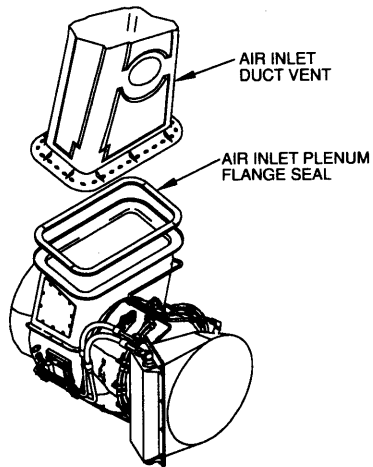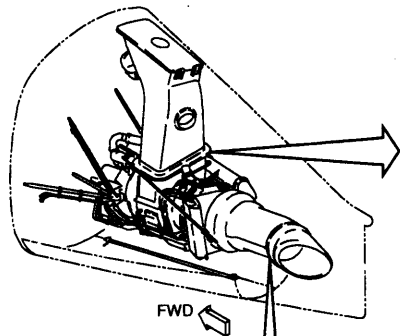


EXHAUST DUCT CLAMP
INSTALLATION

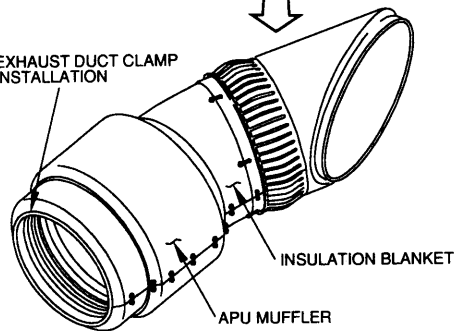



FWD


APU EXHAUST DUCT
(APU MUFFLER OPTION SHOWN)

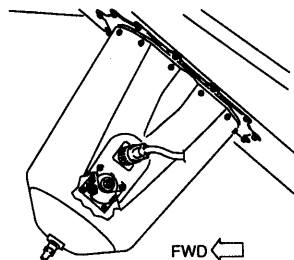





AIR INLET DOOR ACTUATOR HOUSING




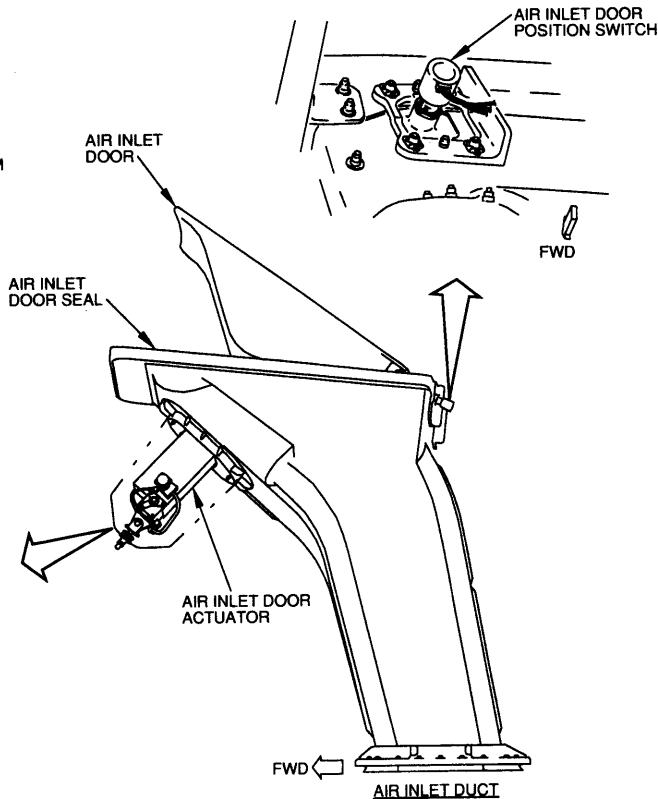





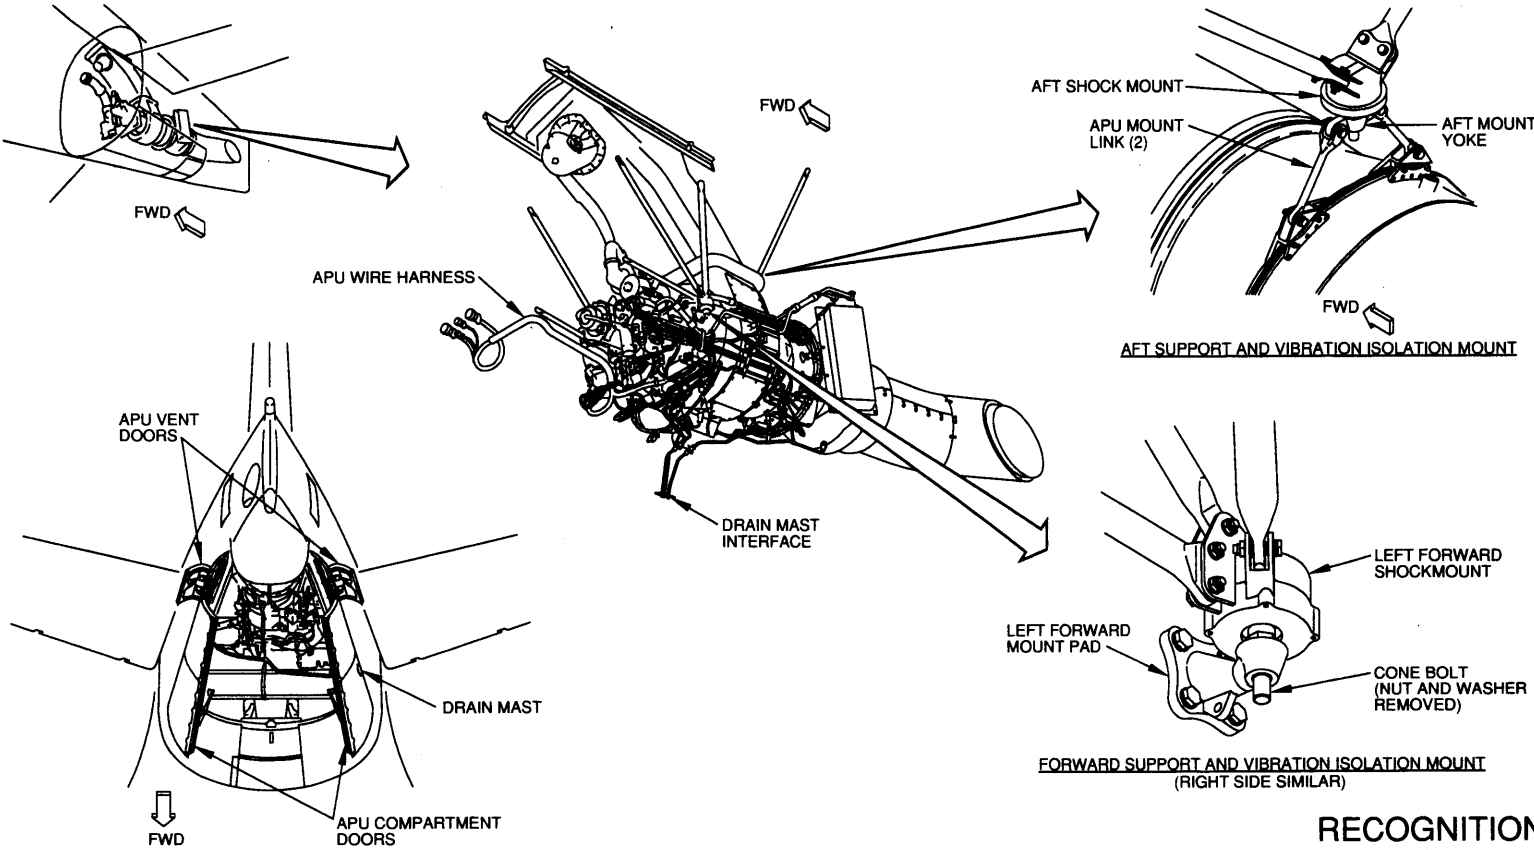



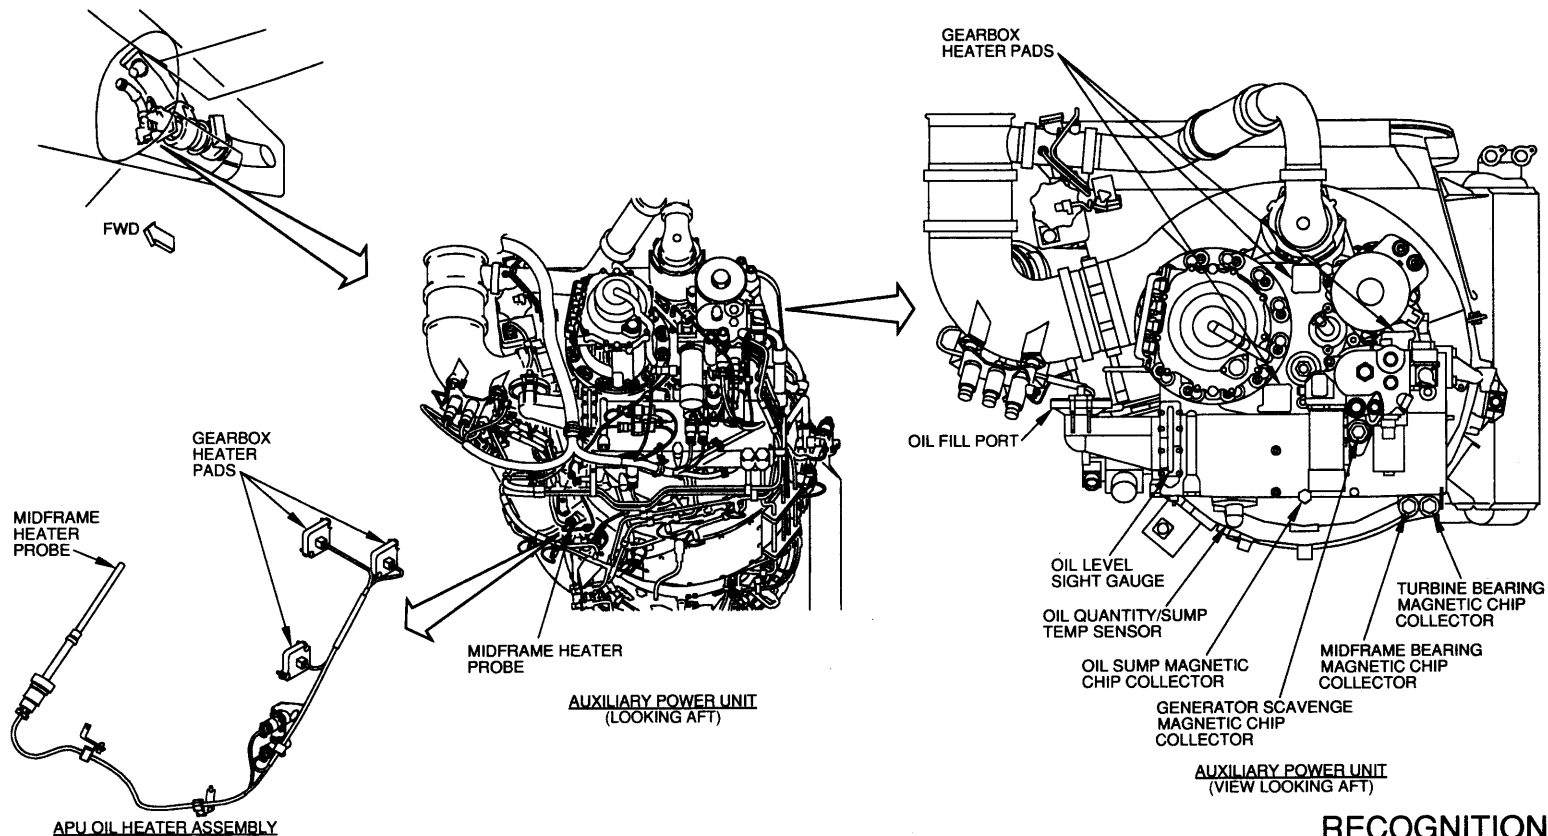


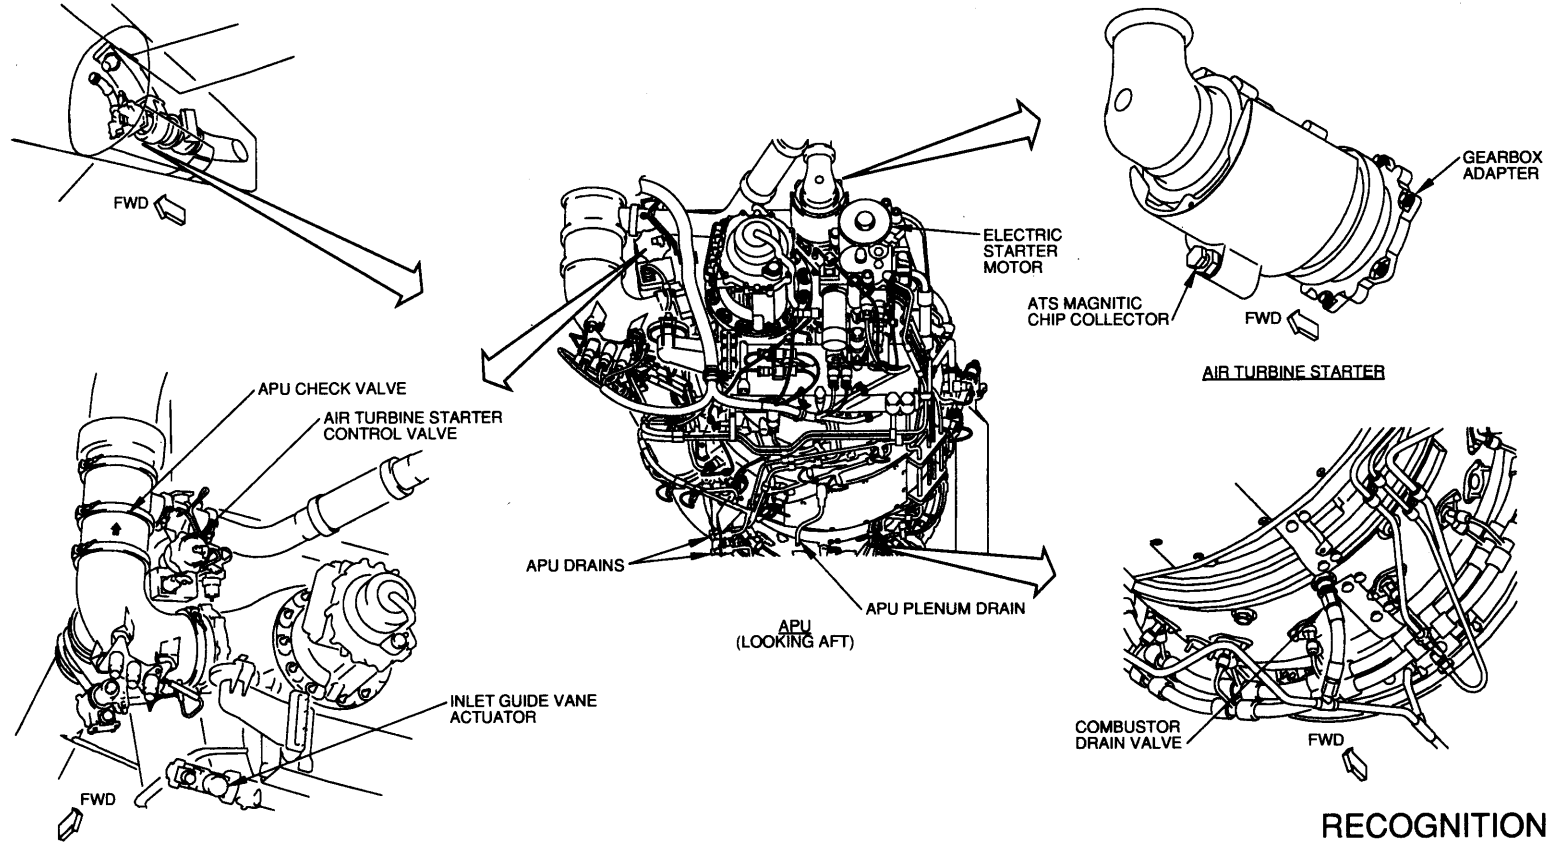


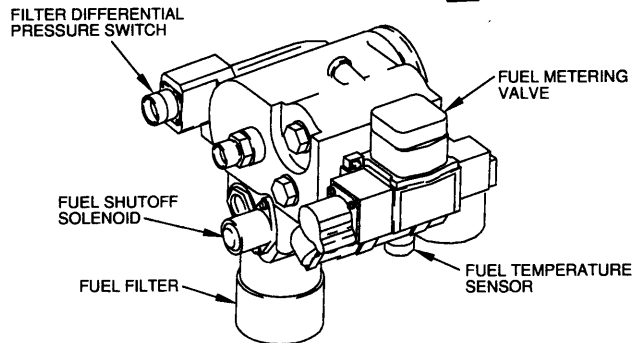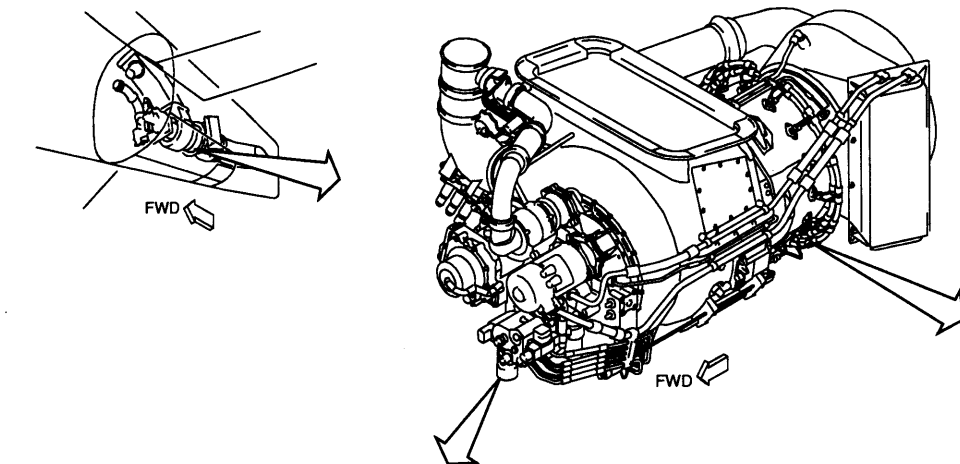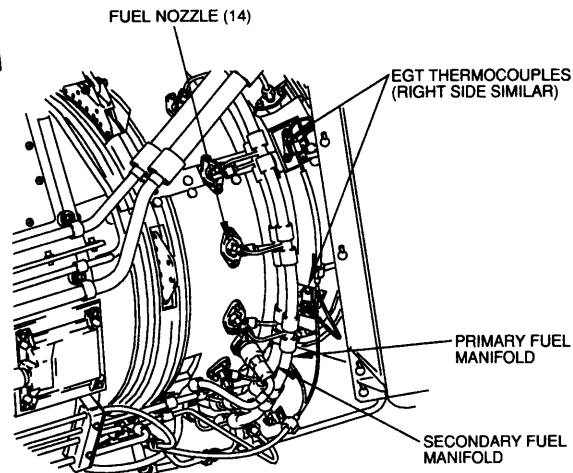
**FUEL CLUSTER****FUEL MANIFOLDS AND NOZZLES**

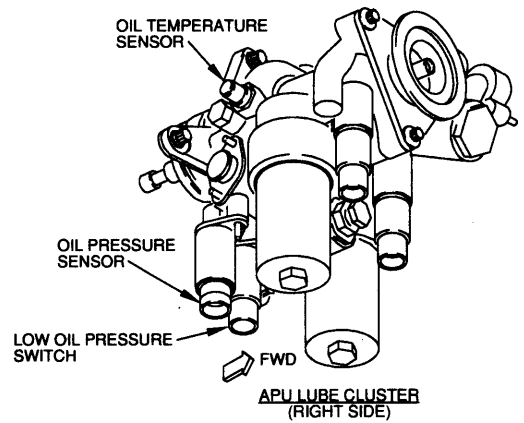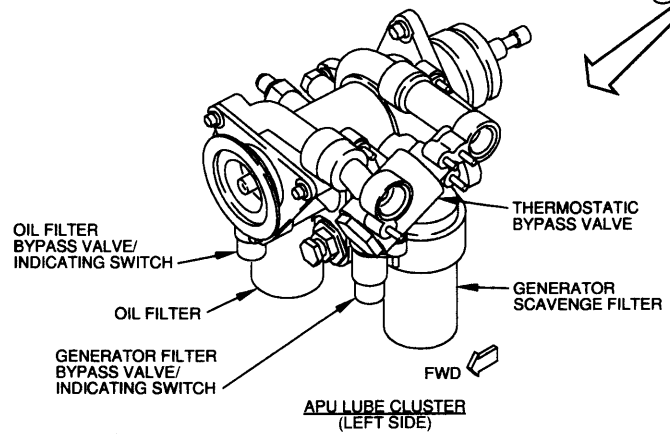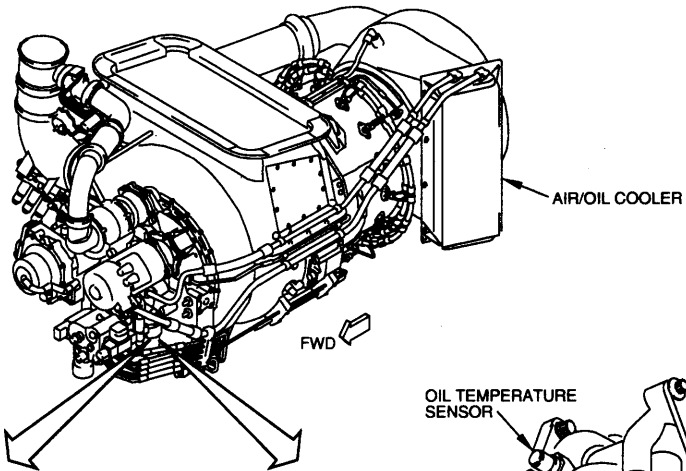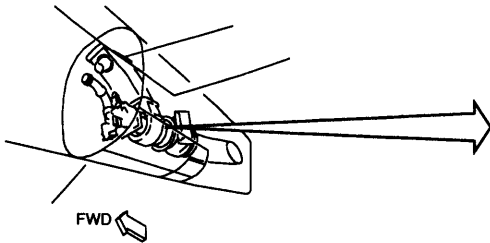


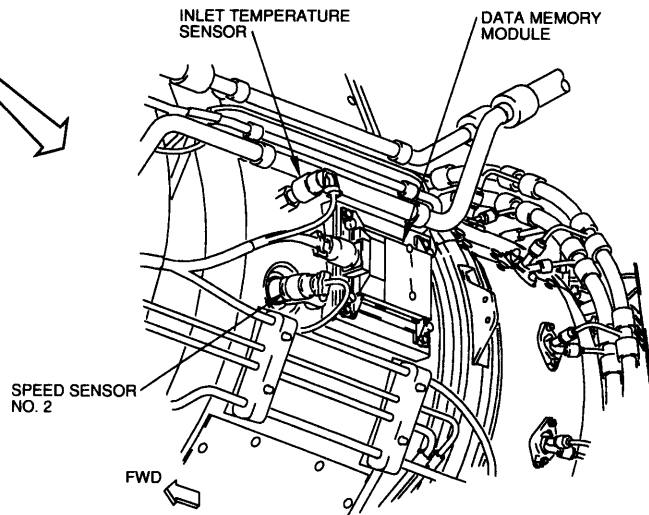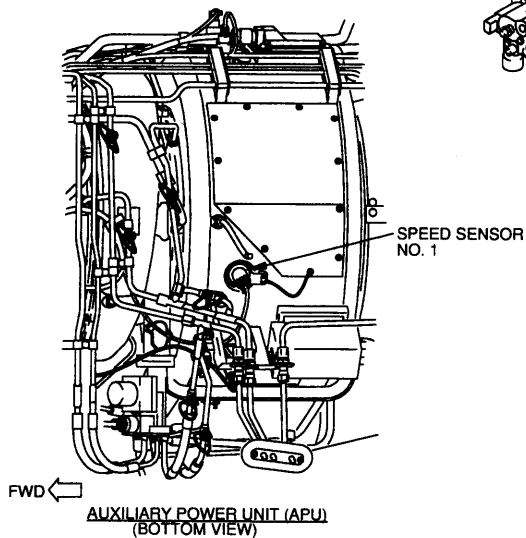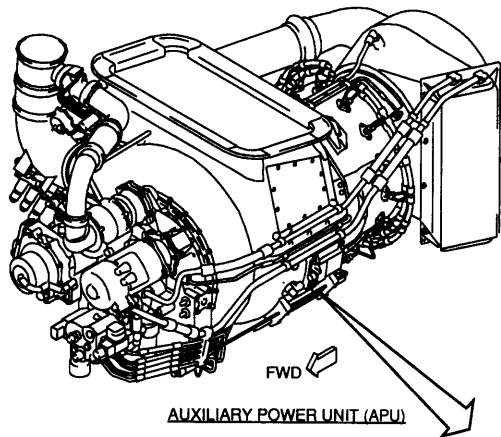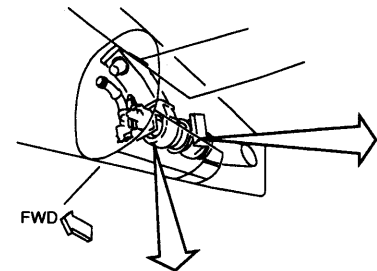

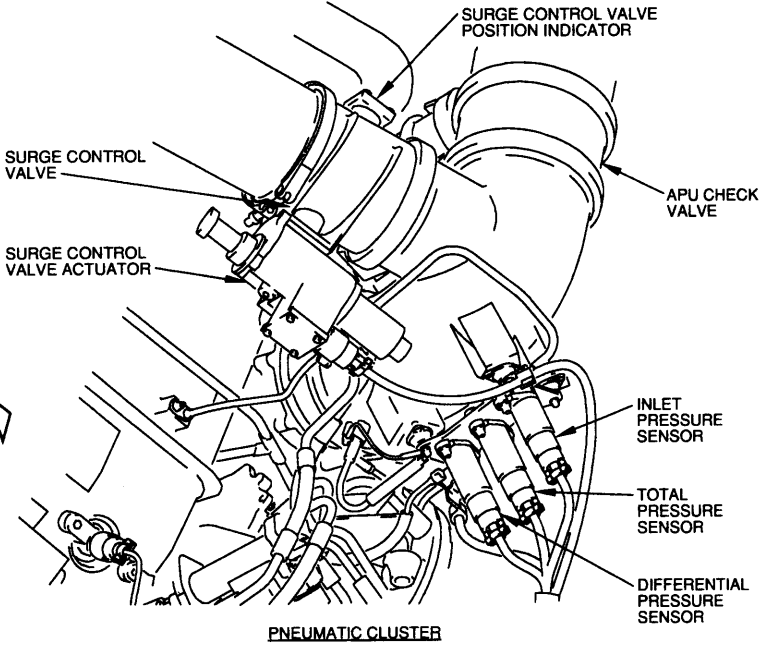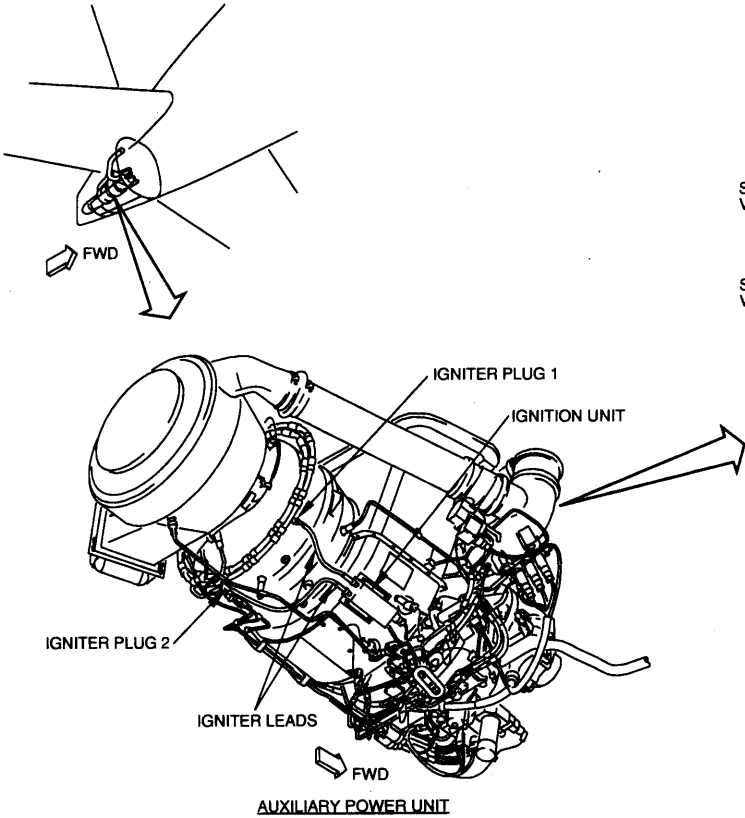

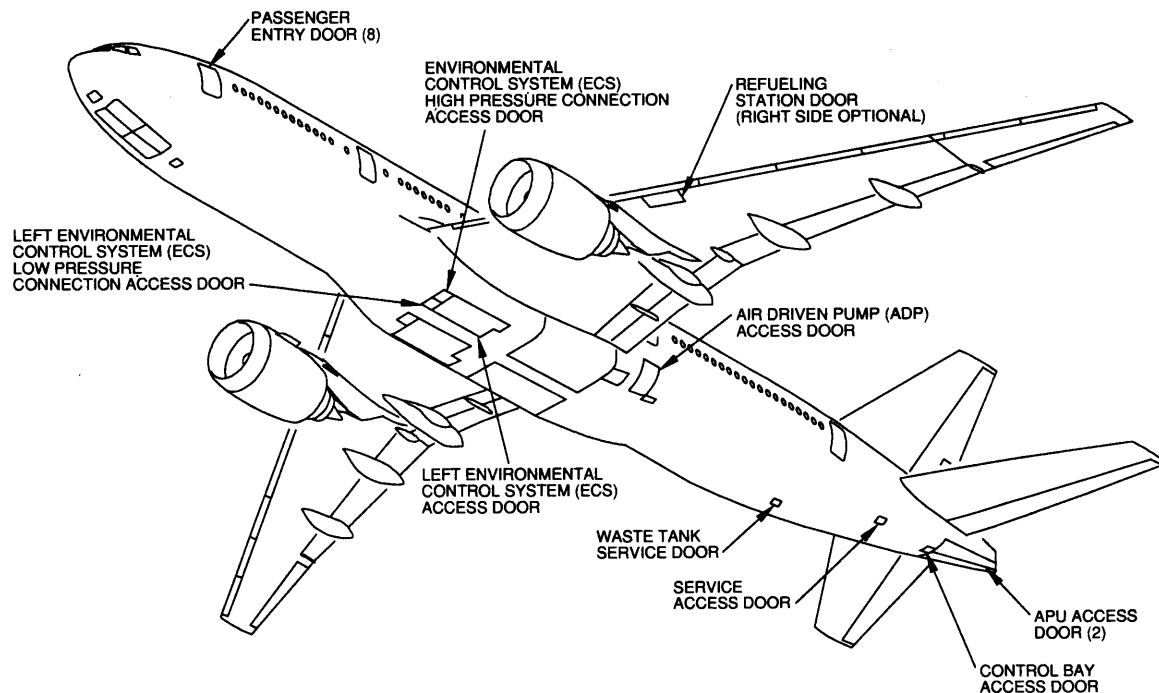

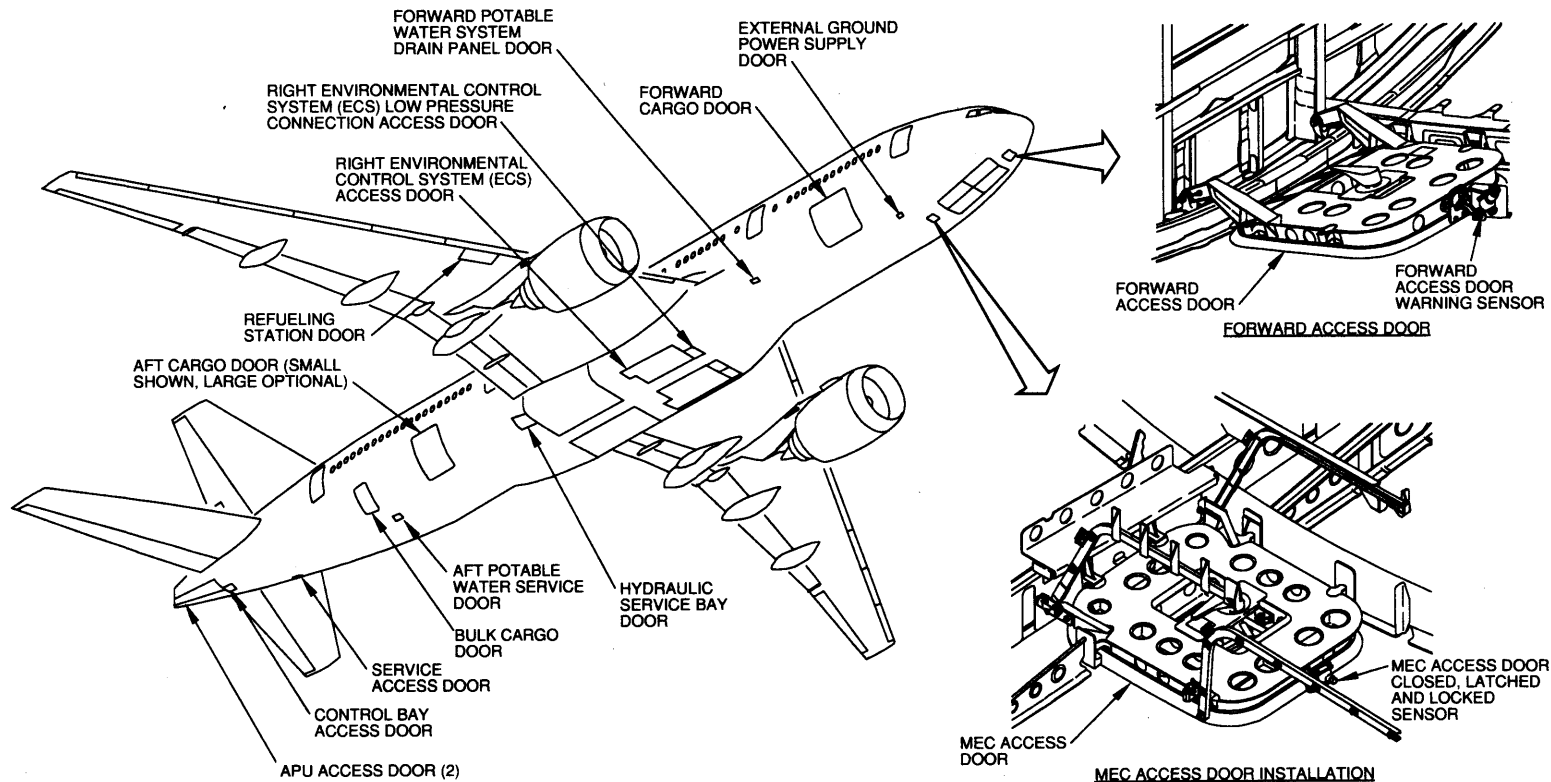

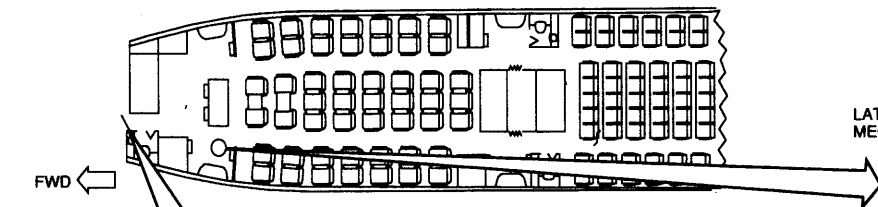

FLIGHT
COMPARTMENT
DOOR UPPER
SECTION

PIN (3)

HINGE

DOOR
HANDLE

CLIP

DOOR
POST

FLIGHT
COMPARTMENT
DOOR LOWER
SECTION

FLIGHT COMPARTMENT
DOOR INSTALLATION

LATCH
MECHANISM

HANDLE


LATCH PIN (3)

RESTRAINT ARM


HINGE (2)


MAIN EQUIPMENT
CENTER ACCESS
HATCH


FWD


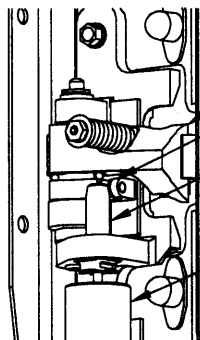


DOOR LOCK
(VIEW LOOKING INSIDE DOOR POST)

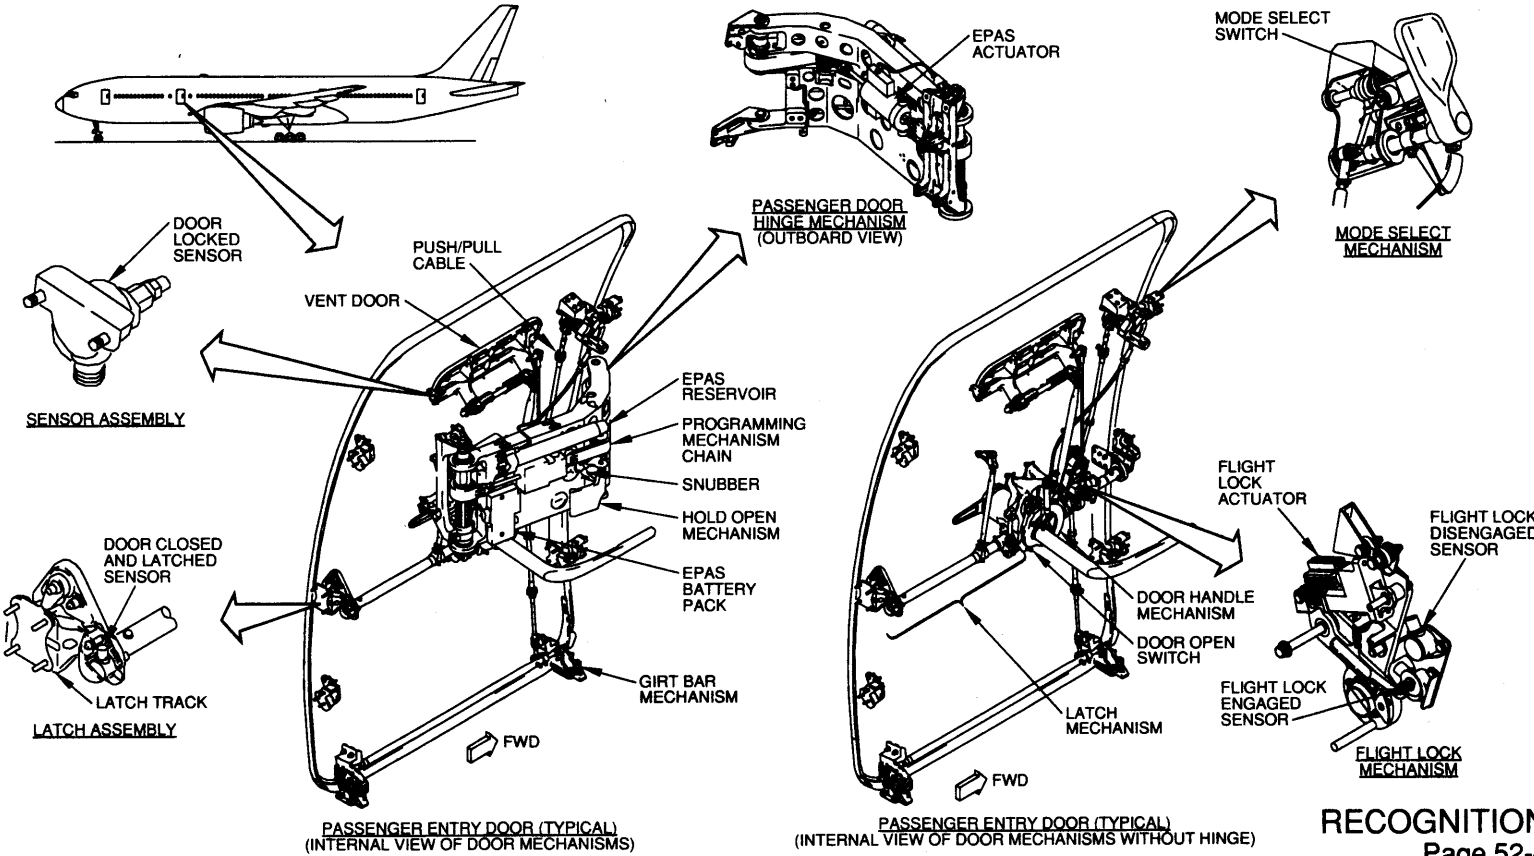


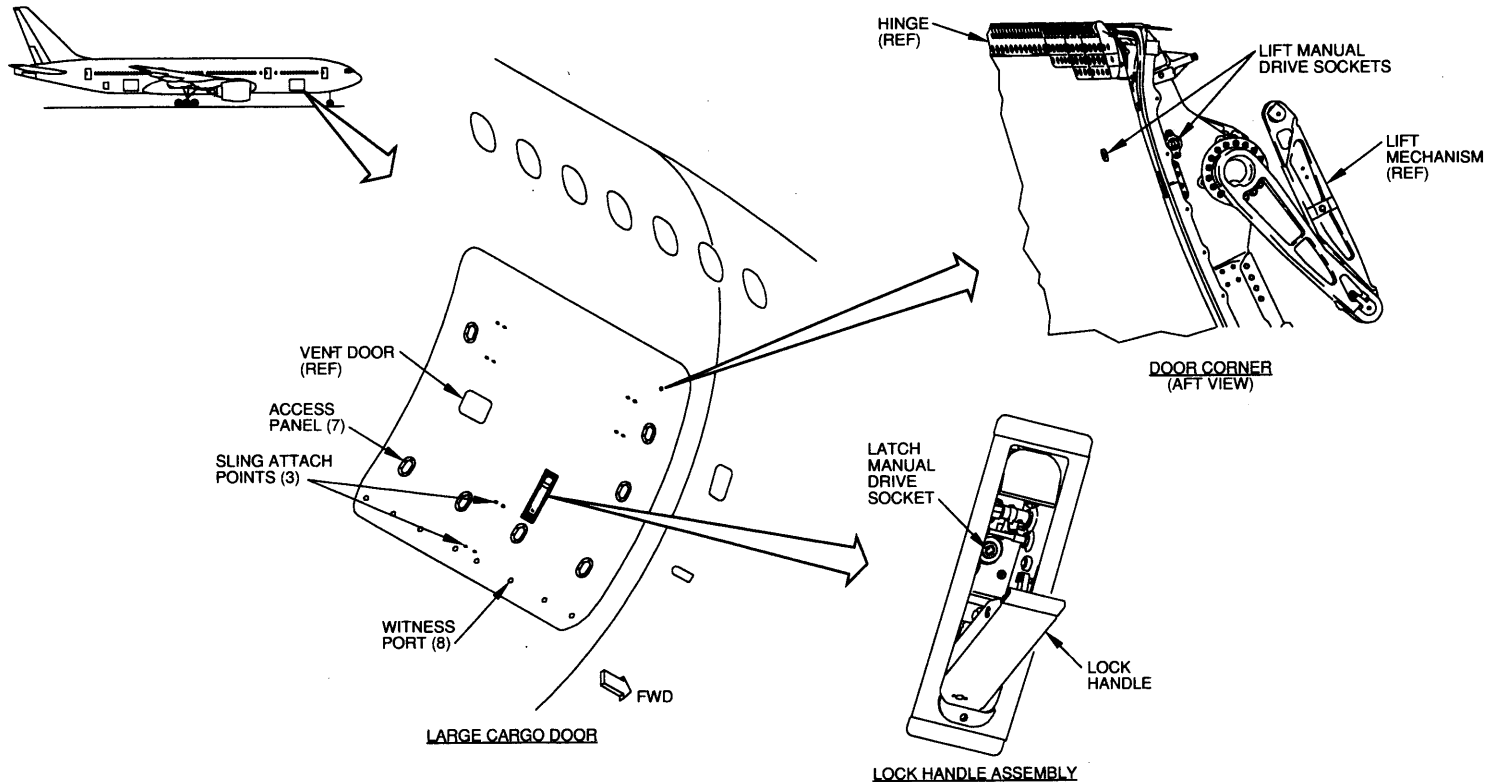

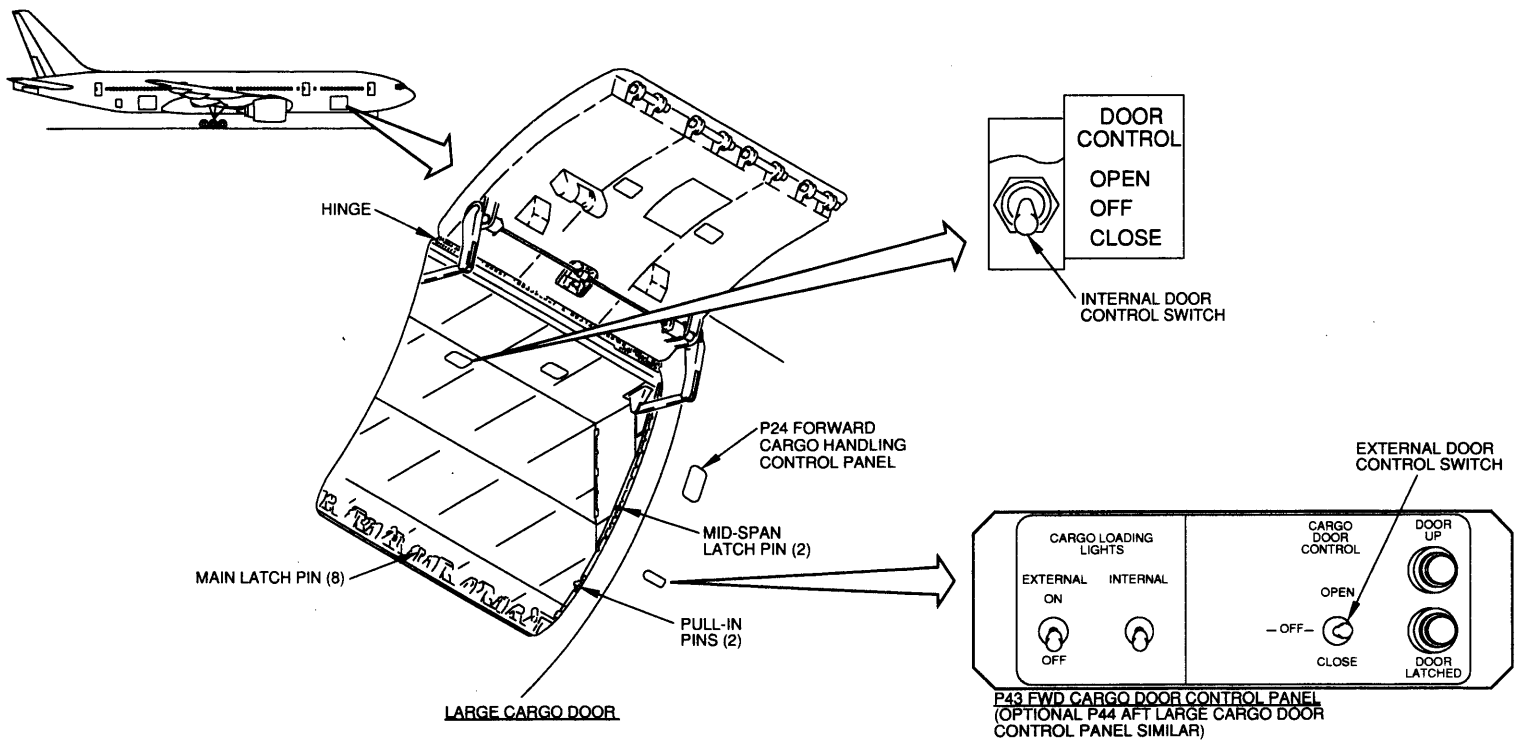


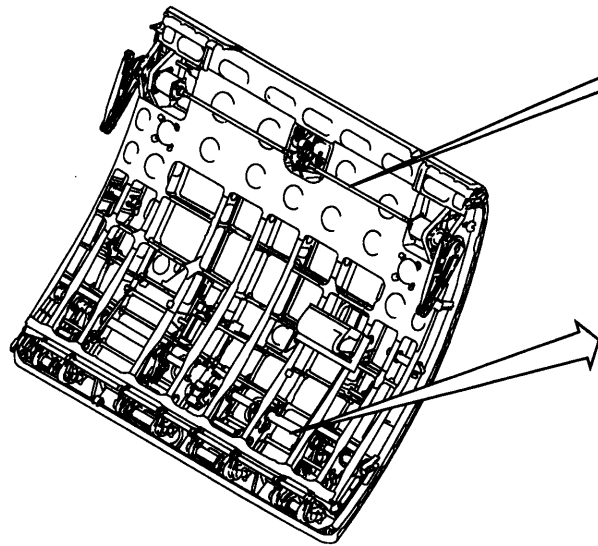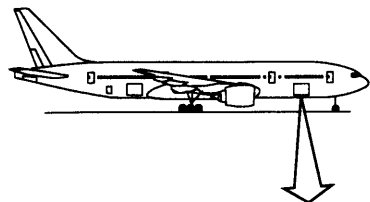


LARGE CARGO DOOR
(LINER REMOVED)

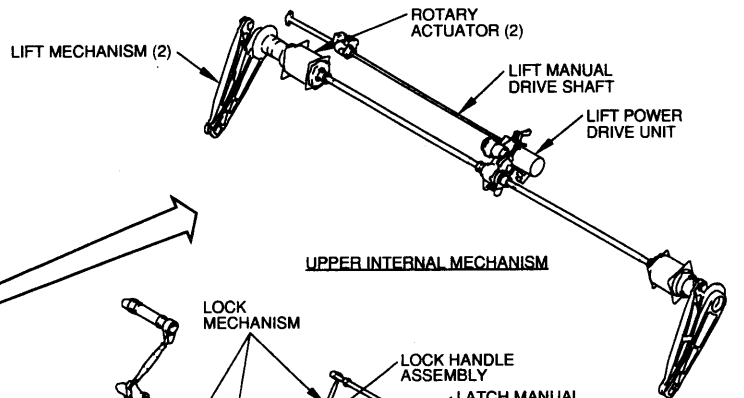



UPPER INTERNAL MECHANISM



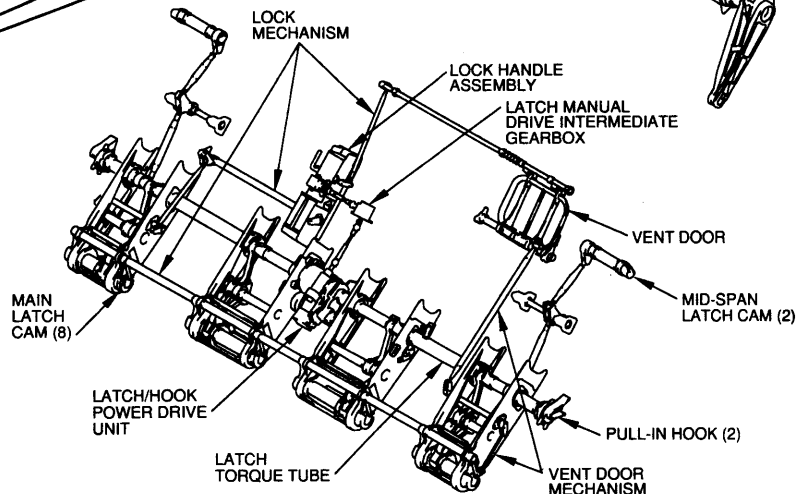


LOWER INTERNAL MECHANISM

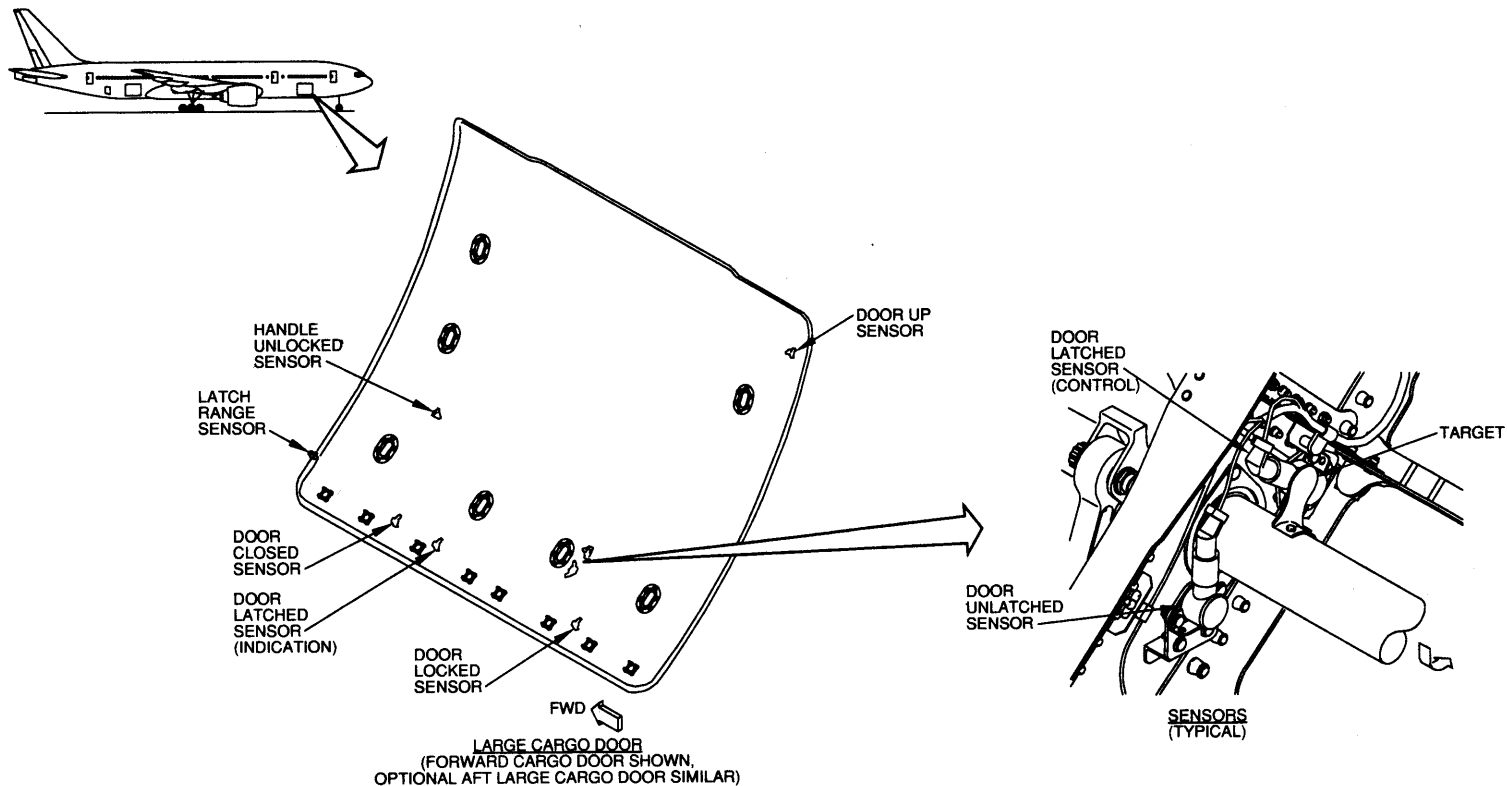




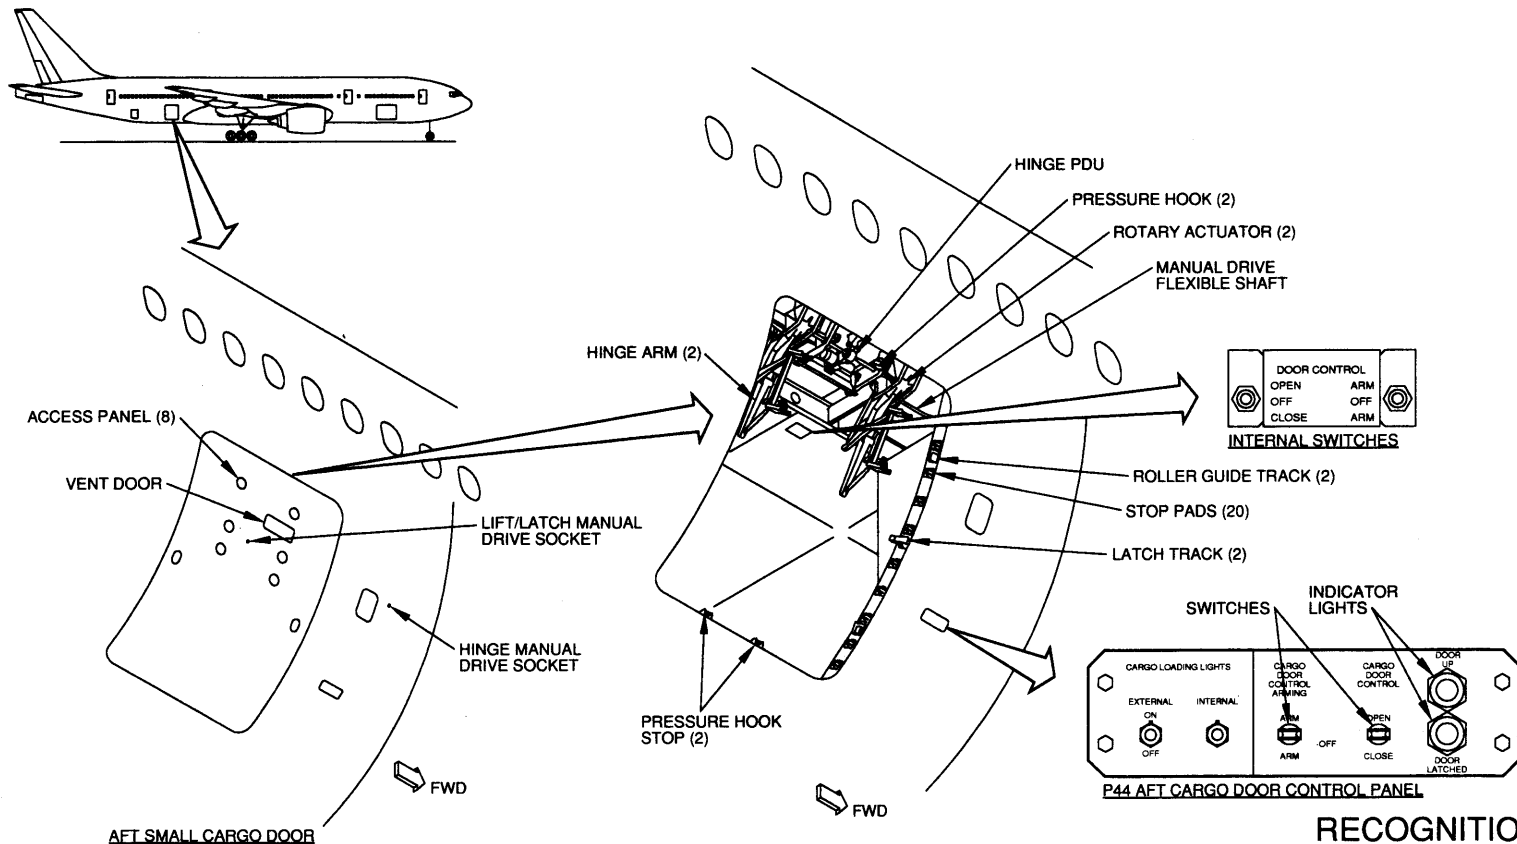


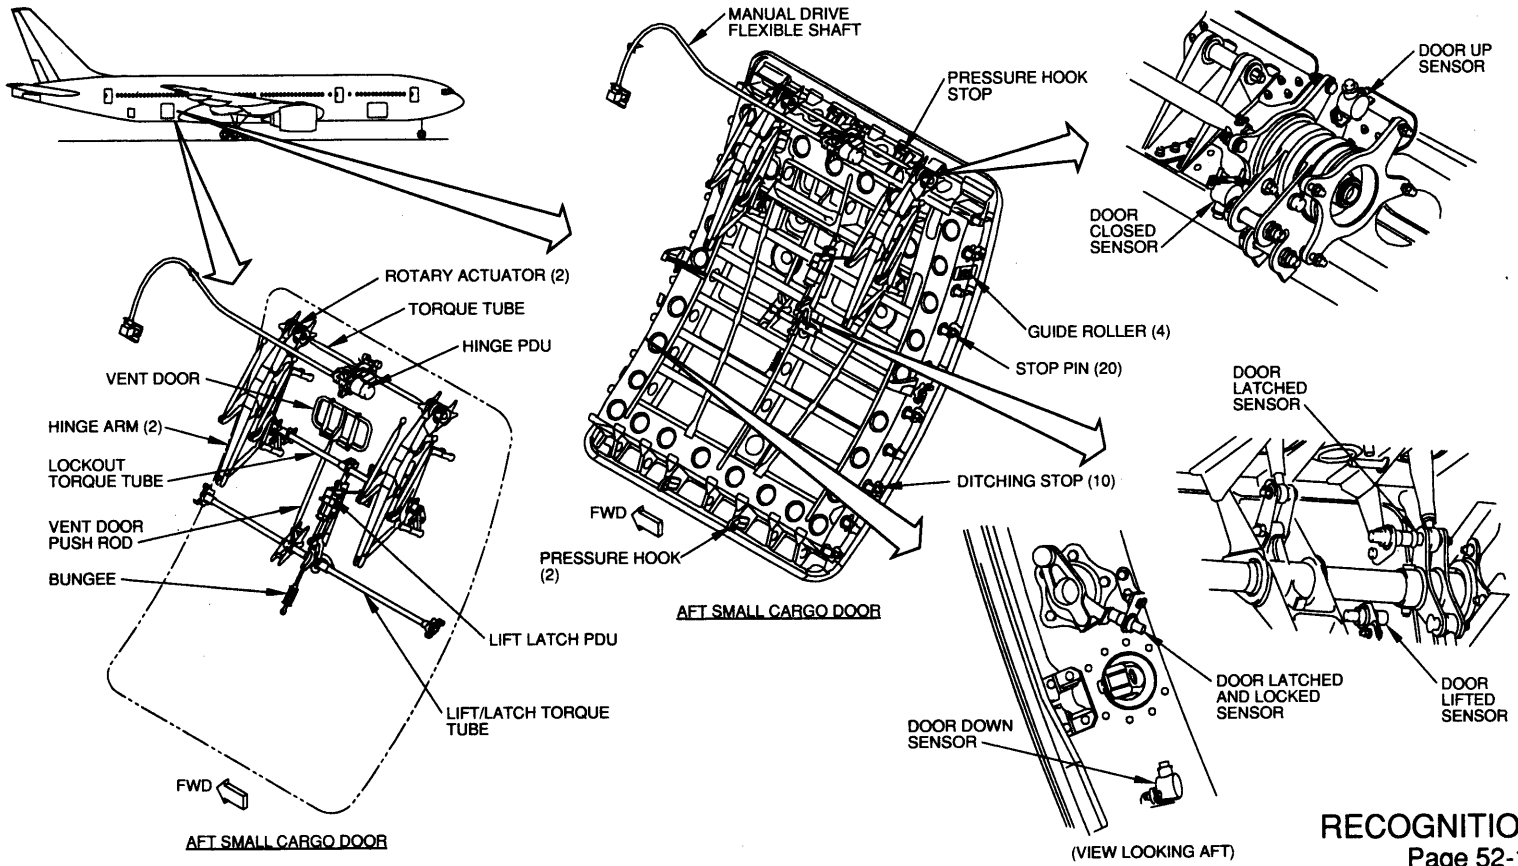


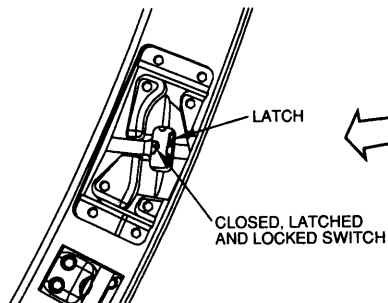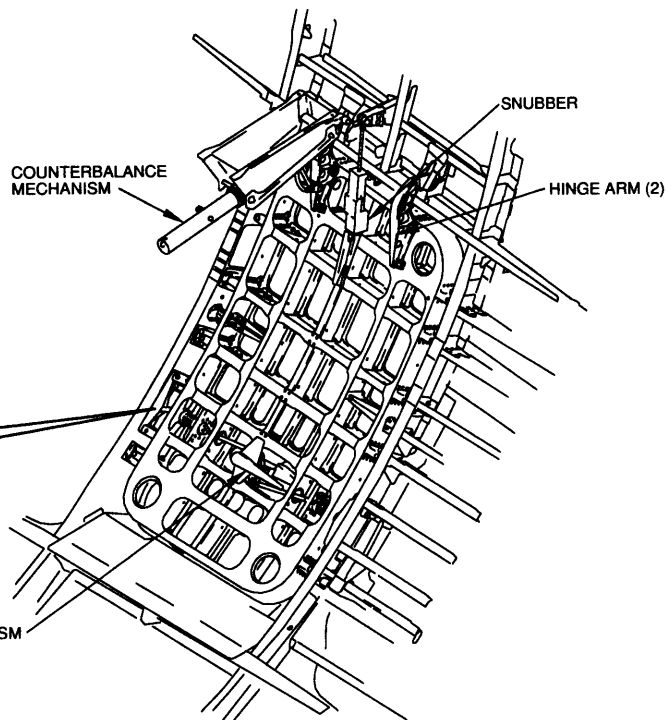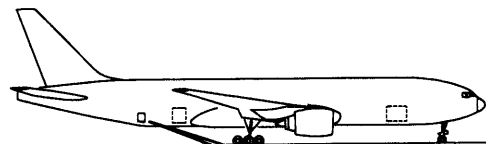



BULK CARGO DOOR CUTOUT
(VIEW LOOKING FORWARD)



BULK CARGO DOOR
(VIEW FROM INSIDE WITH LINER REMOVED)

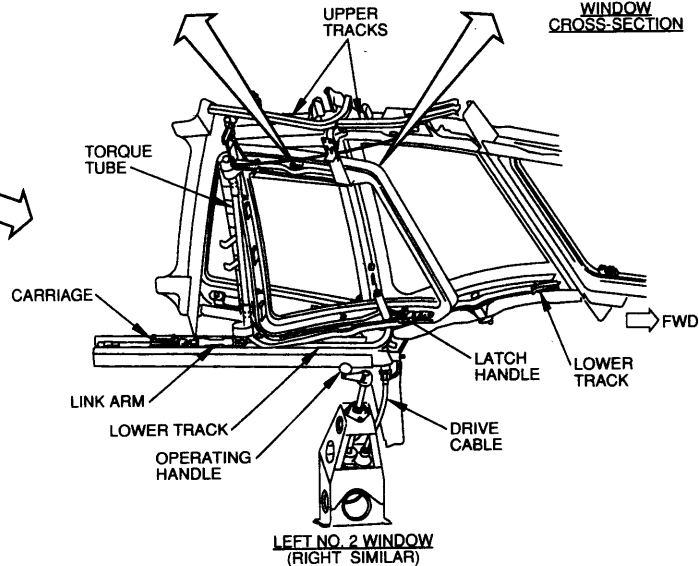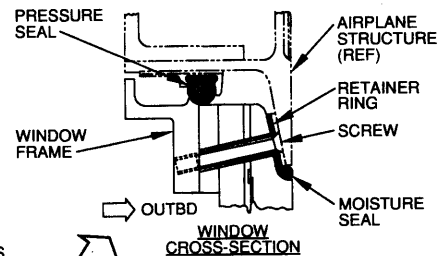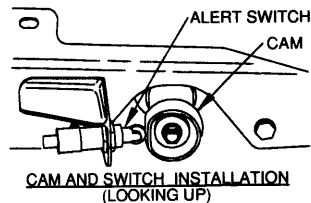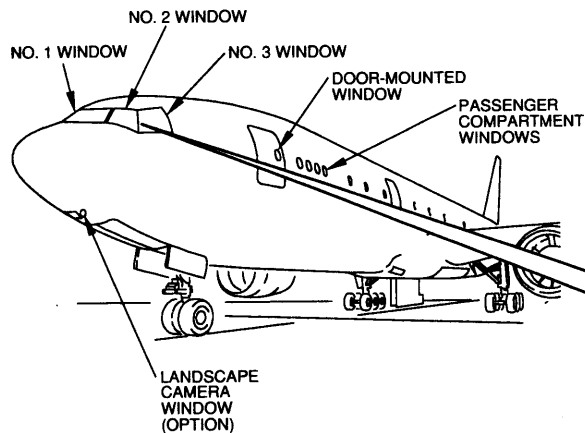



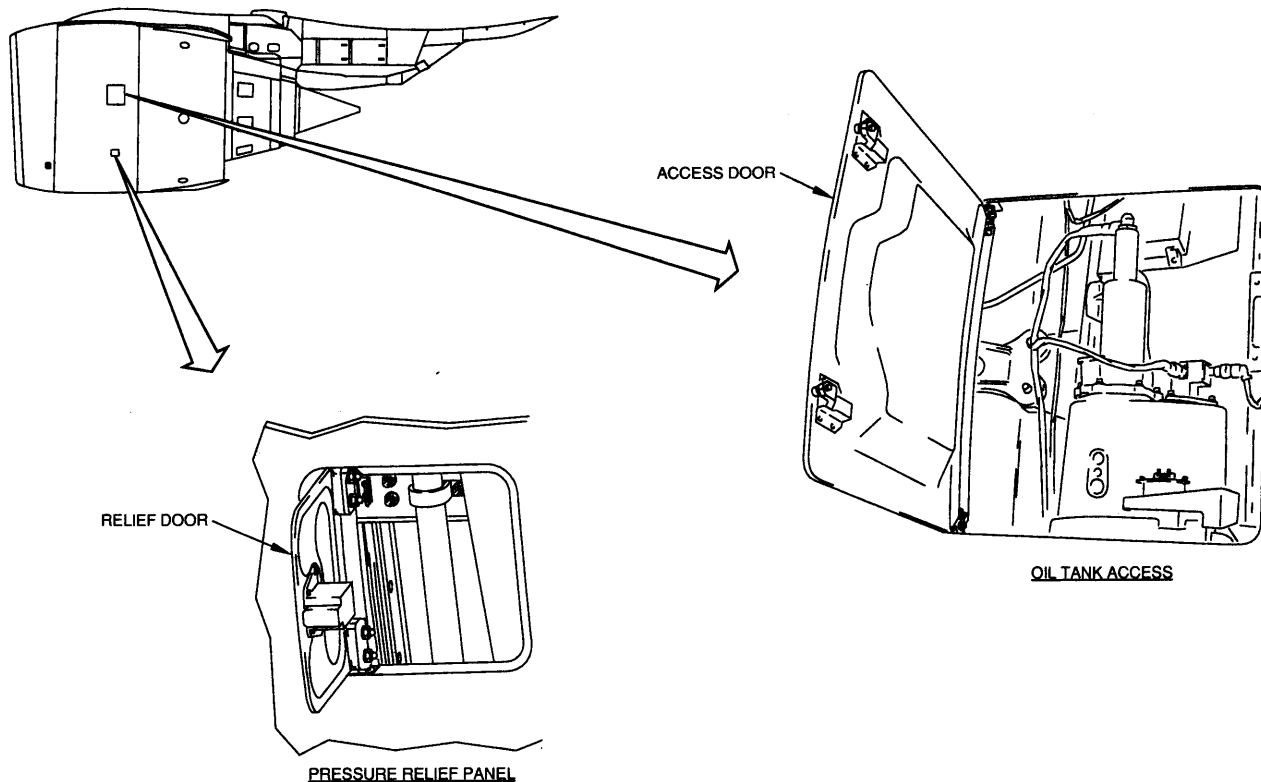


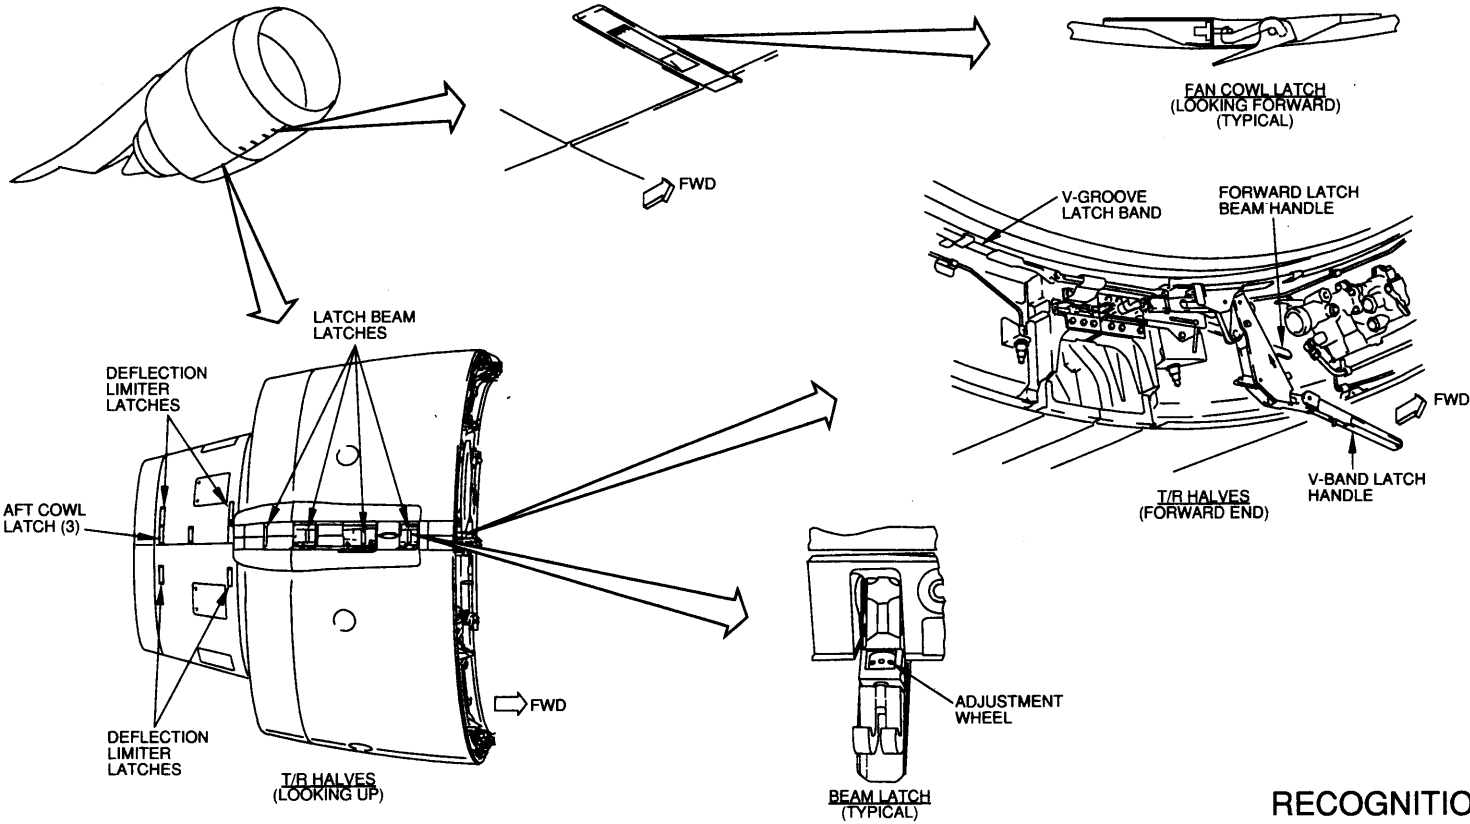


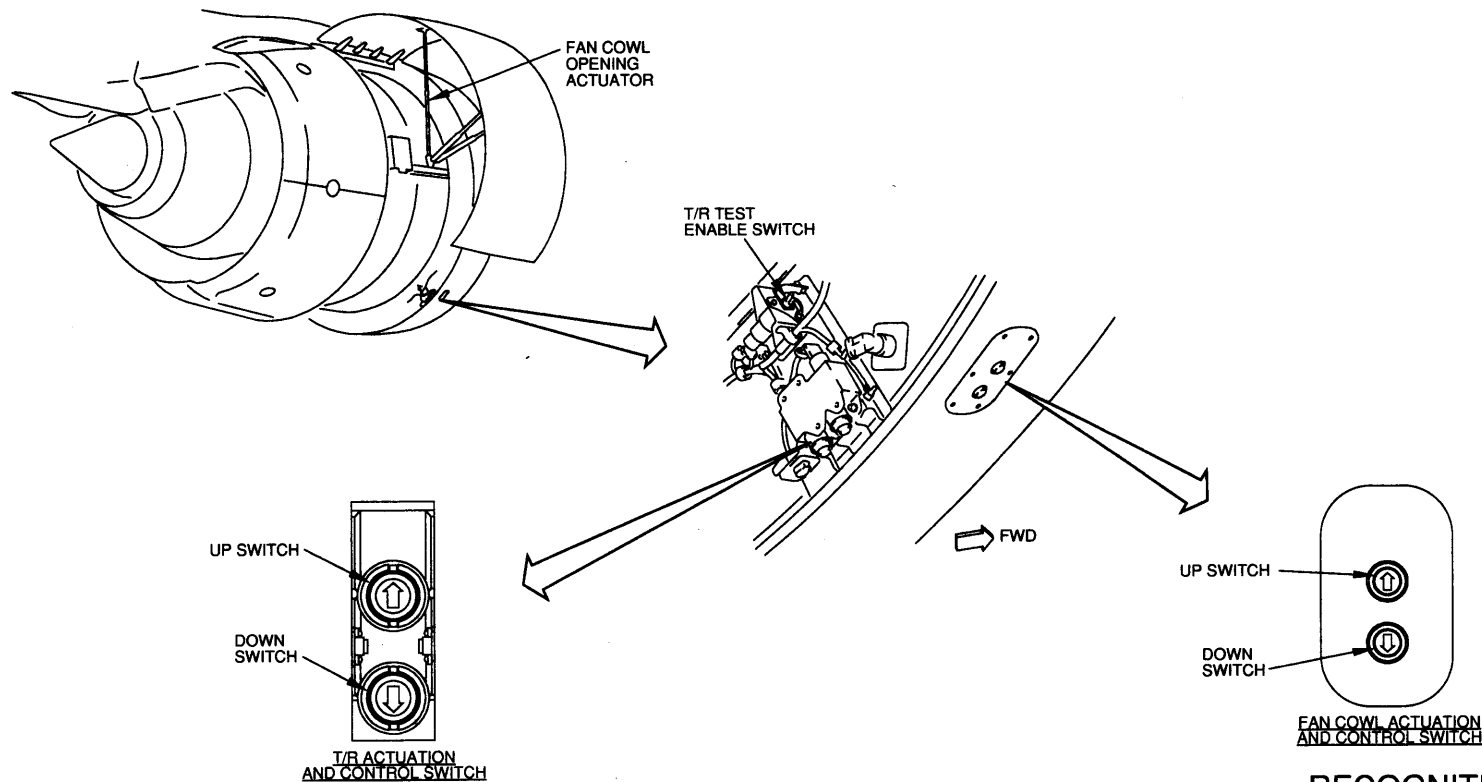


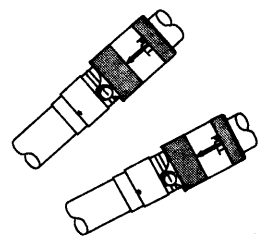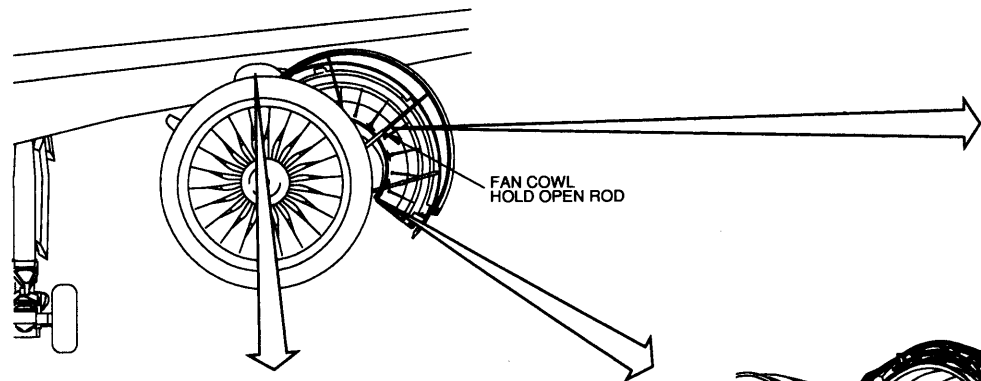

HOLD OPEN ROD LATCHES

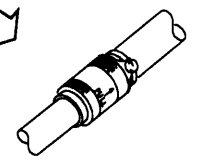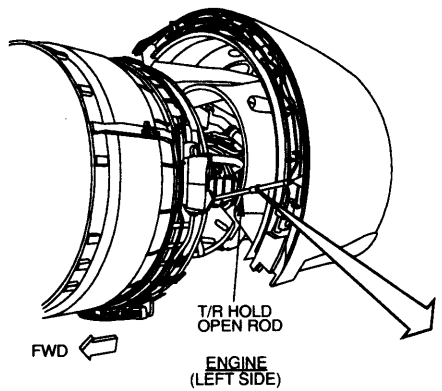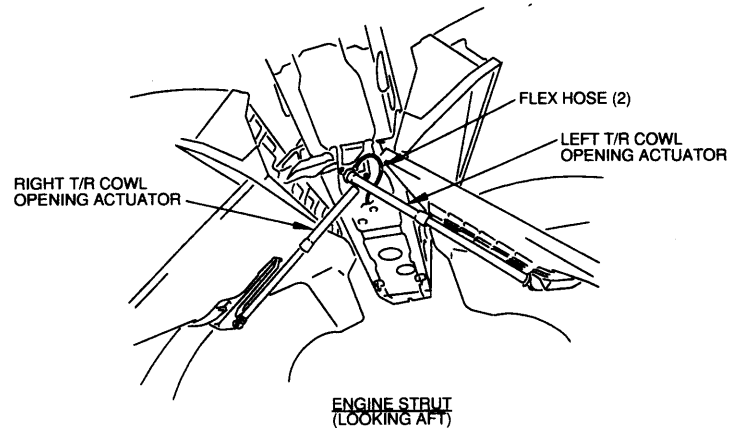


HOLD OPEN ROD LATCH

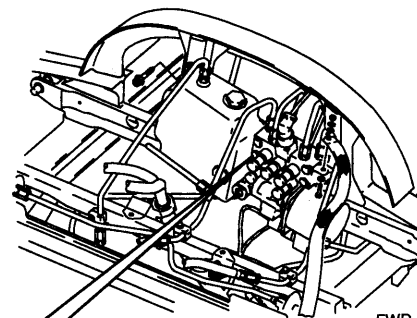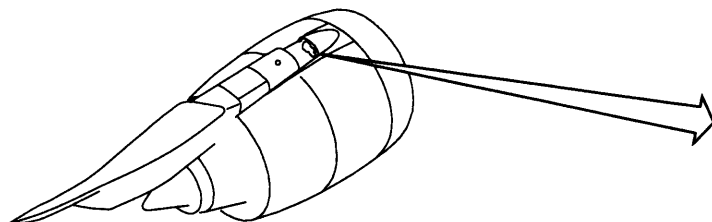


TOP OF STRUT
(LOOKING FORWARD)



FWD




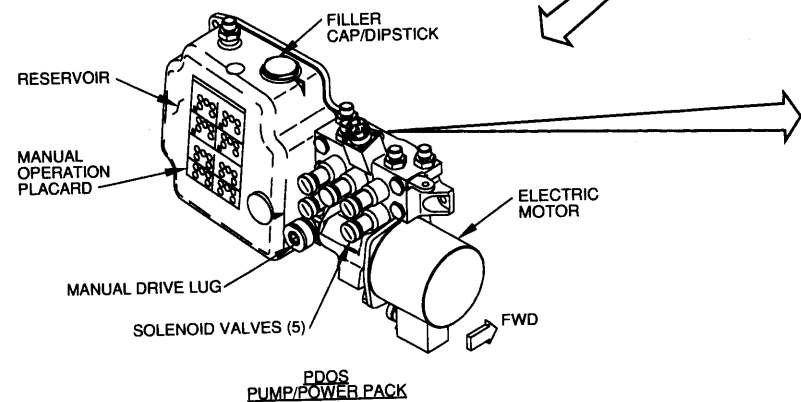



PDOS
PUMP/POWER PACK


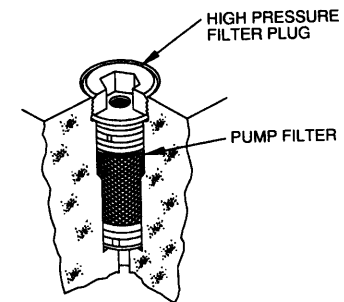



PUMP FILTER INSTALLATION

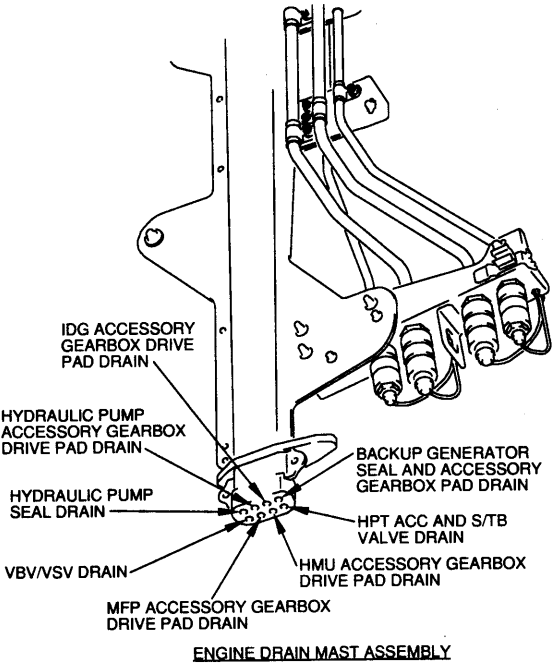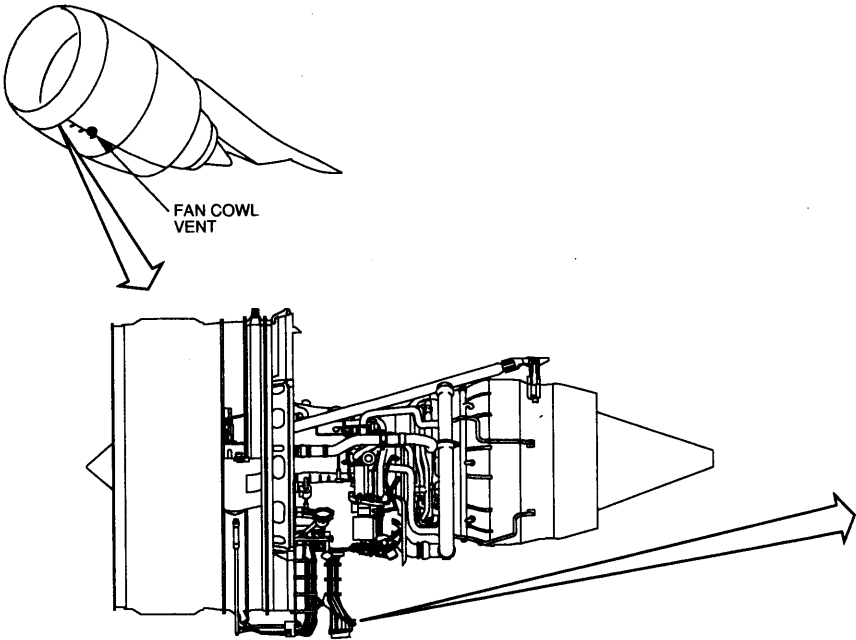

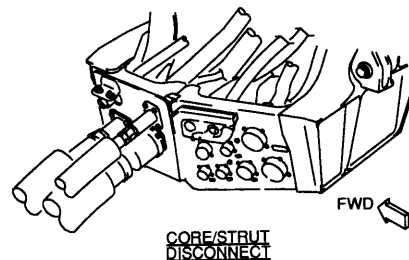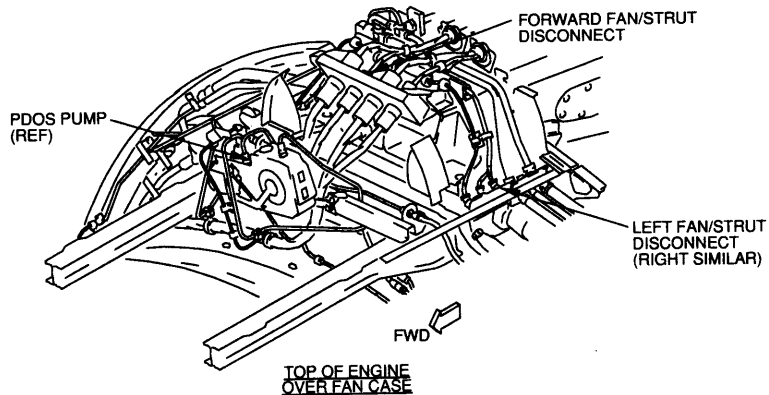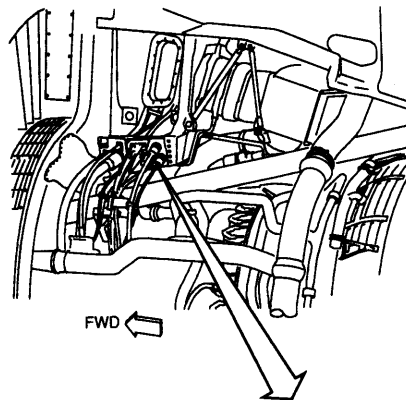
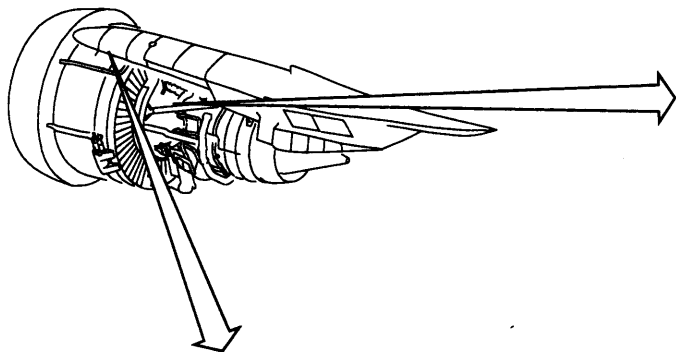





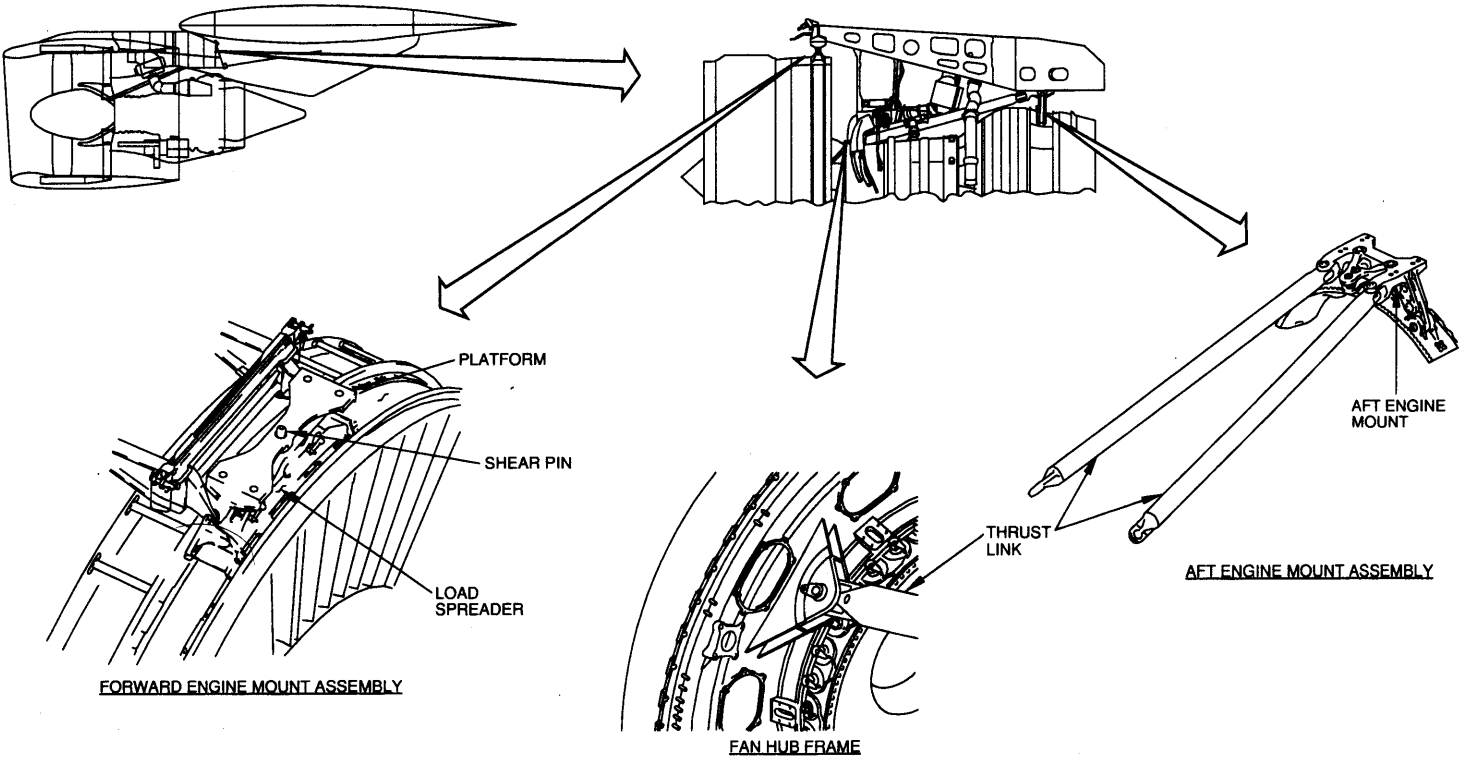


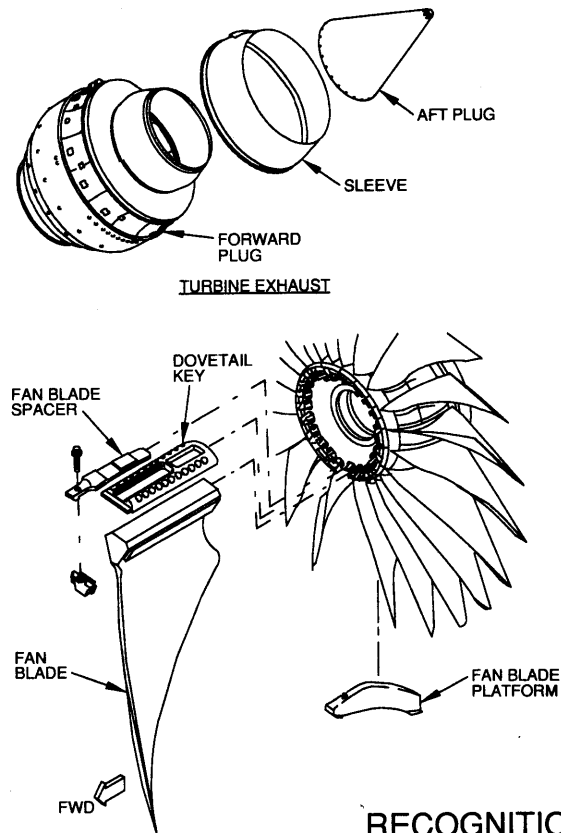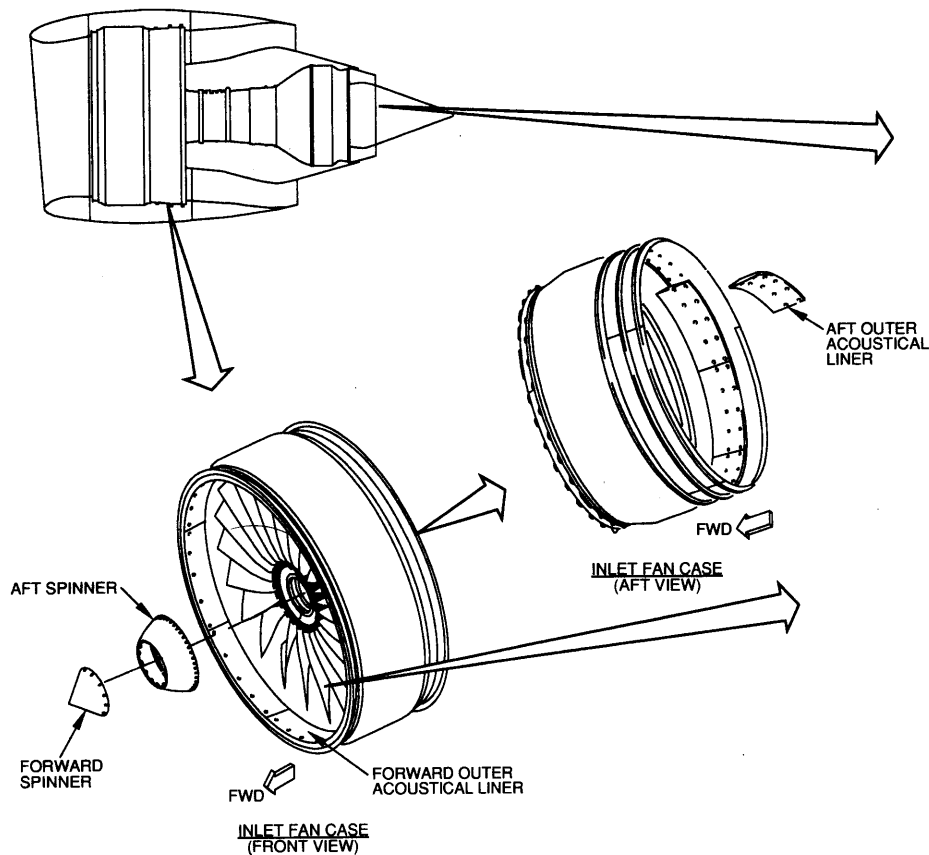









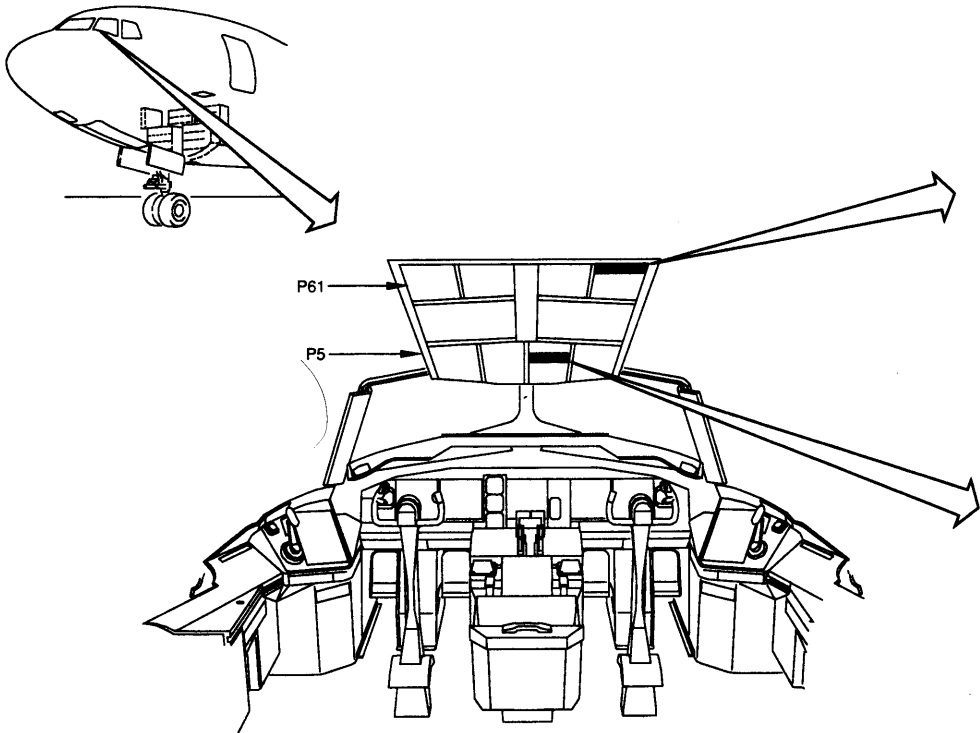





FLIGHT DECK




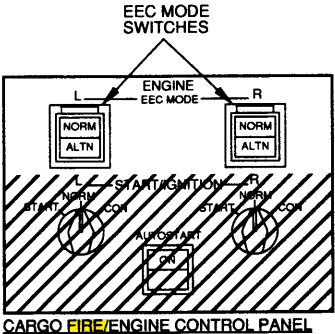
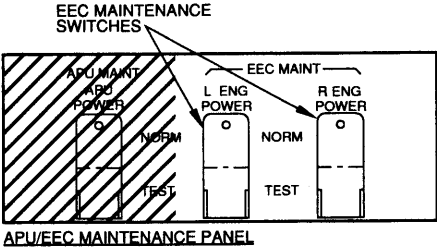


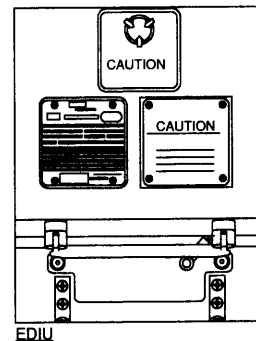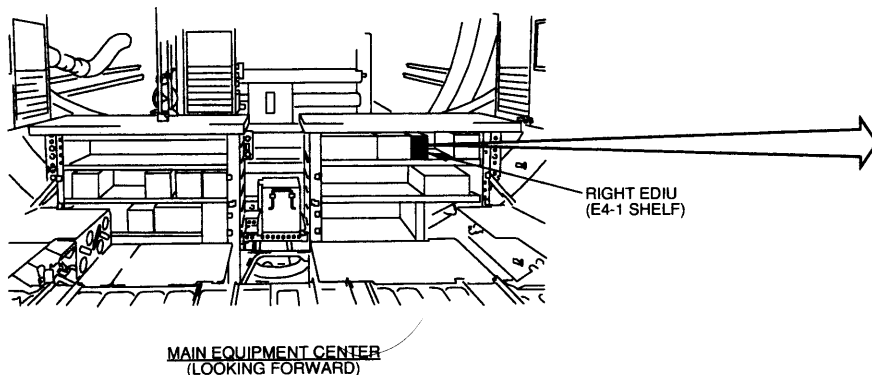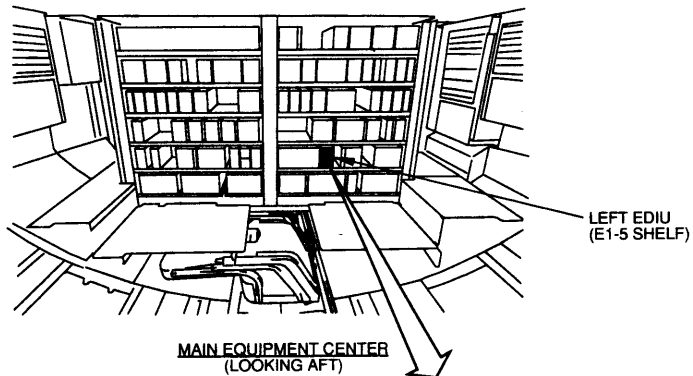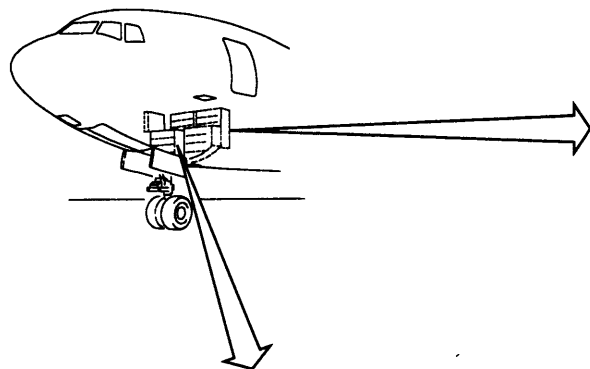

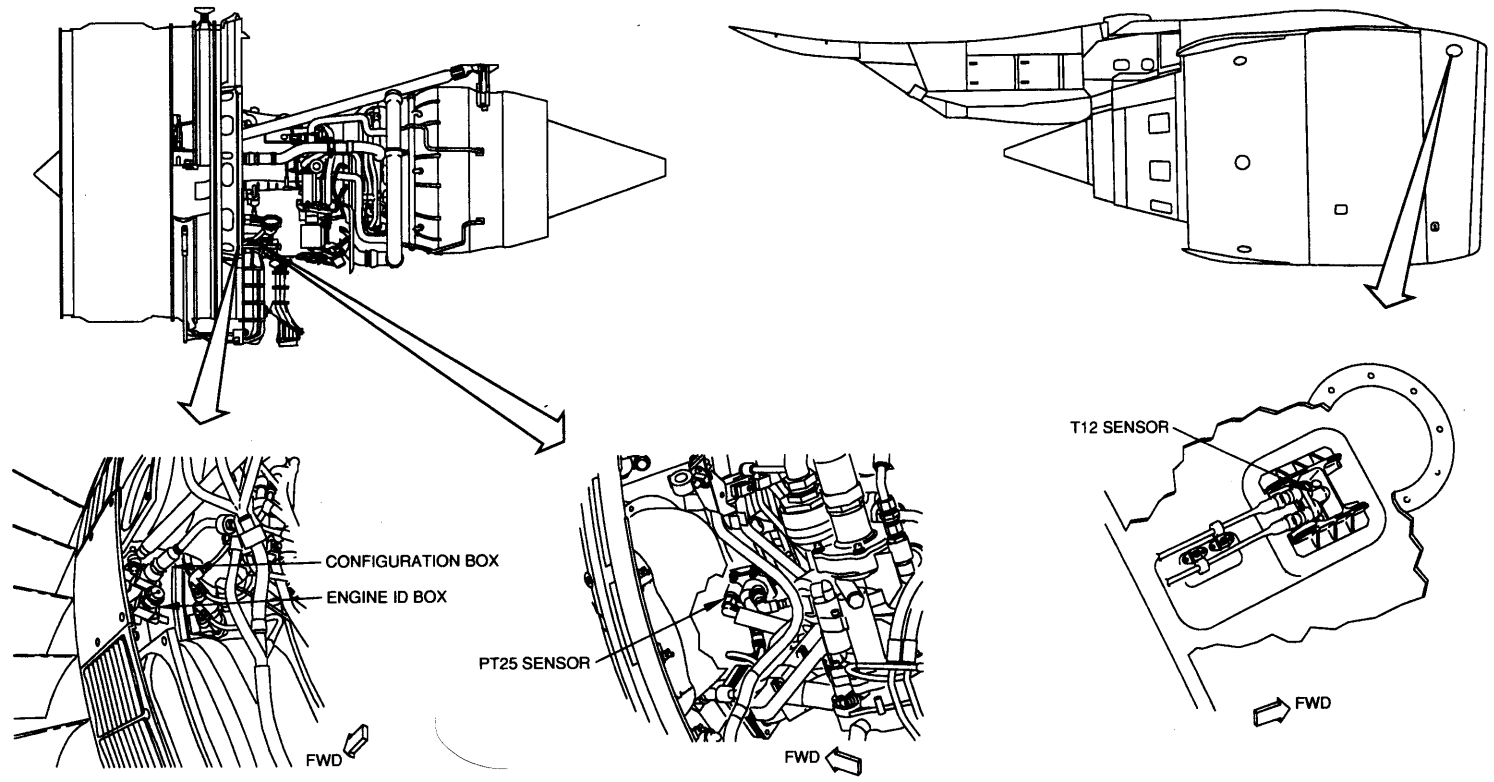


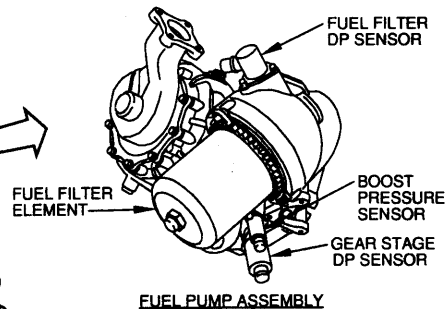
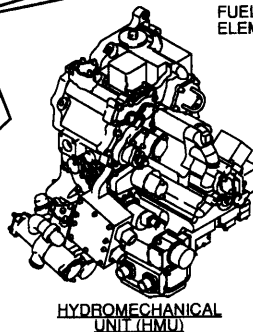
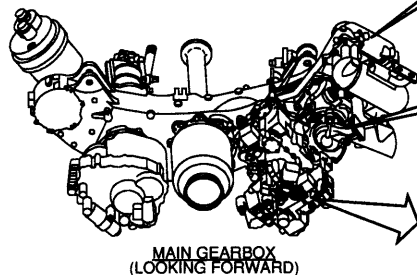
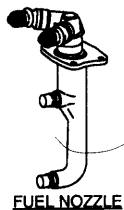
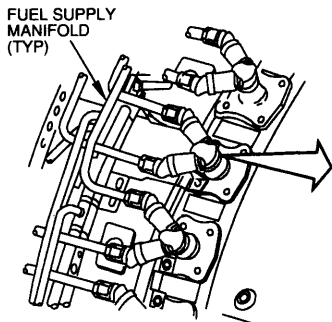
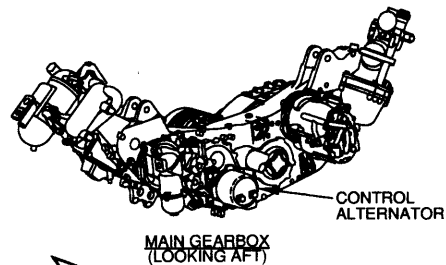
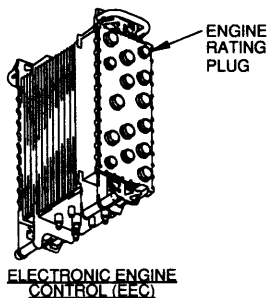
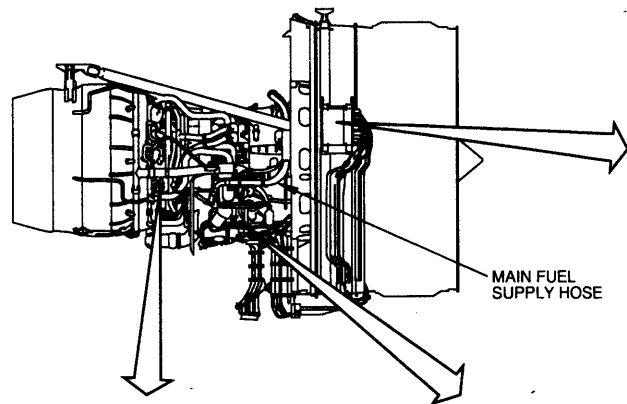


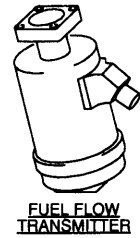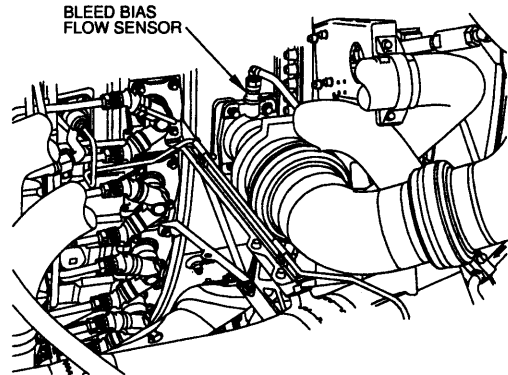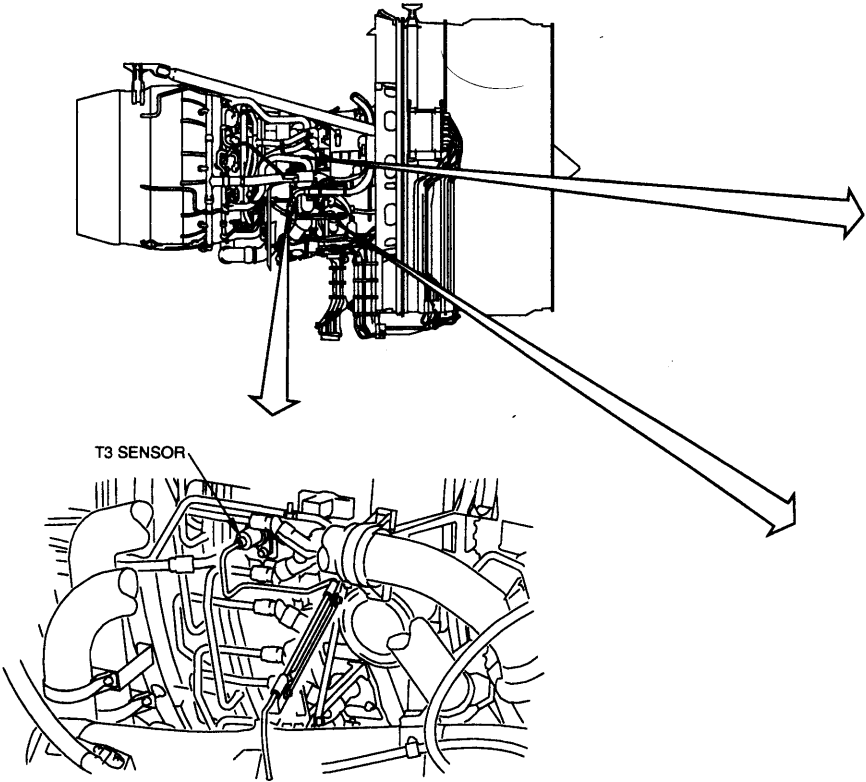

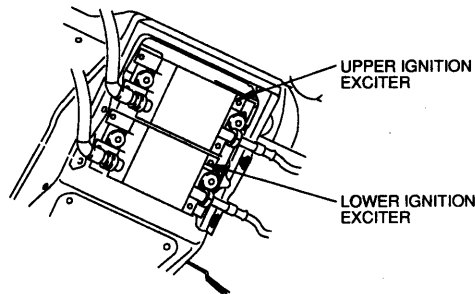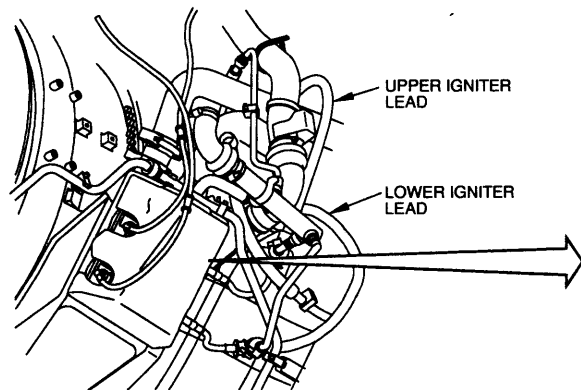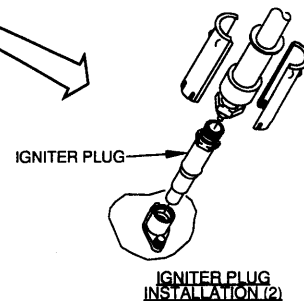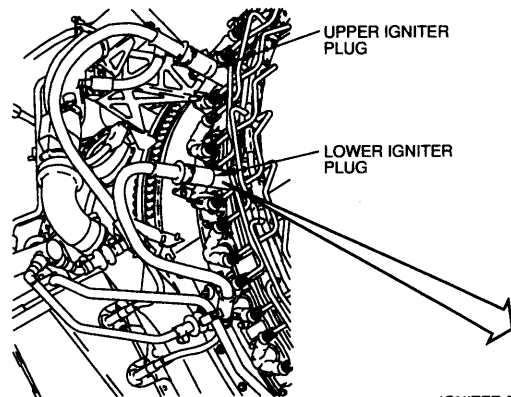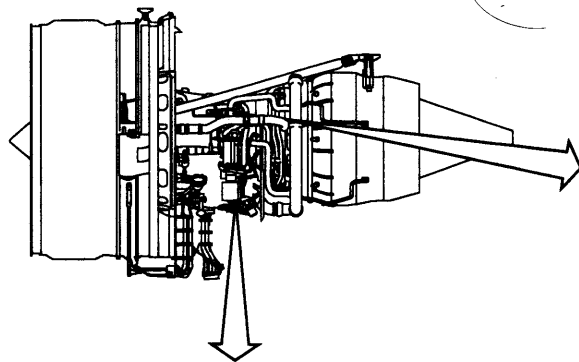




IGNITION EXCITERS INSTALLATION

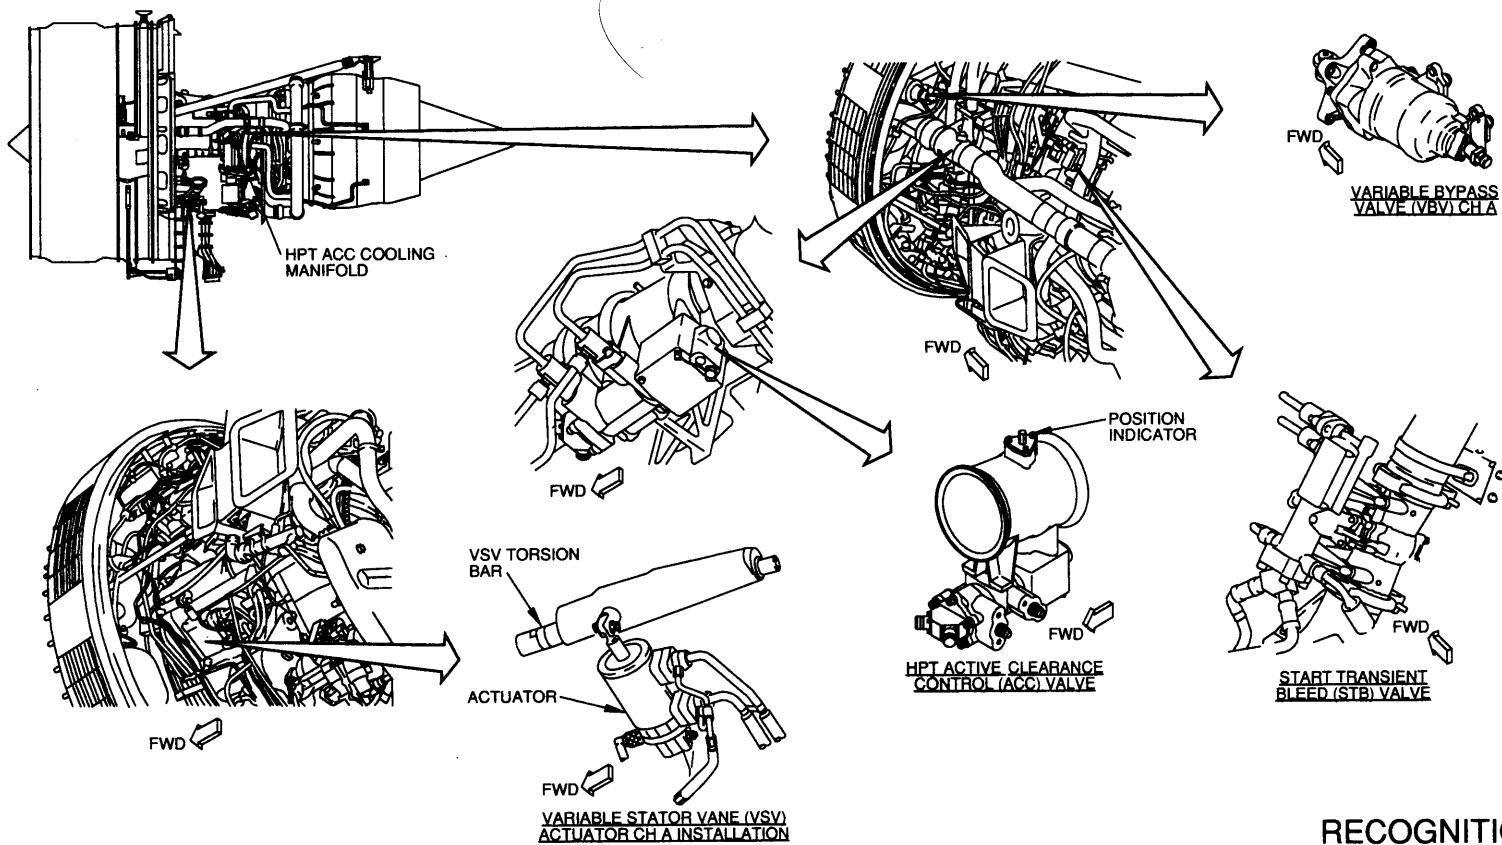

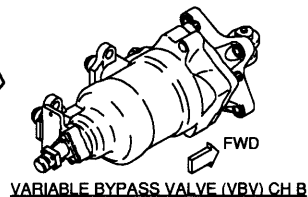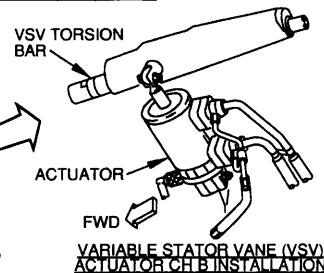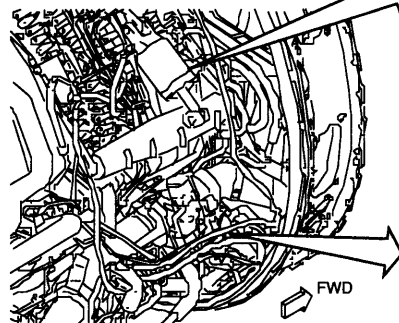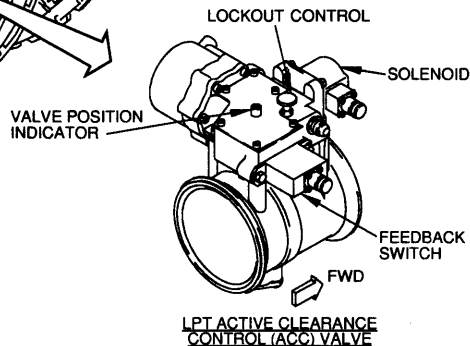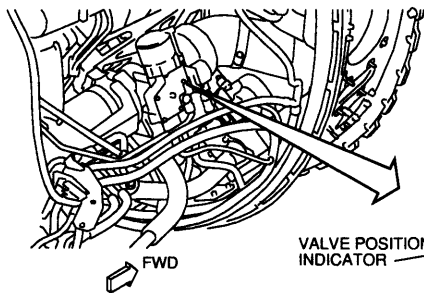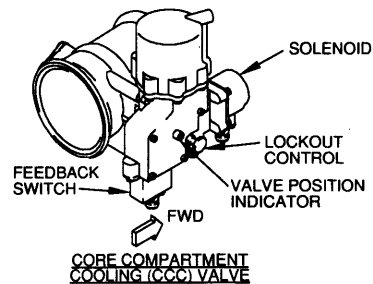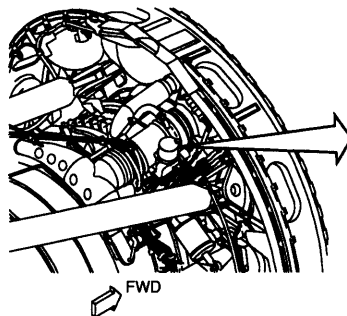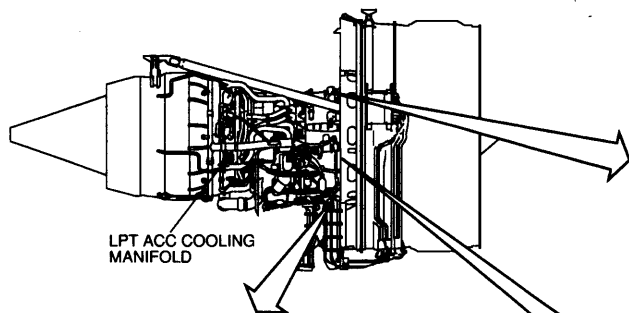


VARIABLE BYPASS VALVE (VBV) CH B

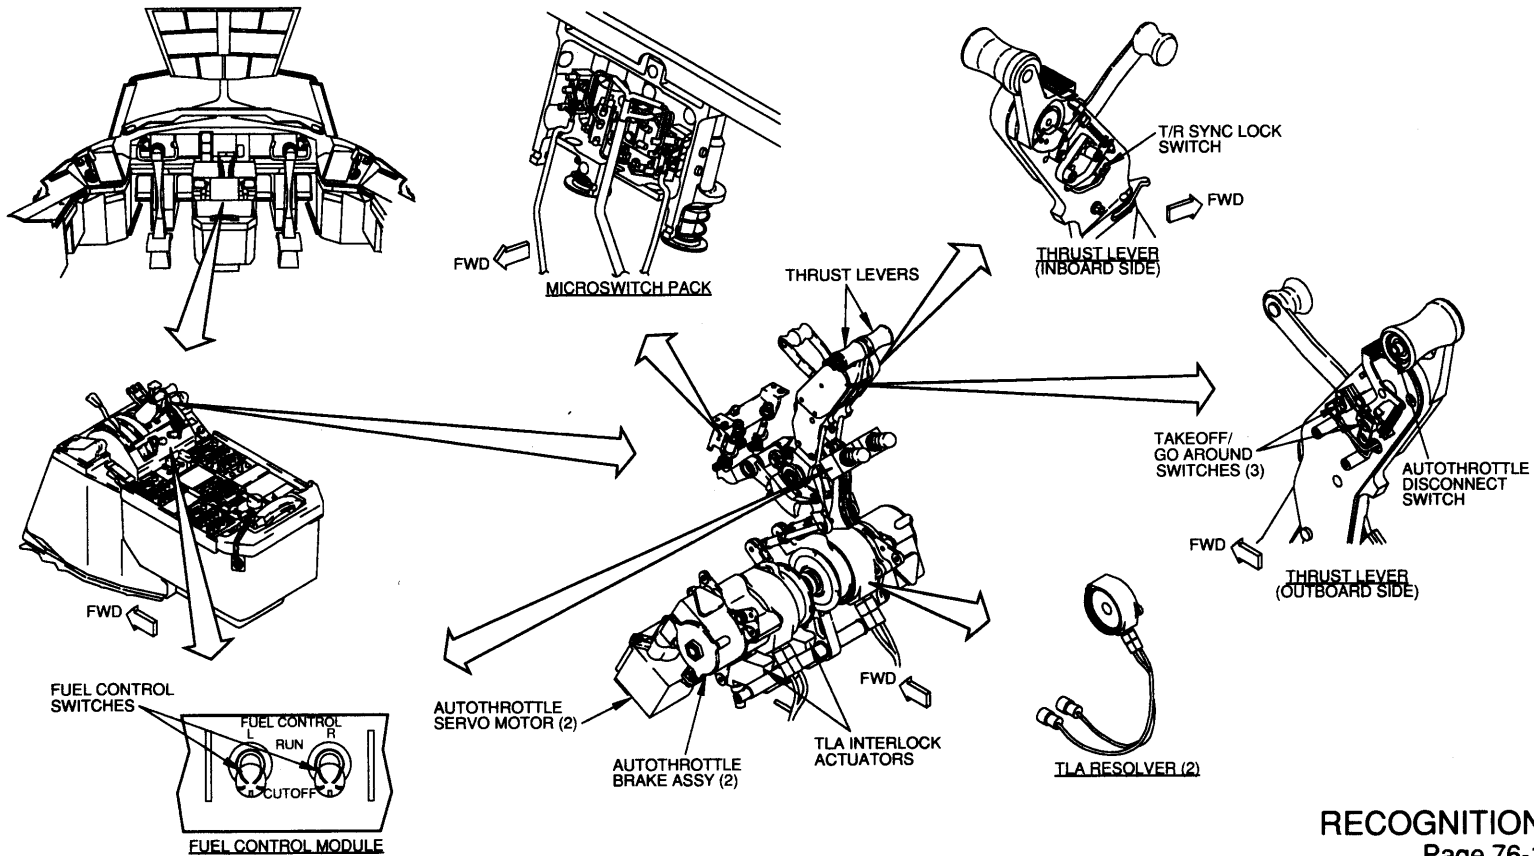

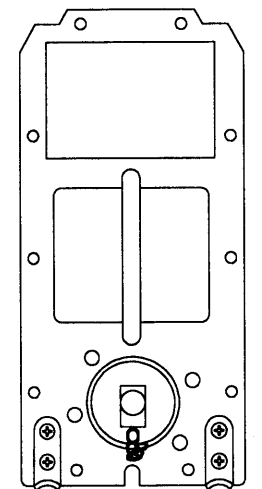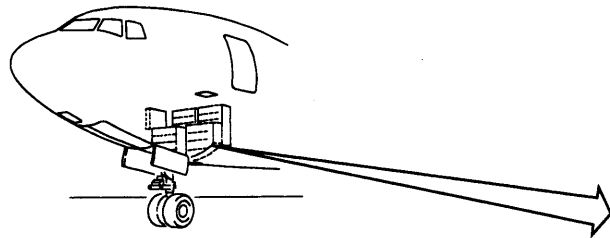


**AIRBORNE VIBRATION MONITOR
(AVM) SIGNAL CONDITIONER**

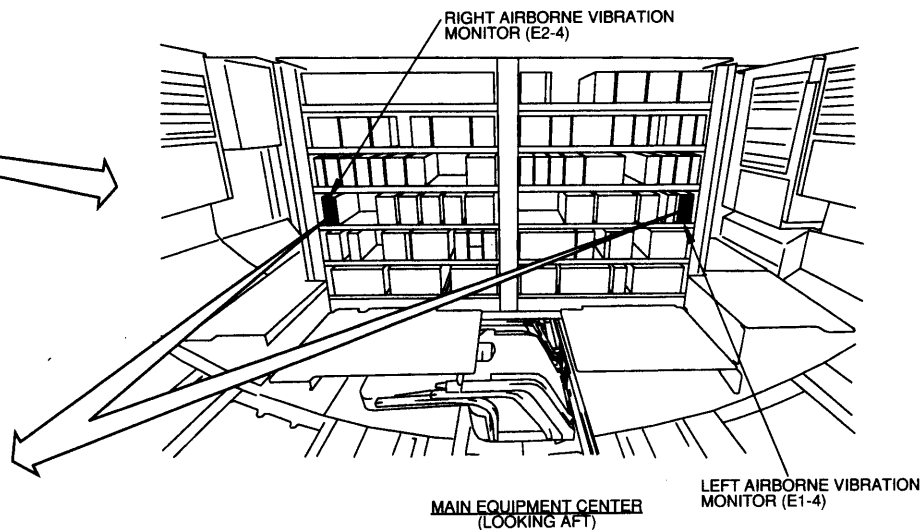


**MAIN EQUIPMENT CENTER
(LOOKING AFT)**



**LEFT AIRBORNE VIBRATION
MONITOR (E1-4)**

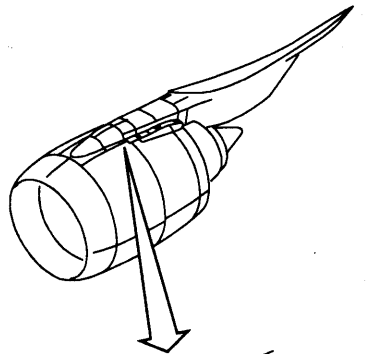



ENGINE STRUT

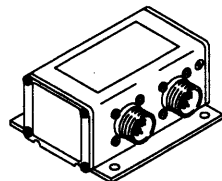

REMOTE CHARGE
CONVERTER (RCC)

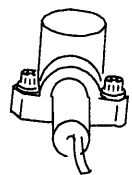
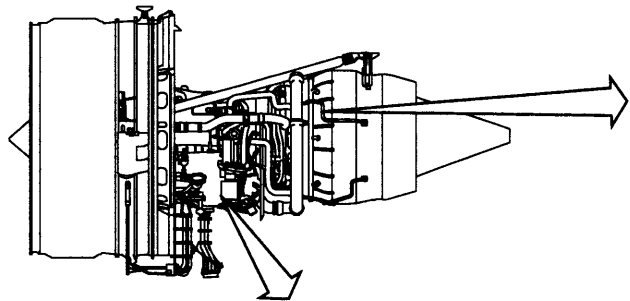


TURBINE ACCELEROMETER

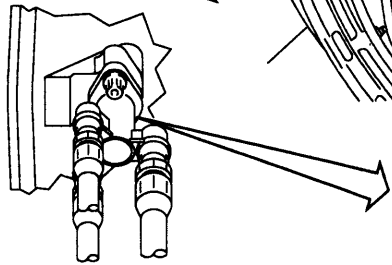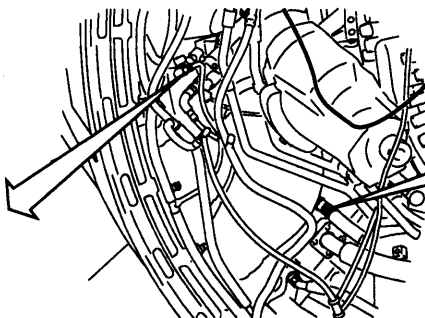



N1 SPEED SENSOR INSTALLATION

 
NO. 1 BEARING
ACCELEROMETER






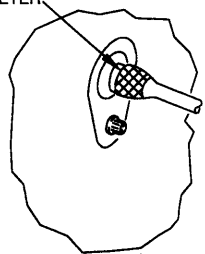



N1 SPEED SENSOR

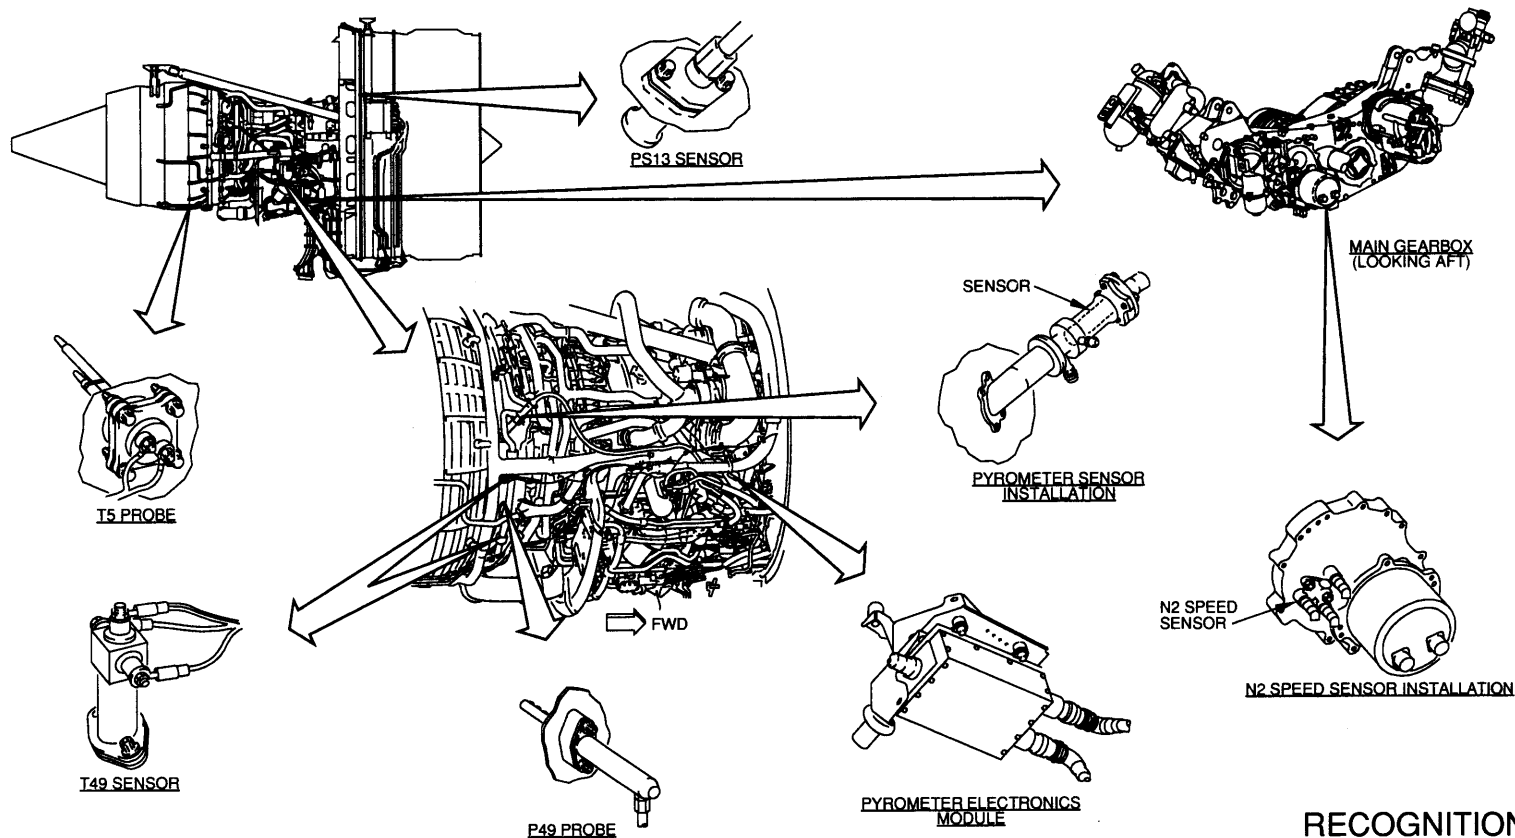

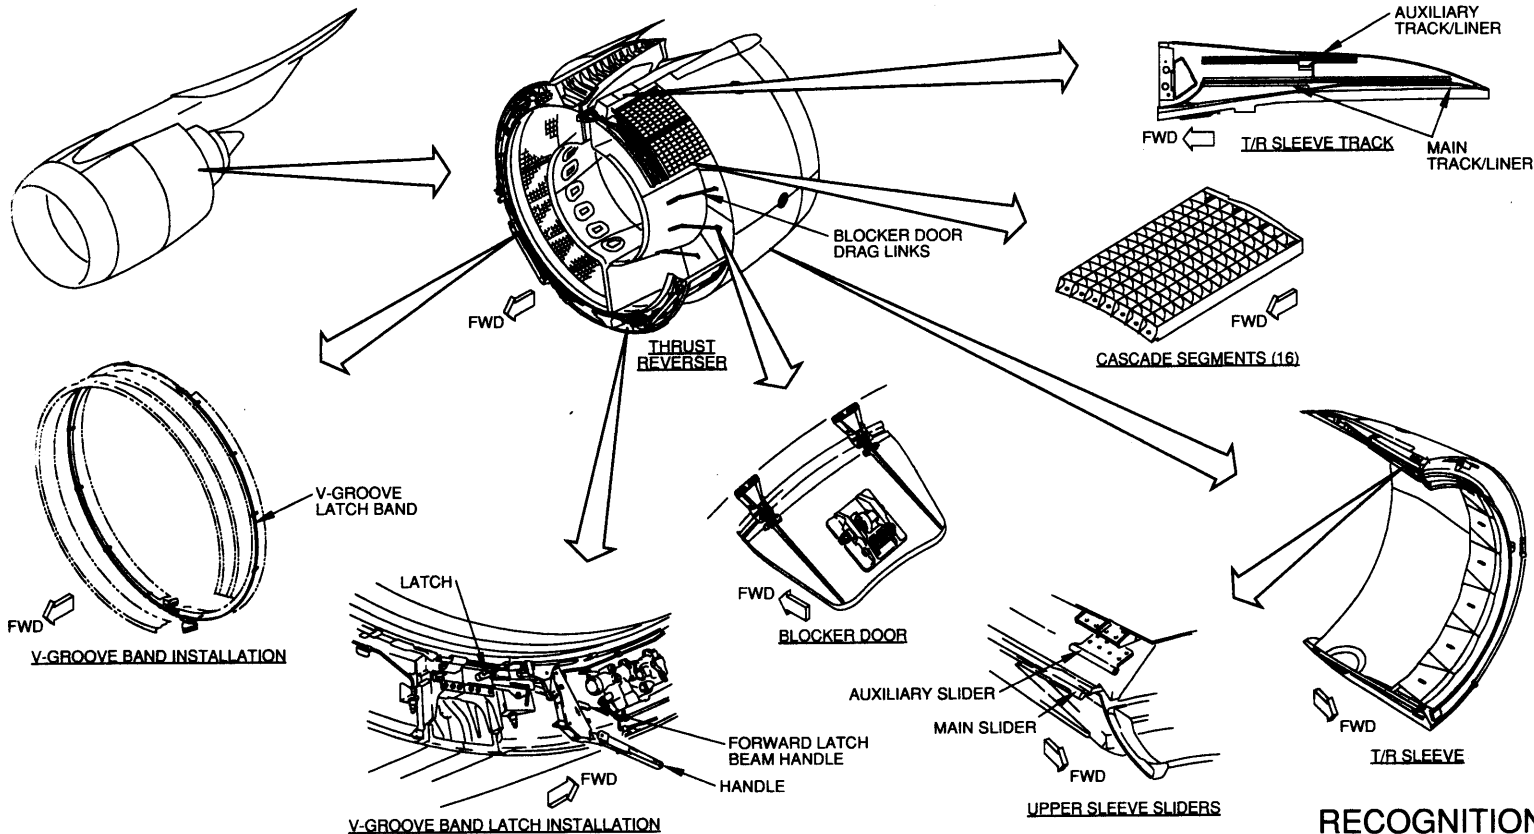

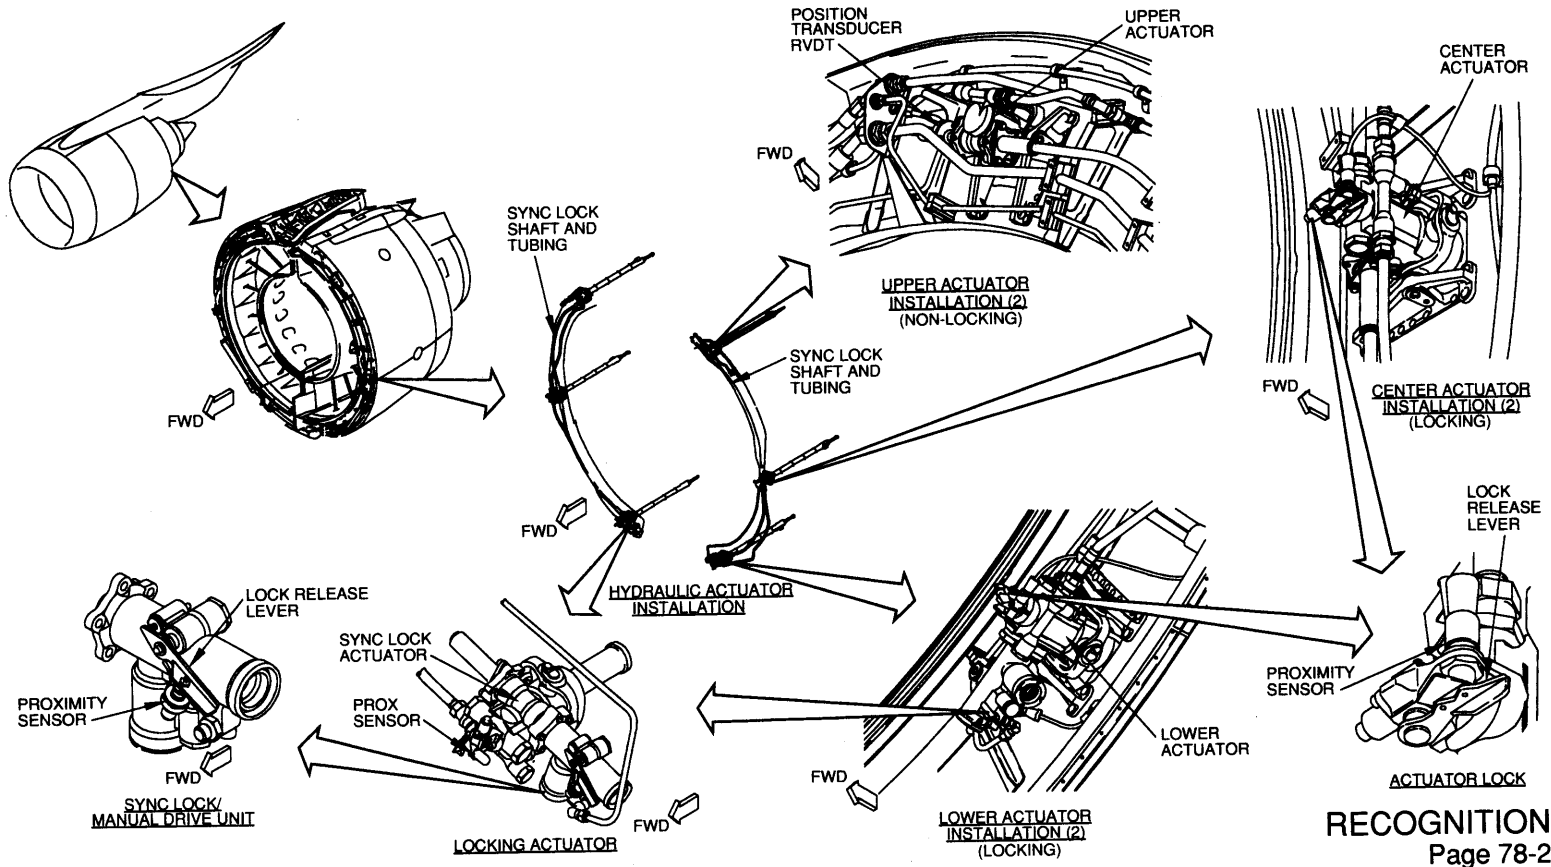

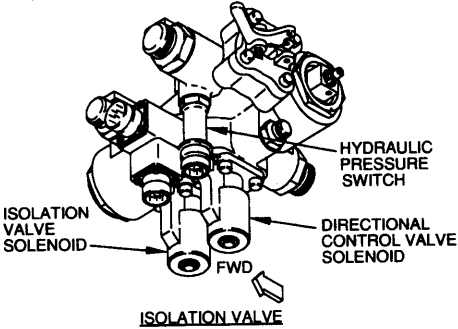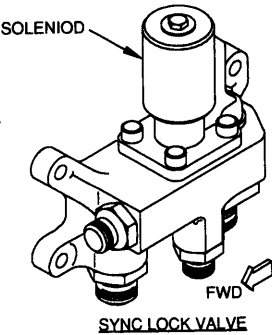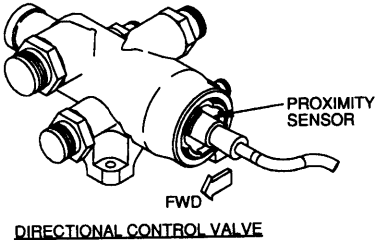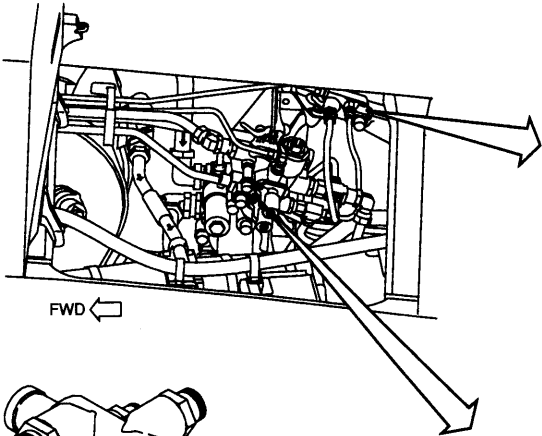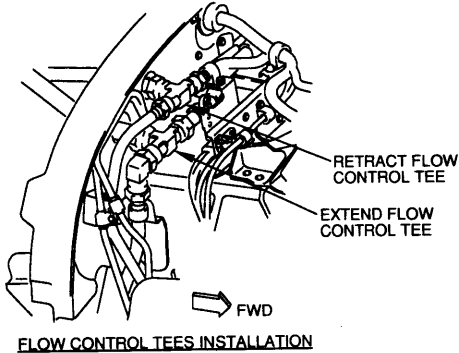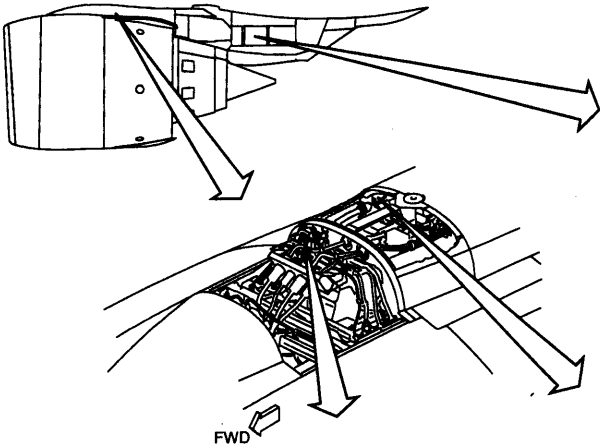

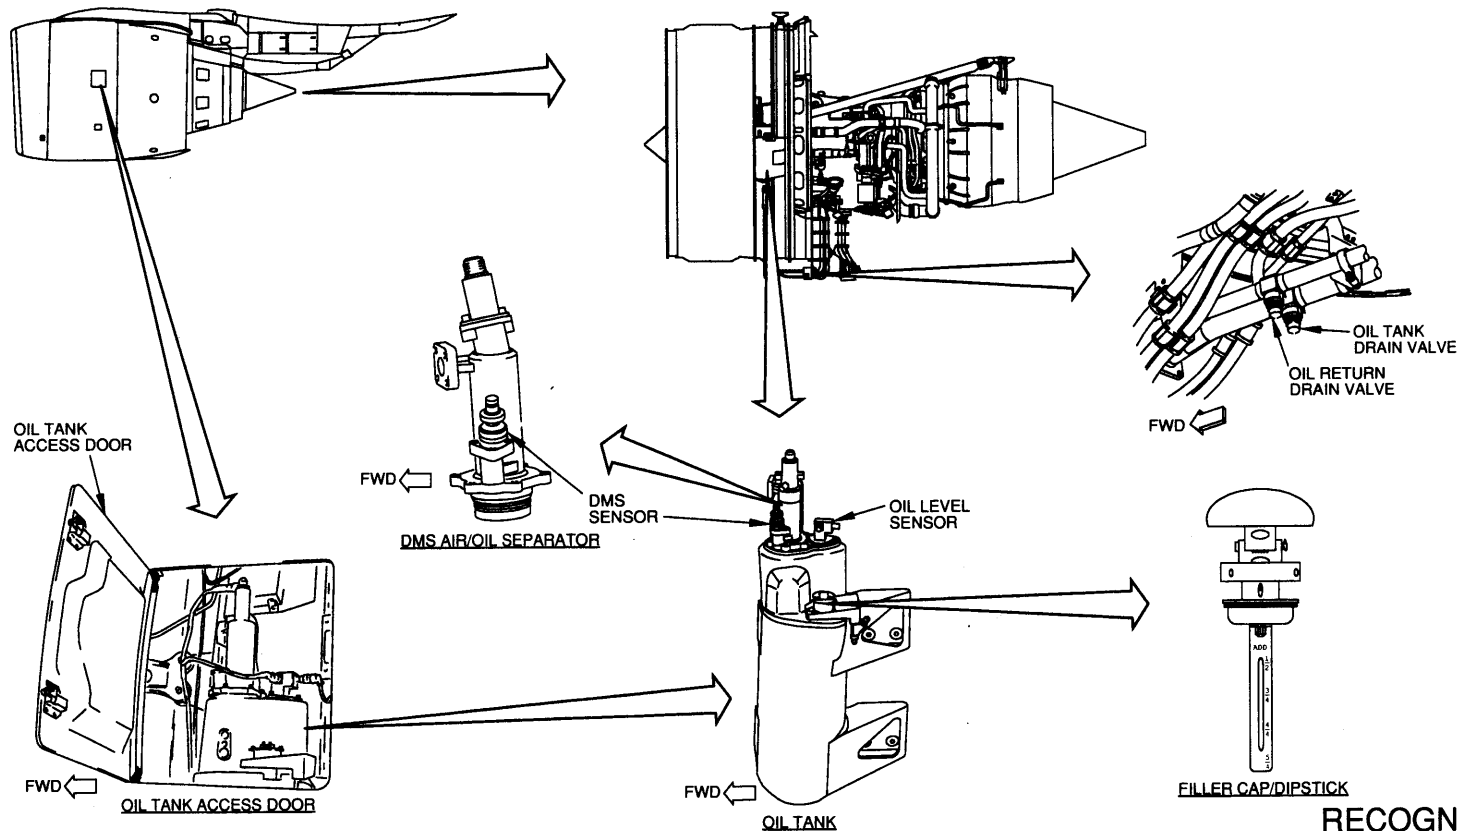

RECOGNITION

